

AutoCAD LT 2011

# Customization Guide

The Autodesk logo is displayed in white text on a black rectangular background. The word "Autodesk" is written in a sans-serif font, with a registered trademark symbol (®) at the end. The logo is oriented vertically, reading from bottom to top.

February 2010

© 2010 Autodesk, Inc. All Rights Reserved. Except as otherwise permitted by Autodesk, Inc., this publication, or parts thereof, may not be reproduced in any form, by any method, for any purpose.

Certain materials included in this publication are reprinted with the permission of the copyright holder.

#### **Trademarks**

The following are registered trademarks or trademarks of Autodesk, Inc., and/or its subsidiaries and/or affiliates in the USA and other countries: 3DEC (design/logo), 3December, 3December.com, 3ds Max, Algor, Alias, Alias (swirl design/logo), AliasStudio, AliasWavefront (design/logo), ATC, AUGI, AutoCAD, AutoCAD Learning Assistance, AutoCAD LT, AutoCAD Simulator, AutoCAD SQL Extension, AutoCAD SQL Interface, Autodesk, Autodesk Envision, Autodesk Intent, Autodesk Inventor, Autodesk Map, Autodesk MapGuide, Autodesk Streamline, AutoLISP, AutoSnap, AutoSketch, AutoTrack, Backburner, Backdraft, Built with ObjectARX (logo), Burn, Buzzsaw, CAiCE, Civil 3D, Cleaner, Cleaner Central, ClearScale, Colour Warper, Combustion, Communication Specification, Constructware, Content Explorer, Dancing Baby (image), DesignCenter, Design Doctor, Designer's Toolkit, DesignKids, DesignProf, DesignServer, DesignStudio, Design Web Format, Discreet, DWF, DWG, DWG (logo), DWG Extreme, DWG TrueConvert, DWG TrueView, DXF, Ecotect, Exposure, Extending the Design Team, Face Robot, FBX, Fempro, Fire, Flame, Flare, Flint, FMDesktop, Freewheel, GDX Driver, Green Building Studio, Heads-up Design, Heidi, HumanIK, IDEA Server, i-drop, ImageModeler, iMOUT, Incinerator, Inferno, Inventor, Inventor LT, Kaydara, Kaydara (design/logo), Kynapse, Kynogon, LandXplorer, Lustre, MatchMover, Maya, Mechanical Desktop, Moldflow, Moonbox, MotionBuilder, Movimento, MPA, MPA (design/logo), Moldflow Plastics Advisers, MPI, Moldflow Plastics Insight, MPX, MPX (design/logo), Moldflow Plastics Xpert, Mudbox, Multi-Master Editing, Navisworks, ObjectARX, ObjectDBX, Open Reality, Opticore, Opticore Opus, Pipeplus, PolarSnap, PortfolioWall, Powered with Autodesk Technology, Productstream, ProjectPoint, ProMaterials, RasterDWG, RealDWG, Real-time Roto, Recognize, Render Queue, Retimer, Reveal, Revit, Showcase, ShowMotion, SketchBook, Smoke, Softimage, Softimage|XSI (design/logo), Sparks, SteeringWheels, Stitcher, Stone, StudioTools, ToolClip, Topobase, Toxik, TrustedDWG, ViewCube, Visual, Visual LISP, Volo, Vtour, Wire, Wiretap, WiretapCentral, XSI, and XSI (design/logo).

All other brand names, product names or trademarks belong to their respective holders.

#### **Disclaimer**

THIS PUBLICATION AND THE INFORMATION CONTAINED HEREIN IS MADE AVAILABLE BY AUTODESK, INC. "AS IS." AUTODESK, INC. DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE REGARDING THESE MATERIALS.

Published by:  
Autodesk, Inc.  
111 McInnis Parkway  
San Rafael, CA 94903, USA

# Contents

<b>Chapter 1</b>	<b>Basic Customization</b> . . . . .	<b>1</b>
	Overview of Customization . . . . .	1
	Organize Program and Support Files . . . . .	3
	Overview of File Organization . . . . .	3
	Multiple Configurations . . . . .	6
	Multiple Drawing Folders . . . . .	7
	Locate Customized Files . . . . .	8
	Locate Plot Style Files . . . . .	9
	Locate Plotter Files . . . . .	10
	Locate the PMP File . . . . .	10
	Locate Support Files . . . . .	11
	Locate Drawing Template Files . . . . .	14
	Customize a Publish to Web Template . . . . .	14
	Create Command Aliases . . . . .	17
<b>Chapter 2</b>	<b>Custom Linetypes</b> . . . . .	<b>19</b>
	Overview of Linetype Definitions . . . . .	19
	Simple Custom Linetypes . . . . .	20
	Text in Custom Linetypes . . . . .	24
<b>Chapter 3</b>	<b>Custom Hatch Patterns</b> . . . . .	<b>27</b>
	Overview of Hatch Pattern Definitions . . . . .	27
	Hatch Patterns with Dashed Lines . . . . .	30

	Hatch Patterns with Multiple Lines . . . . .	34
<b>Chapter 4</b>	<b>User Interface Customization . . . . .</b>	<b>39</b>
	Understand User Interface Customization . . . . .	39
	Overview of the Customization . . . . .	39
	Use the Customization Environment . . . . .	41
	Overview of the Customize User Interface (CUI)	
	Editor . . . . .	42
	Work with the Customizations In Pane . . . . .	44
	Work with the Command List Pane . . . . .	45
	Work with the Dynamic Display Pane . . . . .	46
	How Customization Has Changed . . . . .	48
	Customization Glossary . . . . .	54
	Work with the Customize User Interface (CUI) Editor . . . . .	58
	Create a Command . . . . .	58
	Create User Interface Elements . . . . .	60
	Create a Quick Access Toolbar . . . . .	60
	Customize the Ribbon . . . . .	61
	Create a Toolbar . . . . .	64
	Create a Pull-Down Menu . . . . .	65
	Create a Shortcut Menu . . . . .	67
	Customize Shortcut Key . . . . .	68
	Create a Double Click Action . . . . .	68
	Create a Mouse Button . . . . .	69
	Create and Modify Workspaces . . . . .	69
	Create a Workspace from the User Interface . . . . .	70
	Create a Workspace with the CUI Editor . . . . .	71
	Create and Manage Customization Files . . . . .	73
	Basics of Customization Files . . . . .	73
	Create and Load a Partial CUIx File . . . . .	78
	Create an Enterprise CUIx File . . . . .	82
	Find and Replace Commands and Text in a CUIx File . . . . .	86
	Customize Commands . . . . .	92
	Overview of Commands . . . . .	92
	Create, Edit, and Reuse Commands . . . . .	94
	Create Macros . . . . .	101
	Overview of Macros . . . . .	101
	Use Special Control Characters in Macros . . . . .	104
	Pause for User Input in Macros . . . . .	106
	Provide International Support in Macros . . . . .	108
	Repeat Commands in Macros . . . . .	109
	Use Single Object Selection Mode in Macros . . . . .	110
	Use Macros to Swap User Interface Elements . . . . .	110
	Use Conditional Expressions in Macros . . . . .	111
	Control the Display of Command Items . . . . .	113
	Assign Search Tags . . . . .	119

Create Tooltips and Extended Help for Commands . . . . .	122
Create Status Line Help Messages . . . . .	128
Assign, Create, and Manage Images for Commands . . . . .	129
Assign Images to a Command . . . . .	129
Create and Edit Custom Images for Commands . . . . .	132
Manage, Import, and Export Custom Images . . . . .	134
Customize User Interface Elements . . . . .	139
Quick Access Toolbars . . . . .	142
Ribbon . . . . .	148
Ribbon Panels . . . . .	149
Ribbon Tabs . . . . .	180
Ribbon Contextual Tab States . . . . .	186
Toolbars . . . . .	190
Create and Edit Toolbars . . . . .	190
Add Flyouts to a Toolbar . . . . .	202
Add, Remove or Switch Toolbar Controls . . . . .	207
Pull-down and Shortcut Menus . . . . .	212
Overview of Pull-Down and Shortcut Menus . . . . .	212
Create a Pull-Down Menu . . . . .	213
Create a Shortcut Menu . . . . .	217
Create Submenus . . . . .	227
Reference Pull-Down or Shortcut Menus . . . . .	229
Swap and Insert Pull-Down Menus . . . . .	230
Quick Properties . . . . .	233
Rollover Tooltips . . . . .	241
Keyboard Shortcuts . . . . .	248
Shortcut Keys . . . . .	248
Temporary Override Keys . . . . .	255
Double Click Actions . . . . .	262
Overview of Double Click Actions . . . . .	262
Double Click Action Object Names . . . . .	266
Examples of Double Click Actions . . . . .	269
Mouse Buttons . . . . .	270
Overview of Mouse Buttons . . . . .	270
Accept Coordinate Entry in Button Menus . . . . .	271
Legacy Interface Elements . . . . .	272
Create Tablet Menus . . . . .	272
Customize Tablet Buttons . . . . .	274
Create Image Tile Menus . . . . .	275
Customize Workspaces . . . . .	280
Overview of Workspace Customization . . . . .	280
Control User Interface Elements Outside the CUI Editor . . . . .	293
Control User Interface Elements in the CUI Editor . . . . .	296
Control the Appearance of Palettes . . . . .	312
Transfer and Migrate Customization . . . . .	316
Customize User Interface (CUI) Editor FAQs . . . . .	319

<b>Chapter 5</b>	<b>DIESEL</b>	<b>325</b>
	Customize the Status Line	325
	Overview of the MODEMACRO System Variable	325
	Set MODEMACRO Values	326
	DIESEL Expressions in Macros	328
	Catalog of DIESEL Functions	331
	+ (addition)	331
	- (subtraction)	331
	* (multiplication)	331
	/ (division)	332
	= (equal to)	332
	< (less than)	333
	> (greater than)	333
	!= (not equal to)	333
	<= (less than or equal to)	334
	>= (greater than or equal to)	334
	and	335
	angtos	335
	edtime	336
	eq	337
	eval	338
	fix	338
	getenv	338
	getvar	339
	if	339
	index	340
	nth	340
	or	341
	rtos	341
	strlen	341
	substr	342
	upper	342
	xor	343
	DIESEL Error Messages	343
<b>Chapter 6</b>	<b>Slides and Command Scripts</b>	<b>345</b>
	Create Slides	345
	Overview of Slides	345
	View Slides	347
	Create and View Slide Libraries	348
	Create Command Scripts	350
	Overview of Command Scripts	350
	Run Scripts at Startup	352
	Run Slide Shows from Scripts	354

<b>Index</b> . . . . .	<b>359</b>
------------------------	------------





# Basic Customization

# 1

Your dealer can offer you independently developed applications that can further tailor AutoCAD LT to your needs.

## Overview of Customization

AutoCAD LT can be customized in simple ways. For example, you can change the directory structure or move a button from one toolbar to another. If you want to change the interface further, you can edit the CUIx file and use DIESEL code to create customizations with your own commands.

The list that follows is arranged from least to most complex:

- **Organize files.** You can organize program, support, and drawing files. For example, you can make a separate folder for each project that includes only the support files that project needs.
- **Customize Tool Palettes.** You can create a tool by dragging objects from your drawing onto a tool palette. You can create a tool palette by right-clicking on the Tool Palettes title bar and selecting New Palette. For information about customizing tool palettes, see “Customize Tool Palettes” in the *User's Guide*.
- **Create custom templates.** Use templates to define common parameters when you publish a drawing using the Publish to Web wizard.
- **Define command aliases.** You can define simple abbreviations, or aliases, for frequently used commands from within AutoCAD LT by adding the command to the PGP file *acadlt.pgp*. For example, you might want to start the **BLOCK** command by entering **b**.

- **Create custom linetypes and hatch patterns.** You can create linetypes and hatch patterns that conform to your company standards and working methods.
- **Customize the user interface.** The CUIx file controls many aspects of the user interface, including the behavior of your pointing device buttons and the functionality and appearance of pull-down, tablet, and image tile menus, toolbars, and accelerator keys. You can edit or create a CUIx file to add commands or combine commands and assign them to a menu, toolbar, or other location.
- **Customize the status line.** You can use the DIESEL string expression language and the MODEMACRO system variable to provide additional information at the status line, such as the date and time or system variable settings.
- **Automate repetitive tasks by writing scripts.** A script is an ASCII text file containing commands that are processed like a batch file when you run the script. For example, if a set of drawings needs to be plotted a certain way, you can write a script that opens each drawing, hides and displays various layers, and issues PLOT commands. You can use scripts with slides to create automated presentations like those used at trade shows. A slide is a “snapshot” of the drawing area that cannot be edited. Slides can also be used in image tile menus and dialog boxes.

**See also:**

- [“Organize Program and Support Files”](#)
- [“Toolbars”](#)
- [“Customize a Publish to Web Template”](#)
- [“Create Command Aliases”](#)
- [“Custom Lintypes”](#)
- [“Custom Hatch Patterns”](#)
- [“User Interface Customization”](#)
- [“DIESEL”](#)
- [“Customize the Status Line”](#)
- [“Slides and Command Scripts”](#)

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUSTOMIZE

Customizes tool palettes and tool palette groups.

### System Variables

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Organize Program and Support Files

You can change the default directory structure for the program and support files to suit your needs.

## Overview of File Organization

AutoCAD LT<sup>®</sup> uses support files for purposes such as storing customization definitions and describing text fonts.

The default directory structure for the AutoCAD LT program and support files is designed to efficiently organize those files into logical groups. If this organization does not suit your needs, you can change it. However, some applications look for certain files in specific locations, and you should verify that your modifications do not conflict with the requirements of those applications. Without the full path, including drive and directory, AutoCAD LT can locate only those files that are found in the library search path.

The location of the *support* folder changed in AutoCAD 2004. The location of local customizable files is stored in the LOCALROOTPREFIX system variable. The location of roamable customizable files is stored in the ROAMABLEROOTPREFIX system variable. If a network supports roaming,

customizable files in the user's roaming profile are available on the machine the user is logged onto.

### Library Search Path

The library search path specifies where the program searches for files when you do not specify a full path name, as follows:

- Current directory. (This is typically determined by the “Start In” setting in your shortcut icon.)
- Directory that contains the current drawing file.
- Directories listed in the search path specified on the Files tab in OPTIONS. (See Specify Search Paths and File Locations in the *User's Guide*.)
- Directory that contains the AutoCAD LT program files.

Depending on the current environment, two or more directories may be the same.

If a file is not in this search path, you must specify both its path name and file name before AutoCAD LT can find it. For example, if you want to insert the *part5.dwg* drawing into your current drawing and it is not in the library search path, you must specify its full path name, as shown here:

Command: **insert**

Enter block name or [?]: **/files2/olddwgs/part5**

If the drawing exists in that location, AutoCAD LT prompts you to finish the INSERT command in the usual manner.

### Directory Structure

AutoCAD LT uses tree-structured directories and subdirectories. It is recommended that you keep supplemental files (such as third-party applications and customization files) separate from the AutoCAD LT program and support files. This makes it easier to track possible conflicts and to upgrade each application without affecting the others.

You can create a new directory on the same level as the main AutoCAD LT directory and store any customization files or third-party applications in subdirectories on the next level.

If you want to store drawings by job, you can create a third directory on the same level. Subdirectories for each job could contain drawing files and a subdirectory for related support files.

## Command Search Procedure

When you enter a command, AutoCAD LT goes through a series of steps to evaluate the validity of the command name. A command can be a built-in command or system variable or an alias defined in the acadlt.pgp file. Commands can also be defined by a device driver command. You can enter a command on the command prompt or choose a command from the appropriate menu. Commands can also be entered from a script file.

The following list describes the search order AutoCAD LT uses to validate a command name.

- 1 If the input is a null response (SPACEBAR or ENTER), AutoCAD LT uses the name of the last command issued. HELP is the default.
- 2 AutoCAD LT checks the command name against the list of built-in commands. If the command is in the list and is not preceded by a period (.), AutoCAD LT then checks the command against a list of undefined commands. If the command is undefined, the search continues. Otherwise, the command is run, unless another reason prevents it from doing so. Running it transparently or in Perspective mode might be impossible.
- 3 AutoCAD LT checks the command name against the names of commands defined by a device driver, and then by those defined by the display driver.
- 4 AutoCAD LT checks the command name against the list of system variables. If the command name is in the list, AutoCAD LT executes the SETVAR command, using the input as the variable name.
- 5 If the command name corresponds to a command alias defined in the program parameters file, AutoCAD LT uses the expanded command name and continues the search, starting a new search against the list of built-in commands.
- 6 If all the preceding steps fail, the search terminates with a warning message about illegal command names.

### See also:

- “Specify Search Paths and File Locations” in the *User's Guide*

## Quick Reference

### Commands

#### OPTIONS

Customizes the program settings.

### System Variables

#### LOCALROOTPREFIX

Stores the full path to the root folder where local customizable files were installed.

#### ROAMABLEROOTPREFIX

Stores the full path to the root folder where roamable customizable files were installed.

## Multiple Configurations

If you use more than one pointing device or use different plotters, you can set up more than one configuration file to make it easy to switch between devices.

When you configure AutoCAD LT for a pointing device and plotter drivers, the information you supply is recorded in a configuration file.

Typically, only a single configuration is necessary, but you may need multiple configurations. For example, if you use a mouse for most of your work but occasionally require a large digitizing tablet, you can set up your system to handle multiple configurations rather than reconfiguring each time you change a device.

The configuration file stores the values of many AutoCAD LT system variables and the configuration options defined in the Options dialog box. If you want different settings for these system variables and operating parameters, you can save those values to different configuration files. For a list of the system variables and where they are stored, see System Variables in the *Command Reference*.

To take advantage of multiple configurations, you must set up AutoCAD LT to use different configuration files. Use the */c* switch to specify alternative configuration files at startup.

See also:

- “Customize Startup” in the *User's Guide*

## Quick Reference

### Commands

#### OPTIONS

Customizes the program settings.

## Multiple Drawing Folders

Keeping your drawing and other associated files in separate directories makes it easier to perform basic file maintenance.

Keeping your drawing files and other associated files in separate directories makes it easier to perform basic file maintenance. The scenario described in this topic is based on the sample directory structure described in [Overview of File Organization](#) on page 3, but you can expand or alter it to meet your needs.

You can set up the `/ActJobs` directory to contain your drawing subdirectories. The drawing subdirectories can contain other subdirectories that hold related support files for that particular drawing type or job. The `/ActJobs/Job1/Support` directory can contain blocks and other files specific to the drawing files in `/ActJobs/Job1`. Specifying **support** (with no path prefix) in the Support path adds the *support* directory within the current directory to the Support path. Notice that if you use the Options dialog box to specify a directory, AutoCAD LT creates a *hard-coded* path to that directory. To use the *relative* naming convention previously described, you must specify the Support path with the `/s` switch on the command line. See “Customize Startup” in the *User's Guide*.

To make sure that the required drawing directory is the current directory when you start AutoCAD LT, and that all files and subdirectories in that directory are easily accessible, you can create a program icon or a Start menu item that specifies the correct working directory for each job. This functionality works only if you set the AutoCAD LT system variable REMEMBERFOLDERS to 0.

You can use a batch program as an alternative to using icons or menus. With batch programs you can create new job directories automatically. The following

batch program verifies that a specified directory exists, sets that directory to be current, and then runs AutoCAD LT.

```
@echo off
C:
if exist \AcltJobs\Jobs\%1 goto RUNACLT
echo.
echo *** Creating \AcltJobs\Jobs\%1
echo *** Press Ctrl+C to cancel.
echo.
pause
mkdir \AcltJobs\Jobs\%1
:RUNACAD
cd \AcltJobs\Jobs\%1
start C:\ AutoCAD LT\acadlt.exe
```

Using an ASCII text editor (such as Notepad), save the batch program to a file named *acadlt.bat*. Be sure to change the drive and directory names to match those on your system. Place this file in a directory that is on your system search path (for example, *C:\winnt*). You can run this batch program using the Run command on the Start menu or by double-clicking the file in Explorer. If you saved the file as *acadlt.bat*, use the following syntax:

**acltjobname**

where *jobname* is the name of the job directory to make current.

## Quick Reference

## Locate Customized Files

Beginning with AutoCAD LT 2004, the location of some of your customized files has changed. The reasons for the file location changes include the following:

- **Limited user rights on a workstation.** You can run AutoCAD LT as a limited user. This means that you no longer need power user or Administrator permissions to run AutoCAD LT once it is installed.
- **Roaming profiles.** Roaming profiles allow you to log on to any computer within a network and retain your user settings. Some files, such as your personal settings and documents, follow you from computer to computer, while other files, such as templates (including Publish to Web templates), reside only on your system.



If roaming profiles are allowed on your network, your “roamable” files are located in the *\Application Data\Autodesk\<Product Version>* folder, and your “nonroamable” files are located in the *\Local Settings\Application Data\Autodesk\<Product Version>* folder.

---

**NOTE** In some operating systems, the folders that are located under your profile are hidden by default. To display these files, you may need to change your display settings. On the Start menu, click Control Panel ► Folder Options. In the Folder Options dialog box, on the View tab, click Show Hidden Files and Folders.

---

## Locate Plot Style Files

Beginning with the AutoCAD KT 2004, the default location of your plot style files has changed. For information about the default location of these files, see [Locate Customized Files](#) on page 8.

### To locate your plot style files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.
- 2 Click application menu ► Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Printer Support File Path.
- 4 Click the plus sign (+) to the left of the Plot Style Table Search Path file.
- 5 Under Plot Style Table Search Path, click the path name to view the location of your plot style files.

---

**NOTE** You can also locate your plot style files by entering **stylesmanager** on the AutoCAD LT command line.

---

## Locate Plotter Files

Beginning with AutoCAD LT 2004, the default location of your plotter files has changed. For information about the default location of these files, see [Locate Customized Files](#) on page 8.

### To locate your plotter files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.
- 2 Click application menu ► Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Printer Support File Path.
- 4 Click the plus sign (+) to the left of Printer Configuration Search Path.
- 5 Under Printer Configuration Search Path, click the path name to view the location of your plotter files.

---

**NOTE** You can also locate your plotter files by entering **plottermanager** on the AutoCAD LT command line.

---

## Locate the PMP File

Beginning with the 2004 Autodesk products, the default location of your PMP file has changed. For information about the default location of this file, see [Locate Customized Files](#) on page 8.

### To locate your PMP file

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► *<AutoCAD LT>* ► *<AutoCAD LT>*.

- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Printer Support File Path.
- 4 Under Printer Description File Search Path, click the path name to view the location of your PMP file.

## Locate Support Files

Beginning with AutoCAD LT 2004, the default location for some of your support files has changed. For information about the default location of these files, see [Locate Customized Files](#) on page 8.

Support files include the following:

- Customization file (*acadlt.cuix*)
- Custom icon files
- Help and miscellaneous files
- Font mapping file (*acadlt.fmp*)
- Alternate font file (*simplex.shx*)
- Support path files (*acadlt.dcl*, *acadlt.lin*, *acadlt.pat*, *acadlt.pgp*, *acadlt.psf*, *acadlt.unt*, *acadltiso.lin*, *acadltiso.pat*, and *gdt.shx*)

### To find the default location of the customization files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ➤ Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
  - (Windows Vista) Click Start menu ➤ All Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Customization Files.
- 4 Click the plus sign (+) to the left of Main Customization File.

- 5 Under Main Customization File, click the path name to view the location of your main customization file.
- 6 Click the plus sign (+) to the left of Enterprise Customization File.
- 7 Under Enterprise Customization File, click the path name to view the location of your enterprise customization files.

---

**NOTE** By default, the path to an enterprise customization file is empty until you define the file. For more information about defining a customization file, see “Customize the User Interface” in the *Customization Guide*.

---

#### To find the default location of the custom icon files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ➤ Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
  - (Windows Vista) Click Start menu ➤ All Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Customization Files.
- 4 Under Custom Icon Location, click the path name to view the location for the custom button image files used with your customization files.

#### To find the default location of the Help and miscellaneous files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ➤ Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
  - (Windows Vista) Click Start menu ➤ All Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Help and Miscellaneous File Names to expand the list.
- 4 Click the plus sign (+) to the left of the file you want to locate, and then click the path name to view the location of the files.

### **To find the default location of the font mapping file**

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.
- 2 Click application menu ► Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Text Editor, Dictionary, and Font File Names.
- 4 Click the plus sign (+) to the left of Font Mapping File.
- 5 Under Font Mapping File, click the path name to view the location of your font mapping file.

### **To find the default location of the alternate font file**

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.
- 2 Click application menu ► Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Text Editor, Dictionary, and Font File Names.
- 4 Click the plus sign (+) to the left of Alternate Font File.
- 5 Under Alternate Font File, click the path name to view the location of your alternate font file.

### **To find the default location of the support path files**

- 1 Do one of the following:
  - (Windows XP) Click Start menu ► Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.
  - (Windows Vista) Click Start menu ► All Programs ► Autodesk ► <AutoCAD LT> ► <AutoCAD LT>.

- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Support File Search Path.
- 4 Under Support File Search Path, click a path name to view the location of your support files.

## Locate Drawing Template Files

Beginning with AutoCAD LT 2004, the default location of your drawing template files has changed. For information about the default location of these files, see [Locate Customized Files](#) on page 8.

### To locate your drawing template files

- 1 Do one of the following:
  - (Windows XP) Click Start menu ➤ Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
  - (Windows Vista) Click Start menu ➤ All Programs ➤ Autodesk ➤ <AutoCAD LT> ➤ <AutoCAD LT>.
- 2 Click application menu ➤ Options.
- 3 In the Options dialog box, Files tab, click the plus sign (+) to the left of Template Settings.
- 4 Under Template Settings, click the plus sign (+) to the left of Drawing Template File Location.
- 5 Under Drawing Template File Location, click the path name to view the location of your drawing template files.

## Customize a Publish to Web Template

You can create customized templates to use in the Publish to Web wizard by modifying one of the Publish to Web template (PWT) files provided. Use any HTML editor or text editor.

To create a custom template, add or modify any of the following elements:

- Images

- Text
- Hyperlinks
- Color
- Title
- Video, animation, and so on

There are four default Publish to Web templates that you can customize:

- **Array of Thumbnails.** Creates a web page containing an array of thumbnail images.
- **Array Plus Summary.** Creates a web page containing an array of thumbnail images and summary information about each image.
- **List of Drawings.** Creates a web page containing a list of drawings and an image frame.
- **List Plus Summary.** Creates a web page containing a list of drawings, an image frame, and summary information about a selected image.

---

**NOTE** You must be familiar with HTML syntax to customize the Publish to Web templates.

---

You can make changes or additions to the look and feel of a template, but you cannot change the arrangement of images within it. For example, in the *Array of Thumbnails* template, the images are presented across the page in rows. You cannot alter the presentation of the images, but you can wrap text and graphics around the table of images.

---

**WARNING** To ensure that you do not overwrite the default Publish to Web template files, back up those files before you make any changes to them.

---

### To create quick access to the Publish to Web templates

- 1 Click Tools menu ➤ Options.
- 2 In the Options dialog box, Files tab, click the plus sign (+) next to Template Settings. Then click the plus sign next to Drawing Template File Location.
- 3 Move the cursor to the path name that is displayed and click inside it, and press F2, and press CTRL+C to copy it.

- 4 Click OK or Cancel to close the Options dialog box.
- 5 Click File menu ► Open.
- 6 In the Select File dialog box, right-click an empty area in the vertical panel on the left side, and click Add on the shortcut menu.
- 7 Enter a name in the Item name box (for example, **Templates**).
- 8 Press CTRL+V to paste the path into the Item Path box, and click OK.  
You can now access the Template folders by clicking the button in the left panel of the Select File dialog box.

#### To customize a Publish to Web template

- 1 Browse to the Publish to Web template folder, click File menu ► Open.  
See [To create quick access to the Publish to Web templates](#) on page 15.
- 2 Double-click the *PTWTemplates* folder to open it. The following folders are displayed. Each contains a Publish to Web template and preview images (BMP) that you see when you run the Publish to Web wizard.
  - *Template1*. Contains the *Array of Thumbnails* template and a preview image
  - *Template2*. Contains the *Array Plus Summary* template, a preview image, and HTML frames
  - *Template3*. Contains the *List of Drawings* template, a preview image, and HTML frames
  - *Template4*. Contains the *List Plus Summary* template, a preview image, and HTML frames
- 3 Right-click the folder you want to use, and click Copy.
- 4 Press ALT+2, right-click the *PTWTemplates* folder, and click Paste.
- 5 Reopen the *PTWTemplates* folder, and right-click the new folder and rename it.
- 6 Right-click the new folder and click Open to display its contents.
- 7 Rename the Publish to Web template (PWT) file with an *.htm* or *.html* file extension.
- 8 Open the template file in an HTML editor or a text editor.



The template file contains comments that help you determine which areas of the code you can modify to create your new web page.

- 9 Review the comments and make changes to the parts of the template you want to customize.
- 10 Save the template with a *.pwt* file extension. Make sure you save the file to the template folder you created in step 3.

---

**NOTE** Each template folder can contain only one PWT file. If you create a new PWT file, make sure you delete any other PWT files that exist in the same folder.

---

When you run the Publish to Web wizard, the new template is displayed in the list of templates.

## Quick Reference

### Commands

PUBLISHTOWEB

Creates HTML pages that include images of selected drawings.

## Create Command Aliases

A command alias is an abbreviation that you enter at the command prompt instead of entering the entire command name.

For example, you can enter **c** instead of **circle** to start the CIRCLE command. An alias is not the same as a keyboard shortcut, which is a combination of keystrokes, such as CTRL+S for SAVE.

The acadlt.pgp file defines command aliases. You can change existing aliases or add new ones by editing acadlt.pgp in an ASCII text editor (such as Notepad). In addition to command aliases in acad.pgp, you will also find comment lines which are preceded by a semicolon (;). Comment lines allow you to add textual information to acad.pgp, such as when or who revised the file last.

---

**NOTE** Before you edit *acadlt.pgp*, create a backup so that you can restore it later, if necessary.

---

To define a command alias, add a line to the *acadlt.pgp* file using the following syntax:

```
abbreviation,*command
```

where *abbreviation* is the command alias that you enter at the command prompt and *command* is the command being abbreviated. You must enter an asterisk (\*) before the command name to identify the line as a command alias definition.

If you can enter a command transparently, you can also enter its alias transparently. When you enter the command alias, the full command name is displayed at the command prompt and the command is executed.

You can create command aliases that include the special hyphen (-) prefix, such as those listed here, that accesses the version of a command that displays command prompts instead of a dialog box.

```
BH, *-BHATCH  
BD, *-BOUNDARY
```

---

**NOTE** You cannot use command aliases in command scripts. Using command aliases in menu files is not recommended.

---

If you edit *acadlt.pgp* while AutoCAD LT is running, enter **reinit** in order to use the revised file. Restarting AutoCAD LT automatically reloads the file.

#### To open the program parameters file (acadlt.pgp)

■ Click Tools ► Customize ► Edit Program Parameters (acadlt.pgp)

## Quick Reference

### Commands

#### REINIT

Reinitializes the digitizer, digitizer input/output port, and program parameters file.

# Custom Linetypes


# 2

AutoCAD LT® provides a library of standard linetypes in the *acadlt.lin* and *acadltiso.lin* files. You can use the linetypes as they are, modify them, or create your own custom linetypes.

## Overview of Linetype Definitions

Linetypes are defined in one or more linetype definition files that have a *.lin* file extension.

The linetype name and definition determine the particular dash-dot sequence, the relative lengths of dashes and blank spaces, and the characteristics of any included text or shapes. You can use any of the standard linetypes that AutoCAD LT provides, or you can create your own linetypes.



examples of linetypes

A LIN file can contain definitions of many simple and complex linetypes. You can add new linetypes to an existing LIN file, or you can create your own LIN file. To create or modify linetype definitions, edit the LIN file using a text editor or word processor or use LINETYPE at the command prompt.

When you create a linetype, you must load the linetype before you can use it.

The LIN files included in AutoCAD LT are *acadlt.lin* and *acadltiso.lin*. You can display or print these text files to better understand how to construct linetypes.

## Quick Reference

### Commands

#### LINETYPE

Loads, sets, and modifies linetypes.

### System Variables

#### MEASUREINIT

Controls whether a drawing you start from scratch uses imperial or metric default settings.

## Simple Custom Lintypes

Each linetype is defined on two lines in a linetype definition file. The first line contains the linetype name and an optional description. The second line is the code that defines the actual linetype pattern.

The second line must begin with the letter A (alignment), followed by a list of pattern descriptors that define pen-up lengths (spaces), pen-down lengths (dashes), and dots. You can include comments in an LIN file by beginning the line with a semicolon (;).

### Linetype Definition Format

The format of the linetype definition is

```
*linetype_name,description  
A,descriptor1,descriptor2, ...
```

For example, a linetype called DASHDOT is defined as

```
*DASHDOT,Dash dot __ . __ . __ . __ . __ . __ . __  
A,.5,-.25,0,-.25
```

This indicates a repeating pattern starting with a dash 0.5 drawing units long, a space 0.25 drawing units long, a dot, and another space 0.25 drawing units long. This pattern continues for the length of the line, ending with a dash 0.5 drawing units long. The linetype would be displayed as shown below.

\_\_ . \_\_ . \_\_ . \_\_ . \_\_ . \_\_ . \_\_

LIN files must be saved in ASCII format and use an *.lin* file extension. Additional information about each field in a linetype definition follows.

### **Linetype Name**

The linetype name field begins with an asterisk (\*) and should provide a unique, descriptive name for the linetype.

### **Description**

The description of the linetype should help you visualize the linetype when you edit the LIN file. The description is also displayed in the Linetype Manager and in the Load or Reload Linetypes dialog box.

The description is optional and can include

- A simple representation of the linetype pattern using ASCII text
- An expanded description of the linetype
- A comment such as "Use this linetype for hidden lines"

If you omit the description, do not insert a comma after the linetype name. A description cannot exceed 47 characters.

### **Alignment Field (A)**

The alignment field specifies the action for pattern alignment at the ends of individual lines, circles, and arcs. Currently, AutoCAD LT supports only A-type alignment, which guarantees that the endpoints of lines and arcs start and stop with a dash.

For example, suppose you create a linetype called CENTRAL that displays the repeating dash-dot sequence commonly used as a centerline. AutoCAD LT adjusts the dash-dot sequence on an individual line so that dashes and line endpoints coincide. The pattern fits the line so that at least half of the first dash begins and ends the line. If necessary, the first and last dashes are lengthened. If a line is too short to hold even one dash-dot sequence, AutoCAD LT draws a continuous line between the endpoints. For arcs also, the pattern is adjusted so that dashes are drawn at the endpoints. Circles do not have endpoints, but AutoCAD LT adjusts the dash-dot sequence to provide a reasonable display.

You must specify A-type alignment by entering **a** in the alignment field.

### Pattern Descriptors

Each pattern descriptor field specifies the length of segments making up the linetype, separated by commas (no spaces are allowed):

- A positive decimal number denotes a pen-down (dash) segment of that length.
- A negative decimal number denotes a pen-up (space) segment of that length.
- A dash length of 0 draws a dot.

You can enter up to 12 dash-length specifications per linetype, provided they fit on one 80-character line in the LIN file. You need to include only one complete repetition of the linetype pattern defined by pattern descriptors. When the linetype is drawn, AutoCAD LT uses the first pattern descriptor for the starting and ending dashes. Between the starting and ending dashes, the pattern dash specifications are drawn sequentially, beginning with the second dash specification and restarting the pattern with the first dash specification when required.

A-type alignment requires that the first dash length be 0 or greater (a pen-down segment). The second dash length should be less than 0 if you need a pen-up segment and more than 0 if you are creating a continuous linetype. You must have at least two dash specifications for A-type alignment.

### To create a simple linetype from the Command prompt

- 1 At the command prompt, enter **-linetype**.
- 2 Enter **c** (Create).
- 3 Enter a name for the linetype and press ENTER.  
The linetype name can include up to 255 characters. Linetype names can contain letters, digits, and the special characters dollar sign (\$), hyphen (-), and underscore (\_). Linetype names cannot include blank spaces.
- 4 In the Create or Append Linetype File dialog box, select an LIN linetype library file from the File Name box and choose Save.  
If you select an existing file, the new linetype name is added to the linetype names in the file.
- 5 Enter text that describes the new linetype (optional).

- 6 At the Enter Pattern prompt, specify the pattern of the line. Follow these guidelines:
  - All linetypes must begin with a dash.
  - Enter zeros for dots.
  - Enter negative real numbers for spaces. The value defines the length of the space in drawing units.
  - Enter positive real numbers for dashes. The value defines the length of the dash in drawing units.
  - Separate each dot, dash, or space value from the next with a comma.
  - Use a space between a dot and a dash.
- 7 Press ENTER to end the command.

---

**NOTE** When you create a linetype, it is not loaded into your drawing automatically. Use the Load option of LINETYPE.

---

#### **To add a simple linetype to a LIN file**

- 1 Open the *acadlt.lin* or *acadltiso.lin* file in a text editor that saves in ASCII format (for example, Notepad).
- 2 Create a header line that includes an asterisk and a linetype pattern name. The name of the linetype pattern is limited to 31 characters.
- 3 (Optional) To include a description in the header line, follow the linetype pattern name with a comma and description text.
- 4 Create a descriptor line that includes:
  - All linetypes must begin with a dash.
  - Enter zeros for dots.
  - Enter negative real numbers for spaces. The value defines the length of the space in drawing units.
  - Enter positive real numbers for dashes. The value defines the length of the dash in drawing units.
  - Separate each dot, dash, or space value from the next with a comma.
  - Use a space between a dot and a dash.

## Quick Reference

### Commands

#### LINETYPE

Loads, sets, and modifies linetypes.

### System Variables

#### MEASUREINIT

Controls whether a drawing you start from scratch uses imperial or metric default settings.

## Text in Custom Linetypes

Characters from text fonts can be included in linetypes.

Characters from text fonts can be included in linetypes. Linetypes with embedded characters can denote utilities, boundaries, contours, and so on. As with simple linetypes, lines are dynamically drawn as you specify the vertices. Characters embedded in lines are always displayed completely; they are never trimmed.

Embedded text characters are associated with a text style in the drawing. Any text styles associated with a linetype must exist in the drawing before you load the linetype.

The format for linetypes that include embedded characters is similar to that for simple linetypes in that it is a list of pattern descriptors separated by commas.

### Character Descriptor Format

The format for adding text characters in a linetype description is as follows:

```
["text",textstyle, scale, rotation, xoffset, yoffset]
```


This format is added as a descriptor to a simple linetype. For example, a linetype called HOT\_WATER\_SUPPLY is defined as

```
*HOT_WATER_SUPPLY, ---- HW ---- HW ---- HW ---- HW ---- HW ----  
A, .5, -.2, ["HW", STANDARD, S=.1, U=0.0, X=-0.1, Y=-.05], -.2
```

This indicates a repeating pattern starting with a dash 0.5 drawing units long, a space 0.2 drawing units long, the characters *HW* with some scale and placement parameters, and another space 0.2 drawing units long. The text



characters come from the text font assigned to the STANDARD text style at a scale of 0.1, an upright rotation of 0 degrees, an *X* offset of -0.1, and a *Y* offset of -0.05. This pattern continues for the length of the line, ending with a dash 0.5 drawing units long. The linetype would be displayed as shown below.

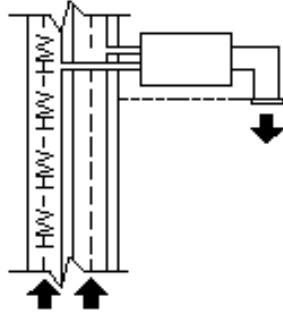

Notice that the total upstroke length is  $0.2 + 0.2 = 0.4$  and that the text origin is offset -.01 units in the *X* direction from the end of the first upstroke. An equivalent linetype would be

```
*HOT_WATER_SUPPLY,----- HW ----- HW ----- HW ----- HW ----- HW -----
A, .5, -.1, ["HW", STANDARD, S=.1, U=0.0, X=0.0, Y=-.05], -.3
```

The total upstroke is still  $0.1 + 0.3 = 0.4$ , but the text origin is not offset in the *X* direction.

Additional information about each field in the character descriptor follows. The values to be used are signed decimal numbers such as 1, -17, and 0.01.

**text** The characters to be used in the linetype.

**text style name** The name of the text style to be used. If no text style is specified, AutoCAD LT uses the currently defined style.

**scale** *S=value*. The scale factor to be used for the text style relative to the scale of the linetype. The height of the text style is multiplied by the scale factor. If the height is 0, the value for *S=value* alone is used as the height.

**rotation** *U=value*, *R=value*, or *A=value*. *U=* specifies upright or easy-to-read text. *R=* specifies relative or tangential rotation with respect to the line. *A=* specifies absolute rotation of the text with respect to the origin; that is, all text has the same rotation regardless of its position relative to the line. The value can be appended with a *d* for degrees (degrees is the default value), *r* for radians, or *g* for grads. If rotation is omitted, 0 relative rotation is used.

Rotation is centered between the baseline and the nominal cap height.

---

**NOTE** Drawings containing legacy linetypes that do not use the U (upright) rotation flag can be updated to the latest linetype definition by reloading the linetype from the LIN files. Custom linetypes can be updated by changing the R (rotation) flag to the U (upright) flag prior to reloading a linetype definition. For information on loading a linetype, see Load Linetypes.

---

**xoffset** *X=value*. The shift of the text on the *X* axis of the linetype, which is along the line. If *xoffset* is omitted or is 0, the text is elaborated with no offset. Use this field to control the distance between the text and the previous pen-up or pen-down stroke. This value is not scaled by the scale factor defined by *S=value*, but it is scaled to the linetype.

**yoffset** *Y=value*. The shift of the text in the *Y* axis of the linetype, which is at a 90-degree angle to the line. If *yoffset* is omitted or is 0, the text is elaborated with no offset. Use this field to control the vertical alignment of the text with respect to the line. This value is not scaled by the scale factor defined by *S=value*, but it is scaled to the linetype.

#### To include text characters in linetypes

- 1 Create a simple linetype, as described in [To add a simple linetype to a LIN file](#) on page 23.
- 2 Add the text character descriptor within the linetype pattern, using the following format:

```
["text",textstylename,scale,rotation,xoffset,yoffset]
```

## Quick Reference

### Commands

#### LINETYPE

Loads, sets, and modifies linetypes.

### System Variables

#### MEASUREINIT

Controls whether a drawing you start from scratch uses imperial or metric default settings.

# Custom Hatch Patterns

# 3

AutoCAD LT® provides a library of standard hatch patterns in the *acadlt.pat* and *acadltiso.pat* files. You can use the hatch patterns as they are, modify them, or create your own custom hatch patterns.

## Overview of Hatch Pattern Definitions

In addition to using the predefined hatch patterns that are supplied, you can design and create your own custom hatch patterns.

In addition to using the predefined hatch patterns that are supplied, you can design and create your own custom hatch patterns. Developing a hatch pattern definition requires knowledge, practice, and patience. Because customizing hatches requires familiarity with hatch patterns, it is not recommended for new users.

The hatch patterns supplied by AutoCAD LT are stored in the *acadlt.pat* and *acadltiso.pat* text files. You can add hatch pattern definitions to this file or create your own files.

Regardless of where the definition is stored, a custom hatch pattern has the same format. It has a header line with a name, which begins with an asterisk and is no more than 31 characters long, and an optional description:

```
*pattern-name, description
```

It also has one or more line descriptors of the following form:

```
angle, x-origin,y-origin, delta-x,delta-y,dash-1,dash-2, ...
```

The default hatch pattern ANSI31 shown in the Boundary Hatch and Fill dialog box looks like this:



and is defined as follows:

```
*ANSI31, ANSI Iron, Brick, Stone masonry  
45, 0,0, 0,.125
```

The pattern name on the first line, `*ANSI31`, is followed by a description: `ANSI Iron, Brick, Stone masonry`. This simple pattern definition specifies a line drawn at an angle of 45 degrees, that the first line of the family of hatch lines is to pass through the drawing origin (0,0), and that the spacing between hatch lines of the family is to be 0.125 drawing units.

Hatch pattern definitions follow these rules:

- Each line in a pattern definition can contain up to 80 characters. You can include letters, numbers, and the special characters underline (`_`), hyphen (`-`), and dollar sign (`$`). However, you must begin a pattern definition with a letter or number, not a special character.
- AutoCAD LT ignores both blank lines and text to the right of a semicolon.
- Each pattern line is considered to be the first member of a line family, created by applying the delta offsets in both directions to generate an infinite family of parallel lines.
- The *delta-x* value indicates the displacement between members of the family in the direction of the line. It is used only for dashed lines.
- The *delta-y* value indicates the spacing between members of the family; that is, it is measured perpendicular to the lines.
- A line is considered to be of infinite length. A dash pattern is superimposed on the line.

---

**NOTE** A blank line must be placed after the last hatch pattern definition in a PAT file. If a blank line is not placed after the last hatch pattern definition, the last hatch pattern definition will not be accessible when creating a hatch fill.

---

The process of hatching consists of expanding each line in the pattern definition to its infinite family of parallel lines. All selected objects are checked for intersections with any of these lines; any intersections cause the hatch lines to be turned on and off as governed by the hatching style. Each family

of hatch lines is generated parallel to an initial line with an absolute origin to guarantee proper alignment.

If you create a very dense hatch, AutoCAD LT may reject the hatch and display a message indicating that the hatch scale is too small or its dash length too short. You can change the maximum number of hatch lines by setting the MaxHatch system registry variable using SETENV and entering a number between 100 and 10000000 (ten million).

---

**NOTE** When changing the value of MaxHatch, you must enter MaxHatch with the capitalization as shown.

---

### To create a simple hatch pattern

- 1 Open the *acadlt.pat* or *acadltiso.pat* file in a text editor that saves in ASCII format (for example, Microsoft® Windows® Notepad).
- 2 Create a header line that includes an asterisk and a pattern name. The name of the hatch pattern is limited to 31 characters.
- 3 (Optional) To include a description in the header line, follow the pattern name with a comma and description text.
- 4 Create a descriptor line that includes
  - An angle at which the line is drawn
  - An *X,Y* origin point
  - A *delta-x* of 0
  - A *delta-y* of any value

## Quick Reference

### Commands

#### ADCENTER

Manages and inserts content such as blocks, xrefs, and hatch patterns.

#### FILL

Controls the filling of objects such as hatches, 2D solids, and wide polylines.

HATCH

HATCHEDIT

Modifies an existing hatch or fill.

SOLID

Creates solid-filled triangles and quadrilaterals.

### **System Variables**

FILLMODE

Specifies whether hatches and fills, 2D solids, and wide polylines are filled in.

HPANG

Sets the angle for new hatch patterns.

HPBOUND

Controls the object type created by HATCH and BOUNDARY.

HPDOUBLE

Specifies hatch pattern doubling for user-defined patterns.

HPNAME

Sets the default hatch pattern name.

HPSCALE

Sets the hatch pattern scale factor.

HPSPACE

Sets the hatch pattern line spacing for user-defined patterns.

## **Hatch Patterns with Dashed Lines**

To define dashed-line patterns, you append dash-length items to the end of the line definition item.

To define dashed-line patterns, you append dash-length items to the end of the line definition item. Each dash-length item specifies the length of a segment making up the line. If the length is positive, a pen-down segment is drawn. If the length is negative, the segment is pen-up, and it is not drawn. The pattern starts at the origin point with the first segment and cycles through

the segments in circular fashion. A dash length of 0 draws a dot. You can specify up to six dash lengths per pattern line.

The hatch pattern ANSI33, shown in the Boundary Hatch and Fill dialog box, looks like this:



and is defined as follows:

```
*ANSI33, ANSI Bronze, Brass, Copper
45, .176776695,0, 0,.25, .125,-.0625
```

For example, to modify a pattern for 45-degree lines to draw dashed lines with a dash length of 0.5 units and a space between dashes of 0.5 units, the line definition would be

```
*DASH45, Dashed lines at 45 degrees
45, 0,0, 0,.5, .5,-.5
```


This is the same as the 45-degree pattern shown in [Overview of Hatch Pattern Definitions](#) on page 27, but with a dash specification added to the end. The pen-down length is 0.5 units, and the pen-up length is 0.5, meeting the stated objectives. If you wanted to draw a 0.5-unit dash, a 0.25-unit space, a dot, and a 0.25-unit space before the next dash, the definition would be

```
*DDOT45, Dash-dot-dash pattern: 45 degrees
45, 0,0, 0,.5, .5,-.25, 0,-.25
```

The following example shows the effect of *delta-x* specifications on dashed-line families. First, consider the following definition:

```
*GOSTAK
0, 0,0, 0,.5, .5,-.5
```


This draws a family of lines separated by 0.5, with each line broken equally into dashes and spaces. Because *delta-x* is zero, the dashes in each family member line up. An area hatched with this pattern would look like this:



Now change the pattern to

```
*SKEWED  
0, 0,0, .5,.5, .5,-.5
```

It is the same, except that you have set *delta-x* to 0.5. This offsets each successive family member by 0.5 in the direction of the line (in this case, parallel to the *X* axis). Because the lines are infinite, the dash pattern slides down the specified amount. The hatched area would look like this:



### To create a hatch pattern with dashed lines

- 1 Open the *acadlt.pat* or *acadltiso.pat* file in a text editor that saves in ASCII format (for example, Notepad).
- 2 Create a header line that includes an asterisk and a pattern name. The name of the hatch pattern is limited to 31 characters.
- 3 (Optional) To include a description in the header line, follow the pattern name with a comma and description text.
- 4 Create a descriptor line that includes
  - An angle at which the line is drawn
  - An *X,Y* origin point
  - A *delta-x* of any value if you want to offset alternating lines in the line family
  - A *delta-y* of any value
  - A value for a dash length
  - A value for a dot length
  - An optional second value for a different dash length
  - An optional second value for a different dot length



## Quick Reference

### Commands

#### ADDCENTER

Manages and inserts content such as blocks, xrefs, and hatch patterns.

#### FILL

Controls the filling of objects such as hatches, 2D solids, and wide polylines.

#### HATCH

#### HATCHEDIT

Modifies an existing hatch or fill.

#### SOLID

Creates solid-filled triangles and quadrilaterals.

### System Variables

#### FILLMODE

Specifies whether hatches and fills, 2D solids, and wide polylines are filled in.

#### HPANG

Sets the angle for new hatch patterns.

#### HPBOUND

Controls the object type created by HATCH and BOUNDARY.

#### HPDOUBLE

Specifies hatch pattern doubling for user-defined patterns.

#### HPNAME

Sets the default hatch pattern name.

#### HPSCALE

Sets the hatch pattern scale factor.

#### HPSPACE


Sets the hatch pattern line spacing for user-defined patterns.

## Hatch Patterns with Multiple Lines

Complex hatch patterns can have an origin that passes through offsets from the origin and can have multiple members in the line family.

Not all hatch patterns use origin points of 0,0. Complex hatch patterns can have an origin that passes through offsets from the origin and can have multiple members in the line family. In composing more complex patterns, you need to carefully specify the starting point, offsets, and dash pattern of each line family to form the hatch pattern correctly.


The hatch pattern AR-B816 shown in the Boundary Hatch and Fill dialog box looks like this:

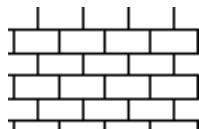

and is defined as follows with multiple lines describing the pattern:

```
*AR-B816, 8x16 Block elevation stretcher bond
0, 0,0, 0,8
90, 0,0, 8,8, 8,-8
```

The following figure illustrates a squared-off, inverted-U pattern (one line up, one over, and one down). The pattern repeats every one unit, and each unit is 0.5 high and wide.

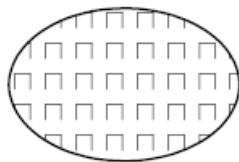

This pattern would be defined as follows:

```
*IUS, Inverted U's
90, 0,0, 0,1, .5,-.5
0, 0,.5, 0,1, .5,-.5
270, .5,.5, 0,1, .5,-.5
```

The first line (the up bar) is a simple dashed line with 0,0 origin. The second line (the top bar) should begin at the end of the up bar, so its origin is 0,.5. The third line (the down bar) must start at the end of the top bar, which is at

.5,.5 for the first instance of the pattern, so its origin is at this point. The third line of the pattern could be the following:


```
90, .5,0, 0,1, .5,-.5
```

or

```
270, .5,1, 0,1, -.5,.5
```

The dashed pattern starts at the origin points and continues in the vector direction given by the angle specification. Therefore, two dashed-line families that are opposed 180 degrees are not alike. Two solid-line families are alike.

The following pattern creates six-pointed stars.

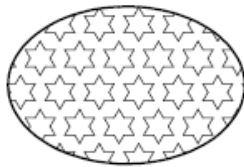

This example can help you refine your skills at pattern definition. (Hint: 0.866 is the sine of 60 degrees.)

The following is the AutoCAD LT definition of this pattern:

```
*STARS,Star of David  
0, 0,0, 0,.866, .5,-.5  
60, 0,0, 0,.866, .5,-.5  
120, .25,.433, 0,.866, .5,-.5
```

### To create a hatch pattern with multiple lines

- 1 Open the *acadlt.pat* or *acadtiso.pat* file in a text editor that saves in ASCII format (for example, Notepad).
- 2 Create a header line that includes an asterisk and a pattern name. The name of the hatch pattern is limited to 31 characters.
- 3 (Optional) To include a description in the header line, follow the pattern name with a comma and description text.
- 4 Create a descriptor line that includes
  - An angle at which the line is drawn
  - An *X,Y* origin point
  - A *delta-x* of any value if you want to offset alternating lines in the line family

- A *delta-y* of any value
  - A value for a dash length
  - A value for a dot length
  - An optional second value for a different dash length
  - An optional second value for a different dot length
- 5 Create a second line including all the parameters in the previous step.
  - 6 (Optional) Create additional lines to complete the multiple-line hatch pattern.

## Quick Reference

### Commands

ADDCENTER

Manages and inserts content such as blocks, xrefs, and hatch patterns.

FILL

Controls the filling of objects such as hatches, 2D solids, and wide polylines.

HATCH

HATCHEDIT

Modifies an existing hatch or fill.

SOLID

Creates solid-filled triangles and quadrilaterals.

### System Variables

FILLMODE

Specifies whether hatches and fills, 2D solids, and wide polylines are filled in.

HPANG

Sets the angle for new hatch patterns.

HPBOUND

Controls the object type created by HATCH and BOUNDARY.

**HPDOUBLE**

Specifies hatch pattern doubling for user-defined patterns.

**HPNAME**

Sets the default hatch pattern name.

**HPSCALE**

Sets the hatch pattern scale factor.

**HPSPACE**

Sets the hatch pattern line spacing for user-defined patterns.



# User Interface Customization

# 4

When you work in the program, you use a variety of ribbon panels, menus, toolbars, shortcut keys, and other user interface elements to help you accomplish your tasks efficiently. You can also streamline your environment by customizing these elements.

## Understand User Interface Customization

Using the customization tools of AutoCAD LT, you can tailor your drawing environment to suit your needs. Customization capabilities, including the customize (CUIx) file format and the Customize User Interface (CUI) Editor, help you to easily create and modify customized content.

## Overview of the Customization

Customization of the user interface is done by modifying the XML-based CUIx file with the Customize User Interface (CUI) Editor. The XML-based CUIx file replaces the customization and menu files from releases prior to AutoCAD LT 2011. Instead of using a text editor to customize menu files (MNU and MNS files) used in release prior to AutoCAD 2006, you customize the user interface from within AutoCAD LT. You can

- Add or change toolbars, menus, and ribbon panels (including shortcut menus, image tile menus, and tablet menus)
- Add and modify the commands on the Quick Access toolbar
- Create or change workspaces
- Assign commands to various user interface elements

- Create or change macros
- Define DIESEL strings
- Create or change aliases
- Add descriptive text for command tooltips
- Control the properties displayed when using rollover tooltips

### **Customizable User Interface Elements**

The editor allows you to create and manage commands that are used in the CUIx file in a centralized location. Along with commands, you are able to customize many of the different user interface elements. From the CUI Editor you can customize

- Double click actions
- Legacy user interface elements (tablets, tablet buttons, screen menus and image tile menus)
- Mouse buttons
- Pull-down menus
- Quick Access toolbar
- Quick properties
- Toolbars
- Ribbon panels
- Ribbon tabs
- Ribbon contextual tab states
- Rollover tooltips
- Shortcut keys
- Shortcut menus
- Temporary override keys
- Workspaces



## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

### System Variables

#### DBLCLKEDIT

Controls the double click editing behavior in the drawing area.

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Use the Customization Environment

You customize the XML-based CUIx file with the Customize User Interface (CUI) Editor to create new commands, user interface elements, and workspaces.

## Overview of the Customize User Interface (CUI) Editor


The Customize User Interface (CUI) Editor is used to customize the user interface of AutoCAD LT. Before you start customizing your own menus, toolbars, and other user interface elements, you should familiarize yourself with the customization environment.

To open the Customize User Interface Editor, click Manage tab ► Customization panel ► User Interface. Once the Customize User Interface (CUI) Editor is opened, view the contents of the loaded customization files by expanding the elements in the tree structure, and view the properties of the elements by selecting them.

Select the Transfer tab to see how to migrate or transfer customizations; select the Customize tab to see how to create or modify user interface elements.

Once you are familiar with the environment, you can start to take advantage of the capabilities of the tools. For more information about the improved customization capabilities, see [How Customization Has Changed](#) on page 48.

Following is an example of the Customize User Interface (CUI) Editor, Customize tab. You use this tab to customize interface elements in CUIx files.

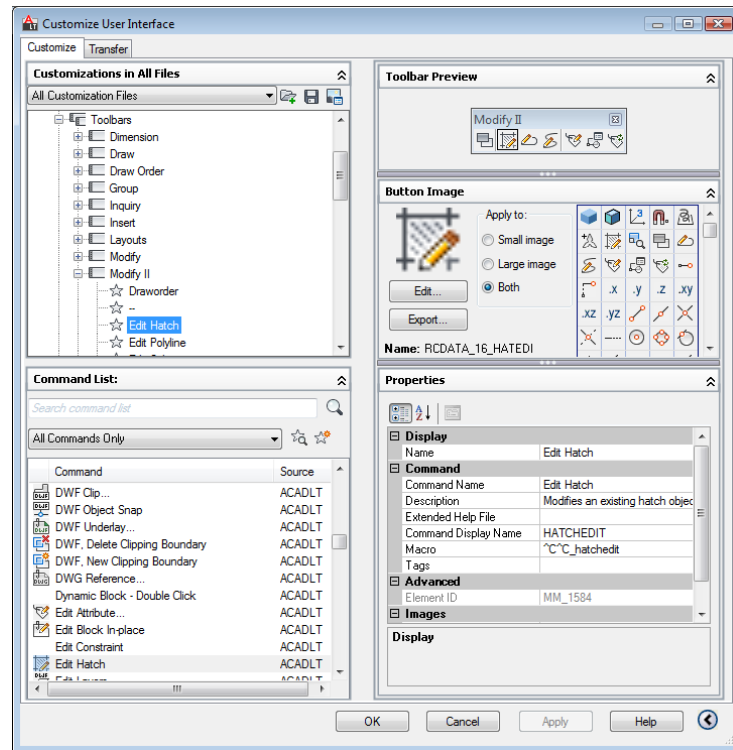

Customize the user interface to make the drawing environment specific to certain types of tasks. For example, if you want a toolbar that contains the commands you use most often, you can create a new Favorites toolbar in the Customize User Interface (CUI) Editor and then load the new toolbar in AutoCAD LT.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

### System Variables

#### DBLCLKEDIT

Controls the double click editing behavior in the drawing area.

#### TOOLTIPS


Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Work with the Customizations In Pane

The Customizations In pane is used to navigate the different user interface elements that are in the loaded customization files.

In this pane, you create and modify user interface elements such as workspaces, toolbars, and menus. Along the top of the pane you will find tools that load partial customization files into the main customization file, save changes to the loaded customization files, and control how you view the loaded customization files.

The tree view is used to create new user interface elements such as toolbars and menus. Once a new user interface element is created, commands can then be added by dragging them from the Command List pane. Along with being able to create user interface elements and add commands to a user interface element, you can change the order in which commands appear on toolbars, menus, and ribbon panels by dragging them up and down.

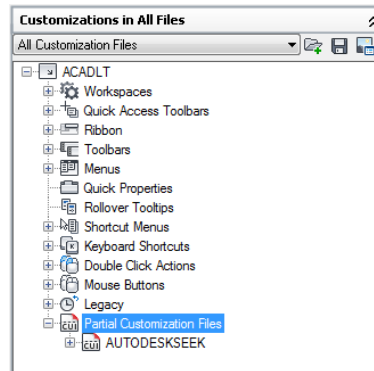

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Work with the Command List Pane

The Command List pane is used to create and locate commands that are contained in the loaded customization files.

Use the Create a New Command button to create a new custom command in the CUIx file that is listed in the Customization File drop-down list at the top of the Customizations In *<file name>* pane. A command must be created before it can be associated with a user interface element in the Customizations In *<file name>* pane.

Next to the Create a New Command button is the Find Command or Text button. The Find Command or Text button displays the Find and Replace dialog box, where you can search for or replace text strings in the Command List pane only.


The Categories drop-down list near the top of the Command List pane contains a listing of preset categories used to filter the commands displayed in the Command list box. There are many different categories that you can select from, for example

- **All Commands.** Displays all of the commands for each of the loaded customization files.

- **Custom Commands.** Displays the user defined commands that have been added to the loaded customization files. These commands are not part of a customization file that ships with AutoCAD LT.
- **Controls Elements.** Displays the special controls that can be added to a toolbar or ribbon panel, such as drop-down lists, sliders, and other controls.

Available commands and controls are displayed in the bottom of the Command List pane. The names of the available commands, the image that is assigned to a command, and the name of the customization group that the command is assigned to are displayed. When the cursor hovers over top of a command, the macro assigned to the command is displayed in a tooltip.

At the top of the Command List pane is the Command Filter field which allows you to filter the Command list based on the text string entered. The text string is matched with any part of a command name, and the commands with the matching text strings are displayed in the Command list box.

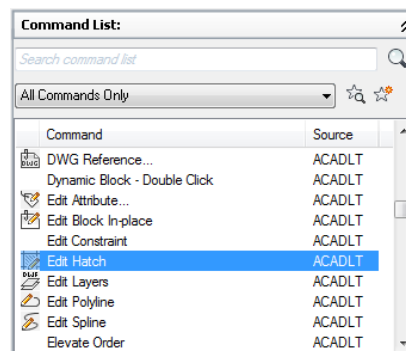

## Quick Reference

### Commands

#### CUI


Manages the customized user interface elements in the product.

## Work with the Dynamic Display Pane

The Dynamic Display pane controls the display of additional panes that respond to the item that is selected in either the Customizations In pane or Command List pane.

Based on the item selected, one or more of the following panes will be displayed:

- Button Image
- Information
- Panel Preview
- Properties
- Quick Properties
- Shortcuts
- Toolbar Preview
- Workspace Contents

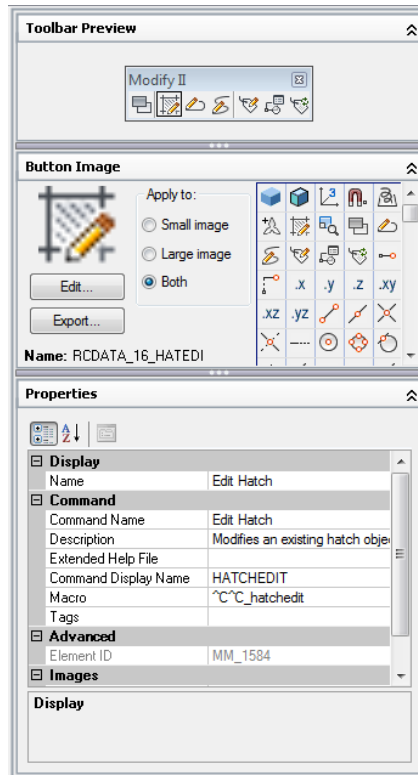

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## How Customization Has Changed

Although the basic customization techniques remain the same as in previous versions of the product, the environment that you use to customize the product was changed starting with AutoCAD 2006.

All of the previous customization options are still available. You are still able to create, edit, and delete interface elements; you can create partial customization files; you can use macros and DIESEL expressions.

However, you no longer perform customization tasks by creating or editing MNU or MNS text files by hand. All customizations are done through the program interface, in the Customize User Interface (CUI) Editor.

### Menu Files Versus Customization Files

In releases prior to AutoCAD 2006, you customized the user interface by editing an MNU or MNS file in an ASCII text editor such as Notepad. You manually entered and verified customization data in the text file, which could be a tedious and error-prone process. As a result, a simple syntax error (such as mismatched parentheses) in the text file could invalidate the entire menu file, leading you back to the text file to investigate where you made the error.

With the Customize User Interface (CUI) Editor, you drag a command to a menu or toolbar or right-click to add, delete, or modify a user interface element. The Customize User Interface (CUI) Editor displays element properties and a list of options to choose from. This prevents you from creating syntax errors or spelling mistakes that may have occurred when you manually entered text in an MNU or MNS file.

The MNU and MNS files used in the past have been replaced with just one file type, the XML-based CUIx file. CUIx is the successor to the CUI file format which was introduced in AutoCAD 2006.

The XML-based format of the CUIx file allows the product to track customizations. When upgrading to a future version of the program, all of your customizations are automatically integrated into the new release. The XML format also supports a backward-compatible customization file. This



means that you can view a CUIx file from a future version in the previous release while preserving the customization data from the future version. However, you cannot modify the future version's CUIx file in the previous release. For more information about migrating customization data, see [Transfer and Migrate Customization](#) on page 316.

The following table lists the menu files that previously shipped with the product and shows how those files are mapped to AutoCAD LT 2011.

Menu files mapped to CUIx files			
Menu file	Description	In AutoCAD LT 2011	Description of change
MNU	ASCII text file. In previous releases, defined most user interface elements. The main MNU file, <i>acdt.mnu</i> , was automatically loaded when you started the product. Partial MNU files could be loaded or unloaded as you needed them during a drawing session.	CUIx	An XML file that defines most user interface elements. The main CUIx file, <i>acadlt.cuix</i> , is automatically loaded when you start the product. Partial CUIx files can be loaded or unloaded as you need them during a drawing session.
MNS	Source menu file. Was the same as the MNU ASCII text file but did not contain comments or special formatting.	CUIx	An XML file that defines most user interface elements. The main CUIx file, <i>acadlt.cuix</i> , is automatically loaded when you start the product. Partial CUIx files can be loaded or unloaded as you need them during a drawing session.
MNC	Compiled ASCII text file. Contained command strings and syntax that defined the functionality and appearance of user interface elements.	CUIx	An XML file that defines most user interface elements. The main CUIx file, <i>acadlt.cuix</i> , is automatically loaded when you start the product. Partial CUIx files can be loaded or unloaded as you

Menu files mapped to CUIx files			
Menu file	Description	In AutoCAD LT 2011	Description of change
			need them during a drawing session.
MNR	Menu resource file. Contains the bitmaps that are used by the user interface elements.	MNR	No change.

### Menu Text File Structure Versus CUI and CUIx Structure


In releases prior to AutoCAD 2006, you added, edited, and deleted menu information directly in a text file. In AutoCAD 2006 and later, you use the Customize User Interface (CUI) Editor.

Following is an example of how the Window menu looked in the legacy menu file *aclt.mnu*.

#### Contents of the Window menu in *aclt.mnu*


Window menu	Description
Close	***POP10
Close All	**WINDOW
Lock Location	ID_MnWindow [&Window]
Cascade	ID_DWG_CLOSE [C&lose]^C^C_close
Tile Horizontally	ID_WINDOW_CLOSEALL [C&lose All]^C^C_closeall
Tile Vertically	[--]
Arrange Icons	ID_WINDOW_CASCADE [&Cascade]^C^C_syswindows;_cascade
1 Drawing1.dwg	ID_WINDOW_TILE_HORZ [Tile &Horizontally]^C^C_syswindows;_hor
	ID_WINDOW_TILE_VERT [&Tile Vertically]^C^C_syswindows;_vert
	ID_WINDOW_ARRANGE [&Arrange Icons]^C^C_syswindows;_arrange

Compare the menu data above with the same menu data as it is displayed in the Customize User Interface (CUI) Editor, in the tree view.

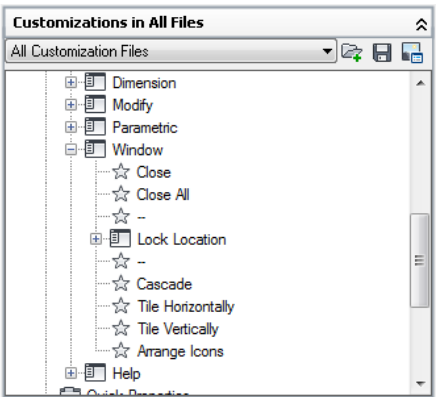


For a more detailed comparison, following are examples of the Window menu properties, Close command properties, Close All command properties, and the Window shortcut menu that is displayed with the Insert Separator option.


Window menu Properties pane

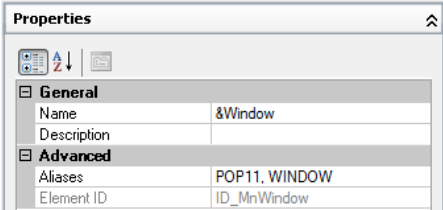


Window menu, Properties pane for the Close command

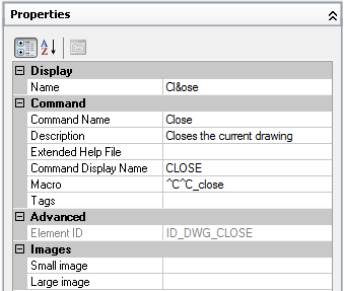

Window menu, Properties pane for the Close All command

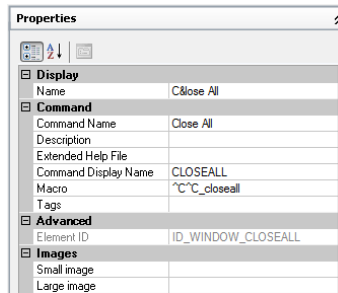

Window menu tree node, shortcut menu displayed with Insert Separator option

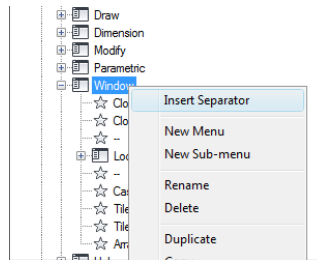


## Menu Group Versus Customization Group

There is no difference between a *menu group* (the term used in previous releases) and a *customization group*. A CUIx file loaded into AutoCAD LT must have a unique customization group name to prevent conflicts between customization files in the program.

The main CUIx file, *acadlt.cuix* by default, has a customization group named ACADLT. You can load as many customization files into the program, as long as they each have a unique customization group name.

Following is an example of how you change the ACAD customization group name in the Customize tab of the Customize User Interface (CUI) Editor. You can change the partial CUIx file (named CUSTOM in this example) using the same method.

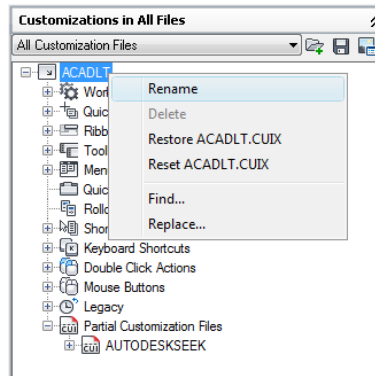

## Dynamic Help

Dynamic Help is a feature that is in the online Help system and references some of the customization elements that are found in the CUIx file when it is loaded into AutoCAD LT. What Dynamic Help does, is it looks up the Element ID of a command that has been identified in the online Help system, and where that command is currently being referenced on a ribbon panel or menu when the CUIx file is loaded.

If the command is on a ribbon panel or menu, access to the command is updated in the online Help system to reflect the new location of the command. If one of the standard commands that ships with AutoCAD LT is moved from one ribbon panel or menu to another, the online Help system will automatically reflect this change the next time it is displayed. Currently, only commands on ribbon panels and menus work with Dynamic Help.

Dynamic Help may not display properly if a command is not available:

- In one of the loaded CUIx files
- On an accessible menu, ribbon panel, or ribbon tab in the current workspace

---

**NOTE** Dynamic Help only works with the online Help documents that come with AutoCAD LT, and has no affect on third-party documentation.

---

### See also:

- [Transfer and Migrate Customization](#) on page 316
- [Create and Load a Partial CUIx File](#) on page 78

- [Create an Enterprise CUIx File](#) on page 82

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

## Customization Glossary

You should know several terms for customizing AutoCAD LT 2011.

**Customization (CUIx) file** A package file that contains multiple XML-based files and custom image files. Each one of the XML-based files contain the data for a different type of user interface element that can be customized. The custom images that are stored in the file are those that are referenced by the commands defined in the customization data and are not stored in a resource DLL. You modify a customization file through the Customize User Interface (CUI) Editor. CUIx files replace the CUI, MNU, MNS, and MNC files that were used to define menus in releases prior to AutoCAD LT 2011.

**Customization group** A name that is assigned to a CUIx file to identify customization content in the CUIx file. A CUIx file loaded into AutoCAD LT must have a unique customization group name to prevent conflicts between

CUIx files in the program. In releases prior to AutoCAD 2006, called a *menugroup*.

**Element ID** A unique identifier of an interface element. In previous releases, called a *tag*.

**Dashboard panel** An organizational structure used to lay out commands and controls for display on the dashboard, which was available in AutoCAD LT 2007 and AutoCAD LT 2008. The dashboard was replaced by the ribbon in AutoCAD LT 2009 and later. For information about transferring dashboard panels to ribbon panels, see [To copy a dashboard panel to a ribbon panel](#) on page 152.

**Enterprise customization file** A CUIx file that is typically controlled by a CAD manager. It is often accessed by many users and is stored in a shared network location. The file is read-only to users to prevent the data in the file from being changed. A CAD manager creates an enterprise CUIx file by modifying a main CUIx file and then saving the file to a shared network location. Users then specify this file in the Options dialog box, Files tab.

**Interface element** An object that can be customized, such as a toolbar, pull-down menu, shortcut key, palette, and so on. It is a node in the Customizations In <file name> pane that contains user interface items.

**Interface item** The individual parts of a user interface element, such as a toolbar button, pull-down menu item, shortcut key, temporary override key, and so on.

**Legacy Customization (CUI) file** An XML-based file that stores customization data for AutoCAD 2006 through AutoCAD LT 2009. The CUI file has been replaced by the CUIx file. A CUIx file can be generated from a CUI file using the Transfer tab of the CUI command.

**Legacy Menu (MNS) file** An ASCII based file that stores menu customization data for AutoCAD 2005 and earlier. Most of the file needed to be edited outside of AutoCAD LT using a text editor such as Notepad, but there were a few features that could be customized in AutoCAD LT using the CUSTOMIZE command. The MNS file has been replaced by the CUIx file. A CUIx file can be generated from an MNS file using the Transfer tab of the CUI command.

**Legacy Menu Template (MNU) file** An ASCII based file that is used as a template to define the contents of the MNS file when the MNU file is loaded into AutoCAD LT with the MENU command. The MNU file is used in AutoCAD 2005 and earlier, and is very similar to the MNS file. The MNU file has been replaced by the CUIx file. A CUIx file can be generated from a MNU file using the Transfer tab of the CUI command.

**Macro** A series of commands that are run in a defined sequence to accomplish a drawing task.

**Main customization file** A writable CUIx file that defines most of the user interface elements (including the standard menus, toolbars, keyboard accelerators, and so on). The *acadlt.cuix* file (the default main CUIx file) is automatically loaded when you start AutoCAD LT.

**Ribbon** An interface element that displays panels made up of commands and controls that can be docked horizontally or vertically along the program's application window.

**Ribbon panel** An organizational structure used to lay out commands and controls for display on the ribbon or as a floating user interface.

**Palette** An interface element that can be docked or floating in the drawing area. Palettes include the Command Line window, Tool Palettes Window, Properties palette, and so on.

**Partial customization file** Any CUIx file that is not defined as the main or enterprise CUIx file. You can load and unload partial CUIx files as you need them during a drawing session.

**Quick Access toolbar** An interface element that is located to the right of the application menu and provides direct access to a defined set of commands.

**Tree node** A hierarchical structure in the Customize User Interface (CUI) Editor that contains interface elements and items that can be imported, exported, and customized.

**Workspace** A collection of user interface elements, including their contents, properties, display states, and locations.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.



#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### CUSTOMIZE

Customizes tool palettes and tool palette groups.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

#### TOOLPALETTES

Opens the Tool Palettes window.

#### TOOLPALETTECLOSE

Closes the Tool Palettes window.

### **System Variables**

#### DBLCLKEDIT

Controls the double click editing behavior in the drawing area.

#### ROLLOVERTIPS

Controls the display of rollover tooltips in the application.

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Work with the Customize User Interface (CUI) Editor


With the Customize User Interface (CUI) Editor, you can create and manage standard and custom commands and user interface elements.


By customizing the user interface, you can arrange and access the commands that you frequently use. You can also extend AutoCAD LT by creating your own custom commands. Use the diagrams under this topic to understand the steps required to successfully create a custom command or to customize the various user interface elements that are available for customization.

### Create a Command

Custom commands to define a series of actions that should be taken when the custom command is used. You can also determine how the command should appear when added to a user interface.

When creating a custom command, you need to give the command a unique name, element ID, and macro. Once the basic properties of a command have been defined, you can assign values to additional properties that determine the content for the command's tooltip, an image, and search tags. For more information about creating custom commands, see [Customize Commands](#) on page 92.

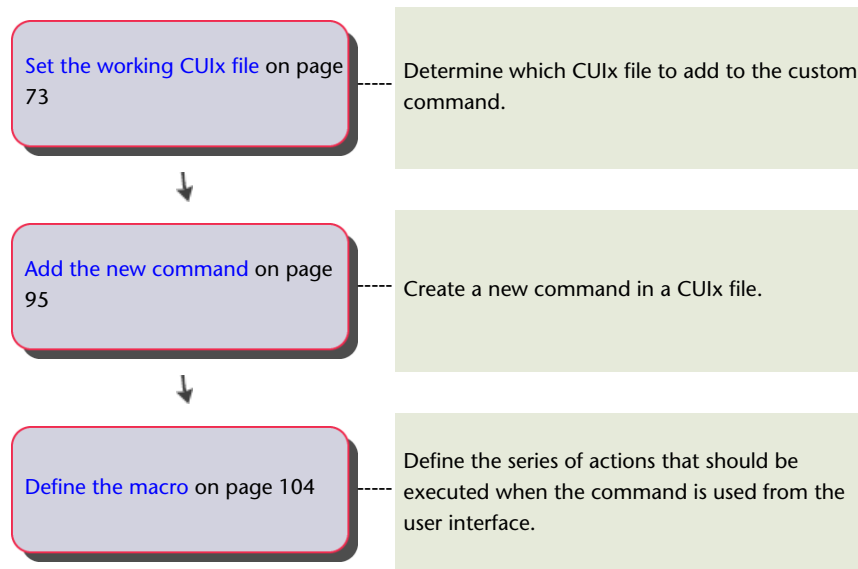

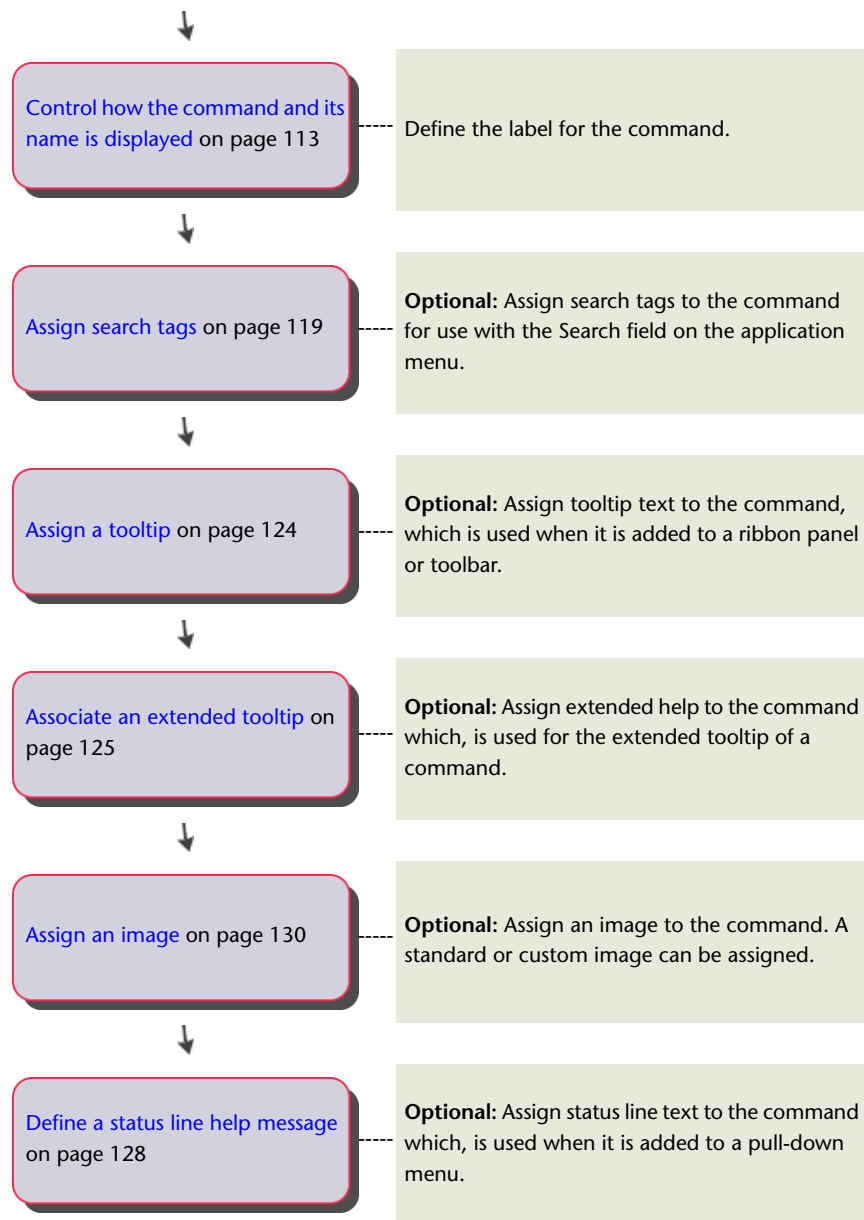

## Create User Interface Elements


User interface elements are used to organize and display commands in AutoCAD LT.

To decide what user interface elements to create, determine how often you want to access a command. Then determine if you want to add the custom command to a shortcut key, the Quick Access toolbar, a ribbon panel or another type of user interface element.

### Create a Quick Access Toolbar

You create Quick Access toolbars in the CUI Editor to determine which commands and controls are displayed on the Quick Access toolbar.

Quick Access toolbars are used to organize and display the commands that you frequently use. For more information about customizing the Quick Access toolbar, see [Quick Access Toolbars](#) on page 142.

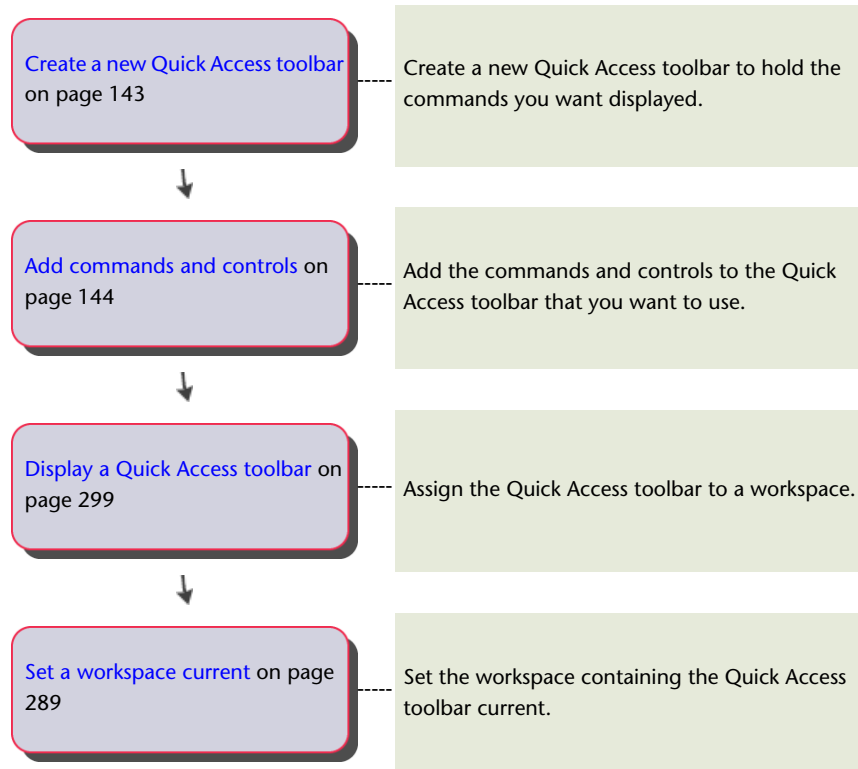


## Customize the Ribbon


Ribbon customization is broken out into three main components: panels, tabs, and contextual tab states. Each component of the ribbon is used to organize and display the commands that you want to use frequently.

### Create a Ribbon Panel

Ribbon panels organize commands and controls on the ribbon.

You use rows, sub-panels, and drop-downs on a ribbon panel to organize the commands and controls you want to display on the ribbon. Each panel is divided into two halves with a panel separator; an upper and lower half. Rows above the panel separator are displayed by default while those below it are displayed only when the panel is expanded. Each panel can also be assigned a command to its Panel Launcher button, which can be used to start an associated dialog box. For more information about ribbon panel customization, see [Ribbon Panels](#) on page 149.

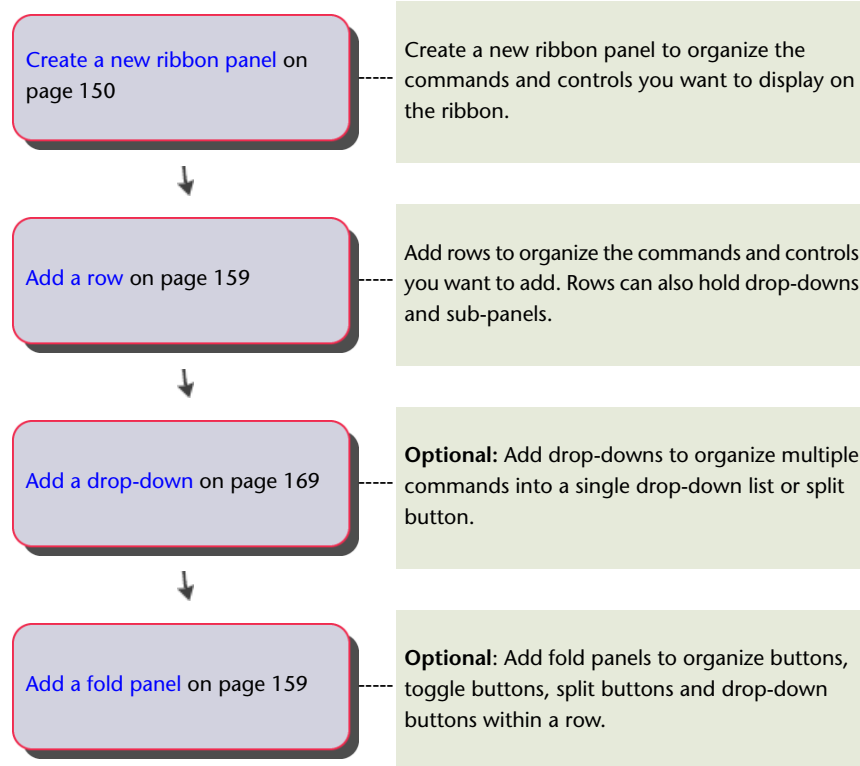

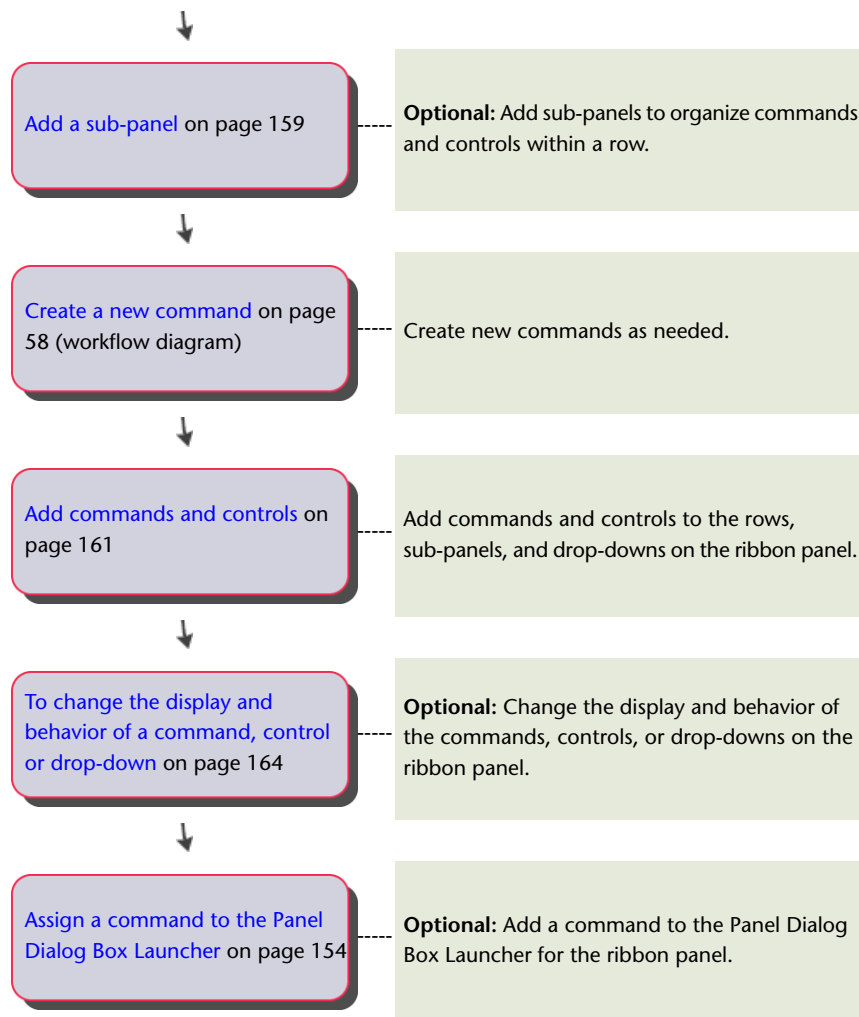


Once you have created a ribbon panel, it must be added to a ribbon tab before it can be displayed on the ribbon. For more information about assigning a ribbon panel to a ribbon panel, see the [Create a Ribbon Tab](#) on page 62 workflow diagram.

## Create a Ribbon Tab

Ribbon tabs control and organize the display of a ribbon panel on the ribbon.


You create ribbon tabs to organize multiple ribbon panels into a single group of related tools. Once ribbon panels are added to the ribbon tab, the ribbon tab must be assigned to a workspace before it is displayed on the ribbon. For more information about ribbon tab customization, see [Ribbon Tabs](#) on page 180.

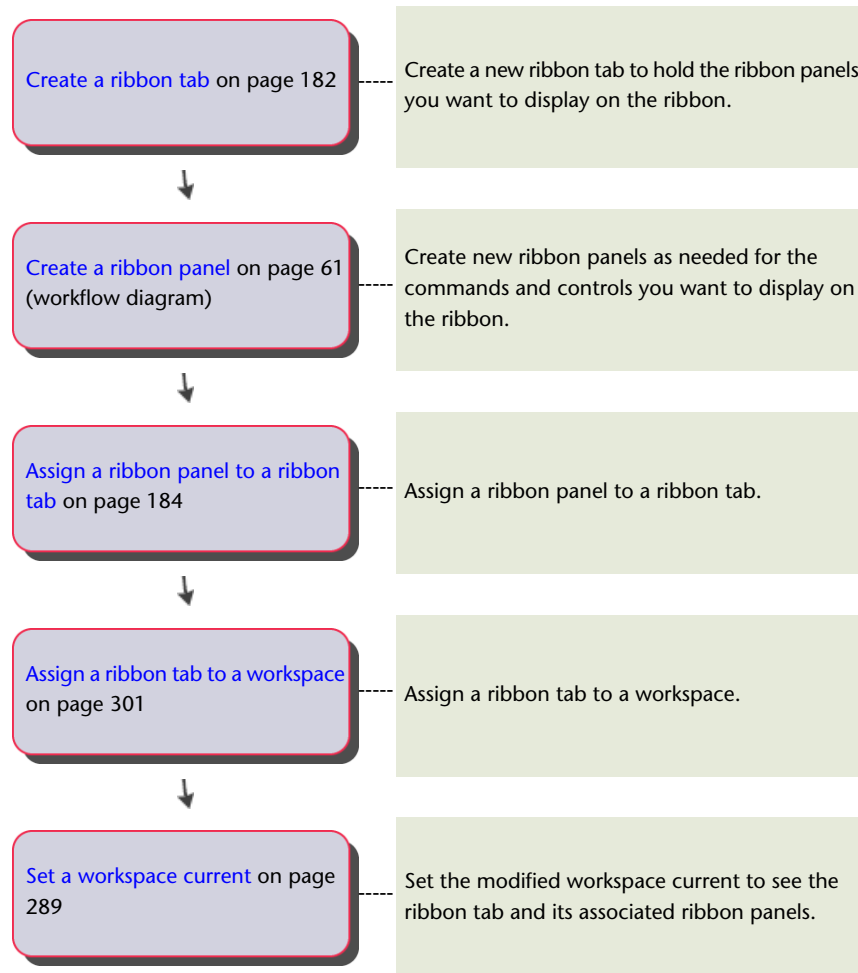

## Create a Ribbon Contextual Tab State

A contextual tab state is used to control the display of ribbon tabs on the ribbon when certain commands are active or an object is selected.


You assign ribbon tabs to a contextual tab state to display commands and controls on the ribbon when working in a specific context. For more information about the customization of ribbon contextual tab states, see [Ribbon Contextual Tab States](#) on page 186.

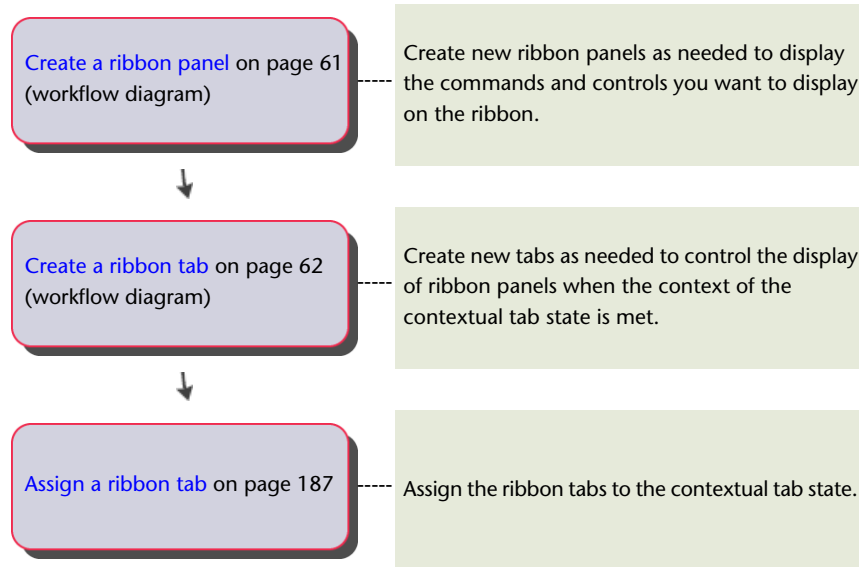


## Create a Toolbar

Toolbars organize commands and controls on small dockable windows.

You can add commands and controls to a toolbar making it easier to access the commands you use. Commands on a toolbar can be displayed as a single button or a grouping of buttons with a flyout. For more information about toolbar customization, see [Create and Edit Toolbars](#) on page 190.

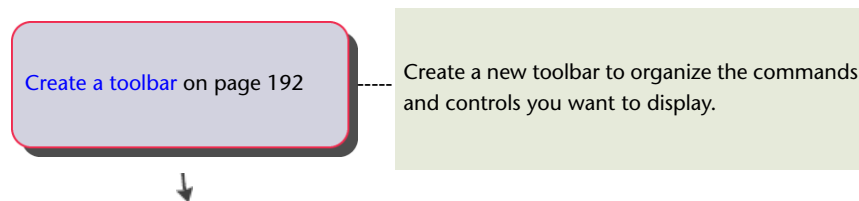



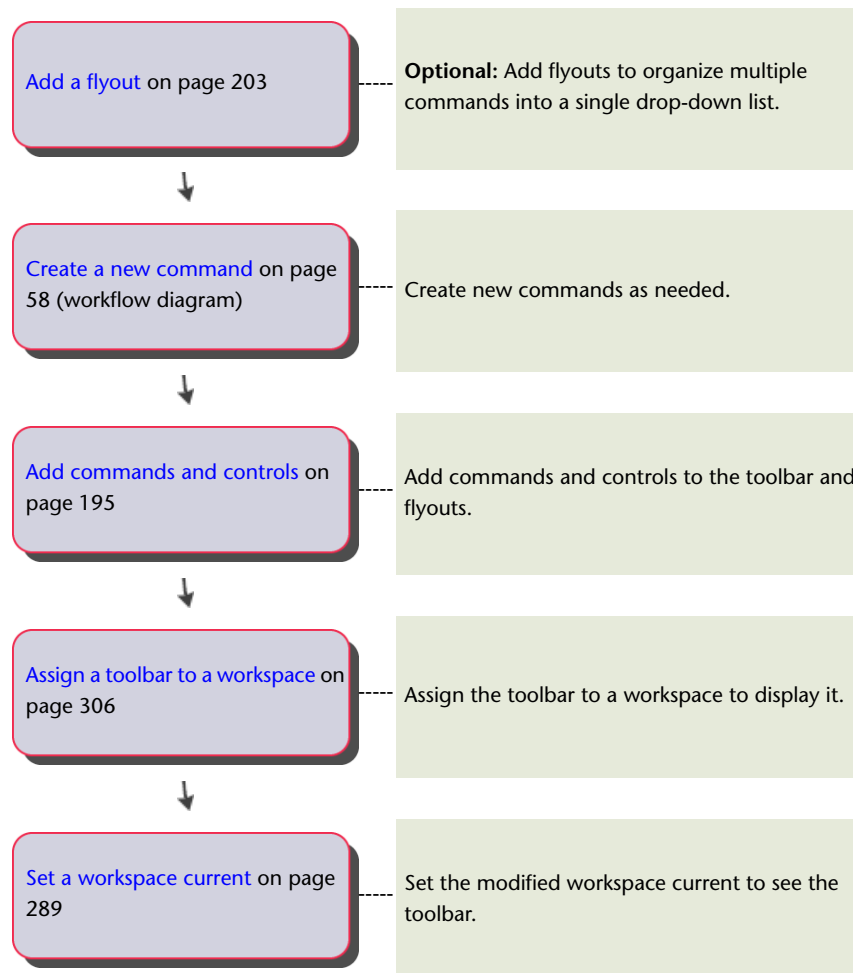


## Create a Pull-Down Menu

Pull-down menus take up the least amount of space in the application frame of AutoCAD LT of all user interface elements, while providing access to a wide range of commands.

You can add commands to a pull-down menu for easy to access to it from the menu bar, while not losing a large amount of space on the screen. Commands on a pull-down menu can be displayed as a single item or as a grouping of items with a submenu. Pull-down menus must be added to a workspace in

order for them to be displayed on the menu bar. For more information about pull-down menu customization, see [Create a Pull-Down Menu](#) on page 213.

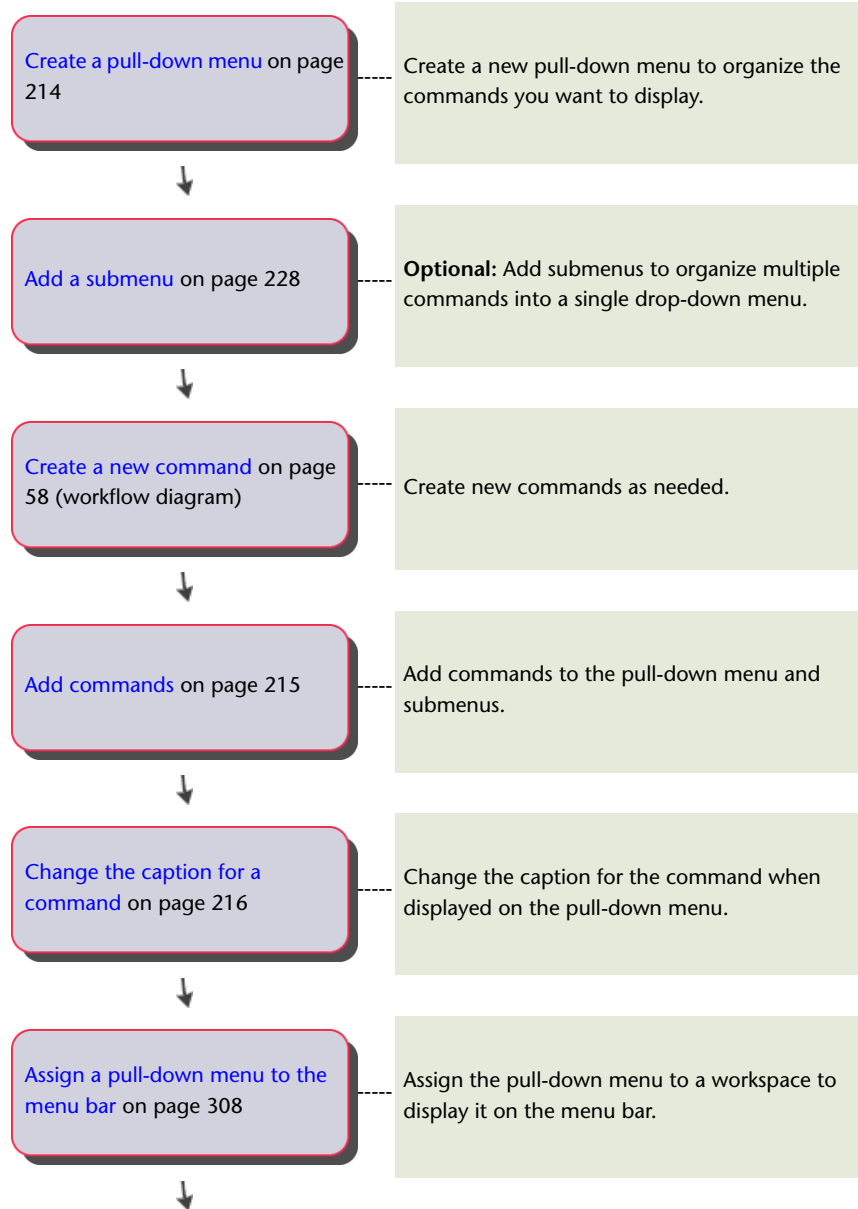

[Set a workspace current](#) on page 289

Set the modified workspace current to see the pull-down menu displayed on the menu bar.

## Create a Shortcut Menu

Shortcut menus provide contextual access to commands based on right-clicking. Contextual states vary depending on if a command is active, an object is selected, or if no command or object is selected.

You create custom shortcut menus that replace the default shortcut menus in AutoCAD LT or to insert additional commands into a specific shortcut menu. Commands on a shortcut menu can be displayed as a single item or as a grouping of items with a submenu. Unlike pull-down menus, shortcut menus do not need to be added to a workspace in order to be displayed. For more information about shortcut menu customization, see [Create a Shortcut Menu](#) on page 217.

[Create a shortcut menu](#) on page 217


Create a new shortcut menu to organize the commands you want to display.

[Add a submenu](#) on page 228

**Optional:** Add submenus to organize multiple commands into a single drop-down menu.

[Create a new command](#) on page 58 (workflow diagram)


Create new commands as needed.

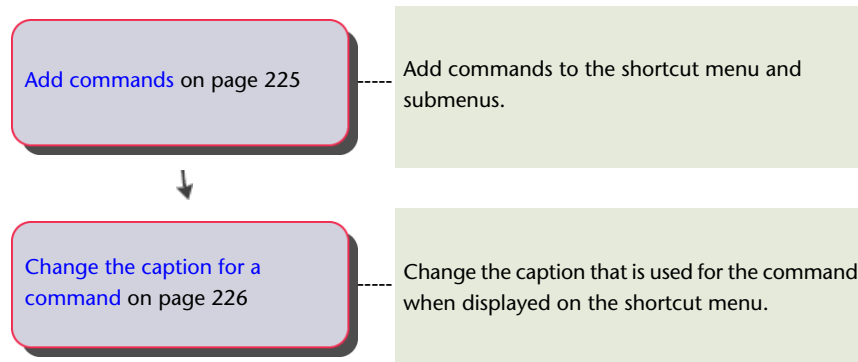

## Customize Shortcut Key

Shortcut keys start a command by with a combination of the Ctrl or Alt key and some additional keys.

You assign commands to a shortcut key combination to make it easy to start the command. You use a key combination instead of clicking a menu item or a button. Shortcut keys include using the Ctrl or Alt key and also an alphanumeric key and or the Shift key. For more information about shortcut key customization, see [Keyboard Shortcuts](#) on page 248.

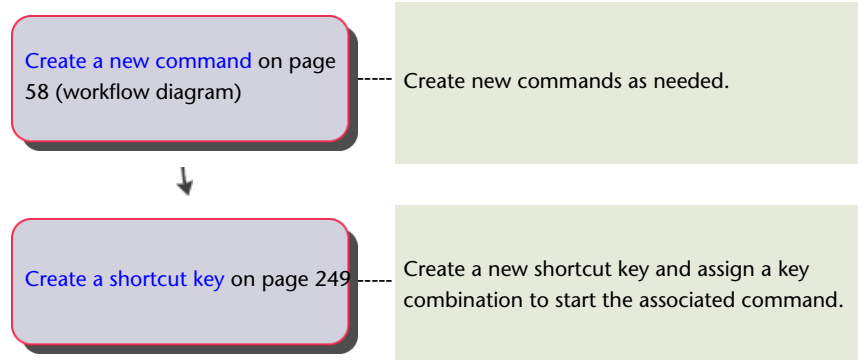


## Create a Double Click Action

Double click actions start a command based on the objects that are selected when you double-click in the drawing window.

You assign commands to a double click action, which typically starts a command that allows you to modify the selected object. For more information


about double click action customization, see [Double Click Actions](#) on page 262.

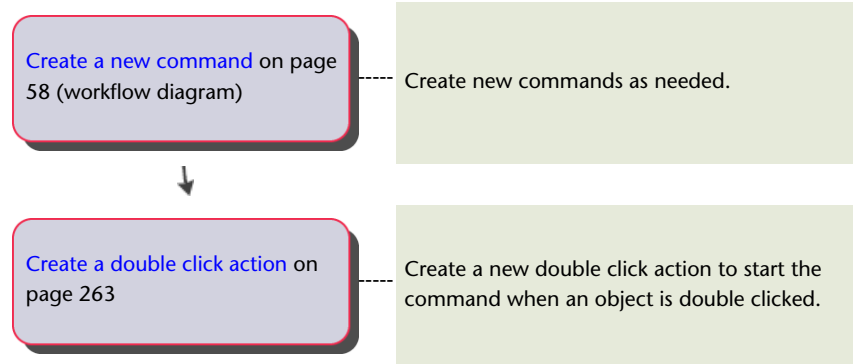

## Create a Mouse Button

Mouse buttons start a command based on a mouse click and a key combination.

You assign commands to mouse button and key combinations. For more information about mouse button customization, see [Mouse Buttons](#) on page 270.

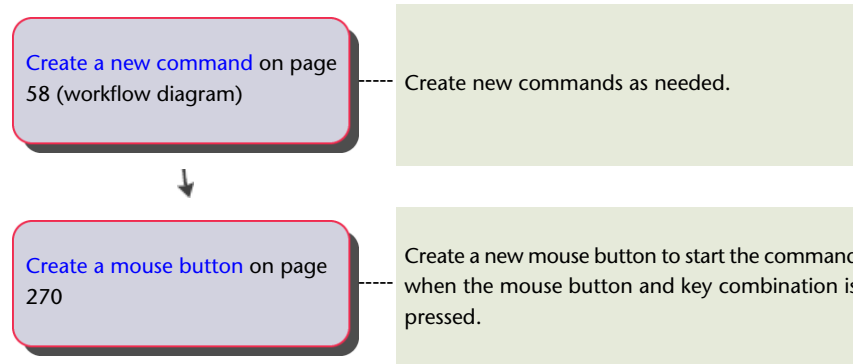

## Create and Modify Workspaces


Workspaces control the display and order in which user interface elements are displayed.


You create and manage workspaces from the user interface of AutoCAD LT or with the Customize User Interface (CUI) Editor. Creating and managing workspaces from the user interface is limited; the CUI Editor gives you full control over all user interface elements in a workspace. For more information about workspace customization, see [Customize Workspaces](#) on page 280.

## Create a Workspace from the User Interface

You can perform some basic customization of a workspace from the user interface.

From the user interface, you can control the display of toolbars and palettes; you can also add and remove commands from the Quick Access toolbar. You can interactively update the position and display of both toolbars and palettes. This cannot be done from the CUI Editor. For more information about workspace customization from the user interface, see [Control User Interface Elements Outside the CUI Editor](#) on page 293.

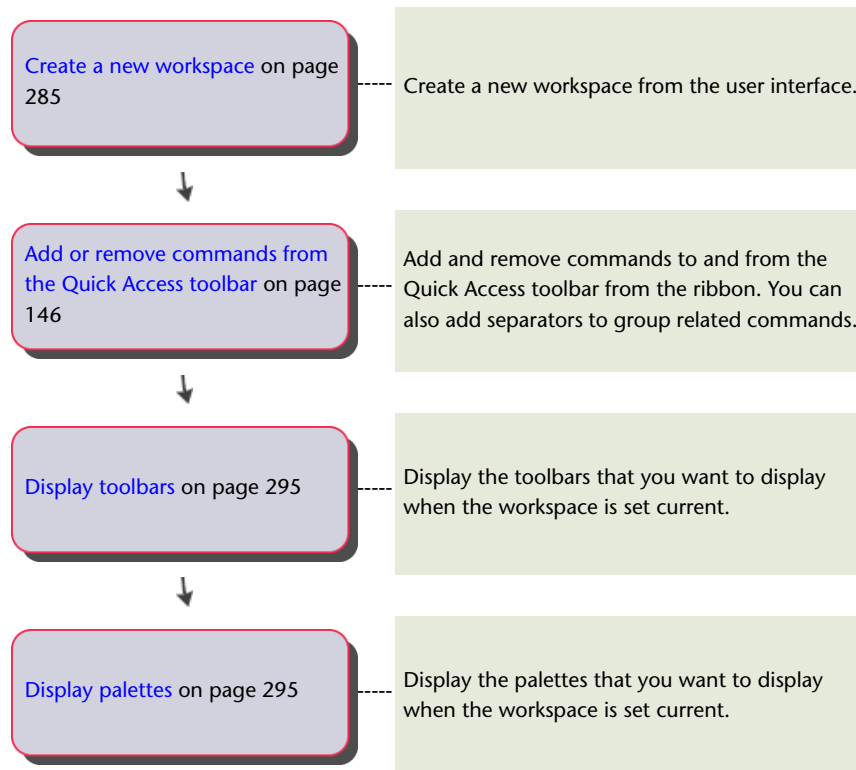


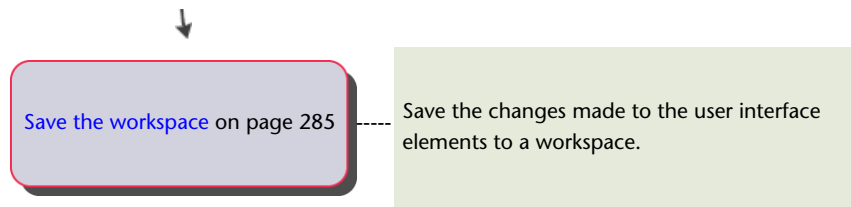


## Create a Workspace with the CUI Editor

The CUI Editor provides an editing environment to customization a workspace.

From the CUI Editor, you can control the display of the Quick Access toolbar, ribbon tabs, toolbars, menus, and palettes. You can also control the display of certain features in the application and drawing windows. For more information about workspace customization from the CUI Editor, see [Control User Interface Elements in the CUI Editor](#) on page 296.

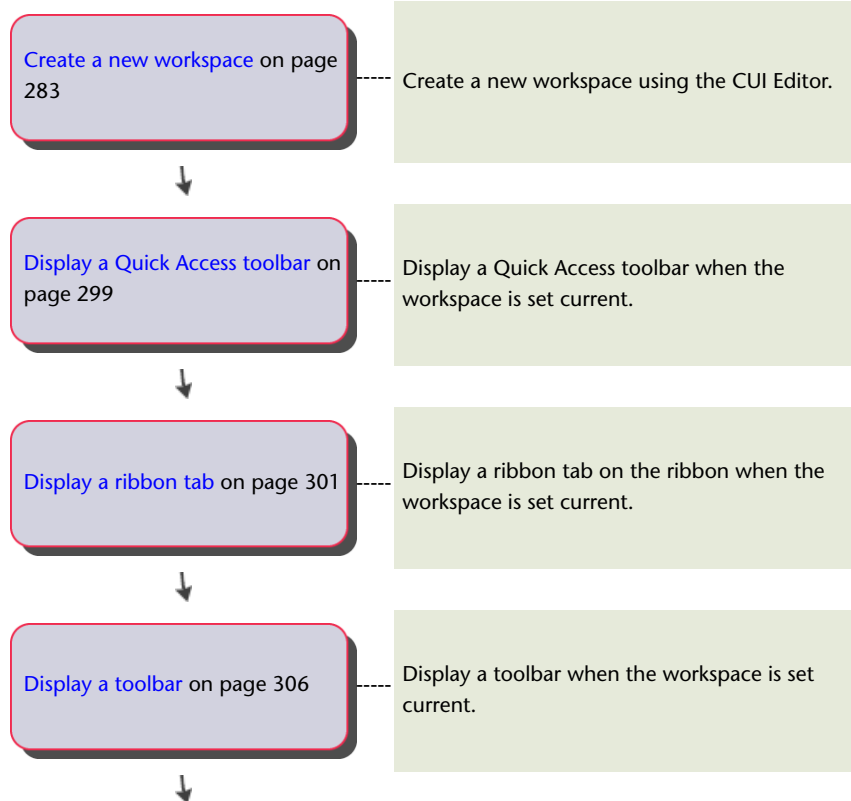

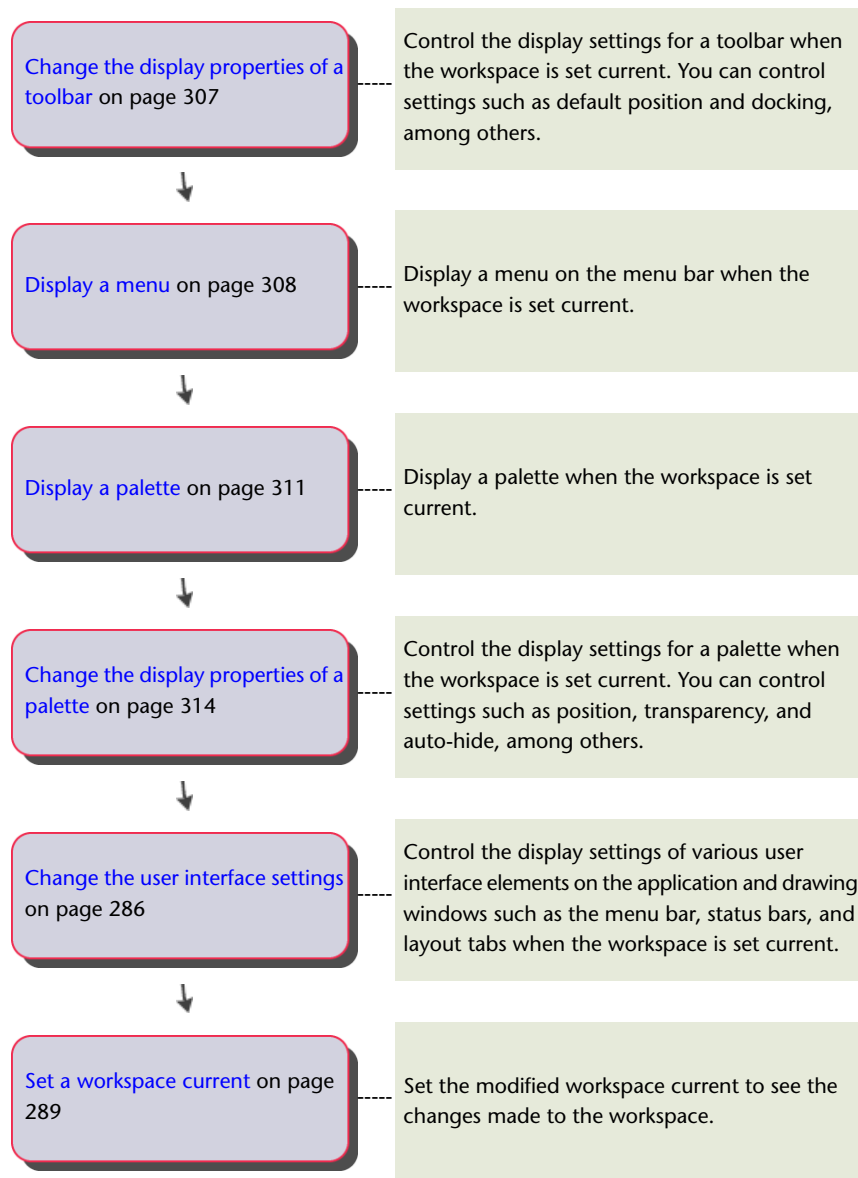



# Create and Manage Customization Files

Customization (CUIx) files are used to store commands, user interface elements, and references to partial CUIx files. CUIx files can be designated as main, partial, or enterprise.

## Basics of Customization Files

Customization files are loaded into AutoCAD LT to define elements that make up the user interface and are edited using the Customize User Interface (CUI) Editor.


AutoCAD LT comes with several different CUIx files that can be tailored to your work environment. AutoCAD LT has two main designations for CUIx files, main and enterprise; by default AutoCAD LT uses a main CUIx file. You can customize the files that come with AutoCAD LT or you can create your own CUIx files from scratch using the Transfer tab in the Customize User Interface (CUI) Editor.


When customizing the CUIx files that come with AutoCAD LT or creating your own CUIx files, the Customize User Interface (CUI) Editor creates a backup copy of the file when you first start making changes to the CUIx file. This allows you to restore the file if you delete something that you wanted to keep. If you happen to modify a CUIx file that comes with AutoCAD LT, you can reset it back to its original state.

The Customize User Interface allows you to not only create new user interface elements and commands from scratch, but you can also copy existing user interface elements and commands to modify them.

### To set the working CUIx file

Before you can add custom commands to a CUIx file, you must set a CUIx file as the working file.


- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Customizations In <file name> pane, click the down arrow on the Customization Files drop-down list.
- 3 Select Main Customization File <file name> or one of the loaded CUIx files to set it as the working CUIx file.

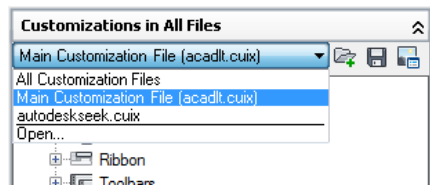


All new commands created are added directly to the working CUIx file. If the CUIx file that you want to work with is not loaded, select Open from the Customization Files drop-down list. Then browse to and select the CUIx file you want to work with.

### To create a CUIx file from scratch

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Transfer tab, in the right pane, click the Create a New Customization File button.

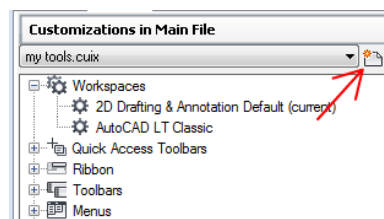

- 3 In the right pane, select Save As from the drop-down list.

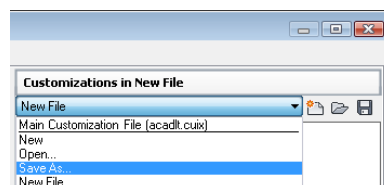

- 4 In the Save As dialog box, specify the location to save the new customization file to and enter a name in the File Name text box.
- 5 Click Save to create and save the customization file.

### To create a customization file from an existing customization file

- 1 In Windows Explorer, navigate to the following location:

(Windows XP) <drive>:\Documents and Settings\<user profile name>\Application Data\Autodesk\<product name>\<release number>\<language>\support\<customization file name>.cuix

(Windows Vista) <drive>:\Users\<user profile name>\AppData\Roaming\Autodesk\<product name>\<release number>\<language>\support\<customization file name>.cuix

---

**NOTE** The folders under your profile may be hidden by default. To display these files, you may need to change your display settings. Click Start menu (Windows) ► Control Panel ► (Appearance and Themes, or Appearance and Personalization) ► Folder Options. In the Folder Options dialog box, View tab, click Show Hidden Files and Folders.

---


- 2 Copy the selected CUIx file to a new file name (such as *enterprise.cuix*) or location (such as the shared network location where users will access the file) so that you preserve the original CUIx file (in case you want to modify or use it again later).


---

**WARNING** This method of creating a new CUIx file can result in additional work if you do not want all the commands and user interface elements in the copied CUIx file.


---

### To rename a customization group name

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customizations In <file name> pane, select a CUIx file from the drop-down list.

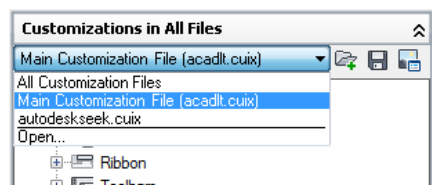

- 3 In the Customizations In <file name> pane, right-click the customization group name and click Rename.

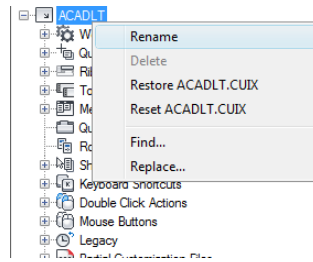

- 4 Enter a new customization group name and press Enter.

---

**NOTE** You can click, wait, and click again on the customization group name to edit its name in-place.

---



---

**NOTE** The customization group name cannot contain spaces.


---

- 5 Click Apply.

#### To restore a customization backup file



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click the customization group name.
- 3 Click Restore <file name>.

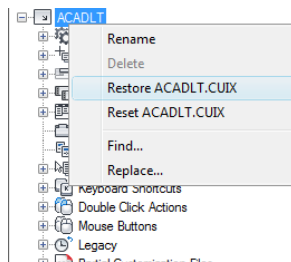


- 4 Click Apply.

### To reset a standard customization file



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click over the customization group name.
- 3 Click Reset <file name>.

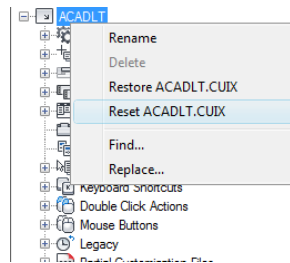

---


**NOTE** Only CUIx files found in the *UserDataCache* folder under the install location of AutoCAD LT can be reset.

---

- 4 Click Apply.


### To designate a CUIx file as the main CUIx file

- 1 Click Application menu ► Options.
- 2 In the Options dialog box, Files tab, click the plus sign (+) next to Customization Files to expand the list.

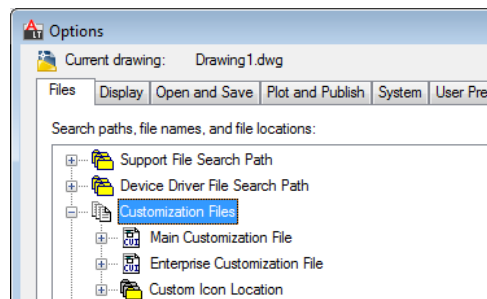

- 3 Click the plus sign (+) next to Main Customization File to expand it.

- 4 Select the item below Main Customization File and click Browse.

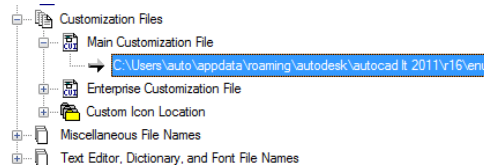

- 5 In the Select a File dialog box, browse to and select the customization file to load. Click Open.  
The file you selected is now designated as the main customization file for the program.
- 6 In the Options dialog box, click OK.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### OPTIONS

Customizes the program settings.

## Create and Load a Partial CUIx File

Create, load, or unload partial customization files as you need them. Loading and using a partial CUIx file allows you to create and modify most user interface elements (toolbars, menus, ribbon panels, and so on) in a separate CUIx file without having to import the customization to your main CUIx file.

The order of the partial CUIx files in the Partial Customization Files tree determines the order they are loaded in the program. You can rearrange the tree hierarchy to change the load order. Use the Transfer tab of the Customize User Interface (CUI) Editor to create a partial CUIx file. For more information on creating a new CUIx file, see [To create a CUIx file from scratch](#) on page 74. CUIx files can be loaded or unloaded with the CUILOAD and CUIUNLOAD commands from the Command prompt, or you can use the Customize tab in the Customize User Interface (CUI) Editor.


Commands and user interface elements can be added to a partial CUIx file that is loaded under the main CUIx file, but not the enterprise CUIx file unless it is loaded as the main CUIx file. Before adding commands to a partial CUIx file, the partial CUIx file must be set as the working CUIx. For more information on adding a command to a partial CUIx file, see [To add commands to a partial CUIx file](#) on page 81.


When a partial CUIx file is loaded, any workspaces defined in the file cannot be set current. To use a workspace defined in a partial CUIx file, it must be transferred to the main CUIx file first. For more information on transferring a workspace to the main CUIx file, see [To import a workspace to a main CUIx file](#) on page 291.

### To load a partial CUIx file using the CUILOAD command

- 1 At the Command prompt, enter **cuiload**.
- 2 In the Load/Unload Customizations dialog box, in the File Name text box, enter a path to the CUIx file you want to load, or click Browse to locate the file.
- 3 Click Load, and then click Close.

### To load a partial CUIx file using the Customize tab

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Main Customization File (<customization file name>.cuix) from the drop-down list. To the right of the drop-down list, click the Load Partial Customization File button.

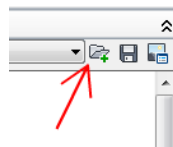


- 3 In the Open dialog box, locate and select the partial CUIx file you want to load, and click Open.

---


**NOTE** If the partial CUIx file you are attempting to load has the same customization group name as the main CUIx file, you need to change the customization group name before loading it. Open the partial CUIx file in the CUI Editor, select the customization group name, and right-click to rename it.

---

- 4 To verify that the file has been loaded into the main CUIx file, in the Customizations In <file name> pane, select the Main Customization File (<customization file name>.cuix) from the drop-down list.

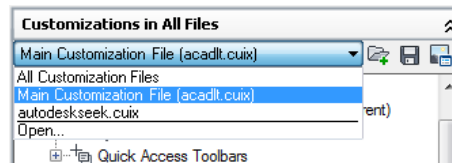

Loaded partial CUIx files in the main CUIx file are listed under the Partial Customization Files node.



- 5 Click Apply.

### To unload a partial CUIx file using the CUIUNLOAD command


- 1 At the Command prompt, enter **cuiunload**.
- 2 In the Load/Unload Customizations dialog box, in the Loaded Customizations Group box, select a CUIx file.
- 3 Click Unload, and then click Close.

### To unload a partial CUIx file using the Customize tab


- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Main Customization File (<customization file name>.cuix) from the drop-down list.





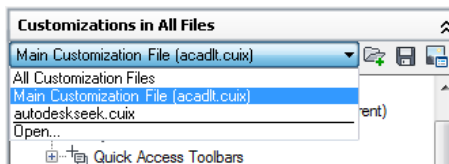

- 3 In the tree view of the main CUIx file, click the plus sign (+) next to the Partial Customization Files node to expand it.  
Any partial CUIx files loaded in the main CUIx file are displayed.
- 4 Right-click the partial CUIx file that you want to unload. Click Unload <customization file name>.cuix.

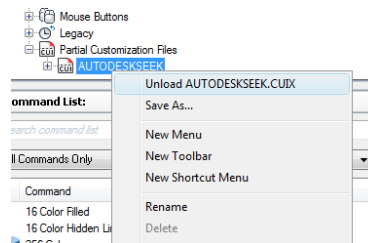


The partial CUIx file is unloaded and removed from the list.

- 5 Click Apply.


### To add commands to a partial CUIx file



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select the partial CUIx file from the drop-down list.

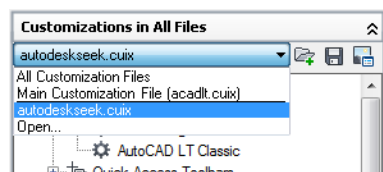

- 3 In the Commands List pane, click Create a New Command.

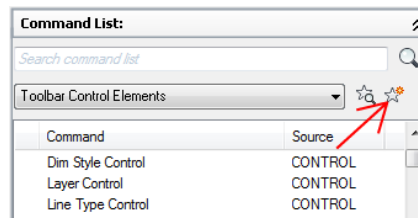

- 4 Adjust the properties of the new command in the Properties pane as necessary.
- 5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

## Create an Enterprise CUIx File

An enterprise CUIx file typically stores customization information that is shared by many users, but is controlled by a CAD manager. Enterprise CUIx files make maintaining and modifying customization data easier for the individual responsible for controlling company standards.

Create an enterprise CUIx file by performing the following tasks:

- **Create an enterprise CUIx file from an existing CUIx file or a new CUIx file.** Make a copy of the main customization file (*acadlt.cuix*) or another customization file of your choice that contains all the base user interface elements you need. If you want to start with a new customization file, use the Transfer tab to create a blank customization file.
- **Designate the new file as your main CUIx file.** Using the Options dialog box, you must load the customization file as your the main customization

file so you make edits to all of the different user interface elements. Make sure to note which customization file is currently designated as the main customization file, as you will need to restore it later.

- **Modify the contents of the enterprise CUIx file.** Once the customization file is designated as the main customization file, you can change the customization group name and modify the CUIx file contents as needed. Changing the customization group name allows you to load more than one CUIx file in the program at one time. CUIx files with the same customization group name cannot be loaded into the program.
- **Replace the main CUIx file.** Using the Options dialog box, replace the previous customization file that was designated as the main customization file.
- **Save the enterprise CUIx file to a shared network location.** When you save the new enterprise file to a shared network location, all of your users that have access to the specified location can access the file.

---

**NOTE** The folder where you place the enterprise CUIx file should be in a shared location that your users can access. To learn more about creating a network share, see “How to Create a Network Share” in the *Network Administrator's Guide*.

---

- **Specify the enterprise CUIx file location.** The program automatically designates an enterprise customization file as read-only when you specify its file location in the Options dialog box. Specifying the enterprise customization file location can be done on individual workstations.


---

**WARNING** Even though the Customize User Interface (CUI) Editor loads the enterprise customization file as read-only, this still doesn't completely protect the file from being modified. The enterprise customization file could be loaded as the main customization file and then modified. To protect the enterprise customization file, the location where it is stored be marked as read-only and write access should be limited to those you want to be able to edit the file.


---

### To designate a CUIx file as an enterprise CUIx file

- 1 On each user's workstation in AutoCAD LT, click Application menu ► Options.
- 2 In the Options dialog box, Files tab, click the plus sign (+) next to Customization Files to expand the list.

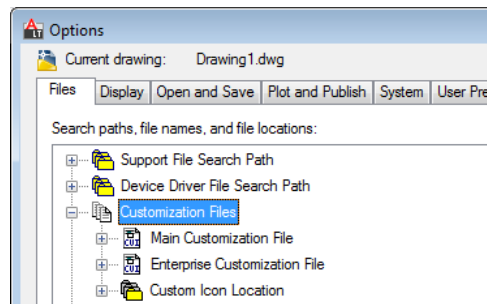

- 3 Click the plus sign next to Enterprise Customization File to open it.
- 4 Select the item below Enterprise Customization Files and click Browse.

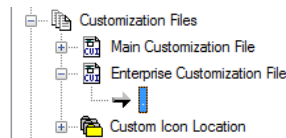

- 5 In the Select a File dialog box, browse to the location of the enterprise customization file. Click Open.  
The enterprise CUIx file if shared, must be saved in a location that all users can access.
- 6 In the Options dialog box, click OK.

### To modify an enterprise CUIx file

- 1 Click Application menu ➤ Options.
- 2 In the Options dialog box, Files tab, click the plus sign (+) next to Customization Files to expand the list.
- 3 Click the plus sign next to Main Customization File to expand it.  
Take note of the current main CUIx file's name and location as you will need to restore it later.
- 4 Select the item below Main Customization Files and click Browse. In the Select a File dialog box, browse to the location of the enterprise customization file. Click Open.
- 5 Click the plus sign next to Enterprise Customization File to expand it.  
Take note of the current enterprise CUIx file's name and location as you will need to restore it later.

- 6 Select the item below Enterprise Customization Files and click Browse. In the Select a File dialog box, browse to the location of the main customization file. Click Open.
- 7 In the Options dialog box, click OK to save the changes.



- 8 Click Manage tab ► Customization panel ► User Interface.
- 9 In the Customize User Interface Editor, Customize tab, create new commands and user interface elements as necessary.
- 10 Once done adding new commands and user interface elements, click OK. Switch the file names of the main and enterprise values around in the Options dialog box.  
The main and enterprise CUIx files should now resemble the original configuration prior to making the changes.

---

**TIP** You can create two different profiles that can be used to switch between your main and enterprise CUIx files. One profile will have the CUIx files in a normal configuration that is used by your drafters, and the other profile has the main and enterprise CUIx files switched around making the enterprise customization file editable.

---

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

## OPTIONS

Customizes the program settings.


## Find and Replace Commands and Text in a CUIx File


You can search one or more CUIx files for commands or search strings (including commands or user interface element names, command display names, descriptions, macros, and tags). You can also replace commands or search strings one at a time or all at once.

You can limit or expand your search depending on the search results you want to achieve.


- **Limit the search to commands located in the Command List pane.** This search does not include the names of user interface elements, the commands that are associated to them, and their properties. For example, if you limit the search for the LINE command in the Command List only, a message similar to the following is displayed when you start your search: “Search string found in command 'Dimension, Linear' property 'Name' at position 11 (1/12).”
- **Expand the search to include all properties in all tree view nodes in the Customizations In pane.** This type of search finds all instances of a search string. For example, if you search for the string “line” and start in the tree view, a message similar to the following is displayed: “Search string found in 'Linear' property 'Name' at position 0 (1/55).”

### To find a search string in a CUIx file

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customizations In <file name> pane, right-click anywhere in the tree view. Click Find.

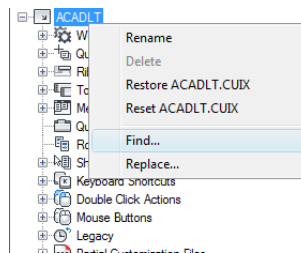


- 3 In the Find and Replace dialog box, Find tab, do the following:
  - In the Find What box, enter the search string.
  - In the Ignore Case option, clear the check box if you want the search to find every instance of the search string regardless of its case.
  - In the Restrict Search To option, select the check box if you want to restrict the search to just one CUIx file. Then, under this option, select a CUIx file from the drop-down list.

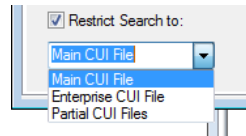

- Click Find Next to locate all instances of the search string.

A message is displayed that details the location of the search string and the number of results generated from the search.

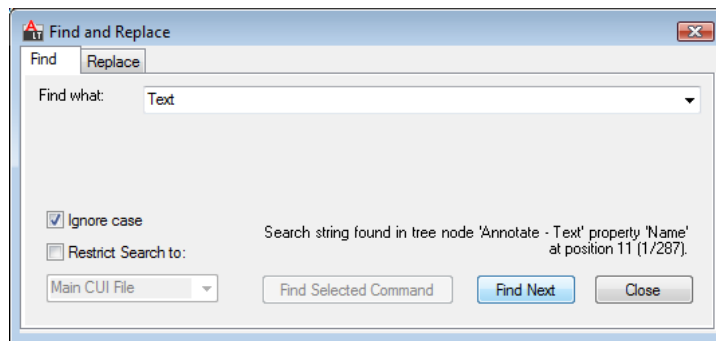


- 4 Click Find Next to continue your search.
- 5 Click Close.
- 6 In the Customize User Interface Editor, click Apply.

#### To find a search string in the Command List pane




- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Command List pane, right-click anywhere in the Command list. Click Find.

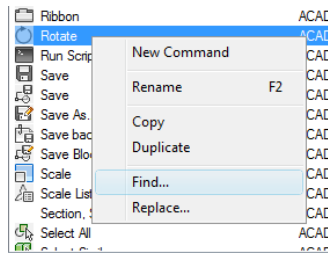

- 3 In the Find and Replace dialog box, Find tab, do the following:
  - In the Find What box, enter the search string.
  - In the Ignore Case option, clear the check box if you want the search to find every instance of the search string regardless of its case.
  - Click Find Next to locate all instances of the search string.

A message is displayed that details the location of the search string and the number of results generated from the search.

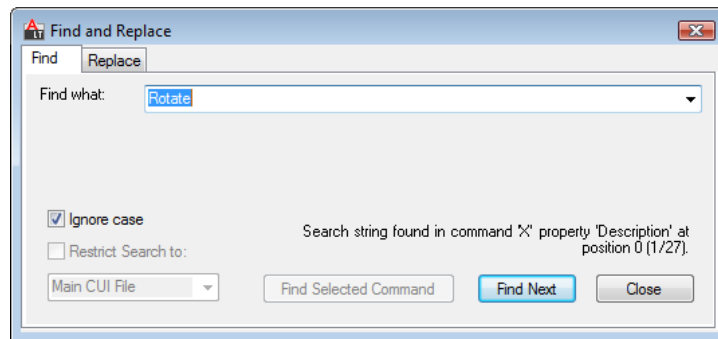


- 4 Click Find Next to continue your search.
- 5 Click Close.
- 6 In the Customize User Interface Editor, click Apply.

#### To find where a command in the Command List pane is used




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Command List pane, right-click the command name you want to find. Click Find.



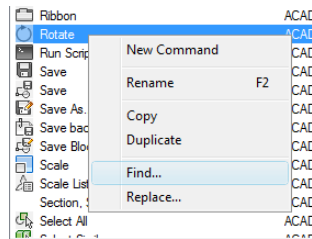

- 3 In the Find and Replace dialog box, Find tab, do the following:
  - In the Find What box, enter the command name.
  - In the Ignore Case option, clear the check box if you want the search to find every instance of the search string regardless of its case.
  - Click Find Selected Command to locate all instances of the command.

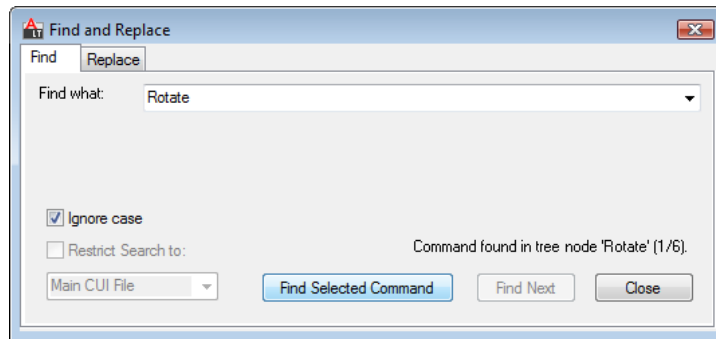


- 4 In the search results text that is displayed, review the location of the matching search string, its exact position in the tree node or Properties pane, and the number of instances in which the command or search string occurs.
- 5 Click Find Selected Command to continue your search.
- 6 Click Close.
- 7 In the Customize User Interface Editor, click Apply.

### To replace a search string


- 1 Click Manage tab ► Customization panel ► User Interface.



- 2 In the Customize User Interface Editor, Customize tab, Customizations In <file name> pane, right-click anywhere in the tree view. Click Replace.

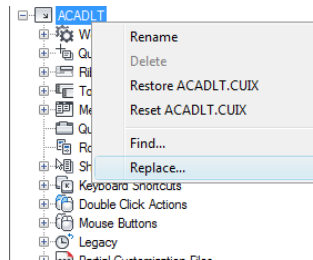

- 3 In the Find and Replace dialog box, Replace tab, do the following:
- In the Find What box, enter the search string.
  - In the Replace With box, specify the text string you want to use to replace the found string.
  - In the Ignore Case option, clear the check box if you want the search to find every instance of the search string, regardless of its case.
  - In the Restrict Search To option, select the check box if you want to restrict the search to just one CUIx file. Then, under this option, select a CUIx file from the drop-down list.
  - To step through each instance of a found string before replacing it, click Replace. In the search results text that is displayed, review the location of the matching search string, its exact position in the tree node or Properties pane, and the number of instances in which the command or search string occurs. You cannot undo this action.
  - To replace all instances of the search string, click Replace All. You cannot undo this action.

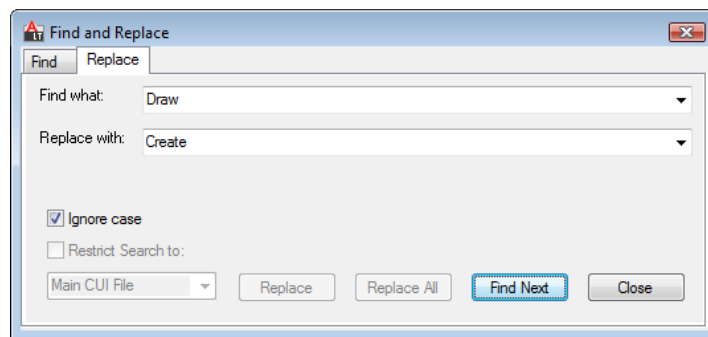


- 4 Click Close.
- 5 In the Customize User Interface Editor, click Apply.


### To replace a command string



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, right-click the command name you want to replace. Click Replace.

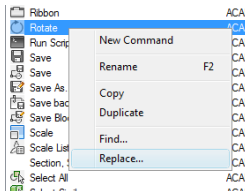

- 3 In the Find and Replace dialog box, Replace tab, in the Find What box, the command name you selected in the previous step is displayed. To complete the dialog box, do the following:
  - In the Replace With box, specify the command name you want to use to replace the found command.
  - In the Ignore Case option, clear the check box if you want the search to find every instance of the command, regardless of its case.
  - To step through each instance of a command name before replacing it, click Replace. In the search results text that is displayed, review the location of the matching search string, its exact position in the tree node or Properties pane, and the number of instances in which the command or search string occurs. By renaming the command in the Command list, you rename the command *everywhere* that command is used in the CUIx file. You cannot undo this action.
  - To replace all instances of the command, click Replace All. You cannot undo this action.

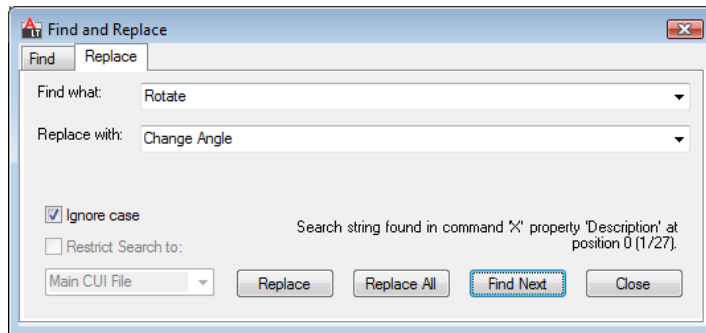

- 4 Click Close.
- 5 In the Customize User Interface Editor, click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Customize Commands

Commands in the Customize User Interface (CUI) Editor are used to define custom macros which are used to start standard and custom commands which can be executed from the command prompt in AutoCAD LT.

## Overview of Commands

You can easily create, edit, and reuse commands. The Customize tab of the Customize User Interface (CUI) Editor allows you to add any command listed in the Command List pane to a toolbar, menu, and one of the other user interface element that can be customized.

When you change the properties of a command in the Command List pane or the tree view in the Customizations In pane, the properties of the command are changed everywhere the command is referenced. Each property of a command in the Command List pane controls which actions are taken when the command is used and how the command looks when added to a user interface element.

The following table shows the properties of the Scale command as they appear in the Properties pane.

Properties for the Scale command in the Command List pane		
Properties pane item	Description	Example
Name	String displayed as a menu name or as a tooltip when you click a toolbar button. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_).	Scale
Description	String displayed as a tooltip when the cursor hovers over a toolbar or panel button, or menu item.	Enlarges or reduces selected objects, keeping the proportions of the object the same after scaling
Extended Help File	Displays the file name and ID for the extended tooltip that is displayed when the cursor hovers over a toolbar or panel button.	
Command Display Name	String that contains the name of the command that is related to the command.	SCALE
Macro	<p>The command macro. It follows the standard macro syntax.</p> <p><b>NOTE</b> When you change the name of a macro, the name of its corresponding menu item or toolbar button does not change. You must change a menu item or toolbar button name by selecting it in the tree view.</p>	<code>\$M=\$(if,\$(eq,\$(substr,\$(getvar,cmd-names),1,4),GRIP),_scale,^C^C_scale)</code>
Tags	Keywords associated to a command. Tags provide an additional field to search for a loaded command when using the Search field in the application menu.	
Element ID	Tag that uniquely identifies a command.	ID_Scale

Properties for the Scale command in the Command List pane		
Properties pane item	Description	Example
Small Image	ID string of the small-image resource (16 × 16 bitmap). The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	RCDATA_16_SCALE
Large Image	ID string of the large-image resource (32 × 32 bitmap). If the specified bitmap is not 32 × 32, the program scales it to that size. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box	RCDATA_32_SCALE

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Create, Edit, and Reuse Commands


You can create a new command from scratch, copy an existing command to create a new command, or edit the properties of an existing command. When you create or edit a command, the properties you can define are the command name, description, extended help file, command display name, macro, tags, element ID (for new commands only), and small or large image.

When you change the properties of a command in the Command List pane, the command is updated for all user interface elements that reference the command.

## To create a command




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, click Create a New Command.

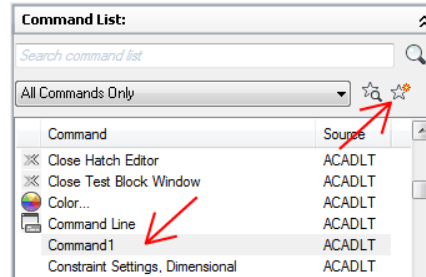


A new command (named Command1) is displayed in both the Command List pane and the Properties pane.

- 3 In the Properties pane, do the following:
  - In the Name box, enter a name for the command. The name is displayed as a tooltip or menu name when the command is added to a user interface element.
  - In the Description box, enter a description for the command. The description will be displayed on the status bar or in a tooltip. When the cursor hovers over the command on a menu, the description is displayed on the status bar while if it is on a toolbar or ribbon panel it is displayed in a tooltip.
  - In the Extended Help File box, enter the name of the file and ID to use for the extended help for the command.
  - In the Command Display Name box, enter the name of the command that you want to display for the command.
  - In the Macro box, enter a macro for the command.
  - In the Tags box, enter the tags you want to use when searching for commands in the Search field of the application menu.
  - In the Element ID box, enter an element ID for the command.

For information about adding button images to a command, see [Create and Edit Custom Images for Commands](#) on page 132.

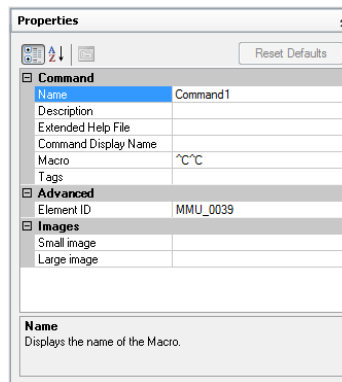

## To remove a command

- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, select Custom from the Command Filter drop-down list.  
The list is filtered to only show the commands that you have created in the loaded customization files.
- 3 Select the command to be removed, and right-click over the command.
- 4 Click Remove.

---

**NOTE** A command only can be removed when it is not being referenced by a user interface element, such as a toolbar or menu.

---



---

**WARNING** There is no way to undo the removal of a command or user interface element from inside the Customize User Interface (CUI) Editor, so be careful when removing commands and user interface elements. If you accidentally remove the wrong command or user interface element the best thing to do is click Cancel, but this will also undo any other changes that you might have made. If you already made several changes to the CUIx file and do not want to lose the changes that you already made, you can open the backup CUIx file that is automatically created after a change is made to a CUIx file from the Transfer tab and then proceed to recover the command or user interface element that was accidentally removed.


---



## To edit a command



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, do one of the following:
  - In the Command List pane, select the command you want to edit.
  - In the Customizations In <file name> pane, tree view, locate and then select the command you want to edit.

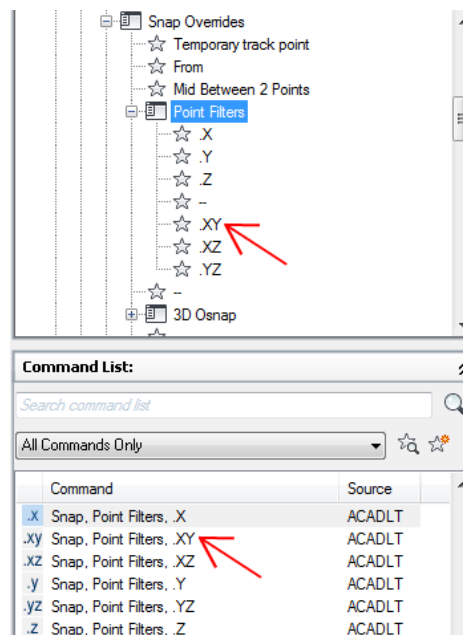


- 3 In the Properties pane, do any of the following to edit the command:
  - In the Name box, enter a name for the command. The name is displayed as a tooltip or menu name when the command is added to a user interface element.
  - In the Description box, enter a description for the command. The description will be displayed on the status bar or in a tooltip. When the cursor hovers over the command on a menu, the description is displayed on the status bar while if it is on a toolbar or ribbon panel it is displayed in a tooltip.


- In the Extended Help File box, enter the name of the file and ID to use for the extended help for the command.
- In the Command Display Name box, enter the name of the command that you want to display for the command.
- In the Macro box, enter a macro for the command.
- In the Tags box, enter the tags you want to use when search for commands with the Search field of the application menu.
- In the Element ID box, enter an element ID for the command. (For new commands only. You cannot modify the element ID of an existing command).

For information about adding button images to a command, see [Create and Edit Custom Images for Commands](#) on page 132.

Properties	
Reset Defaults	
<b>Command</b>	
Name	Snap. Point Filters. XY
Description	Specifies a .XY point filter
Extended Help File	
Command Display Name	
Macro	.XY
Tags	
<b>Advanced</b>	
Element ID	ID_PointFoxy
<b>Images</b>	
Small image	RCDATA_16_PTFXY
Large image	RCDATA_16_PTFXY
<b>Name</b> Displays the name of the Macro.	

### To use a command


- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, locate the command you want to use and drag it to an interface element.

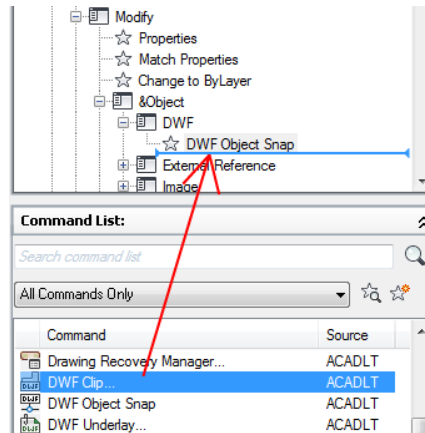


### To copy and paste a command



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, locate the command you want to copy.
- 3 Right-click over the command. Click Copy.

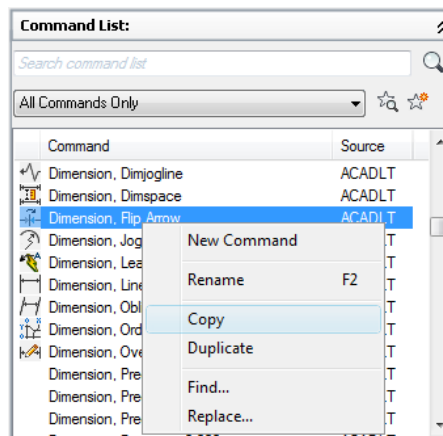

- 4 Right-click over a user interface element like a toolbar or menu. Click Paste.

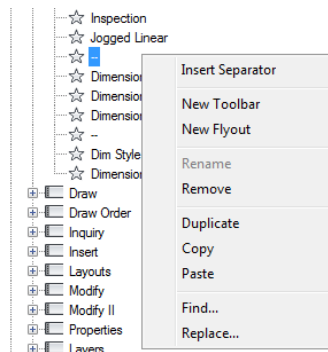


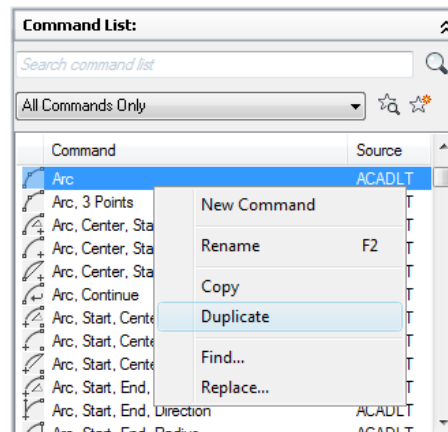

---

**NOTE** The key combination Ctrl+C can be used to copy a command and Ctrl+V can be used to paste a command.

---

### To duplicate a command

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, locate the command you want to duplicate.
- 3 Right-click over the command. Click Duplicate.



A copy of the selected command is created in-place directly above the selected command in the Command List pane.

---

**NOTE** The key combination Ctrl+D can be used to duplicate a command in-place.

---

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Create Macros

A macro defines the action that results when an interface element is selected. A macro accomplishes a drawing task that would otherwise take a series of actions by a user.

## Overview of Macros

A macro can contain commands, special characters, and DIESEL (Direct Interpretively Evaluated String Expression Language) programming code.

---

**NOTE** As AutoCAD LT is revised and enhanced, the sequence of prompts for various commands (and sometimes command names) might change. Therefore, your custom macros might require minor changes when you upgrade to a new release of AutoCAD LT.

---

You add macros to interface elements by using the Customize User Interface (CUI) Editor. Select an existing command or create a new command in the Command List pane. Enter macros in the Macros section of the Properties pane. There are no length limitations for macros. However, you do need to know how specific characters are used in macros and be aware of other considerations or limitations.

### Macro Basics

A macro in a user interface element can be as simple as a command (such as **circle**) and some special characters (such as ^C^C).

For example, the macro `^C^C_circle \1`, draws a circle with a radius of 1 unit. The components that define this macro are explained in the table below.

Components in CIRCLE macro		
Component	Component type	Result
<code>^C^C</code>	Special control character	Cancels any running commands
<code>_</code>	Special control character	Automatically translates the command that follows into other languages
<code>CIRCLE</code>	Command	Starts the CIRCLE command
<code>\</code>	Special control character	Creates a pause for the user to specify the center point
<code>1</code>	Special control character	Responds to the prompt for the circle's radius (1)

For a list of special control characters that you can use in macros, see [Use Special Control Characters in Macros](#) on page 104.

### Cancel Running Commands

Make sure that you have no AutoCAD LT commands in progress before you execute a macro. To automatically cancel a command before executing a macro, enter `^C^C` at the beginning of the macro (which is the same as pressing ESC twice). Although a single `^C` cancels most commands, `^C^C` is required to return to the command prompt from a dimensioning command and `^C^C^C` is required based on the current option of the Layer command. `^C^C` handles canceling out of most command sequences and therefore is the recommended sequence used to ensure no command is active before the macro is started.

### Verify Macro Characters

Every character in a macro is significant, even a blank space.

When you place a space at the end of the macro, AutoCAD LT processes the macro as though you had entered a command (**circle**, for example) and then pressed the SPACEBAR to complete the command.

## Terminate Macros

Some macros require special terminators. Some commands (TEXT, for example) require you to press ENTER rather than SPACEBAR to terminate the command. Some commands require more than one space (or ENTER) to complete, but some text editors cannot create a line with trailing blanks.

Two special conventions resolve these problems.

- A semicolon (;) in a macro automatically issues ENTER at the command prompt.
- If a line ends with a control character, a backslash (\), a plus sign (+), or a semicolon (;), AutoCAD LT does not add a blank space after it.

An item that ends with a backslash (\) pauses a macro for user input.

Compare the following macros:

```
ucs  
ucs ;
```

The first example enters **ucs** at the command prompt and presses SPACEBAR. The following prompt is displayed.

Specify origin of UCS or

[Face/NAmed/OBject/Previous/View/World/X/Y/Z/ZAxis] <World>:

The second example enters **ucs**, presses SPACEBAR, and presses ENTER, which accepts the default value (World).

## Suppress Echoes and Prompts in Macros

Characters in a macro appear in the command window as though you had typed the characters on the keyboard. They are also displayed in the user interface element. This display duplication is called “echoing”. You can suppress the “echoed” displays with the MENU ECHO system variable. If echoes and prompts from item input are turned off, a ^P in the item turns them off.

## Create Long Macros

You can create a macro of any length, without requiring any special characters at the end of a line. The Properties pane in the Customize User Interface (CUI) Editor accepts a macro of any length.

## To assign or modify a command macro



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, locate the command you want to assign (or modify) a command macro.
- 3 In the Properties pane, select the Macro field and click the [ ] button that is displayed.  
The Long String Editor dialog box is displayed.
- 4 In the Long String Editor, edit the macro as desired and click OK.  
You are returned to the Customize User Interface Editor.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Use Special Control Characters in Macros

You can use special characters, including control characters, in macros. In a macro, the caret (^) is equivalent to pressing the Ctrl key on the keyboard. You can combine the caret with another character to construct macros that do such things as turn the grid on and off (^G) or cancel a command (^C).

The macro for the Address command below uses the backslash (\) to pause for user input and the semicolon (;) for ENTER.

```
text \.4 0 DRAFT Inc;;;Main St.;;;City, State;
```

The macro starts the TEXT command, pauses for the user to specify a start point, and then enters the address on three lines. In the triple semicolon (; ; ;), the first semicolon ends the text string, the second repeats TEXT, and the third accepts the default placement below the previous line.



Macros use the special characters listed in the following table.

#### Special characters used in macros

Character	Description
;	Issues ENTER
^M	Issues ENTER
^I	Issues TAB
[blank space]	Enters a space; a blank space between command sequences in a command is equivalent to pressing the SPACEBAR
\	Pauses for user input (cannot be used with accelerators)
_	Translates AutoCAD LT commands and options that follow
=*	Displays the current top-level pull-down, shortcut, or image menu
*^C^C	Repeats a command until another command is chosen
\$	Introduces a conditional DIESEL macro expression (\$M=)
^B	Turns Snap on or off (equivalent to Ctrl+B)
^C	Cancels the active command or command option (equivalent to ESC)
^D	Turns Dynamic UCS on or off (equivalent to Ctrl+D)
^E	Sets the next isometric plane (equivalent to Ctrl+E)
^G	Turns Grid on or off (equivalent to Ctrl+G)
^H	Issues BACKSPACE
^O	Turns Ortho on or off
^P	Turns MENEUECHO on or off
^Q	Echoes all prompts, status listings, and input to the printer (equivalent to Ctrl+Q)

Special characters used in macros	
Character	Description
<code>^R</code>	Turns command versioning on or off. Command versioning is required for some commands to ensure command macros written in an older release work properly in the latest release.
<code>^T</code>	Turns tablet on or off (equivalent to Ctrl+T)
<code>^V</code>	Changes the current viewport
<code>^Z</code>	Null character that suppresses the automatic addition of SPACEBAR at the end of a command

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### TEXT

Creates a single-line text object.

## Pause for User Input in Macros

To accept input from the keyboard or pointing device in the middle of a command, place a backslash (\) in the macro at the point where you want input.

```
circle \1
```

In the circle example, \1 pauses for the user to specify the center point and then reads a radius of 1. Note that there is no space after the backslash.

```
-layer off \;
```

In this example, the macro starts -LAYER at the command prompt, enters the Off option (off), and then pauses for the user to enter a layer name (\). The macro then turns that layer off and exits the -LAYER command (;).

---

**NOTE** LAYER normally prompts for another operation and exits only if you press SPACEBAR or ENTER. In the macro, the semicolon (;) is the equivalent of pressing ENTER.

---

A macro typically resumes after one user input, such as a single point location. Therefore, you cannot construct a macro that accepts a variable number of inputs (as in object selection) and then continues. However, an exception is made for SELECT: a backslash (\) suspends the SELECT command until object selection has been completed. Consider the following example:

```
select \change previous ;properties color red ;
```

In this macro, SELECT creates a selection set of one or more objects (select \). The macro then starts CHANGE (change), references the selection set using the Previous option (previous;), and changes the color of all selected objects to red (properties color red ;).

---

**NOTE** The backslash character (\) causes a macro to pause for user input. You cannot use a backslash for any other purpose in a macro. When you need to specify a file directory path, use a forward slash (/) as the path delimiter: for example, /direct/file.

---

The following circumstances delay resumption of a macro after a pause:

- If input of a point location is expected, object snap modes may be used before the point is specified.
- If X/Y/Z point filters are used, the command remains suspended until the entire point has been accumulated.
- For SELECT only, the macro does not resume until object selection has been completed.
- If the user responds with a transparent command, the suspended macro remains suspended until the transparent command is completed and the originally requested input is received.
- If the user responds by choosing another command (to supply options or to execute a transparent command), the original macro is suspended, and the newly selected item is processed to completion. Then, the suspended macro is resumed.

---

**NOTE** When command input comes from a command, the settings of the PICKADD and PICKAUTO system variables are assumed to be 1 and 0, respectively. This preserves compatibility with previous releases of AutoCAD LT and makes customization easier because you are not required to check the settings of these variables.

---

## Quick Reference

### Commands

#### CHANGE

Changes the properties of existing objects.

#### LAYER

Manages layers and layer properties.

#### SELECT

Places selected objects in the Previous selection set.

### System Variables

#### PICKADD

Controls whether subsequent selections replace the current selection set or add to it.

#### PICKAUTO

Controls automatic windowing at the Select Objects prompt.

## Provide International Support in Macros

To develop menus that can be used with a non-English-language version of AutoCAD LT, precede each command or option with the underscore character (\_). The underscore character allows the standard commands and options to be translated automatically.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Repeat Commands in Macros

You can use a leading asterisk (\*) to repeat a command in a macro until you choose another command.

Once you have selected a command, you might want to use it several times before moving on to another command. In a macro, you can repeat a command until you choose another command. You cannot use this feature to choose options.

If a macro begins with `*^C^C`, the command is repeated until you terminate by pressing ESC on the keyboard or by selecting another command.

---

**NOTE** Do not use `^C` (Cancel) within a macro that begins with the string `*^C^C`; this cancels the repetition.

---

The macros in the following examples repeat the commands:

```
*^C^Cmove Single  
*^C^Ccopy Single  
*^C^Cerase Single  
*^C^Cstretch Single Crossing  
*^C^Crotate Single  
*^C^Cscale Single
```

Each macro in the example starts a command and then prompts you to select an object. Any other prompts necessary to complete the command are displayed, and then the command ends and starts again.

---

**NOTE** Command repetition cannot be used in macros for image tile menus.

---

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Use Single Object Selection Mode in Macros

Single Object Selection mode cancels the normal repetition of the Select Objects prompt in editing commands. After you select one object and respond to any other prompts, the command ends.

Consider the macro in the following example:

```
*^C^Cerase single
```

This macro terminates the current command and starts ERASE in Single Object Selection mode. After you choose this command, you either select a single object to be erased or click a blank area in the drawing and specify window selection. Any objects selected in this way are erased, and the command is repeated (due to the leading asterisk) so that you can erase additional objects. Press ESC to exit this mode.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Use Macros to Swap User Interface Elements

You can replace the contents of active menus, mouse buttons, tablet buttons, tablet menus, or screen menus. The swapped content can be that of another user interface element of the same type in the main CUIx file, or it can come from a partial CUIx file.

You cannot swap interface elements that are of different types (menus and mouse buttons, for example). However, within a given type, you can swap any user interface element for any other element.

---

**NOTE** Swapping can lead to some strange behavior for tablet menus, because they typically have a different number of macros.

---

Use the following syntax in a macro to swap elements:

`$section=customizationgroup.menuname`

The following describes each section of the macro syntax for swapping elements:

Macro syntax for swapping elements

**\$** Loads an interface element

**section** Specifies the element type. Valid names are:

A1-A4 for Aux menus 1 through 4

B1-B4 for mouse buttons 1 through 4

P0-P16 for pull-down menus 0 through 16

I for the image tile menu

T1-T4 for tablet menus 1 through 4

**customizationgroup** Specifies the customization group that *menuname* is a member of (not necessary if *menuname* is in the main CUIx file).

**menuname** Specifies which section or submenu to insert. It is the main label or alias for the section to load

A pull-down menu can be present either in the menu bar or on the active shortcut menu but not both.

## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.

## Use Conditional Expressions in Macros

You can add conditional expressions to a macro by using a command that introduces macro expressions written in DIESEL (Direct Interpretively Evaluated String Expression Language).

The format is:

```
$M=expression
```

Introducing the macro with `$M=` tells AutoCAD LT to evaluate a string as a DIESEL expression, and that *expression* is the DIESEL expression. The following example defines a conditional expression in a macro:

```
FILLMODE $M=$((-1,$(getvar,fillmode))
```

The macro switches the FILLMODE system variable on and off by subtracting the current value of FILLMODE from 1 and returning the resulting value to the FILLMODE system variable. You can use this method to toggle system variables whose valid values are 1 or 0.

### Termination of Macros That Contain Conditional Expressions

If you use the DIESEL string language to perform “if-then” tests, conditions might exist where you do not want the normal terminating space or semicolon (resulting in ENTER). If you add `^z` to the end of the macro, AutoCAD LT does not automatically add a space (ENTER) to the end of the macro expression.

As with other control characters in commands, the `^z` used here is a string composed of `^` (a caret) and `z` and is not equivalent to pressing Ctrl+Z.

In the following examples, `^z` is used as a macro terminator.

```
^C^C$M=$((if,$(=,$(getvar,tilemode),0),$S=mview _mspace )^Z  
^C^C$M=$((if,$(=,$(getvar,tilemode),0),$S=mview _pspace )^Z
```

If these macros did not end with `^z`, AutoCAD LT would automatically add a space (ENTER), repeating the last command entered.

**See also:**

- [Use Special Control Characters in Macros](#) on page 104
- [DIESEL](#) on page 325

## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.



## System Variables

### FILLMODE

Specifies whether hatches and fills, 2D solids, and wide polylines are filled in.

## Control the Display of Command Items

The way a menu or ribbon button item is displayed indicates its availability in the program. A menu or ribbon button item can be displayed as:

- Grayed out (disabled)
- Marked with a check marker or border
- Both grayed out and marked

Ribbon button items do not display a check mark when marked; only a border is displayed.

---

**NOTE** To disable or mark ribbon button items, the “~” or “!” sequence cannot be placed before a command name explicitly; it must be inside a DIESEL expression.

---


### Gray Out (Disable) Menu or Ribbon Button Items

You gray out a menu or ribbon button item by doing one of the following:


- Beginning a name with a tilde (~)
- Using a DIESEL string expression

Ribbon button items only support the use of DIESEL string expressions. For more information about using DIESEL expressions, see DIESEL Expressions in Macros. When grayed out, the macro and submenus associated with the menu or ribbon button item are made inaccessible.

In the following example, the tilde (~) is placed at the beginning of the Copy Link command label in the Name cell of the Properties pane.

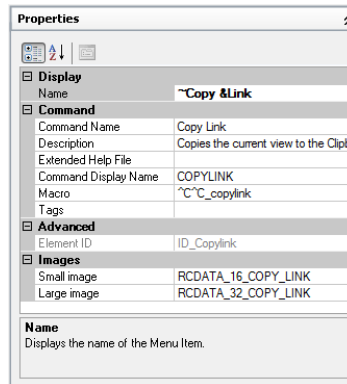

Following is the resulting Copy Link command grayed out in the Edit menu.

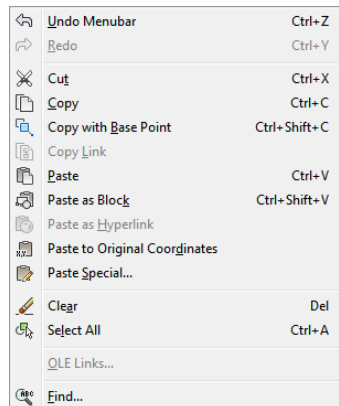

DIESEL string expressions are used to conditionally disable or enable a menu or ribbon button item each time they are displayed. For example, the DIESEL string expression in the Macros cell of the Properties pane disables the MOVE command while any other command is active.

```
$(if,$(getvar,cmdactive),~)MOVE^C^C_move
```

### Mark Menu or Ribbon Button Items


You can mark a menu or ribbon button item by doing one of the following:

- Beginning a command name with an exclamation point and a period (!.)
- Using a DIESEL string expression

Ribbon button items only support the use of DIESEL string expressions. A menu or ribbon button item is marked in one of two ways:

- *A check mark.* Displayed when a menu item does not have an image associated with it.
- *A border.* Displayed when a menu or ribbon button item has an image associated with it; a border is displayed around the image.

Following is an example of the Edit menu with the OLE Links command marked with a check mark and the Copy Link command's image marked with a border:

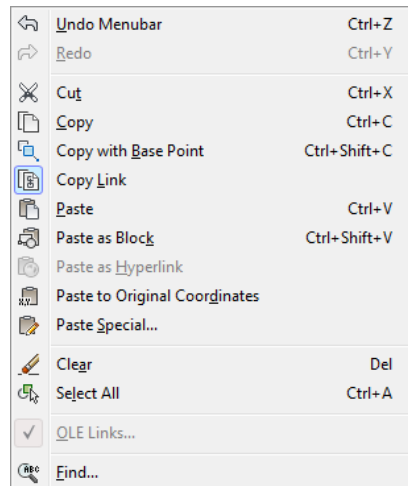

Menu items can and ribbon button items must contain DIESEL string expressions to conditionally mark them each time they are displayed. When the following DIESEL string is added to the Macros cell for the applicable command in the Properties pane, a check mark is placed to the left of the menu item whose related system variable is currently enabled.

```
$(if,$(getvar,orthomode),!.)Ortho^O
$(if,$(getvar,snapmode),!.)Snap^B
$(if,$(getvar,gridmode),!.)Grid^G
```


## Simultaneously Disable and Mark Command Items

You can mark and disable commands at the same time using either of the following formats:

```
~!. labeltext  
!.~ labeltext
```

The tilde (~) is the special character code to disable a command and an exclamation point and period (!.) is the special character code to mark a command.

The tilde (~), exclamation point, and period (!.) are placed at the beginning of the Copy Link command label in the Name cell of the Properties pane. Following is the resulting Copy Link marked and grayed out in the Edit menu.

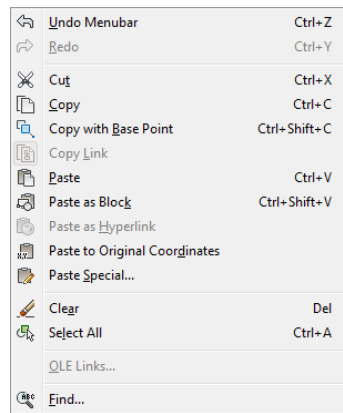


As with the previous examples, a DIESEL expression can be used to simultaneously disable and mark a command item.


## To gray out (disable) a command's menu or ribbon button label



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the menu that contains the command you want to disable.
- 3 Select the command you want to gray out.

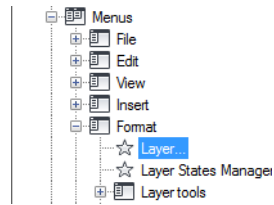

- 4 In the Properties pane, in the Name field, add a tilde (~) or add the desired DIESEL expression to the beginning of the command.

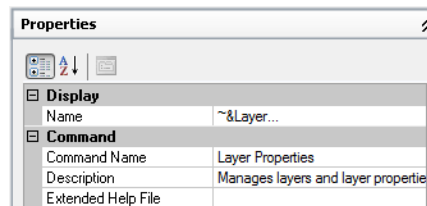



---

**NOTE** The command must be selected from the Customizations In pane, otherwise you are just modifying the name of the command and not the label that is displayed to the user.

---


- 5 Click Apply.  
The changes to the command will be visible after the changes have been applied and the CUI Editor is closed.

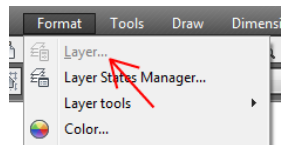


### To mark command's menu or ribbon button label




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the menu that contains the command you want to mark.
- 3 Select the command you want to mark.

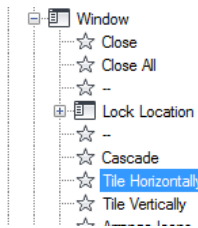

- 4 In the Properties pane, in the Name field, add an exclamation point and a period (! .) or add the desired DIESEL expression to the beginning of the command.

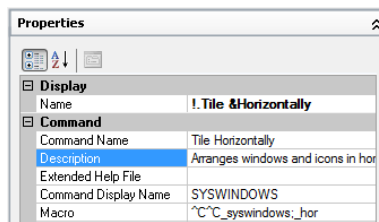

- 5 Click Apply.  
The changes to the command will be visible after the changes have been applied and the CUI Editor is closed.

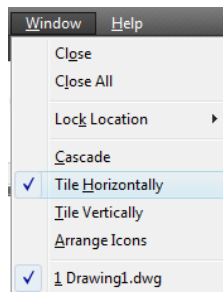

**To simultaneously gray out (disable) and mark a command's menu or ribbon button label**

- 1 Click Manage tab ► Customization panel ► User Interface.



- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the menu that contains the command you want to disable and mark.
- 3 Select the command you want to gray out and mark.
- 4 In the Properties pane, in the Name field, add a tilde, an exclamation point, and a period (~! . or ! . ~) or add the desired DIESEL expression to the beginning of the command.
- 5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.


## Assign Search Tags


With search tags, you can search for a command or a group of commands with the application menu.

You can assign one or more tags to a command to make it easy to locate when performing a search from the application menu. You add tags to a command using the Tag Editor dialog box. When a tag is assigned to a command, it is displayed on a tooltip (when the command is on a toolbar or ribbon panel and the cursor hovers over the command).


You can change the display of tooltips on the Display tab of the Options dialog box. See Search for Commands in the *User's Guide* to learn more about using search in the application menu.

### To add tags to a command


- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, select the command to which you want to add a tag.

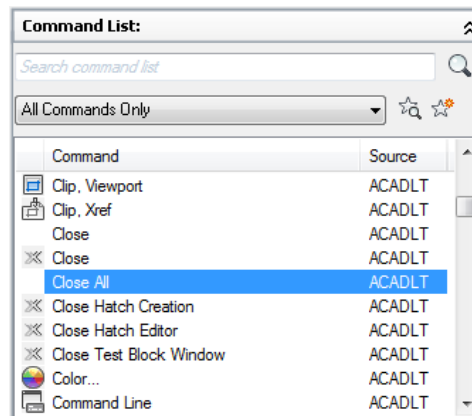

- 3 In the Properties pane, select the Tags field and click the [ ] button.

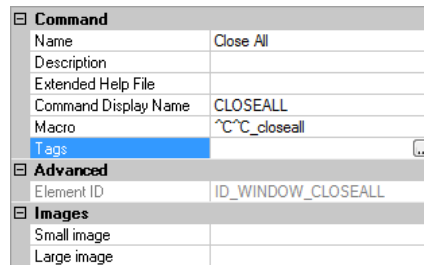

- 4 In the Tag Editor dialog box, in the Tags box, enter a tag.  
As you enter a tag, a popup menu might display showing a list of previously used tags. Click a tag on the menu to use that tag. You can add more than one tag to a command; separate each tag with a comma.

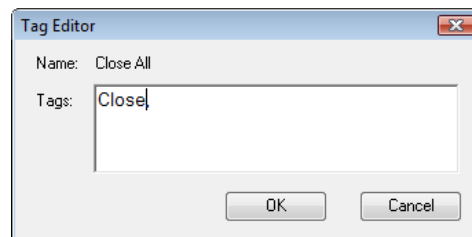

- 5 To add another tag for a command, press the Left Arrow key and enter the tag. Repeat as needed.
- 6 Click OK.




- 7 In the Customize User Interface Editor, click Apply.

### To remove a tag from a command




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, select the command from which you want to remove a tag.

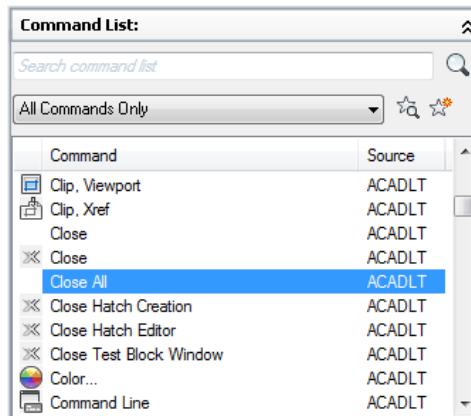


The Properties pane is displayed on the right side.

- 3 In the Properties pane, select the Tags field and click the [ ] button.

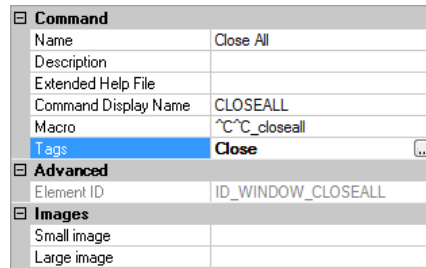

- 4 In the Tag Editor dialog box, in the Tags box, click the tag you want to remove. Press Delete.

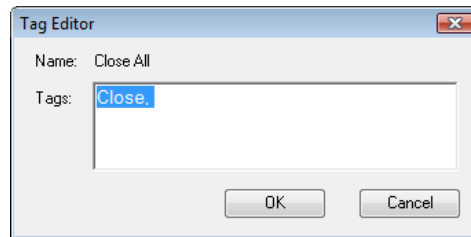

The tag is removed.

- 5 Click OK.
- 6 In the Customize User Interface Editor, click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### OPTIONS

Customizes the program settings.

## Create Tooltips and Extended Help for Commands

Tooltips are descriptive messages that are displayed near the cursor when it hovers over a toolbar or panel button, or menu item.

The Description property associated to a command provides a simple description for what the command does. The value of the Description property is displayed as part of a basic tooltip that is displayed when the cursor hovers over a button on a toolbar, or ribbon panel. Along with the description, a command tooltip also displays the name of the command, and the values assigned to the Command Display Name and Tags properties.

Additionally, a command can be assigned an extended help file and ID so it can display a second level of information for the command. The content from the extended help file is displayed in the extended description area of a tooltip. The content for the extended description area of a tooltip is stored in an XAML file, and can contain rich-text and images.

## Control the Display of Tooltips

You control the display of tooltips and when the extended help assigned to a command is displayed from the Options dialog box. See Set Interface Options in the *User's Guide* to learn more about tooltips.

## Example of an XAML File

The XAML structure is a format that was developed by Microsoft. The following is an example of what an XAML file might look like for two custom commands that exist in your CUIx file.

```
<ResourceDictionary
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:src="clr-namespace:Autodesk.Windows;assembly=AdWindows">
  <src:RibbonToolTip x:Key="MYEH_CMD_0001">
    <src:RibbonToolTip.ExpandedContent>
      <StackPanel>
        <TextBlock Background="AntiqueWhite" TextAlignment="Center">
          Creates a rectangular revision cloud on the <Bold>REVISION</Bold>
          layer.
        </TextBlock>
        <Image Source="images/rectcloud.jpg" Width="Auto" Height="Auto">
        </Image>
      </StackPanel>
    </src:RibbonToolTip.ExpandedContent>
  </src:RibbonToolTip>
  <src:RibbonToolTip x:Key="MYEH_CMD_0002">
    <src:RibbonToolTip.ExpandedContent>
      <StackPanel>
        <TextBlock Background="Yellow" TextAlignment="Left">
          Creates a polygonal revision cloud on the
          <Run Text=" REVISION " Foreground="Red" FontStyle="Italic"/>
          layer.
        </TextBlock>
        <Image Source="images/rectcloud.jpg" Width="Auto" Height="Auto">
        </Image>
      </StackPanel>
    </src:RibbonToolTip.ExpandedContent>
  </src:RibbonToolTip>
</ResourceDictionary>
```

The ResourceDictionary element is used to define the type of content that is in the XAML file; while the src:RibbonToolTip element is used to define each

of the extended help topics in the file. In the previous example there are two different extended help topics, and they are uniquely defined by the keys MYEH\_CMD\_0001 and MYEH\_CMD\_0002.


---


**NOTE** Extended tooltips defined to work with AutoCAD LT 2009 need to be updated to work with AutoCAD LT 2011. For information on converting an extended tooltip created for AutoCAD LT 2009 to work with AutoCAD LT 2011, see [To convert an AutoCAD LT 2009 extended tooltip to work with AutoCAD LT 2011](#) on page 127.

---

The Stack Panel element groups the TextBlock and Image elements together. You can have as many TextBlock and Image elements under a StackPanel element that you need. The TextBlock element holds the text; the Image element holds an illustration that is part of the extended help. To learn more about XAML, visit Microsoft's web site at <http://www.microsoft.com> and perform a search for XAML.

### To add a tooltip to a command

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, click the command to which you want to add a tooltip.

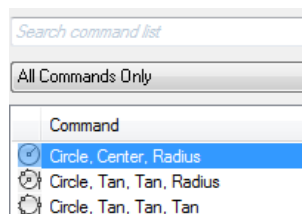


- 3 In the Properties pane, Description field, enter the tooltip text for the selected command.


Command	
Name	Circle, Center, Radius
Description	Creates a circle using a center point
Extended Help File	
Command Display Name	CIRCLE
Macro	^C^C_circle
Tags	
Advanced	
Element ID	ID_CircleRad
Images	
Small image	RCDATA_16_CIRRAD
Large image	RCDATA_32_CIRRAD

- 4 Click Apply.


The next time the cursor hovers over the command on a toolbar, or ribbon panel, the text is displayed in the tooltip.

### To add extended help to a command


- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, click the command to which you want to add extended help.

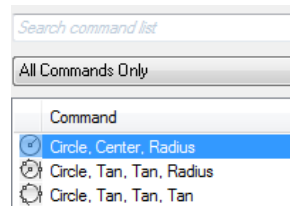

- 3 In the Properties pane, select the Extended Help File field and click [ ] button.

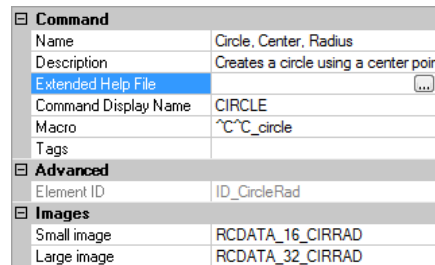

- 4 In the Select Extended Help File dialog box, browse to and select the XAML file that contains the extended help for the command. Click Open.
- 5 In the Select Help ID dialog box, select the help ID for the extended help content. Click OK.

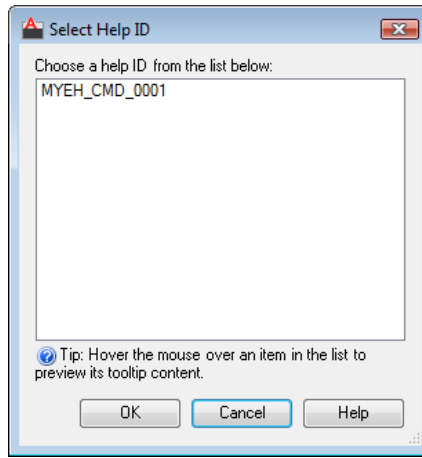

**6** Click Apply.

When the command is added to a toolbar or ribbon panel, the extended help is displayed if extended help is enabled for tooltips and the cursor hovers over the command for the designated time interval.

**To create an XAML file**

- 1** In a text editor (for example, Microsoft® Windows® Notepad), create a new file and enter the elements needed to define the extended help content.

As an example, enter the text below in the text editor:

```
<ResourceDictionary
  xmlns="http://schemas.microsoft.com/winfx/2006/xaml/presentation"
  xmlns:x="http://schemas.microsoft.com/winfx/2006/xaml"
  xmlns:src="clr-namespace:Autodesk.Windows;assembly=AdWindows">
  <src:RibbonToolTip x:Key="MYEH_CMD_0003">
    <src:RibbonToolTip.ExpandedContent>
      <StackPanel>
        <TextBlock Background="AntiqueWhite" TextAlignment="Center">
          Configures the settings for the current drawing.
        </TextBlock>
      </StackPanel>
    </src:RibbonToolTip.ExpandedContent>
  </src:RibbonToolTip>
</ResourceDictionary>
```

- 2 Save the file as ASCII text (TXT file), with a file extension of *.xaml*.

### To convert an AutoCAD LT 2009 extended tooltip to work with AutoCAD LT 2011

- 1 Open the XAML file in a text editor (for example, Microsoft® Windows® Notepad).

The following is an example of an extended tooltip created to use with AutoCAD LT 2009. You change the text shown in *italic*.

```
<src:ProgressivePanel x:Key="MYEH_CMD_0003">
  <StackPanel>
    <TextBlock Background="AntiqueWhite" TextAlignment="Center">
      Configures the settings for the current drawing.
    </TextBlock>
  </StackPanel>
</src:ProgressivePanel>
```

- 2 Change the text shown in *italic* in the previous step to match the following:

```
<src:RibbonToolTip x:Key="MYEH_CMD_0003">
  <src:RibbonToolTip.ExpandedContent>
    <StackPanel>
      <TextBlock Background="AntiqueWhite" TextAlignment="Center">
        Configures the settings for the current drawing.
      </TextBlock>
    </StackPanel>
  </src:RibbonToolTip.ExpandedContent>
</src:RibbonToolTip>
```

- 3 Save the changes made to the XAML file.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### OPTIONS

Customizes the program settings.

## System Variables

### TOOLTIPS


Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.


## Create Status Line Help Messages

Status line help messages are simple, descriptive messages that are displayed on the status line (at the bottom of the application window) when the cursor hovers over a menu item.

You can change or add descriptions for menu items by updating the Description property for a related command. If the status bar for the program is not displayed, no descriptive message is displayed for the menu item. The current workspace controls the display of the application status bar for the program. See Set Interface Options in the *User's Guide* to learn more about workspaces.

### To create a status line help message

- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, Command List pane, select the command to which you want to add a help message.

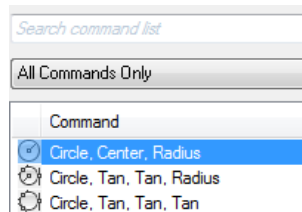


- 3 In the Properties pane, Description box, enter the descriptive text for the selected command.



<b>Command</b>	
Name	Circle, Center, Radius
Description	Creates a circle using a center point
Extended Help File	
Command Display Name	CIRCLE
Macro	^C^C_circle
Tags	
<b>Advanced</b>	
Element ID	ID_CircleRad
<b>Images</b>	
Small image	RCDATA_16_CIRRAD
Large image	RCDATA_32_CIRRAD

#### 4 Click Apply.

The next time you use the command, the descriptive text you added is displayed in the status line when the cursor hovers over the command on a menu.



## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.

OPTIONS

Customizes the program settings.

## Assign, Create, and Manage Images for Commands

Images can be assigned to commands, and can be of two different types: standard and custom. Standard commands come with AutoCAD LT in a library, while custom commands are created and managed from the Button Image pane and the Button Editor dialog box in the Customize User Interface Editor.


### Assign Images to a Command


Standard and custom images can be assigned to a command.

When a command is added to a ribbon or toolbar, the assigned image is displayed on the ribbon or toolbar button, or if added to a pull-down menu, the image is displayed next to the menu item.

AutoCAD LT comes with a library of standard images that are used for the standard commands; these can be assigned to your own custom commands. You can create your own custom commands using the Button Editor dialog box found in the Customize User Interface Editor or an external image editor. For more information about creating custom images for your commands, see [Create and Edit Custom Images for Commands](#) on page 132.

### To assign an image to a command


- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Command List pane, select command to which you want to add an image.  
The Button Image pane (in the upper-right corner) and the Properties pane (in the lower-right corner) are displayed.

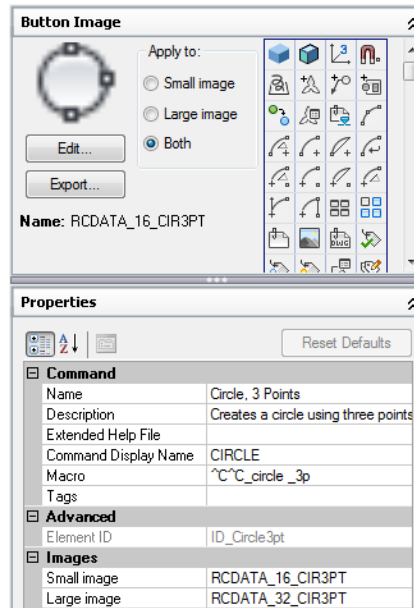

- 3 Do one of the following:

### Assign a standard image

- In the Button Image pane, under Apply To, select one of the three image assignment options; Small Image, Large Image, or Both.

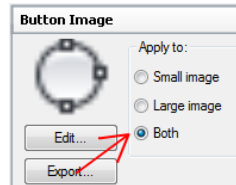

- Select an image from the image list and the image name is assigned to the Small, Large, or both the Small and Large image properties of the selected command.


---

**NOTE** As you select an image from the image list, the image's name is displayed below the Export button in the Button Image pane.


---

### Import and assign a custom image

- In the Button Image pane, right-click in the list of images and click Import Image.

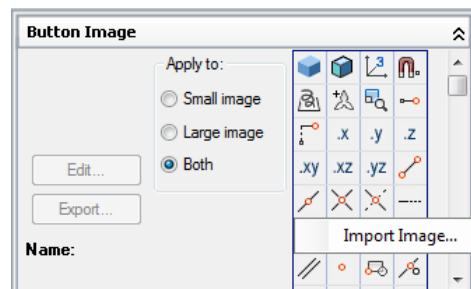

- In the Open dialog box, browse to and select the BMP file that you want to import and click Open.
- In the Button Image pane, under Apply To, select one of the three image assignment options; Small Image, Large Image, or Both. Then select the image you imported from the image list.

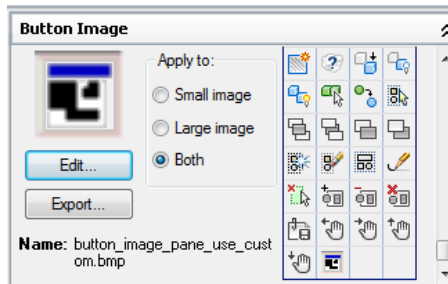

- 4 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Create and Edit Custom Images for Commands

Custom images can be created and edited which can be assigned to a command.

You can create custom images to assign to a command using the Button Editor dialog box built into the CUI Editor or an external image editor. You can either start with an existing button image or create your own from scratch. Custom images when saved are by default stored in the working customization file. Saved custom images can be exported to an external BMP file to use in another customization file.

---

**NOTE** In releases prior to AutoCAD LT 2011, custom images were stored separately from the customization file. In AutoCAD LT 2011, images are now stored as part of the CUIx file making it easier to share with others.


---

Custom images can be created in two different sizes: small and large. Small images should be 16 x 16 pixels. Large images should be 32 x 32 pixels. Images that do not match these sizes are scaled to fit.

## To create or edit a button image



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Command List pane or the Customizations In <file name> pane, click a command to display the Button Image pane (in the upper-right corner).

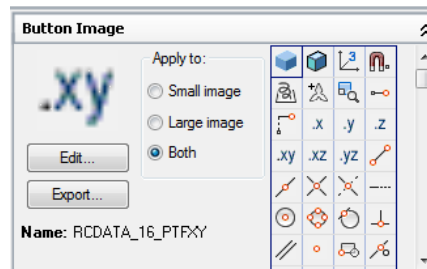

- 3 In the Button Image pane, select an image from the image list that is closest in appearance to the image you want to create or select an existing image to edit. Click Edit.

---

**TIP** If you want to start with a blank image, select any image from the image list under the Button Images pane. Click Edit to display the Button Editor dialog box. In the Button Editor dialog box, click Clear.

---

- 4 In the Button Editor dialog box, use the Pencil, Line, Circle, and Erase buttons to create or edit the button image. To change the selected color, select a color from the color palette, or click More to open the Select Color dialog box.
  - **Pencil button.** Edits one pixel at a time in the selected color. You can drag the pointing device to edit several pixels at once.
  - **Line button.** Creates lines in the selected color. Click and hold to set the first endpoint of the line. Drag to draw the line. Release to complete the line.
  - **Circle button.** Creates circles in the selected color. Click and hold to set the center of the circle. Drag to set the radius. Release to complete the circle.
  - **Erase button.** Resets the color of one pixel at a time to the default canvas color.

---

**NOTE** Click Import to import a BMP file stored on a local or network drive to edit it in the Button Editor dialog box and store it in the working CUIx file.

---

- 5 Click Save.  
The Save Image dialog box is displayed.
- 6 In the Save Image dialog box, Image Name text box, enter a name and click OK.  
The image is saved to the working CUIx file.
- 7 Click Close.  
You are returned to the Customize User Interface Editor.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Manage, Import, and Export Custom Images

Custom images stored as externally saved BMP files can be imported into a loaded customization file and exported from a customization file to a local or network drive. Custom images can be deleted from a customization file in the Image Manager.


Prior to AutoCAD LT 2011, custom images used for commands in a customization file were stored on a local or network drive as separate BMP files or in a resource DLL. Resource DLLs are still maintained externally to customization files but starting with AutoCAD LT 2011, BMP files used by custom commands defined in a customization file are stored in the customization file.

You can use the Image Manager, the Button Editor dialog box, or the Button Image pane to manage custom images in the loaded customization files. With the Image Manager, you can import and export custom images to and from a customization file. You can also use the Image Manager to see which custom images are currently stored in a loaded customization file and remove those that you no longer need. You can also use the Button Editor dialog box and Button Image pane to import and export custom images.

### To import a custom image to the image list and the working customization file



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Command List pane, select any command to display the Button Image pane.
- 3 In the Button Image pane, right-click the image list and click Import Image.

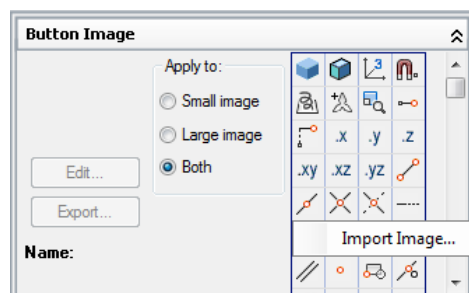


- 4 In the Open dialog box, browse to and select the BMP file that you want to import and click Open.  
The image is added to the image list and can then be assigned to a command.

### To export an image from the image list



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Command List pane, select any command to display the Button Image pane.
- 3 In the Button Image pane, select the image to export, and click Export.

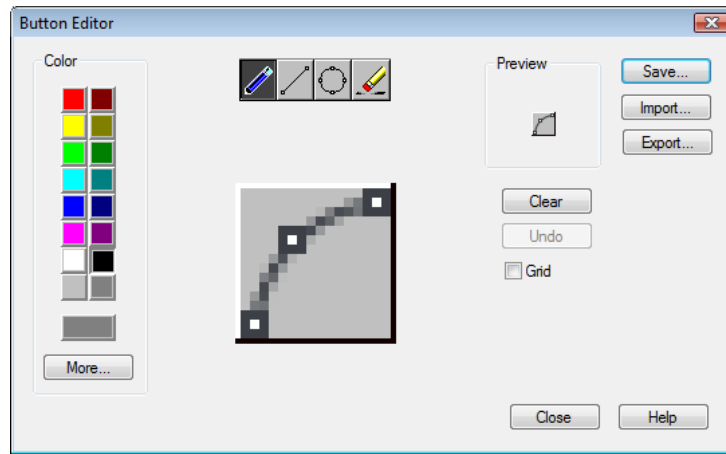

- 4 In the Export Image File dialog box, browse to the folder to which you want to export the image and enter a name for the image in the File Name text box.
- 5 Click Save.

---

**NOTE** You can only export images in the BMP (\*.bmp, \*.rle, or \*.dib) format.


---

#### To import an image into a loaded customization file using the Image Manager



- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click Launches the Image Manager Dialog.
- 3 In the Image Manager, Loaded Customization Files drop-down list, select the loaded customization file into which you want to import a custom image.



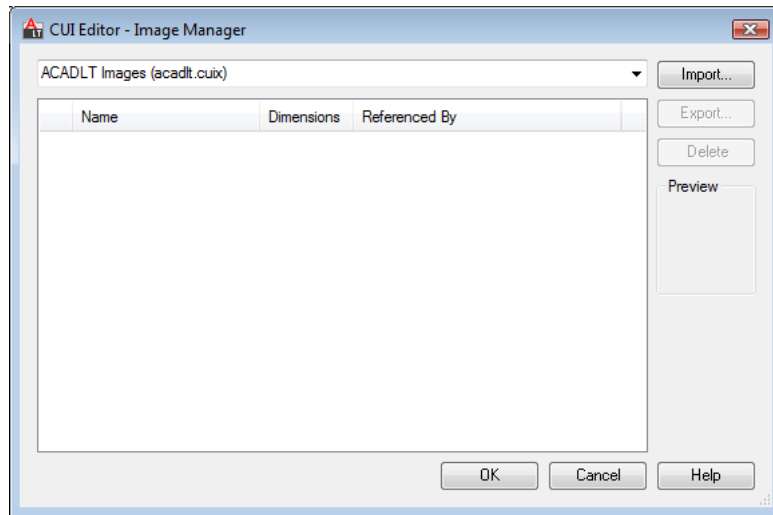

- 4 In the Import Images dialog box, browse to and select the images you want to import. Click Open.


If the CUI Editor - Image Already Exists dialog box is displayed, click Import Image as Copy to create a copy of the image being imported or Overwrite Existing Image to replace the image with the one being imported.

- 5 Click OK.

#### To export an image from a loaded customization file with the Image Manager



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name > pane, click Launches the Image Manager Dialog.
- 3 In the Image Manager, Loaded Customization Files drop-down list, select the loaded customization file that contains the custom image you want to export.

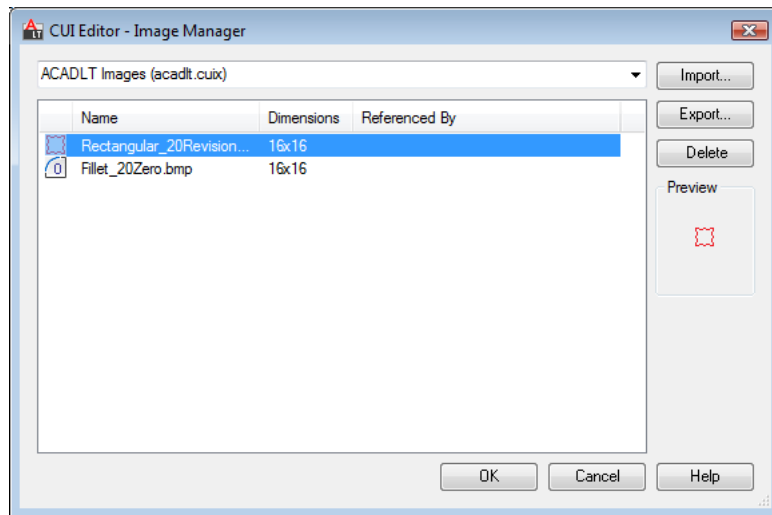


- 4 In the Custom Images list, select the image you want to export and click Export.
- 5 In the Browse For Folder dialog box, browse to the folder to which you want to export the selected images. Click OK.
- 6 Click OK.

#### To delete an image from a loaded customization file



- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click Launches the Image Manager Dialog.
- 3 In the Image Manager, Loaded Customization Files drop-down list, select the loaded customization file that contains the custom image that you want to delete.

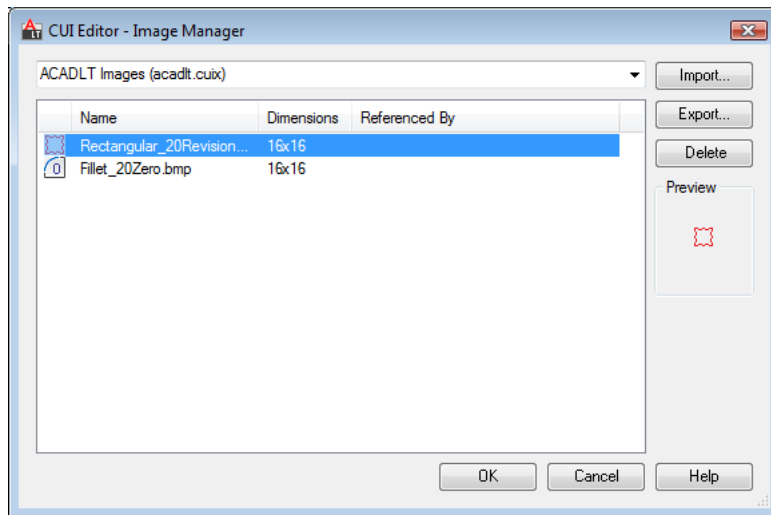

- 4 In the Custom Images list, select the image you want to remove and click Delete.
- 5 In the CUI Editor - Confirm Deletion of Image dialog box, click Delete Image.  
If the selected image is assigned to a command, the CUI Editor - Confirm Deletion of Referenced Image dialog box is displayed. The deletion of the image cannot be undone.
- 6 Click OK.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Customize User Interface Elements


User interface elements in the Customize User Interface (CUI) Editor are used to control how standard and custom commands can be started.

See also:


### To copy and paste a user interface element



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Customizations In <file name> pane, expand the main node for the user interface element that you want to copy.
- 3 Right-click the user interface element, and click Copy.

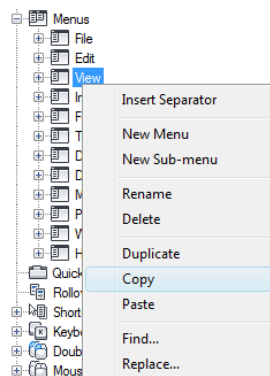

- 4 Right-click the node that you want to paste the selected user interface element to, and click Paste.

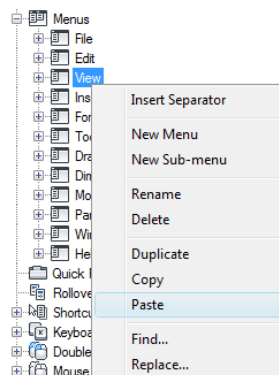

---

**NOTE** The key combination Ctrl+C can be used to copy a user interface element and Ctrl+V can be used to paste a user interface element in the Customizations In <file name> pane.


---

- 5 Click Apply.

### To duplicate a user interface element



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Customizations In <file name> pane, expand the main node for the user interface element that you want to duplicate.
- 3 Right-click the user interface element, and click Duplicate.

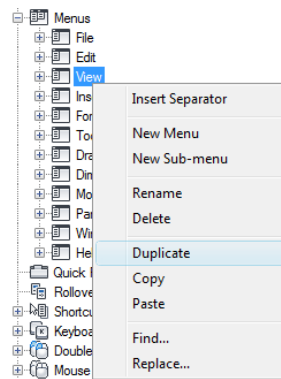

A copy of the selected user interface element is created in-place directly above the selection in the Customizations In <file name> pane.

---

**NOTE** The key combination Ctrl+D can be used to duplicate a user interface element in-place.

---

- 4 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Quick Access Toolbars

The Quick Access toolbar is located along the top of the application window (above or below the ribbon) and provides direct access to a defined set of commands.

The Quick Access toolbar is always located in the same place in the program, but different commands may be displayed on it based on the current workspace. You can customize the Quick Access toolbar by

- Creating Quick Access toolbars under the Customizations In *<file name>* pane and then adding the Quick Access toolbar to a workspace under the Workspace Contents pane in the Customize User Interface (CUI) Editor.
- Adding commands directly to the Quick Access toolbar from the ribbon or when the Customize User Interface (CUI) Editor is displayed. You can also remove commands when the Customize User Interface (CUI) Editor is displayed or not.

Customizing a Quick Access toolbar is similar to customizing a ribbon panel or toolbar. You can add, remove, and reposition commands and controls to tailor the user interface element to the way you work. You can also add drop-downs and separators to group and organize related commands.

Once a Quick Access toolbar has been defined, it can be displayed in the application window by assigning it to the Quick Access Toolbar node of a workspace under the Workspace Contents pane. For more information about assigning a Quick Access toolbar to a workspace, see [To display a Quick Access toolbar](#) on page 299.

---


**NOTE** You can add controls to a Quick Access toolbar. The controls you can add are listed under Ribbon Controls in the drop-down list under the Command List pane.

---

## To create a Quick Access toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Quick Access Toolbars. Click New Quick Access Toolbar.

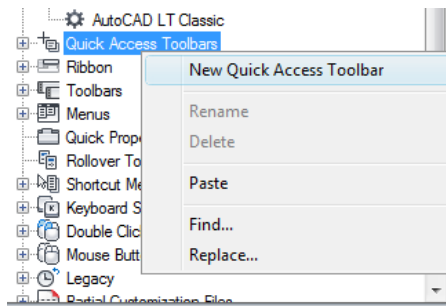


A new Quick Access toolbar (named Quick Access Toolbar1) is placed at the bottom of the Quick Access Toolbars tree.

- 3 Do one of the following:
  - Enter a new name over the default name Quick Access Toolbar1.
  - Right-click Quick Access Toolbar1. Click Rename. Enter a new name.
  - Click Quick Access Toolbar1, wait, and click again over the Quick Access toolbar's name again to edit its name in-place.
- 4 Click Apply.

## To delete a Quick Access toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Quick Access Toolbars node to expand it.
- 3 Right-click the Quick Access toolbar you want to delete and click Delete.

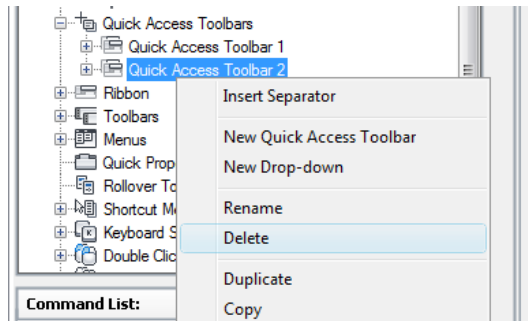


- 4 Click Apply.

#### To add a command or control to a Quick Access toolbar from the CUI Editor



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Quick Access Toolbars node to expand it.
- 3 Click the plus sign (+) next to the Quick Access toolbar that you want to modify.
- 4 Under the Command List pane, drag the command or control you want to add to the Quick Access toolbar from the Command List pane to the Quick Access Toolbar node under the Customizations In <file name> pane.



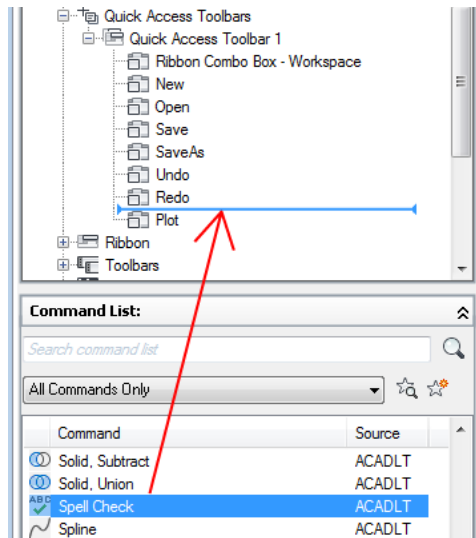


A splitter bar is displayed to indicate the location where the command or control will be added when you release the pointing device button.

- 5 Once the splitter bar is in the location you want to insert the command or control, release the pointing device button.
- 6 Click Apply.

#### To remove a command or control from a Quick Access toolbar with the CUI Editor



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Quick Access Toolbars node to expand it.
- 3 Click the plus sign (+) next to the Quick Access toolbar from which you want to remove a command or control.
- 4 Right-click the command you want to remove and click Remove.

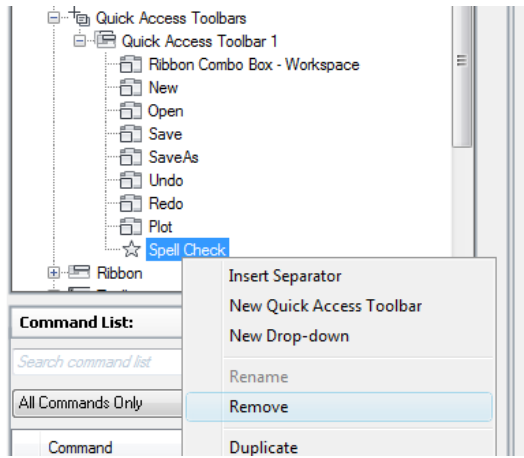

5 Click Apply.

### To add and remove commands from the Quick Access toolbar outside the CUI Editor

#### ■ To add a command to the Quick Access toolbar

Do one of the following:

- Right-click a command on the ribbon, and click Add to Quick Access Toolbar.
- On the Quick Access toolbar, click the Customize button located on the right side and select one of the listed commands or select More Commands.  
Selecting More Commands displays the Customize User Interface (CUI) Editor in a compact state. Drag commands from the Command List pane to the Quick Access toolbar in the application window.


#### ■ To remove a command from the Quick Access toolbar

- Right-click the command you want to remove and click Remove from Quick Access Toolbar.

## To add a drop-down to a Quick Access toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Quick Access Toolbars node to expand it.
- 3 Click the plus sign (+) next to the Quick Access toolbar that you want to modify.
- 4 Right-click the Quick Access toolbar which you want to add a drop-down to. Click New Drop-down.

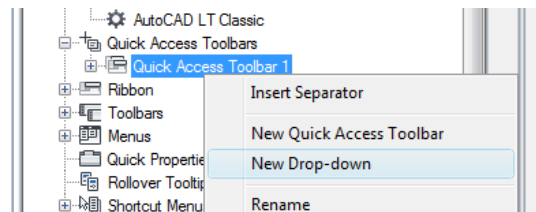

A new drop-down (named New Drop-down) is added to the bottom of the Quick Access toolbar.


- 5 Right-click the new drop-down. Click Rename. Enter a new name.

---

**NOTE** You can click, wait, and click again over a drop-down name to edit its name in-place in the Customizations In <file name> pane.

---

- 6 Drag the drop-down under the Quick Access toolbar to the position where you want it placed. Use the visual indicator bar that is displayed to help specify the location for the drop-down. Release the pointing device button to reposition the drop-down.
- 7 Under the Command List pane, drag the command or control you want to add to the Quick Access toolbar from the Command List pane to the Quick Access Toolbar node under the Customizations In <file name> pane.

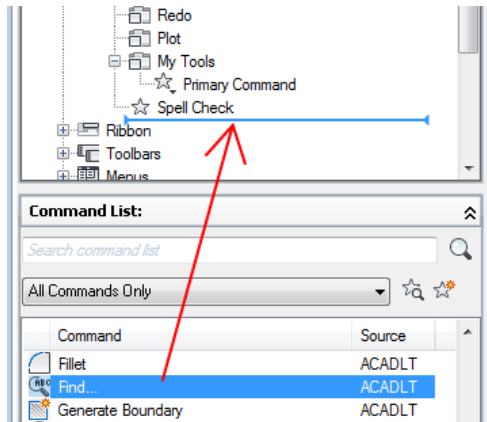

A visual indicator bar is displayed to indicate the location where the command or control will be added when the pointing device button is released.

- 8 Once the splitter bar is in the location where you want to insert the command or control, release the pointing device button.
- 9 [Adjust the properties of the drop-down as desired to control the appearance of the drop-down and the commands under the drop-down.](#)  
on page 164
- 10 If the drop-down will use the Split behavior, add a command to the Primary Command node under the drop-down to set the command for the main button.
- 11 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Ribbon

You can customize the ribbon by creating and modifying ribbon panels and organizing ribbon panels into groups of task-based tools with ribbon tabs.

Ribbon tabs can be displayed on the ribbon with a workspace or based on a contextual tab state when they are needed.

## Ribbon Panels

By customizing ribbon panels, you can organize commands that you use frequently similar to toolbars. With ribbon panels, you can quickly access commands, and reduce the number of user interface elements that are displayed.

## Overview of Ribbon Panels

Ribbon panels are organized by rows, sub-panels, and slideout elements. Rows and sub-panels are used to organize how commands and controls are displayed on the ribbon panel. A slideout is automatically added to each ribbon panel and controls which rows are shown by default. Rows located below a slideout are displayed only when a ribbon panel is expanded.

The following table describes the properties of the Home 2D - Draw ribbon panel as they appear in the Properties pane.

Properties for the Home 2D - Draw Ribbon Panel		
Properties Pane Item	Description	Example
Name	Name of the panel; does not appear in the user interface.	Home 2D - Draw
Display Text	Title of the panel; displayed when the ribbon is set to display titles or when a panel is floating.	Draw
Description	Text used to describe the element; does not appear in the user interface and is optional.	
KeyTip	Specifies the keytip characters that can be used to access the ribbon panel from the keyboard.	
Aliases	Specifies the aliases for the panel. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and is used to reference the panel programmatically.	ID_Draw

## Properties for the Home 2D - Draw Ribbon Panel

Properties Pane Item	Description	Example
Element ID	Tag that uniquely identifies a panel.	ID_PanelDraw

### Create a Ribbon Panel

Ribbon panels can be created from scratch or from an existing toolbar or dashboard panel. Create ribbon panels from scratch under the Ribbon Panels node on the Customizations In *<file name>* pane of the Customize tab. This gives you control over which commands are displayed on the ribbon panel.

If you have an existing toolbar or dashboard panel from a previous release, you can create a new ribbon panel from them. Copy toolbars to a ribbon panel from the Toolbars node under the Customizations In *<file name>* pane on the Customize or Transfer tabs. Dashboard panels can only be copied to ribbon panels from the Dashboard Panels node on the Transfer tab.

### Display Ribbon Panels on the Ribbon

The display of ribbon panels is controlled with ribbon tabs. Once a ribbon tab is defined, the ribbon tab can be added to a workspace, which controls which ribbon tabs are displayed and the order in which they are displayed on the ribbon. For more information about ribbon tabs, see [Ribbon Tabs](#) on page 180 under [Customize User Interface Elements](#) on page 139.

### Associating Tool Palette Group with a Ribbon Panel


You can associate a tool palette group with a ribbon panel. By associating a tool palette group to a ribbon panel you can quickly access additional tools that are related to a ribbon panel and are defined on a tool palette. The association of a tool palette group to a ribbon panel is done from the ribbon. For more information about tool palettes and tool palette groups, see [Customize Tool Palettes and Organize Tool Palettes](#) in the *User's Guide*.

### To create a ribbon panel

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, click the plus sign (+) next to the Ribbons node to expand it.




- 3 Right-click Panels. Click New Panel.

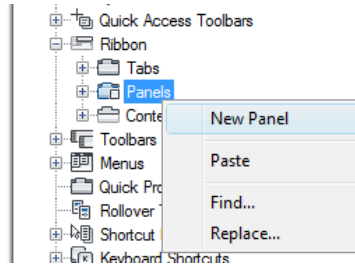

A new panel (named Panel1) is placed at the bottom of the Ribbon Panels tree.

- 4 Right-click Panel1. Click Rename. Enter a new panel name.
- 5 Select the new panel, and update its properties in the Properties pane:
  - In the Display Text box, enter the text you want to display for the title of the panel when it is displayed on the ribbon.
  - In the KeyTip box, enter the characters to access the ribbon panel from the keyboard.
  - In the Aliases box, enter an alias for the ribbon panel.

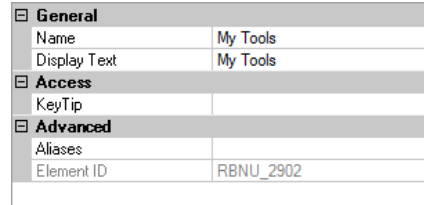

- 6 Click Apply.


### To copy a toolbar to a ribbon panel




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Toolbars to expand it.

- 3 Right-click the toolbar that you want to copy to a ribbon panel. Click Copy to Ribbon Panels.
- 4 In the CUI Editor - Confirm Copy to Ribbon Panels Node dialog box, click Yes.  
The copied toolbar is copied to the Panels node under the Ribbons node.
- 5 Click Apply.

#### To copy a dashboard panel to a ribbon panel


- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Transfer tab, in the Customizations In <file name> pane on the right, click Open Customization File.
- 3 In the Open dialog box, Files of Type drop-down list, select Legacy Customization Files (\*.cui).
- 4 Browse to and select the customization (CUI) file that contains the dashboard panels you want to copy to ribbon panels. Click Open.
- 5 Click the plus sign (+) next to Dashboard Panels to expand it.
- 6 Right-click over the dashboard panel you want to copy to a ribbon panel. Click Copy to Ribbon Panels.
- 7 In the CUI Editor - Confirm Copy to Ribbon Panels Node dialog box, click Yes.

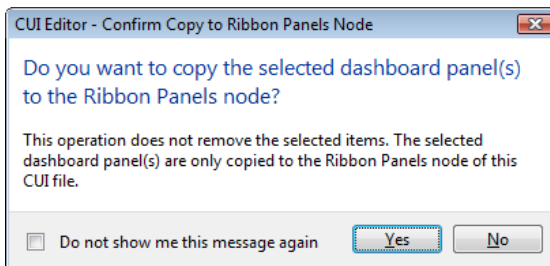

The copied dashboard panel is copied to the Panels node under the Ribbons node.

- 8 Drag the new ribbon panel from the Customizations In <file name> pane on the right to the Panels node of one of the loaded CUIx files in the Customizations In <file name> pane on the left.



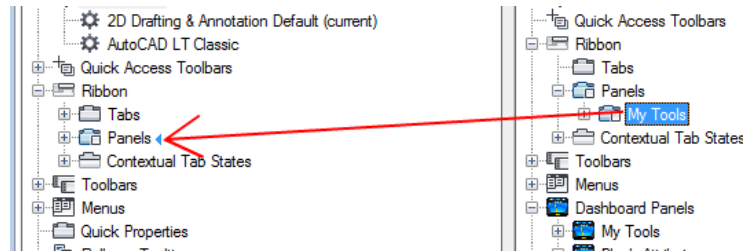


9 Click Apply.

### To remove a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Right-click the panel that you want to remove. Click Delete.

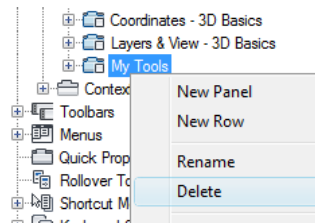


**WARNING** There is no way to undo the removal of a user interface element, so be careful when removing user interface elements. If you remove the wrong user interface element, the best thing to do is click Cancel to not save changes, but this will also undo any other changes that you might have made.

- 5 In the AutoCAD LT message box, click Yes.
- 6 Click Apply.

### To control the display of ribbon panel titles on the ribbon


- Right-click a ribbon tab on the ribbon, and click Show Panel Titles.

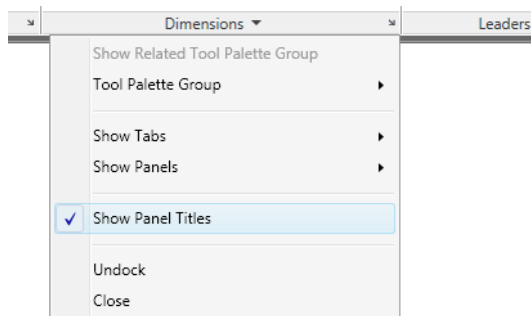

### To assign a command to the Panel Dialog Box Launcher



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to assign a command to its Panel Dialog Box Launcher node.
- 5 Drag a command from the Command List pane to the Panel Dialog Box Launcher node for the panel.

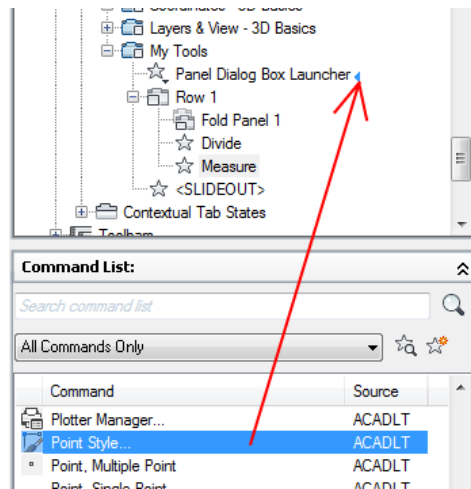

6 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

## Add and Organize Commands and Controls on a Ribbon Panel

Commands and controls are added to and organized with rows and sub-panels on a ribbon panel.

You can add and rearrange the commands and controls on a row that you use often, and you can remove those from a row that you use infrequently. Rows are used to hold and organize commands and controls on a ribbon panel. Along with using rows to organize commands, you can also create drop-downs that contain multiple commands and only take up the space of a single

command. For more information about drop-downs on ribbon panels, see [Add Drop-downs to a Ribbon Panel](#) on page 167.

In addition to using rows and sub-panels to organize commands, you can also use menu separators. Menu separators are used to add space or lines between commands and controls.

The following table describes the properties for the Line command of Row 1 on the Home 2D - Draw ribbon panel as they appear in the Properties pane.

Properties for the Line Command on Row 1 of the Home 2D - Draw Ribbon Panel		
Properties Pane Item	Description	Example
Name	<p>Text used as the name and label of the command button; does appear in the user interface.</p> <hr/> <p><b>NOTE</b> Use the “\n” character sequence to represent a line break and display a command label on more than one line. The “\n” character sequence is displayed as a space instead of the characters “\n” after the changes to the command are saved.</p>	Line
Button Style	<p>Controls the size and the label display of the command. The available options are Large With Text (Vertical), Large With Text (Horizontal), SmallWithText, or SmallWithoutText.</p> <hr/> <p><b>NOTE</b> It is recommended to not use the Large With Text (Horizontal) option as it takes up extra space on the ribbon.</p>	Large with Text (Vertical)
Group Name	<p>Specifies the group name assigned to the command that is used to control the organization of the command on a drop-down.</p>	
Command Name	<p>Text that contains the name of the command as it appears in the Command List pane.</p>	Line
Description	<p>Text used to describe the element; does not appear in the user interface.</p>	Creates straight line segments

### Properties for the Line Command on Row 1 of the Home 2D - Draw Ribbon Panel

Properties Pane Item	Description	Example
Extended Help File	Text that displays the file name and ID for the extended tooltip that is displayed when the cursor hovers over a toolbar or panel button.	
Command Display Name	Text that contains the name of the command that is related to the command.	LINE
Macro	<p>The command macro. It follows the standard macro syntax.</p> <p><b>NOTE</b> When you change the name of a macro, the name of its corresponding menu item or toolbar button does not change. You must change a menu item or toolbar button name by selecting it in the tree view.</p>	^C^C_line
Tags	Keywords associated to a command. Tags provide an additional field to search when using the Search field in the application menu.	
KeyTip	Specifies the keytip characters that can be used to access the command from the keyboard.	LI
Tooltip Title	Text string that controls the title of the tooltip for the command.	
Element ID	Tag that uniquely identifies a command.	UIDU_0005
Small Image	ID string of the small-image resource (16 × 16 bitmap). The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	RCDATA_16_LINE
Large Image	ID string of the large-image resource (32 × 32 bitmap). If the specified bitmap is not 32 × 32,	RCDATA_32_LINE

---

**Properties for the Line Command on Row 1 of the Home 2D - Draw Ribbon Panel**

---

Properties Pane Item	Description	Example
	the program scales it to that size. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	

---

**Organize Commands and Controls with Rows**

A row, similar to a toolbar, determines the order and position that commands and controls appear on a ribbon panel. Rows run horizontally on a ribbon panel no matter if the ribbon is displayed horizontally or vertically. Not all rows might be displayed by default on a ribbon panel, the <SLIDEOUT> element controls which rows are displayed without expanding a ribbon panel. A down arrow to the right of a ribbon panel's title indicates that the ribbon panel can be expanded.

**Organize Rows with Sub-panels**

Sub-panels do not directly contain commands. Instead, sub-panels are used in combination with rows to organize commands and controls on a ribbon panel.

**Organize Rows with Fold Panels**

Fold panels can have buttons, toggles button, split buttons, and drop-down buttons. Button Style must be set to Large with Text. Fold panels can be converted to sub-panels.

**See also:**


- [To add a row to a ribbon panel](#) on page 159 (Procedure)
- [To add a sub-panel or fold panel to a row on a ribbon panel](#) on page 159 (Procedure)
- [To remove a row or sub-panel from a ribbon panel](#) on page 160 (Procedure)
- [To reposition a row or sub-panel on a ribbon panel](#) on page 161 (Procedure)
- [To add a command to a ribbon panel](#) on page 161 (Procedure)

- [To reposition a command on a ribbon panel](#) on page 163 (Procedure)
- [To remove a command from a ribbon panel](#) on page 162 (Procedure)
- [To change the display and behavior of commands, controls and drop-downs on a ribbon panel](#) on page 164 (Procedure)

### To add a row to a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Right-click the ribbon panel to which you want to add a row. Click New Row.

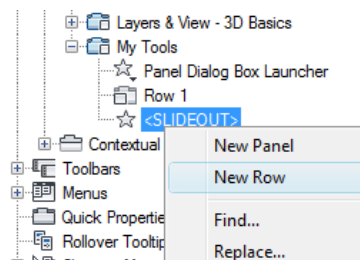


- 5 Click Apply.

### To add a sub-panel or fold panel to a row on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to add a sub-panel or fold panel.

- 5 Create a new row for the sub-panel or fold-panel if needed, or click the plus sign (+) next to the row where you want to add a sub-panel or fold panel.
- 6 Right-click the row where you want to add a sub-panel or fold-panel. Click New Sub-Panel or New Fold Panel.

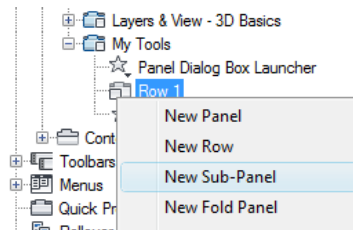


- 7 Click Apply.

#### To remove a row or sub-panel from a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel from which you want to remove a row or sub-panel.
- 5 Right-click the row or sub-panel that you want to remove. Click Delete.

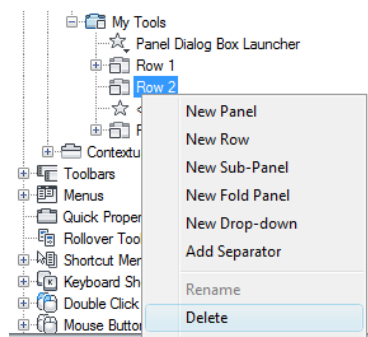




- 6 Click Apply.

### To reposition a row or sub-panel on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to reposition a row or sub-panel.
- 5 Drag the row or sub-panel that you want to reposition up or down under the ribbon panel's node. Use the visual indicator bar to position the row above or below other rows or sub-panels.

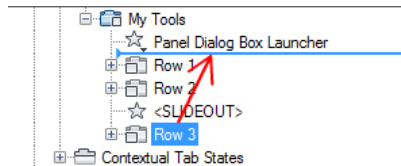


- 6 Click Apply.

### To add a command to a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to add a command.
- 5 Click the plus sign (+) next to the rows, sub-panels, or drop-downs to get to the location you want to add a command.

- 6 Drag a command from the Command List pane to a row, sub-panel, or drop-down on the panel. Use the visual indicator bar to specify the position of the command.

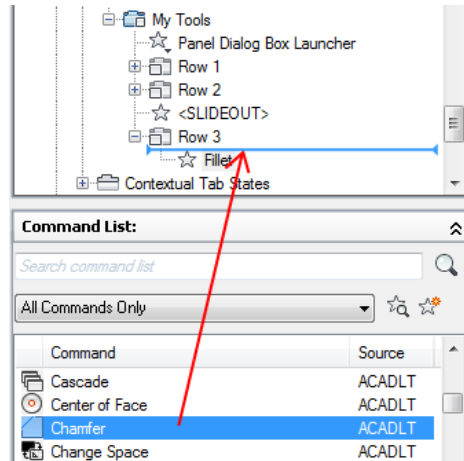

- 7 In the Properties pane, **change the properties of the command you added** on page 164.

<b>Display</b>	
Name	
<b>Appearance</b>	
Button Style	SmallWithoutText
Group Name	
<b>Command</b>	
Command Name	Chamfer
Description	Bevels the edges of objects
Extended Help File	
Command Display Name	CHAMFER
Macro	^C^C_chamfer
Tags	
<b>Access</b>	
KeyTip	
Tooltip Title	Chamfer
<b>Advanced</b>	
Element ID	ID_Chamfer
Element ID	RBNU_2906
<b>Images</b>	
Small image	RCDATA_16_CHAMFE
Large image	RCDATA_32_CHAMFE


- 8 Click Apply.

#### To remove a command from a ribbon panel

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.



- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to remove a command.
- 5 Click the plus sign (+) next to the rows, sub-panels, or drop-downs to get to the location you want to remove a command.
- 6 Right-click the command that you want to remove. Click Remove.

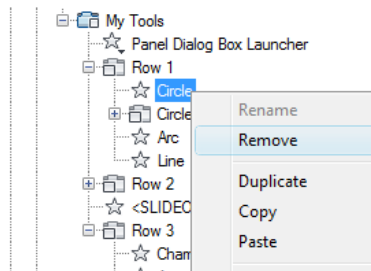


- 7 Click Apply.

### To reposition a command on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to reposition a command.
- 5 Click the plus sign (+) next to the rows, sub-panels, or drop-downs to get to the location you want to reposition a command.
- 6 Drag the command to a new location. Use the visual indicator bar to specify the position of the command.

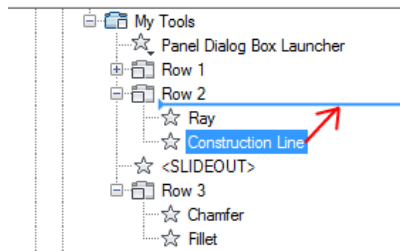

7 Click Apply.

### To change the display and behavior of commands, controls and drop-downs on a ribbon panel

- Do one of the following:

#### To show the label and set the orientation of a command or drop-down on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to show the label for a command.
- 5 Click the plus sign (+) next to the row, sub-panel, or drop-down where you want to show the label for a command. If you need to, continue expanding rows, sub-panels, and drop-downs to get to the command or drop-down.
- 6 Select the command that you want to show its label for.
- 7 In the Properties pane, Button Style box, click the down arrow and select Large With Text (Vertical), Large With Text (Horizontal), or SmallWithText.

<b>Display</b>	
Name	
<b>Appearance</b>	
Button Style	SmallWithoutText
Group Name	
<b>Command</b>	
Command Name	Chamfer
Description	Bevels the edges of objects
Extended Help File	
Command Display Name	CHAMFER
Macro	^C^C_chamfer
Tags	
<b>Access</b>	
KeyTip	
Tooltip Title	Chamfer
<b>Advanced</b>	
Element ID	ID_Chamfer
Element ID	RBNU_2906
<b>Images</b>	
Small image	RCDATA_16_CHAMFE
Large image	RCDATA_32_CHAMFE

8 Click Apply.

### To set the size of a command or drop-down on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel which has the command or drop-down for which you want to set the size.
- 5 Click the plus sign (+) next to the row or sub-panel that has the command or drop-down for which you want to set the size. If you need to, continue expanding rows, sub-panels, and drop-downs to get to the command or drop-down.
- 6 Select the command or drop-down for which you want to set the size.
- 7 In the Properties pane, Button Style box, click the down arrow and select Large With Text (Vertical), Large With Text (Horizontal), SmallWithText, or SmallWithoutText.

[-] <b>Display</b>	
Name	Circle Commands
Description	
[-] <b>Appearance</b>	
Behavior	Drop Down Menu with Recent
SplitButtonListStyle	IconText
Button Style	SmallWithoutText
Grouping	No
[-] <b>Access</b>	
KeyTip	
Tooltip Title	
[-] <b>Advanced</b>	
Element ID	RBNU_2909
[-] <b>Images</b>	
Small image	
Large image	

8 Click Apply.

### To set the button and style of a drop-down on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to change the style of a drop-down.
- 5 Click the plus sign (+) next to the row or sub-panel that contains the drop-down you want to change. If you need to, continue expanding rows and sub-panels to get to the drop-down.
- 6 Select the drop-down that you want to change, and update its properties in the Properties pane:
  - In the Behavior box, click the down arrow and select Drop Down Menu with Recent, Drop Down Menu, Split with Recent, Split, or Split with Recent (Static).
  - In the Split Button List Style box, click the down arrow and select Icon, Icon and Text, and Descriptive.

<b>Display</b>	
Name	Circle Commands
Description	
<b>Appearance</b>	
Behavior	Drop Down Menu with Recent
SplitButtonListStyle	IconText
Button Style	SmallWithoutText
Grouping	No
<b>Access</b>	
KeyTip	
Tooltip Title	
<b>Advanced</b>	
Element ID	RBNU_2909
<b>Images</b>	
Small image	
Large image	

7 Click Apply.

## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.

RIBBON

Opens the ribbon window.

RIBBONCLOSE

Closes the ribbon window.

## Add Drop-downs to a Ribbon Panel

Drop-downs can be used to group multiple related commands into a single button.

Ribbon panel drop-downs, like toolbar flyouts, that can hold a number of commands in a single place on a ribbon panel. Drop-downs are used to help reduce the amount of space that related commands can take up. Commands on a drop-down can be started by clicking the main button or selecting a command from the menu when the main or split button is clicked based on how the properties of a drop-down are configured. When a drop-down is set as a split button, the main button can reflect the most recently used command or not, or display the image of the most recently used command with a static label.

The following table describes the properties for the Arc drop-down of Row 1 on under Sub-Panel 1 of the Home 2D - Draw ribbon panel as they appear in the Properties pane.

Properties for the Arc Drop-down on Row 1 of the Home 2D - Draw Ribbon Panel		
Properties Pane Item	Description	Example
Name	<p>Logical name for the drop-down; does not appear in the user interface.</p> <hr/> <p><b>NOTE</b> The “\n” character sequence represents a line break in a command label, which is used to allow a command label to be displayed on more than one line. Once focus from the Name field is lost, the “\n” character sequence is displayed as a space instead of the characters “\n”.</p> <hr/>	Arc
Description	Text used to describe the element; does not appear in the user interface.	
Behavior	Specifies if the button executes a command or displays a list of commands. The available options are Drop Down Menu with Recent, Drop Down Menu, Split with Recent, Split, Split with Recent (Static).	Split with Recent
Split Button List Style	Specifies how the commands on the drop-down will be displayed. The available options are Icon, IconText, or Descriptive.	IconText
Button Style	<p>Controls the size and the label display of the drop-down. The available options are Large With Text (Vertical), Large With Text (Horizontal), SmallWithText, or SmallWithoutText.</p> <hr/> <p><b>NOTE</b> It is recommended to not use the Large With Text (Horizontal) option as it takes up extra space on the ribbon.</p> <hr/>	Large with Text (Vertical)
Grouping	Controls whether the commands assigned to a drop-down are grouped based on the values assigned to their Group Name properties.	No
KeyTip	Specifies the keytip characters that can be used to access the command from the keyboard.	AR



### Properties for the Arc Drop-down on Row 1 of the Home 2D - Draw Ribbon Panel

Properties Pane Item	Description	Example
Tooltip Title	Text string that controls the title of the tooltip for the command.	
Element ID	Tag that uniquely identifies a panel section.	ID_RBN_SPLIT-BTN_ARC
Small Image	ID string of the small-image resource (16 × 16 bitmap). The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	RCDATA_16_ARC3PT
Large Image	ID string of the large-image resource (32 × 32 bitmap). If the specified bitmap is not 32 × 32, the program scales it to that size. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	RCDATA_16_ARC3PT


#### See also:



#### To create a drop-down in a row on a ribbon panel




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to add a drop-down.
- 5 Right-click the row to which you want to add a drop-down. Click New Drop-down.

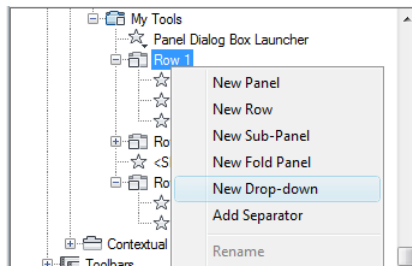

A new drop-down (named New Drop-down) is created in the last position of the row.

- 6 Right-click the new drop-down. Click Rename. Enter a new name.
- 7 In the Command List pane, drag the commands that you want to add to the new drop-down in the Customizations In <file name> pane.

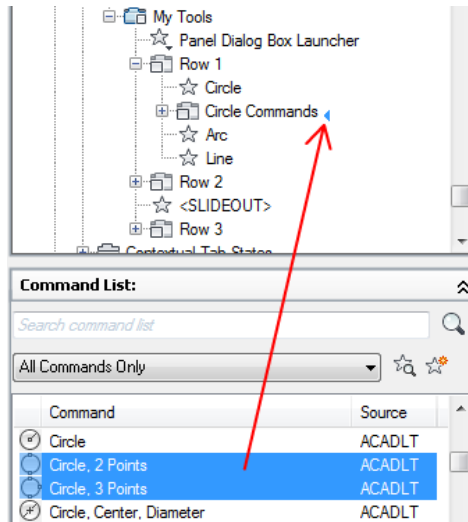

- 8 Adjust the properties of the drop-down as desired to control the appearance of the drop-down and the commands under the drop-down. on page 164
- 9 If the drop-down will use the Split behavior, add a command to the Primary Command node under the drop-down to set the command for the main button.
- 10 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

## Add and Remove Ribbon Panel Controls

You can add, remove, and relocate ribbon panel controls, such as drop-down lists, sliders, text boxes, and other types of panel-specific controls that start commands or change a setting. For example, the Home 2D/3D - Layers panel contains controls for working with the layers of a drawing.

The following table describes the controls found in the Customize User Interface (CUI) Editor that can be used on ribbon panels.

Controls available for ribbon panels		
Control element	Control Type	Description
Ribbon Toggle Button - Authoring Palettes	Toggle	Displays or hides the Block Authoring palettes.
Ribbon Combo Box - Background Color	Drop-down list	Displays and changes the background color of the selected cells in a table.
Ribbon Toggle Button - Block Constraint Status	Toggle	Controls constraint display status and the shading of objects based on their constraint level.
Ribbon Label - Block	Label	Displays the name of the block that is currently being edited in the Block Editor.
Ribbon Combo Box - Block Visibility States	Drop-down list	Displays a list of the visibility states saved with the current block in the Block Editor.

Controls available for ribbon panels		
Control element	Control Type	Description
Ribbon Command Button - Block Visibility Hide	Button	Makes objects visible in the current visibility state or all visibility states in the block definition opened for edit in the Block Editor.
Ribbon Command Button - Block Visibility Mode	Button	Controls how objects that are made invisible for the current visibility state are displayed in the Block Editor.
Ribbon Command Button - Block Visibility State	Button	Makes objects invisible in the current visibility state or all visibility states in the block definition opened for edit in the Block Editor.
Ribbon Command Button - Block Visibility States	Button	Allows you to create or modify the visibility states of the current block definition opened for edit in the Block Editor.
Ribbon Combo Box - Cell Styles	Drop-down list	Displays and changes the cell style of the selected cells in a table.
Ribbon Toggle Button - Command Line	Toggle	Displays or hides the command line window.
Ribbon Toggle Button - Design Center	Toggle	Displays or closes the DesignCenter palette.
Ribbon Toggle Button - DGN Osnap	Toggle	Controls object snapping for DGN underlays.
Ribbon Combo Box - Dimension Style	Drop-down list	Displays and sets the current dimension style.
Ribbon Toggle Button - Drawing Recovery Manager	Toggle	Displays or closes the Drawing Recovery Manager palette.
Ribbon Toggle Button - Drawing Status Bar	Toggle	Displays or hides the drawing status bar.
Ribbon Toggle Button - DWF Osnap	Toggle	Controls object snapping for DWF underlays.
Ribbon Toggle Button - Dynamic Constraint Display	Toggle	Displays or hides dynamic constraints.

---

**Controls available for ribbon panels**

---

<b>Control element</b>	<b>Control Type</b>	<b>Description</b>
Ribbon Combo Box - What to Export	Drop-down list	Controls which part of the drawing should be exported to a DWF, DWFX or PDF file.
Ribbon Combo Box - Page Setup	Drop-down list	Allows you to export the drawing to a DWF, DWFX, or PDF file using the page setup settings in the Page Setup Manager or to override these settings.
Ribbon Toggle Button - External References	Toggle	Displays or closes the External References palette.
Ribbon - Image, Show Image Toggle Button	Toggle	Displays or hides the selected raster image.
Ribbon - Image, Transparency Toggle Button	Toggle	Controls the use of transparency for the selected raster image.
Ribbon Combo Box - IPE Color Color	Drop-down list	Displays and changes the current color for the selected text in the multiline text editor.
Ribbon Combo Box - Font	Drop-down list	Displays and changes the current font style for the selected text in the multiline text editor.
Ribbon Combo Box - Text Height	Drop-down list	Displays and changes the current text height for the selected text in the multiline text editor.
Ribbon Gallery - IPE Text Style	Gallery	Displays and changes the current text style for the selected text in the multiline text editor.
Ribbon Spinner - Oblique Angle	Spinner	Displays and changes the current oblique angle for the selected text in the multiline text editor.
Ribbon Button - Paragraph Button	Button	Displays the Paragraph dialog box when the multiline text editor is active.

---

Controls available for ribbon panels		
Control element	Control Type	Description
Spell Check Settings	Button	Displays the Check Spelling Settings dialog box when the multiline text editor is active.
Ribbon Spinner - Tracking	Spinner	Displays and changes the current tracking spacing for the selected text in the multiline text editor.
Ribbon Spinner Width Factor	Spinner	Displays and changes the current width factor for the selected text in the multiline text editor.
Ribbon Toggle Button - Layer Properties	Toggle	Displays or closes the Layer Properties Manager palette.
LayerFilterComboControl	Drop-down list	Displays and sets the layer filter used in the drawing.
Ribbon Combo Box - Layer State	Drop-down list	Displays the available layer states; you can restore a saved layer state.
Ribbon Combo Box - Linetypes	Drop-down list	Displays and sets the current linetype.
Ribbon Combo Box - Lineweight	Drop-down list	Displays and sets the current lineweight.
Ribbon Toggle Button - Locked Layer Fading	Toggle	Enables or disables the fading effect for locked layers.
Locked layer fading	Slider	Adjusts the percentage lock layers are faded into the background.
Ribbon Toggle Button - Markup Set Manager	Toggle	Displays or closes the Markup Set Manager palette.
Ribbon Combo Box - Multileader Style	Drop-down list	Displays and sets the current multileader style.

---

**Controls available for ribbon panels**

---

Control element	Control Type	Description
3D Navigation Combo Control	Multiple	Displays and sets the current view to a standard orthographic or isometric view, or a saved name view based on the current space.
Lens length	Slider	Adjusts the lens length of a perspective view.
Ribbon Combo Box - Object Color	Drop-down list	Displays and sets the current object color.
Ribbon Menu Button - Switch Windows	Button	Displays a list of all open drawings; you can switch to a different open drawing.
Ribbon Radio Button - Paragraph Alignment	Radio button	Displays and changes the current paragraph alignment for the selected text in the multiline text editor.
Ribbon Toggle Button - Parameters Manager	Toggle	Displays or closes the Parameters Manager palette.
Ribbon Toggle Button - PDF Osnap	Toggle	Controls object snapping for PDF underlays.
Ribbon Combo Box - Plot Style	Drop-down list	Displays and sets the current plot style when the current drawing uses named plot styles.
Ribbon Toggle Button - Properties	Toggle	Displays or closes the Properties palette.
Ribbon Toggle Button - Quick Calculator	Toggle	Displays or closes the QuickCalc palette.
Ribbon Label - ReferenceEditName	Label	Displays the name of the block that is directly being edited in the current drawing.
RibbonAutodeskSeekControl	Text box and button	Allows you to perform a context search from the Autodesk Seek web site.
Join Viewports	Button	Allows you to merge two adjacent tiled viewports into a single viewport.

---

Controls available for ribbon panels		
Control element	Control Type	Description
Ribbon Control - Empty Row Aligner	Spacer	Allows you to align empty rows with other rows that contain commands and controls.
Ribbon Text Box - Find Text	Text box	Searches a drawing for matching text based on a text string.
Ribbon Menu Button - Status Bar Options	Drop-down menu button	Displays a list of the status bar items that are currently turned on or off.
Ribbon Combo Box - Table Styles	Drop-down list	Displays and sets the current table style.
Ribbon Gallery - Text Style	Drop-down list	Displays and sets the current text style.
Ribbon Combo Box - Annotation Text Height	Drop-down list	Displays and sets the default text height for new text objects.
Ribbon Toggle Button - Tool Palettes	Toggle	Displays or hides the Tool Palettes window.
Ribbon - Underlay, Adjust Color for Background	Toggle	Determines if the colors of the selected underlay are adjusted based on the current background color.
Brightness	Slider	Displays and sets the current brightness for the selected underlay.
Contrast	Slider	Displays and sets the current contrast for the selected underlay.
Ribbon - Underlay, Display Monochrome Toggle Button	Toggle	Determines if the selected underlay should be displayed in monochrome colors only.
Fade	Slider	Displays and sets the current fade value for the selected underlay.
Ribbon - Clip Toggle Button	Toggle	Determines if the selected underlay is fully visible or just the area based on the clipping boundary.



---


### Controls available for ribbon panels


---

Control element	Control Type	Description
Ribbon - Show Underlay Toggle Button	Toggle	Determines if the selected underlay is visible or not.
Ribbon Combo Box - Viewport Configurations	Drop-down list	Sets how the active tiled viewport should be divided.
Xref fading	Slider	Displays and sets the level of fading that is applied to the objects of an xref.
Ribbon Toggle Button - Xref fading	Toggle	Indicates the objects of xrefs are faded into the background, enables or disables xref fading.
Layer Combo Control	Drop-down list	Displays and sets the current layer.

---


### To add a control to a ribbon panel

- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to add a control.
- 5 Create a new row for the control if you need to, or click the plus sign (+) next to the row where you want to add a control.
- 6 In the Command List pane, in the Categories list, click Ribbon Control Elements.

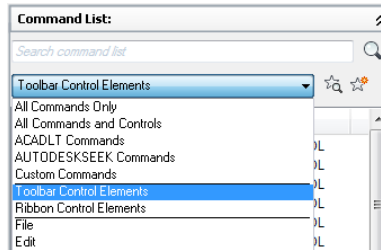

The Command List pane displays the list of ribbon control elements only.

- 7 Drag a control from the Command List pane to add it to the panel. Use the visual indicator bar to specify the position of the control.

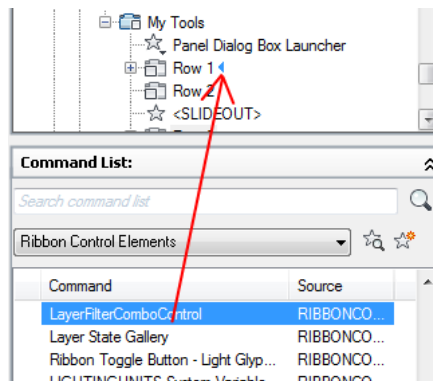


- 8 Click Apply.

### To reposition a control on a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to reposition a control.

- 5 Click the plus sign (+) next to the row where you want to reposition a control. If you need to, continue expanding sub-panels, rows, and drop-downs to get to the control.
- 6 Drag the control to a new location. Use the visual indicator bar to specify the position of the command.

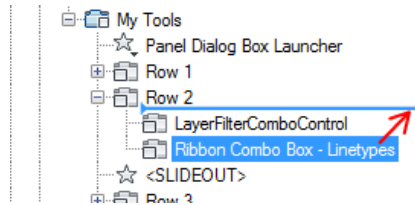


- 7 Click Apply.

#### To remove a control from a ribbon panel



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Panels to expand it.
- 4 Click the plus sign (+) next to the ribbon panel where you want to remove a control.
- 5 Click the plus sign (+) next to the row where you want to remove a control. If you need to, continue expanding sub-panels, rows, and drop-downs to get to the control.
- 6 Right-click the control that you want to remove. Click Remove.

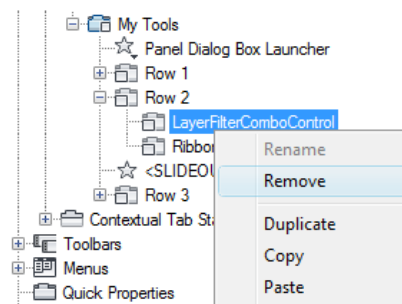

7 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

## Ribbon Tabs

Ribbon tabs control the display and order in which ribbon panels are displayed on the ribbon. You add ribbon tabs to a workspace to control which ribbon tabs are displayed on the ribbon.

Ribbon tabs do not contain any commands or controls like a ribbon panel does; instead, they manage the display of ribbon panels on the ribbon. Once a ribbon tab is created, you can then add references to any of the ribbon panels from the Panels node under the Ribbon node in the Customizations In *<file name>* pane to the ribbon tab. After references to ribbon panels are added to a ribbon tab, you can control the initial display order in which ribbon panels appear on a ribbon tab from the ribbon tab's node in the Customizations In *<file name>* pane.

---

**NOTE** Newly created ribbon tabs are not automatically added to a workspace. To display a new ribbon tab on the ribbon, select the workspace in which you want the ribbon tab to be displayed with and then use the Workspace Contents pane to add it to the workspace. For information on adding a ribbon tab to a workspace, see [To display ribbon tabs from the CUI Editor](#) on page 301.

---

In the Workspace Contents pane, you add and remove ribbon tabs from the ribbon, which is controlled by the current workspace. Once a ribbon tab has been added to a workspace, you can control the order in which the tab is displayed on the ribbon by expanding the Ribbon Tabs node under the Workspace Contents pane.

From the Workspace Contents pane, you can control the default display of ribbon tabs and panels; this allows you to keep the associations of ribbon tabs and panels with a workspace, but turn it off. You can also control the tool palette group associated with a ribbon tab, and the collapse behavior, resize order, and orientation of a ribbon panel from the Workspace Contents pane.


The following table describes the properties for the Home - 2D ribbon tab as they appear in the Properties pane.


<b>Properties for the Home - 2D ribbon tab</b>		
<b>Properties pane item</b>	<b>Description</b>	<b>Example</b>
Display Text	Title of the tab; displayed when the ribbon tab is assigned to a workspace and the Ribbon palette is displayed.	Home
Contextual Display Type	Specifies whether the ribbon tab is displayed on its own tab or is merged with the ribbon tabs already displayed on the ribbon. The available options are Full or Merged.	Full
Default Display	Specifies if the ribbon tab is displayed the first time the CUIx file is loaded as a partial customization file. The available options are Do Not Add to Workspaces or Add to Workspaces.	Add to workspaces
Workspace Behavior	Specifies how the ribbon tab is merged or added to the ribbon when this CUIx file is loaded as a partial customization file. The available options are Add Tab Only, Merge Tab Only, or Merge or Add Tab.	Merge or add tab
KeyTip	Specifies the keytip character to access the ribbon tab on the ribbon from the keyboard.	H
Aliases	Specifies the aliases for the ribbon tab. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique; it is used to reference the ribbon tab programmatically.	ID_TabHome
Element ID	Tag that uniquely identifies a panel.	ID_TabHome

## Display Ribbon Tabs from a Partial CUIx File

When you load ribbon tabs from a partial CUIx file, you can use the Workspace Behavior property to control how ribbon tabs that might share the same alias in the main and partial CUIx files are handled. The Add Tab Only option displays each ribbon tab that is loaded with a workspace as its own tab. While Merge Tab Only displays the ribbon tabs from a partial CUIx file with those that have a matching alias in the main CUIx file. The Merge or Add Tab option merges the tab before a new tab is created on the ribbon.

### To create a ribbon tab

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Right-click Tabs and click New Tab.

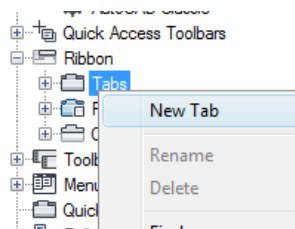

A new ribbon tab (named New Tab) is placed at the bottom of the Tabs node.


- 4 Right-click New Tab. Click Rename. Enter a new name for the ribbon tab.
- 5 Select the new ribbon tab in the tree view, and update the Properties pane:
  - In the Display Text box, enter a text string that will appear on the ribbon tab.
  - In the Contextual Display Type box, specify how the ribbon tab should be displayed on the ribbon when used with a contextual ribbon tab state.
  - In the Default Display box, specify if the ribbon tab should be displayed by default when the CUIx file is loaded as a partial customization file.


- In the Workspace Behavior box, specify if the ribbon tab is merged or added to the ribbon when the CUIx file is loaded as a partial file.
- In the KeyTip box, enter a text string that can be used to access the ribbon tab from the keyboard.
- In the Aliases box, enter an alias for the ribbon tab.

<b>General</b>	
Display Text	My Utilities
Contextual Display Type	Full
<b>Partial File Behavior</b>	
Default Display	Add to workspaces
Workspace Behavior	Merge or add tab
<b>Access</b>	
KeyTip	
<b>Advanced</b>	
Aliases	ID_TABSOURCENEWTAB
Element ID	RBNU_2902

6 Click Apply.

#### To remove a ribbon tab

- 1 Click Manage tab ➤ Customization panel ➤ User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Right-click the ribbon tab that you want to remove. Click Remove.

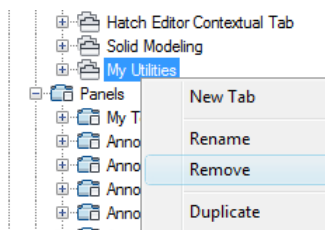


---

**WARNING** There is no way to undo the removal of a user interface element, so be careful when removing user interface elements. If you remove the wrong user interface element, the best thing to do is click Cancel to not save changes, but this will also undo any other changes that you might have made.


---

5 Click Apply.

### To add a ribbon panel to a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Click the plus sign (+) next to the ribbon tab where you want to add a ribbon panel.
- 5 Click the plus sign (+) next to Panels to expand it.
- 6 Drag a ribbon panel from the Panels node to a ribbon tab. Use the visual indicator bar to specify the position of the ribbon panel on the ribbon tab.

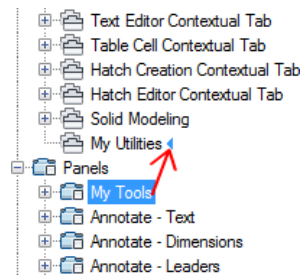


- 7 Click Apply.

### To remove a ribbon panel from a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Click the plus sign (+) next to the ribbon tab where you want to remove a ribbon panel.
- 5 Right-click the ribbon panel that you want to remove. Click Remove.



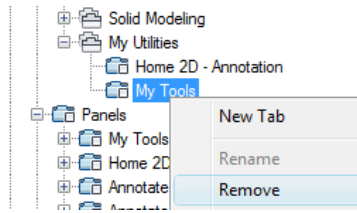


---

**WARNING** There is no way to undo the removal of a user interface element, so be careful when removing user interface elements. If you remove the wrong user interface element, the best thing to do is click Cancel to not save changes, but this will also undo any other changes that you might have made.


---

- 6 Click Apply.

### To set the initial position of a ribbon panel on a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Click the plus sign (+) next to the ribbon tab where you want to reposition a ribbon panel.
- 5 Select the ribbon panel that you want to reposition and drag it to a new location.

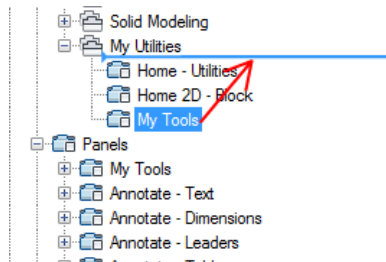

A visual indicator bar is displayed between the ribbon panels indicating the placement of the ribbon panel when you release the pointing device button.

- 6 Once the splitter bar is in the place where you want to insert the ribbon panel, release the pointing device button.
- 7 Click Apply.

#### To set the resize style of a ribbon panel on a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Click the plus sign (+) next to the ribbon tab that contains the ribbon panel for which you want to adjust the resize style.
- 5 Select the ribbon panel that you want to change.
- 6 In the Properties pane, Resize Style, select an option (Collapse as Needed, Never Collapse, or Collapse Last).
- 7 Click Apply.

### Quick Reference

#### Commands

##### CUI

Manages the customized user interface elements in the product.

##### RIBBON

Opens the ribbon window.

##### RIBBONCLOSE

Closes the ribbon window.

### Ribbon Contextual Tab States


Ribbon contextual tab states are used to control the display of ribbon panels on the ribbon when certain commands are active or an object is selected.

You use the same ribbon tabs that you create to control the display of ribbon panels on the ribbon through a workspace, as those used for ribbon contextual tab states. Instead of using a workspace to control the display of a ribbon tab, you assign a ribbon tab to one of the predefined contextual states listed under the Contextual Tab States node in the Customizations In <file name> pane. Predefined contextual tab states range from selecting an object such as a table or opening a block in the Block Editor.

### To assign a ribbon tab to a contextual tab state



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Tabs to expand it.
- 4 Click the plus sign (+) next to Contextual Tab States to expand it.
- 5 Drag a ribbon tab from the Tabs node to a ribbon contextual tab state.

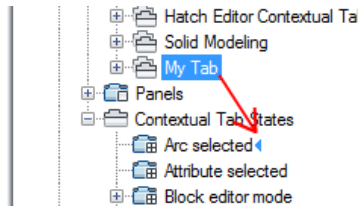


- 6 Click Apply.

### To remove a ribbon tab from a contextual tab state



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Contextual Tab States to expand it.
- 4 Click the plus sign (+) next to the contextual tab state that contains the ribbon tab you want to remove.

- 5 Right-click the ribbon tab under the contextual tab state and click Remove.

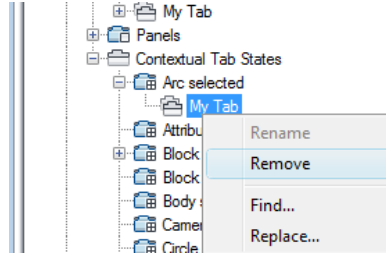


- 6 Click Apply.

### To set the contextual display type a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Ribbon to expand it.
- 3 Click the plus sign (+) next to Contextual Tab States to expand it.
- 4 Click the plus sign (+) next to the contextual tab state that contains the ribbon tab for which you want to change the contextual display type.
- 5 Select the ribbon tab you want to change.

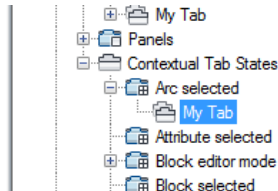

- 6 In the Properties pane, Contextual Display Type, select Full or Merged.

<b>General</b>	
Display Text	My Tab
Contextual Display Type	Full
<b>Partial File Behavior</b>	
Default Display	Merged
Workspace Behavior	Merge or add tab
<b>Access</b>	
KeyTip	
<b>Advanced</b>	
Aliases	
Element ID	RBNU_2909

7 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

### System Variables

#### RIBBONCONTEXTSELECT

Controls how ribbon contextual tabs are displayed when you single- or double-click an object.

#### RIBBONCONTEXTSELLIM

Limits the number of objects that can be changed at one time with the ribbon property controls or a contextual tab.

#### RIBBONSELECTMODE

Determines whether a pickfirst selection set remains selected after a ribbon contextual tab is invoked and the command is completed.

## Toolbars

Toolbar customization can be as easy as placing or resizing a toolbar in the application window to gain drawing efficiency or space. You can also create and modify toolbars and flyout toolbars, add commands and controls, and reposition and remove commands and controls from a toolbar.

### Create and Edit Toolbars

Some of the simplest toolbar customizations can make your daily drawing tasks more efficient. For example, you can consolidate frequently used commands and controls onto one toolbar, remove buttons that you never use, or change some simple toolbar properties.

You can also specify information to be displayed when the cursor passes over a button in the form of a tooltip.

You can add buttons or remove buttons you use infrequently, and rearrange buttons and toolbars. You can also create your own toolbars and flyout toolbars, and create or change the button image associated with a command. When creating a toolbar, you can create a toolbar from scratch, create a copy of an existing toolbar, or create a toolbar from an existing pull-down menu. Sub-menu items are not included when a toolbar is created from a pull-down menu.

---

**NOTE** When you create a toolbar, you should determine in which workspaces you want to display the toolbar. By default, a new toolbar is displayed in all workspaces.

---

The following table shows the properties of the Standard toolbar as they appear in the Properties pane.

Properties for the Standard toolbar		
Properties pane item	Description	Example
Name	String used as the caption for the toolbar.	Standard
Description	Text used to describe the element; does not appear in the user interface.	Standard Toolbar
Default Display	Specifies if the toolbar is displayed when the CUIx file is loaded as a partial customization file. The available op-	Add to workspaces

---

## Properties for the Standard toolbar

---

Properties pane item	Description	Example
	tions are Do Not Add to Workspaces or Add to Workspaces.	
Orientation	Specifies whether the toolbar is floating or docked (top, bottom, left, or right) the first time the CUIx file is loaded.	Top
Default X Location	Specifies the location from the left edge of the screen when the toolbar appears when it is floating, or the location when it is docked. If docked, a value of 0 indicates the left most location in a docked area.	0
Default Y Location	Specifies the location from the top edge of the screen when the toolbar appears when it is floating, or the location when it is docked. If docked, a value of 0 indicates the top most location in a docked area.	0
Rows	Specifies the number of rows the items on the toolbar are displayed in when the toolbar is floating.	1
Aliases	Specifies the aliases for the toolbar. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and it is used to reference the toolbar programmatically.	TB_STANDARD, Standard
Element ID	Tag that uniquely identifies a toolbar.	ID_TbStandard

---

**NOTE** The properties On By Default, Orientation, Default X Location, Default Y Location, and Rows are used only the first time the CUIx file is loaded and when no default workspace is set. After a toolbar is loaded the first time, a workspace is used to control the Appearance properties of a toolbar. See the procedure [To change the properties of a toolbar](#) on page 307 for more information.

---

When you create a new toolbar, the first task you need to do is to provide a name for it. A new toolbar has no commands or controls assigned to it. If a toolbar has no commands or controls on it, it is ignored by the program until you add at least one command or control to it. You add commands and controls to a toolbar by dragging a command or control from an existing toolbar or the Command List pane and dropping it onto a toolbar. Once a command or control has been added to a toolbar, you can change the text

that is displayed in the tooltip when the cursor hovers over top of the button by changing the Name property that is displayed in the Properties pane.

### Customize Toolbars with the Toolbar Preview Pane

You can customize a toolbar using the tree view under the Customizations In *<file name>* pane or the Toolbar Preview pane. The Toolbar Preview pane allows you to add and remove commands or controls visually in real-time instead of just using the tree view. You can also interactively drag a command or control in the preview pane to reposition it.

### Customize Toolbars from the Application Window

The program allows you to customize toolbars that are displayed in the application when the Customize User Interface (CUI) Editor is open. You drag commands from the Command List pane and drop them directly onto a visible toolbar that is docked or floating in the application window. You can also remove, reposition, or copy commands on a visible toolbar while the CUI Editor is open.

### Create Ribbon Panels from Toolbars

New ribbon panels can be created from a toolbar by dragging existing toolbars from the Toolbars node under the Customizations In *<file name>* pane to the Panels node under Ribbon in the Customizations In *<file name>* pane. When the toolbar is dropped, you are prompted to convert a copy of the toolbar to a ribbon panel. See [Ribbon Panels](#) on page 149 for more information about customizing ribbon panels.

### To display a toolbar


- Do one of the following:
  - [To display toolbars from the user interface](#) on page 295
  - [To display toolbars using the CUI Editor](#) on page 306

### To create a toolbar

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, right-click Toolbars. Click New Toolbar.






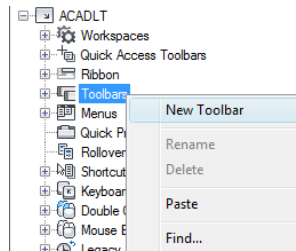


A new toolbar (named Toolbar1) is placed at the bottom of the Toolbars tree.

- 3 Do one of the following:
  - Enter a new name over the default name Toolbar1.
  - Right-click Toolbar1. Click Rename. Enter a new toolbar name.
  - Click Toolbar1, wait, and click again over the toolbar's name again to edit its name in-place.
- 4 Select the new toolbar in the tree view, and update the Properties pane:
  - In the Description box, enter a description for the toolbar.
  - In the Default Display box, specify if the toolbar should be displayed by default when the CUIx file is loaded as a partial customization file.
  - In the Orientation box, specify the orientation of the toolbar.
  - In the Default X Location box, enter a number.
  - In the Default Y Location box, enter a number.
  - In the Rows box, enter the number of rows for an undocked toolbar.
  - In the Aliases box, enter an alias for the toolbar.

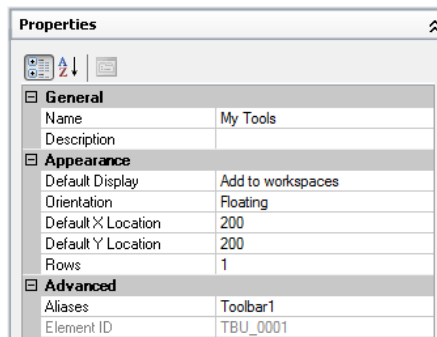

- 5 In the Command List pane, drag the command you want to add to a location just below the name of the toolbar in the Customizations In *<file name>* pane.

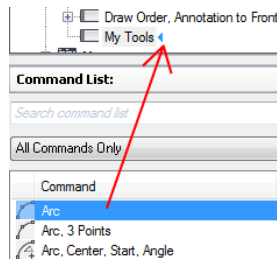


- 6 Click Apply.

### To create a toolbar from a pull-down menu



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, click the plus sign (+) next to the Menus tree node to expand it.
- 3 Drag the menu that you want to create a toolbar from and drop it onto the Toolbars node.

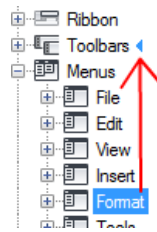


- 4 Update the workspace as desired to update the display and position for the new toolbar.

### To add a command to a toolbar in the Customizations In pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 In the Command List pane, drag the command to the toolbar you want to add it to in the Customizations In <file name> pane.

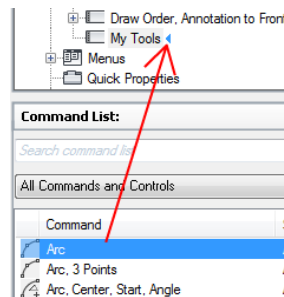


- 4 Click Apply.

### To add a command to a toolbar in the Toolbar Preview pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.

- 3 Select the toolbar you want to add a command to.
- 4 In the Command List pane, drag the command you want to add to the selected toolbar and drop it on the toolbar's preview in the Toolbar Preview pane.

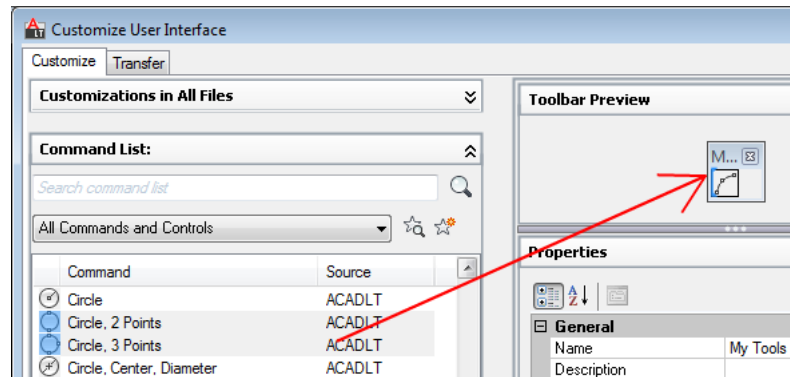


You can control where the command is placed by releasing the mouse button when the black vertical splitter bar is displayed.

- 5 Click Apply.

#### To add a command to a toolbar outside the CUI Editor

- 1 Display the toolbar you want to add a command to by right-clicking over a toolbar button. Click the name of the toolbar.
- 2 Right-click over any toolbar button. Click Customize.
- 3 In the Customize User Interface Editor, Customize tab, Command List pane, drag the command you want to add and drop it onto the toolbar.

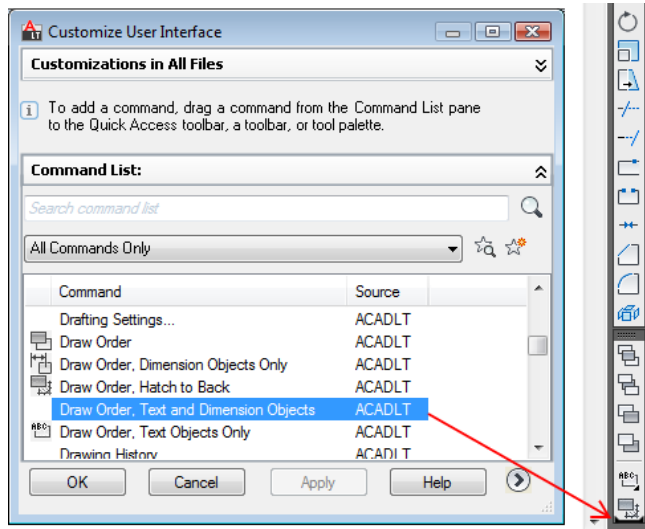


You can control the location of the command you are adding by using the visual or horizontal indicator bar.

- 4 Click Apply.

#### To reposition a command or control on a toolbar in the Customizations In pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to the toolbar that contains the command or control you want to reposition to expand it.
- 4 Drag the name of the command or control you want to reposition to the new location in the list of tools.

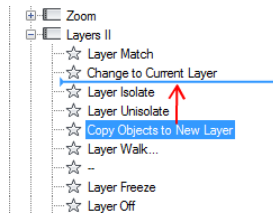


While dragging the command or control, use the visual indicator bar to specify the new position of the command or control. When the left arrow appears, the command or control is moved to the front of the toolbar.

- 5 Click Apply.

### To reposition a command or control on a toolbar in the Toolbar Preview pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Select the toolbar that contains the command or control you want to reposition.
- 4 In the Toolbar Preview, drag the command or control that you want to reposition.

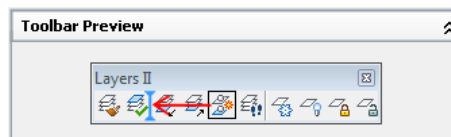

While dragging the command or control, use the visual indicator bar to specify the new position of the command or control.


- 5 Click Apply.

### To reposition a command on a toolbar outside the CUI Editor

- 1 Display the toolbar you want to reposition a command on by right-clicking over a toolbar button. Click the name of the toolbar.
- 2 Right-click over any toolbar button. Click Customize.

The Customize User Interface (CUI) Editor is displayed.

- 3 Drag the command on the toolbar that you want to reposition.




While dragging the command, use the visual indicator bar to specify the new position of the command.

- 4 Click Apply.

#### To remove a command or control from a toolbar in the Customizations In pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to a toolbar that contains the command or control you want to remove.
- 4 Right-click the name of the command or control you want to remove. Click Remove.

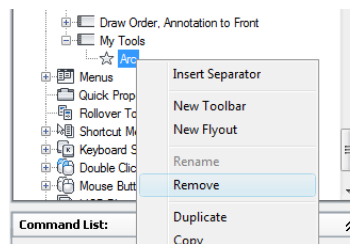


- 5 Click Apply.

### To remove a command or control from a toolbar in the Toolbar Preview pane



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Select the toolbar that contains the command or control you want to reposition.
- 4 In the Toolbar Preview pane, drag the command or control that you want to remove and drop it outside of the preview.



- 5 Click Apply.


### To remove a command from a toolbar outside the CUI Editor

- 1 Display the toolbar from which you want to remove a command by right-clicking over a toolbar button. Click the name of the toolbar.
- 2 Right-click over any toolbar button. Click Customize.  
The Customize User Interface (CUI) Editor is displayed.
- 3 Drag the command you want to remove from the toolbar and drop it over the drawing window.



- 4 Click OK to confirm the deletion of the command from the toolbar.



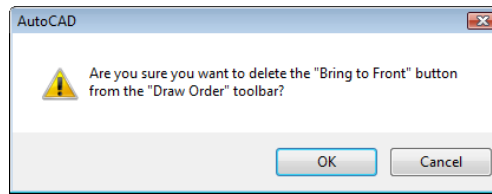

- 5 In the Customize User Interface (CUI) Editor, click Apply.

### To change properties of a toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.

---

**NOTE** Making changes to a toolbar's properties here only affect the initial appearance of the toolbar after the CUIx file has been loaded. To control the appearance of a toolbar, it is best to use a workspace.

---

- 3 Select the toolbar whose properties you want to change.
- 4 In the Properties pane, make your changes.
- 5 Click Apply.

### To change the tooltip of a command



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Select the toolbar whose tooltip text you want to change.
- 4 In the Properties pane, Display section, make the desired change to the Name property (not the Command Name or Command Display Name properties), and the Description and Extended Help File properties.
- 5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

#### RIBBON

Opens the ribbon window.

#### RIBBONCLOSE

Closes the ribbon window.

### System Variables

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Add Flyouts to a Toolbar

You can use flyouts to group related commands together on a toolbar.

A flyout is a set of commands nested under a single button on a toolbar. Flyout buttons have a black triangle in the lower-right corner. To create a flyout, you can start from scratch, or drag an existing toolbar or drag pull-down menu onto a toolbar. When a pull-down menu is dragged onto a toolbar, a new toolbar is created and a flyout is created in the position that the pull-down menu was dropped onto the toolbar.

The following table shows the properties for the Zoom flyout as they appear in the Properties pane.

Properties for the Zoom flyout on the Standard toolbar		
Properties pane item	Description	Example
Name	String that does not appear in the user interface unless the property Use Own Button is set to Yes.	Zoom

---

### Properties for the Zoom flyout on the Standard toolbar

---

Properties pane item	Description	Example
Description	Text used to describe the element, does not appear in the user interface.	
Source Toolbar	A read-only value used to specify which toolbar is being referenced to create the flyout.	TB_ZOOM
Use Own Button	Controls whether the last used toolbar button is set as the current button or not. The possible values are Yes or No.	No
Small Image	ID string of the small-image resource (16 × 16 bitmap). The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box.	RCDATA_16_ZOOM
Large Image	ID string of the large-image resource (32 × 32 bitmap). If the specified bitmap is not 32 × 32, the program scales it to that size. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_). It can also be a user-defined bitmap. Click the [ ] button to open the Select Image File dialog box	RCDATA_16_ZOOM

---


**WARNING** Do not change the aliases for a toolbar that is being used as a flyout; otherwise the link between the toolbar and flyout will become broken.

---

### To create a flyout toolbar from scratch

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Right-click the toolbar to which you want to add a flyout toolbar. Click New Flyout.



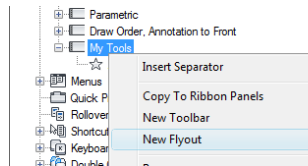


A new flyout toolbar (named Toolbar1) is placed below the toolbar you selected.

- 4 Right-click Toolbar1. Click Rename. Enter a new toolbar name.

---

**NOTE** You can click, wait, and click again over a toolbar name to edit its name in-place in the Customizations In <file name> pane.

---

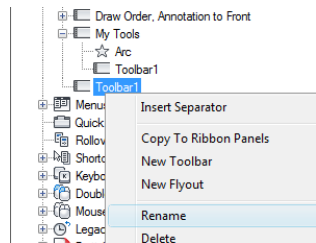



---


**NOTE** Just renaming the toolbar won't change the name of the flyout. You must select and rename the flyout independently if you want them to both have the same name.

---

- 5 In the Command List pane, drag the command you want to add to the toolbar flyout in the Customizations In <file name> pane.

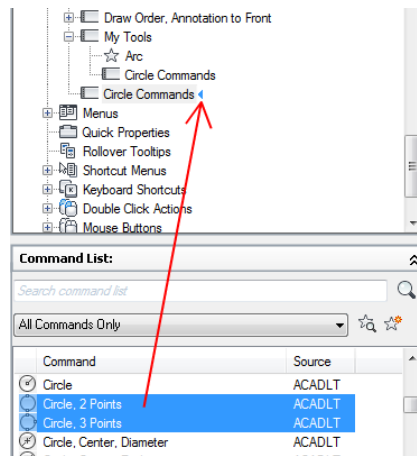


6 Click Apply.

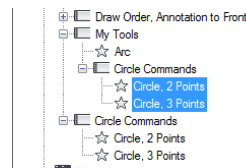


## To create a flyout toolbar from another toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to the toolbar to which you want to add a flyout toolbar.
- 4 Locate the toolbar you want to use as a flyout. Drag the toolbar to a location in the expanded toolbar.

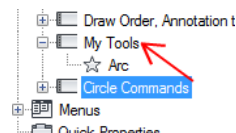

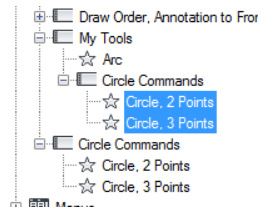


5 Click Apply.


### To create a flyout toolbar from a pull-down menu



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to the toolbar to which you want to add a flyout toolbar.
- 4 Click the plus sign (+) next to the Menus tree node to expand it.
- 5 Drag the menu that you want to create a flyout from and drop it onto the node of the toolbar where you want to place the flyout.

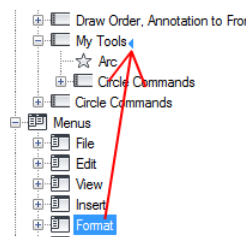

If the menu is dropped on a toolbar, a new flyout and toolbar are created.

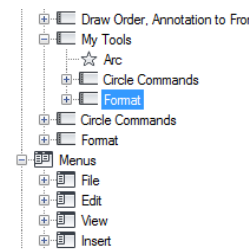

- 6 Reposition the new flyout on the toolbar.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Add, Remove or Switch Toolbar Controls

Toolbar controls are drop-down lists of items that can affect the objects in a drawing or the way the program behaves from a toolbar. For example, the Layers toolbar contains controls for defining layer settings. In the Customize User Interface (CUI) Editor, you can add, remove, and relocate controls within toolbars.

The following table lists the toolbar controls found in the Customize User Interface (CUI) Editor and their definitions. The control elements in the left column of the table are not always the text that is displayed as a tooltip in the program (for example, Undo Skinny Button is displayed as Undo in the program's tooltip). Refer to this table when you want to change a control in a toolbar.

Control elements for toolbars	
Control element	Description
Autodesk Seek Control	Allows for entering a text string to locate content on the Autodesk Seek web site.
Dim Style Control	Displays and sets the current dimension style.
Find Text Control	Allows for searching on a text string contained in the current drawing.
Layer Control	Displays the current layer and allows you to set a layer current.
Line Type Control	Displays and sets the current linetype.
Line Weight Control	Displays and sets the current line weight.

Control elements for toolbars	
Control element	Description
Multileader Style Control	Displays and sets the current multileader style.
Named View Control	Displays and sets the current named view.
OPT Color Control	Displays and sets the current color.
Plot Style Control	Displays and sets the current plot style.
Redo Skinny Button Control	Allows you to reverse the previous undo or undoes.
Reference Block Name Control	Displays the name of the xref being edited.
Table Style Control	Displays and sets the current table style.
Text Style Control	Displays and sets the current text style.
UCS Control	Displays the current UCS and allows you to restore a saved UCS.
Undo Skinny Button Control	Allows you to undo the previous action or actions.
View Control	Displays and sets the current standard 3D view for a viewport.
Viewport Scale Control	Displays and sets the current scale for a floating viewport.
Workspace Control	Displays the current workspace and allows you to set a workspace current.


### To add a control to a toolbar in the Customizations In pane

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.






- 2 In the Customize User Interface Editor, Customize tab, Customizations In *<file name>* pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to the toolbar to which you want to add a control.
- 4 In the Command List pane, Categories list, click Toolbar Control Elements.

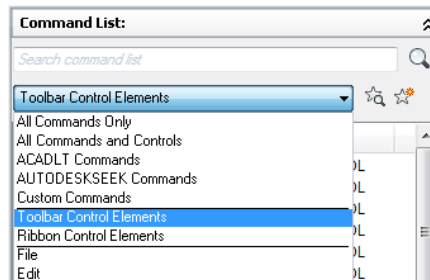

The Command List pane displays the list of toolbar control elements only.

- 5 In the Command list, drag the control to the Customizations In *<file name>* pane to the position where you want to add it in the toolbar.

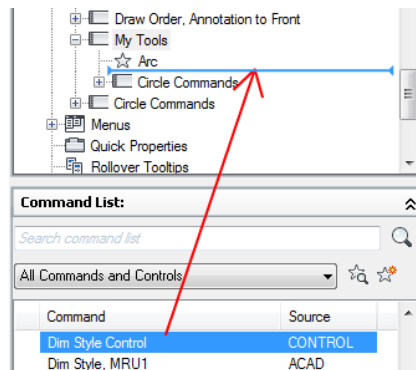


- 6 Click Apply.

#### To add a control to a toolbar in the Toolbar Preview pane

- 1 Click Manage tab ► Customization panel ► User Interface.




- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Select the toolbar to which you want to add a control.
- 4 In the Command List pane, Categories list, click Control Elements.

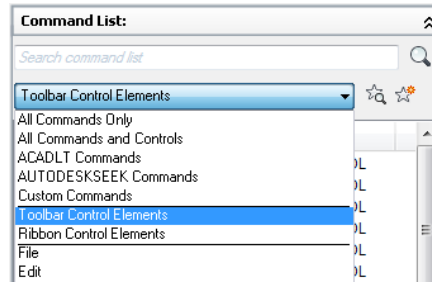

The Command List pane displays the list of toolbar control elements only.

- 5 In the Command List pane, drag the control you want to add to the selected toolbar and drop it on the toolbar's preview in the Toolbar Preview pane.

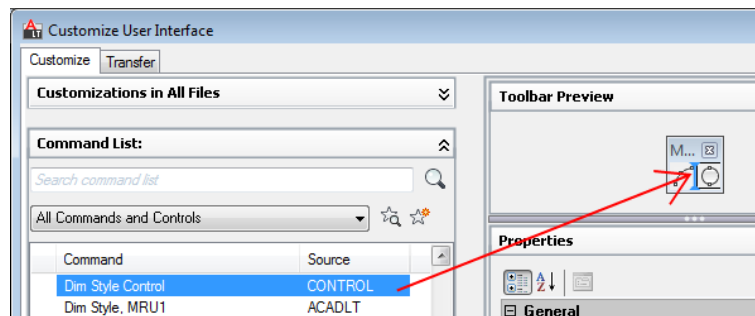


You can control where you place the command by releasing the mouse button when the vertical splitter bar is displayed in the location you want.

- 6 Click Apply.


## To switch a control in a toolbar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node to expand it.
- 3 Click the plus sign (+) next to the toolbar to which you want to add a control.
- 4 Click the control element under the toolbar.

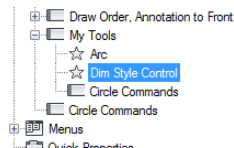

- 5 In the Properties pane, Control box, click the down arrow to display a list of toolbar controls.

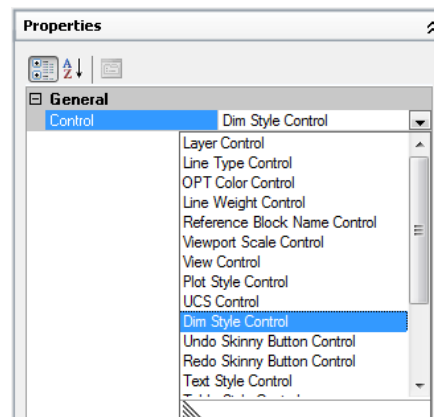

- 6 Click a toolbar control to replace the original control with the one you selected.
- 7 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Pull-down and Shortcut Menus

Pull-down menus are displayed as a list under a menu bar. Shortcut menus (also called context menus) are displayed at or near the crosshairs or cursor when you right-click in the drawing window, text window, command window, in toolbar areas, or the ribbon.

## Overview of Pull-Down and Shortcut Menus

A pull-down menu can contain up to 999 commands. A shortcut menu can contain up to 499 commands. The command limit includes all menus in a hierarchy. If commands in the menu file exceed these limits (which is unlikely), the program ignores the extra commands. If a pull-down or shortcut menu is longer than the available display space, it is truncated to fit. When a pull-down or shortcut menu is truncated, two arrows are added to the menu; one is added at the top and another to the bottom. With the arrows, you can scroll the list of menu items up or down. The following table shows the properties for the File menu as they appear in the Properties pane. The properties for a pull-down menu and shortcut menu are identical.

Properties for the File menu		
Properties pane item	Description	Example
Name	String used as the caption of the menu on the menu bar.	&File
Description	Text used to describe the element; does not appear in the user interface.	
Aliases	Specifies the aliases for the menu. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique; and it is used to reference the menu programmatically.	POP1, FILE
Element ID	Tag that uniquely identifies a menu.	ID_MnFile

---

**NOTE** When you create a pull-down or shortcut menu, you must also add at least one command to the menu. Otherwise, the menu will not be displayed on the menu bar.

---

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

### System Variables

#### MENUBAR

## Create a Pull-Down Menu

You can create a pull-down menu, add submenus and commands to it on the Customize tab of the Customize User Interface (CUI) Editor.

You can create and modify standard pull-down menus to display and organize the commands to best match the way you work. Commands are added to a pull-down menu from the Command List pane. Once commands are added to a pull-down menu, you can change the caption displayed for the command on the menu, reposition commands, and organize commands using separators. Along with separators, you can also group commands using submenus. For more information on submenus, see [Create Submenus](#) on page 227.

As you modify the positioning of commands on menus, the online Help system is automatically updated to reflect the change through the Dynamic Help feature. For more information about how Dynamic Help affects customization, see [How Customization Has Changed](#) on page 48.

---

**NOTE** When you create a menu, you should determine in which workspaces you want to display the menu in. By default, a new menu is displayed in all workspaces.


---

### Pull-Down Menu Aliases

Pull-down menus should have one alias in the range of POP1 through POP499. Menus with an alias of POP1 through POP16 are loaded by default when a menu loads. All other menus must be added to a workspace to be displayed.

## To create a pull-down menu

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Menus. Click New Menu.

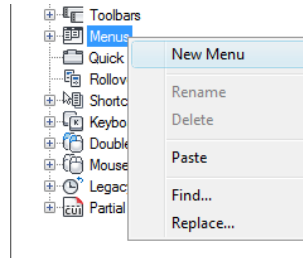


A new menu (named Menu1) is placed at the bottom of the Menus tree.

- 3 Do one of the following:
  - Enter a new name over the default name Menu1.
  - Right-click Menu1. Click Rename. Enter a new menu name.
  - Click Menu1, wait, and click again over the menu's name again to edit its name in-place.
- 4 Select the new menu in the tree view, and update the Properties pane as follows:
  - In the Description box, enter a description for the menu.
  - In the Aliases box, an alias is automatically assigned to the new menu, based on the number of menus already loaded. For example, if the alias assignment is POP12, eleven menus are already loaded. View or edit the alias.
  - (Optional) If the name change is based upon a DIESEL expression, the DIESEL expression should be included in the Name box.

<b>General</b>	
Name	<b>My Tools</b>
Description	
<b>Advanced</b>	
Aliases	POP13
Element ID	PMU_0001

- 5 In the Command List pane, drag the command to a location just below the menu in the Customizations In <file name> pane.

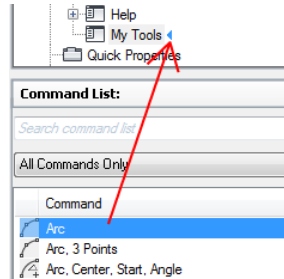


**NOTE** You can change the name of a command after it has been added to a menu. This allows you to define how the user can access the menu item using keyboard navigation with the Alt key. To do this, select the menu item under the Menus node and then change the Name property in the Properties pane.

- 6 Click Apply.

#### To add a command to a pull-down menu



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the menu to which you want to add a command.
- 3 In the Command List pane, drag the command you want to add to a location just below the menu in the Customizations In <file name> pane.

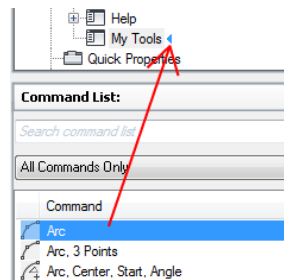

---

**NOTE** You can change the name of a command after it has been added to a menu. This allows you to define how the user can access the menu item using keyboard navigation with the Alt key. To do this, select the menu item under the Menus node and then change the Name property in the Properties pane.

---

- 4 Click Apply.  
For information about creating a command, see [Create, Edit, and Reuse Commands](#) on page 94.

### To change the caption of a menu item on a pull-down menu



- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Menus node to expand it.
- 3 Click the plus sign (+) next to the pull-down menu that has the command whose text you want to change.
- 4 Select the command whose text you want to change.
- 5 In the Properties pane, in the Display section, make the desired change to the Name property (not the Command Name or Command Display Name properties).

Display	
Name	Arc
Command	
Command Name	Arc
Description	Creates an arc using three points
Extended Help File	
Command Display Name	ARC
Macro	^C^C_arc
Tags	
Advanced	
Element ID	MM_1607
Images	
Small image	RCDATA_16_ARC3PT
Large image	RCDATA_32_ARC3PT

- 6 Click Apply.



## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.

### System Variables

MENUBAR

## Create a Shortcut Menu

Shortcut menus are displayed at or near the location of your cursor when you right-click on the pointing device. The shortcut menu and the options it provides depend on the location of the cursor and other conditions, such as whether an object is selected or a command is in progress.

*Context-sensitive* shortcut menus display menu options that are relative to the current command or the selected object when you right-click.

### Shortcut Menu Aliases

Shortcut menus are referenced by their aliases and are used in specific situations. In the Customize User Interface (CUI) Editor, the alias names must follow the proper naming conventions. For example, the shortcut menu named “Default Menu” displays the following information in the Aliases section of the Properties pane:

POP501, CMDEFAULT

CMDEFAULT is one of the reserved aliases that the program looks for in specific situations. In this case, the shortcut menu assigned the alias CMDEFAULT is displayed if no objects are selected and no command is in progress when you right-click over the drawing window.

Aliases for context-sensitive shortcut menus must be numbered between POP500 and POP999, with the exception of the Object Snap menu which uses an alias of POP0. The following aliases are reserved for use by the program:

---

#### Program aliases for shortcut menus

---

Alias	Description
GRIPS	Defines the Hot Grip shortcut menu. (Right-click the drawing area while a grip on an object is selected.)

---

Program aliases for shortcut menus	
Alias	Description
CMDEFAULT	Defines the Default mode shortcut menu. (Right-click the drawing area while no command is active and no objects are selected.)
CMEDIT	Defines the Edit mode shortcut menu. (Right-click the drawing area while one or more objects are selected, no grips are selected, and no command is active.)
CMCOMMAND	Defines the Command mode menu. (Right-click the drawing area while a command is active.) In addition to the content of the CMCOMMAND menu, the command's options (keywords within the square brackets) are inserted into this menu.
SNAP	Defines the Object Snap menu. (Shift+right-click the drawing area.)

### Object Specific Shortcut Menus

The CMEDIT and CMCOMMAND shortcut menus can be made context-sensitive. In addition to the content of the CMEDIT menu, the appropriate object menu (if it exists) is inserted into this menu when one or more of a specific object type are selected. Object menus use either of the following naming conventions:

*OBJECT\_objectname*

*OBJECTS\_objectname*

If a single object is selected, the *OBJECT\_objectname* menu is used, and if more than one of the same object type is selected, the *OBJECTS\_objectname* menu is used. If no *OBJECT\_objectname* is available, the program uses the *OBJECTS\_objectname* menu (if it exists).

The object name used for the alias is the drawing interchange format (DXF™) name of the object in most cases except for inserted objects. The following table shows the object names that are specific to inserted objects (blocks, dynamic blocks, and xrefs).

Object names specific to insert objects	
Object Name	Description
ATTBLOCKREF	Block reference with attributes

---

### Object names specific to insert objects

---

Object Name	Description
ATTDYNBLOCKREF	Dynamic block reference with attributes
BLOCKREF	Block reference without attributes
DYNBLOCKREF	Dynamic block reference without attributes
XREF	External reference (xref)

---

For example, to support an object-specific shortcut menu for one or more selected block references, you would create or modify a shortcut menu and change its properties to those in the following table. The important property to change is Aliases, which would need to be modified to include the alias

`OBJECTS_BLOCKREF`.

---

### Properties for the Block Reference Objects shortcut menu

---

Properties pane item	Description	Example
Name	String that is only used in the CUI Editor and is not displayed in the user interface.	Block Objects Menu
Description	Text used to describe the element; does not appear in the user interface.	Shortcut menu for block objects
Aliases	Specifies the aliases for the shortcut menu. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and it is used to reference the shortcut menu programmatically.	POP512,OBJECTS_BLOCKREF
Element ID	Tag that uniquely identifies a shortcut menu.	PM_0021

---

### Command Specific Shortcut Menus

Like the `CMEDIT` menu, the `CMCOMMAND` menu can contain context-sensitive commands. Menus named `COMMAND_commandname` control which commands are appended to the `CMCOMMAND` menu when a command is active. The text of `commandname` can be any valid AutoCAD LT command, including custom-defined or third-party commands.

In many cases, you can enter a hyphen before a command to suppress the display of a dialog box and display prompts for the command instead. To create a context-sensitive menu for a command that displays prompts instead of a dialog box (such as `-INSERT`), you need to name the menu


`COMMAND_-INSERT.`

### To create a shortcut menu

Do one of the following:

#### ■ To create a standard shortcut menu

- a Click Manage tab ► Customization panel ► User Interface.
- b In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, right-click Shortcut Menus. Click New Shortcut Menu.

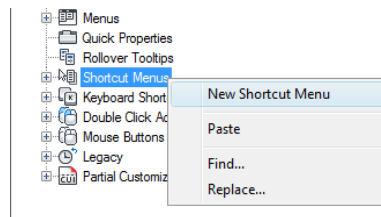


The new shortcut menu (named ShortcutMenu1) is placed at the bottom of the Menus tree.

- c Do one of the following:
  - Enter a new name over the default name ShortcutMenu1.
  - Right-click ShortcutMenu1. Click Rename. Enter a new shortcut menu name.
  - Click ShortcutMenu1, wait, and click again over the shortcut menu's name to edit its name in-place.
- d In the Properties pane, Description box, optionally enter a description for the shortcut menu.
- e In the Aliases box, click the [ ] button.
- f In the Aliases dialog box, press Enter so you are on a new line. Enter additional aliases for the menu, and after each one, press Enter. An alias is automatically assigned, and defaults to the next available POP

number, based on the number of shortcut menus already loaded in the program.

<b>General</b>	
Name	<b>My Tools</b>
Description	
<b>Advanced</b>	
Aliases	POP532
Element ID	PMU_0003

- g In the Command List pane, drag the command that you want to add to the location just below the shortcut menu in the Customizations In <file name> pane.

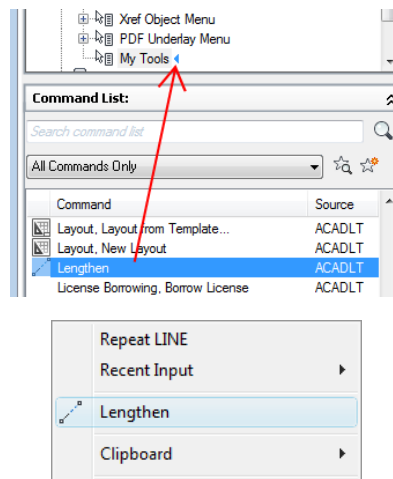

- h Continue adding commands until the new shortcut menu is complete.  
i Click Apply.


#### ■ To create a command shortcut menu

In order for the commands on the shortcut menu to appear when a command is active, make sure to use the alias `COMMAND_commandname`. For example, if you want the commands on the shortcut menu to appear when using the `LINE` command use the alias `COMMAND_LINE`. The commands from the shortcut menu will appear at the bottom of the shortcut menu with the alias `CMCOMMAND` when it is displayed.

- a Click Manage tab ➤ Customization panel ➤ User Interface.



- b** In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, right-click Shortcut Menus. Click New Shortcut Menu.

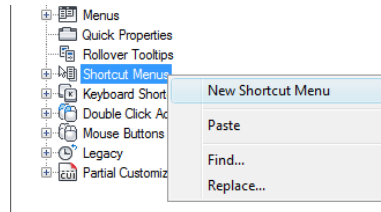


The new shortcut menu (named ShortcutMenu1) is placed at the bottom of the Menus tree.

- c** Do one of the following:
- Enter a new name over the default name ShortcutMenu1.
  - Right-click ShortcutMenu1. Click Rename. Enter a new shortcut menu name.
  - Click ShortcutMenu1, wait, and click again over the shortcut menu's name to edit its name in-place.
- d** In the Properties pane, Description box, optionally enter a description for the shortcut menu.
- e** In the Aliases box, click the [ ] button.
- f** In the Aliases dialog box, press Enter so you are on a new line. Enter additional aliases for the menu, and after each one, press Enter. An alias is automatically assigned, and defaults to the next available POP number, based on the number of shortcut menus already loaded in the program.

<b>General</b>	
Name	Line Command Menu
Description	
<b>Advanced</b>	
Aliases	POP532, COMMAND_LINE
Element ID	PMU_0003


- g** In the Command List pane, drag the command that you want to add to the location just below the shortcut menu in the Customizations In *<file name>* pane.

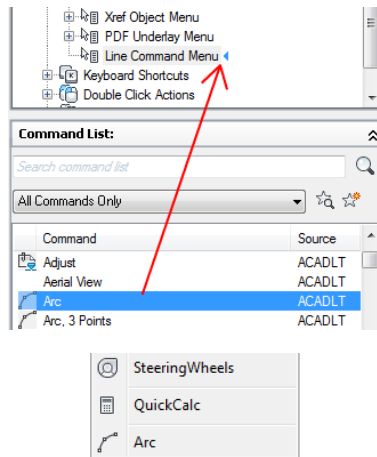


- h Continue adding commands until the new shortcut menu is complete.
- i Click Apply.

#### ■ To create an object shortcut menu

In order for the commands on the shortcut menu to appear when an object or objects of the same type are selected, make sure to use the alias `OBJECT_objecttype` or `OBJECTS_objecttype`. For example, if you want the commands on the shortcut menu to appear when a LINE object is selected in the drawing, use the alias `OBJECT_LINE`. The commands from the shortcut menu will appear near the top of the shortcut menu with the alias `CMEDIT` when it is displayed.

- a Click Manage tab ► Customization panel ► User Interface. 
- b In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Shortcut Menus. Click New Shortcut Menu.

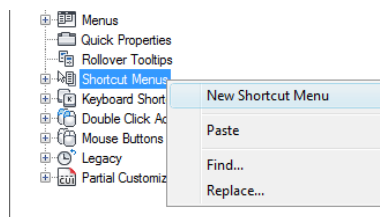

The new shortcut menu (named ShortcutMenu1) is placed at the bottom of the Menus tree.


- c Do one of the following:
  - Enter a new name over the default name ShortcutMenu1.
  - Right-click ShortcutMenu1. Click Rename. Enter a new shortcut menu name.
  - Click ShortcutMenu1, wait, and click again over the shortcut menu's name to edit its name in-place.
- d In the Properties pane, Description box, optionally enter a description for the shortcut menu.
- e In the Aliases box, click the [ ] button.
- f In the Aliases dialog box, press Enter so you are on a new line. Enter additional aliases for the menu, and after each one, press Enter. An alias is automatically assigned, and defaults to the next available POP number, based on the number of shortcut menus already loaded in the program.

**NOTE** If you create a shortcut menu with the alias `OBJECTS_objecttype`, the commands assigned to the shortcut menu will be displayed when one or more objects are selected before right-clicking over the drawing area.

General	
Name	Line Object Menu
Description	
Advanced	
Aliases	POP531, OBJECT_LINE
Element ID	PMU_0001

- g In the Command List pane, drag the command that you want to add to the location just below the shortcut menu in the Customizations In *<file name>* pane.



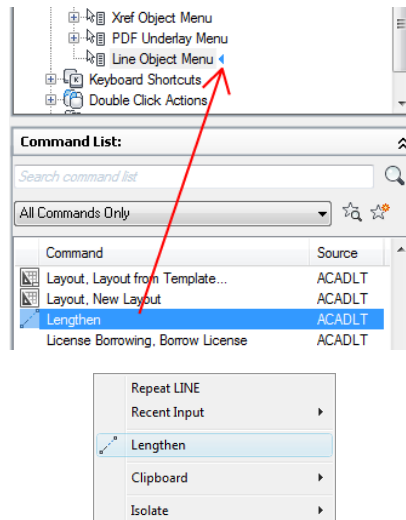


- h Continue adding commands until the new shortcut menu is complete.
- i Click Apply.

### To add a command to a shortcut menu



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the menu to which you want to add a command.
- 3 In the Command List pane, drag the command you want to add to a location just below the menu in the Customizations In <file name> pane.

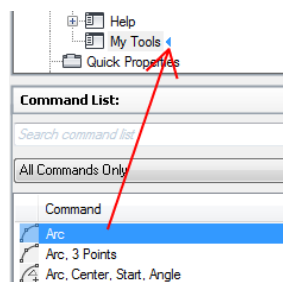

---

**NOTE** You can change the name of a command after it has been added to a menu. This allows you to define how the user can access the menu item using keyboard navigation with the Alt key. To do this, select the menu item under the Shortcut Menus node and then change the Name property in the Properties pane.

---

- 4 Click Apply.  
For information about creating a command, see [Create, Edit, and Reuse Commands](#) on page 94.

### To change the caption of a menu item on a shortcut menu



- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Shortcut Menus node to expand it.
- 3 Click the plus sign (+) next to the shortcut menu that has the command whose text you want to change.
- 4 Select the command whose text you want to change.
- 5 In the Properties pane, in the Display section, make the desired change to the Name property (not the Command Name or Command Display Name properties).

Display	
Name	Arc
Command	
Command Name	Arc
Description	Creates an arc using three points
Extended Help File	
Command Display Name	ARC
Macro	^C^C_arc
Tags	
Advanced	
Element ID	MM_1607
Images	
Small image	RCDATA_16_ARC3PT
Large image	RCDATA_32_ARC3PT

- 6 Click Apply.

## Quick Reference

### Commands

CUI

Manages the customized user interface elements in the product.

### System Variables

SHORTCUTMENU

Controls whether Default, Edit, and Command mode shortcut menus are available in the drawing area.

## Create Submenus

You can create submenus to organize and group similar commands together. Submenus are created in much the same way that you create a menu.

The following table describes the non-alphanumeric characters that can be used to control the display and behavior of the caption for a submenu. Non-alphanumeric characters not listed are reserved for future use as special menu characters.

Special characters for submenus		
Character	Description	Example
\$ (	Enables the pull-down or shortcut command label to evaluate a DIESEL string macro if \$ ( are the first characters.	\$(if,\$(and,\$(getvar,CleanScreenState),1),!.)Clean S&screen
~	Makes a command unavailable.	~Plot Style
! .	Marks a command with a check mark or if an icon is displayed for the menu item it appears sunken.	!.Layer...
&	Placed directly before a character, specifies the character as the menu access key in a pull-down or shortcut menu label.	S&ample displays Sample (with the letter <i>a</i> underlined).


## Special characters for submenus

Character	Description	Example
\t	Pushes all label text entered after these characters to the right side of the menu.	Help\tF1 displays Help on the left side of the pull-down menu and F1 on the right side.


## To create a submenu




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Menus. Select the menu you want to add a submenu to.

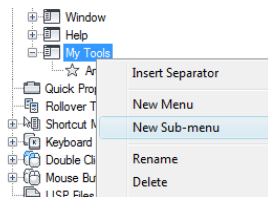


- 3 Right-click the menu. Click New Sub-menu.  
The new submenu (named Menu1) is placed at the bottom of the Menu you selected to add the submenu to.
- 4 Do one of the following:
  - Enter a new name over the default name Menu1.
  - Right-click Menu1. Click Rename. Enter a new submenu name.
  - Click Menu1, wait, and click again over the menu's name again to edit its name in-place.
- 5 In the Properties pane, do the following:
  - In the Description box, optionally enter a description for the submenu.



- 6 In the Command List pane, drag the command you want to add to a location just below the name of the submenu in the Customizations In <file name> pane.

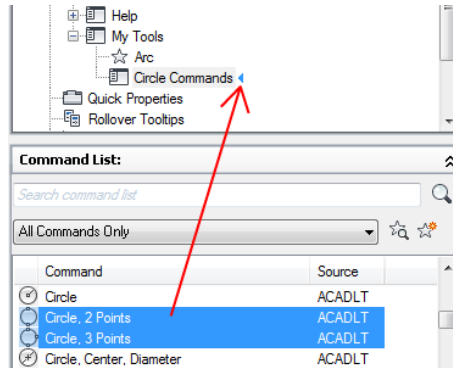

- 7 Continue adding commands until the new submenu is complete.
- 8 Click Apply.



## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Reference Pull-Down or Shortcut Menus

Using a method similar to that used to activate submenus, you can activate or deactivate another pull-down or shortcut menu. This is called *menu referencing*.

Pull-down or shortcut menus can be referenced using *absolute referencing*. Absolute referencing uses the absolute position of a menu item in the menu hierarchy.

### Absolute Referencing of Pull-Down and Shortcut Menu Items

In addition to referencing a menu item, you can activate or deactivate a menu item with the `$Pn=xxx` syntax. This is the format:

```
$Pn.i=xxx
```

The `$` loads a menu section; `Pn` specifies the active menu section (0 through 16 are valid values); `i` specifies the menu item number; and `xxx` (if present), specifies a string of grayed out or marked characters.

Using the `$Pn=xxx` syntax, the following example adds a check mark to item 1 in the `POP7` section.

```
$P7.1=!.
```

Menu item numbering is consecutive regardless of the hierarchy of the menu.

To make it easy for an item to address itself regardless of its location in the menu hierarchy, use these forms:

`$P@.@=xxx` References the current or most recently chosen command.

`$P@.n=xxx` References item `n` in the current or most recently chosen menu.

### Quick Reference

#### Commands

##### CUI

Manages the customized user interface elements in the product.

## Swap and Insert Pull-Down Menus

Using the Customize User Interface (CUI) Editor, you can use workspaces to control the swapping of pull-down menus. However, you can also swap one pull-down menu programmatically for another (for example, when a user loads an application that requires an additional menu).

### Swap Pull-Down Menus

Because the program has cascading pull-down menus, there is little need to swap menus. Also, swapping menus can detract from the consistency of the user interface. However, using `$` commands, you can swap pull-down menus and submenus. An alternative to menu swapping involves relative (or global)

referencing. Using this method, you can insert the new menu in front of a known menu and then remove the known menu.

For menu-swapping purposes, the pull-down menu areas are named P1 through P16. You can change the title that appears in the menu bar by replacing that line of the menu with a \$Pn= command. You can use the special command \$Pn=\* from within any command to force the menu currently assigned to area POPn to pull down for greater flexibility in movement of the pointing device.

The following macro example replaces a menu at position P3 with the menu named MyMenu in the customization group named MYMENU.

```
$P3=mymenu.new3
```

You can use the \$Pn=\* special command from within any macro to force the menu currently assigned to area POPn to be displayed.

---

**NOTE** The swapping of pull-down menus does not conform to the Microsoft® user interface guidelines and is not guaranteed to be available in future releases of the program.

---

### Insert and Remove Pull-Down Menus

Menu swapping is done by activating one menu directly from another menu. Menu swapping is supported for the following interface elements:

- B - Buttons
- P - Pull-down menus
- A - Mouse buttons
- I - Image tile menus
- T - Tablet menus

The syntax for the swapping of partial menus is as follows:

```
$section=customizationgroup.menuname
```

section

B1-4, A1-4, P0-16, T1-4

customizationgroup

Customization group name in the desired CUIx file

menuname

Main label or alias

You can also insert a menu with the `Pn=` syntax. The following macro inserts a menu after the `P5` menu.

If you use this method to insert a menu, remember that you cannot rely on its being inserted at the `P6` menu location as you might expect. There are two reasons that this may not be the case.

- If the current menu bar has only three menus, inserting a menu after menu `P5` results in the new menu's location being `P4`.
- If the user inserts or removes a customization file with the `CUILOAD` command or when another application inserts or removes customization files, menu numbering can get out of sync.

This is the syntax for removing a menu:

```
Gcustomizationgroup.menuname=-
```

The following shows how to remove the menu `NEW3` that is a member of the `MyMenu` group.

```
$Gmymenu.new3=-
```

As you might expect, the preceding format is preferable to the `Pn=` format because it removes only the specified menu. The following shows how to remove the menu at the `P4` location (whatever it is).

```
$P4=-
```

### Control Toolbars Across Partial CUIx Files

To control toolbars across partial CUIx files, use the following syntax at the Enter toolbar name or [ALL]: prompt of the `-TOOLBAR` command.

```
menugroup.subsection-name
```

This syntax accesses the toolbar identified by `menugroup.menuname` and allows you to use the full spectrum of `-TOOLBAR` command options on that toolbar.

If the menu group is left out of any of these commands and functions, the program defaults to the main CUIx file.

You should be aware of the following:

- Image tile menus cannot be swapped from external customization files.



- You can swap customization elements of the same type only; that is, one shortcut menu for another, one toolbar for another, and so on. Trying to swap between types may result in unpredictable behavior.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### -TOOLBAR

Displays, hides, and customizes toolbars.

#### WORKSPACE

Creates, modifies, and saves workspaces and makes a workspace current.

## Quick Properties

With the Quick Properties palette, for a selected object, you can access a sub-set of the properties that are accessible from the Properties palette.

You can customize the properties that are displayed on the Quick Properties palette. The properties (displayed when an object is selected) are common to all object types and are specific to the object that was selected. The available properties are the same as those on the Properties palette and for rollover tooltips.

---

**NOTE** You can synchronize the properties that are displayed on the Quick Properties palette with those for rollover tooltips.

---

### Display Objects Properties on the Quick Properties Palette

When customizing the Quick Properties palette, you control which object types display properties on the Quick Properties palette and which properties are displayed. You use the Objects pane to add and remove the object types

that are set to display properties on the Quick Properties palette. Once an object type is added to the Objects pane, you can then decide which properties to display when an object of that type is selected in the drawing window.

You can change the general properties for a selected object type or for all object types. Selecting an object type from the Objects pane allows you to control the display of the general properties for the selected object type, or by clicking the General button at the bottom of the Objects pane you can override the general properties of all object types.

When the General button at the bottom of the Objects pane is clicked, a list of the general properties that can be used to override the general properties of all object types is displayed along with the Reset Overrides button. Selecting the general properties that you want to display for all object types and clicking Reset Overrides applies the selected general properties to all listed object types in the Objects pane. However, after applying a general property to all object types you can deselect any general property for a specific object type by selecting the object type and deselecting the property.

### Display the Quick Properties Palette

The Quick Properties palette is displayed when objects are selected, if the object type of the selected objects is supported for Quick Properties, and if the QPMODE system variable is set to 1 or 2. See Display and Change the Properties of Objects in the *User's Guide* for more information about controlling the display of the Quick Properties.

---


**NOTE** When the system variable QPMODE is set to a value of 1, the general properties that are checked are displayed in the Quick Properties palette for all object types that are not in the list on the Objects pane.

---


### To control which object types are used with the Quick Properties palette

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Quick Properties.




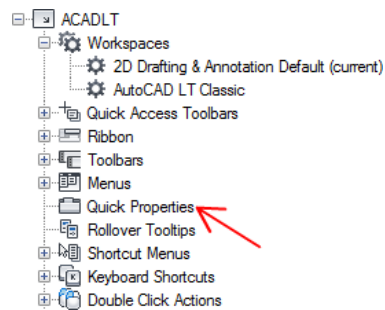

3 In the Objects pane, click Edit Object Type List.

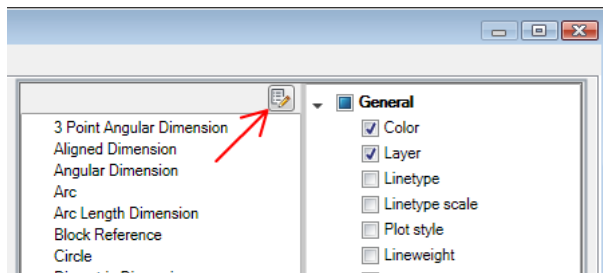

4 In the Edit Object Type List dialog box, select the object types you want to display properties for on the Quick Properties palette.

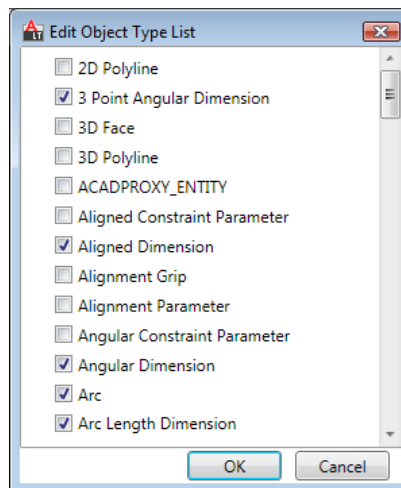


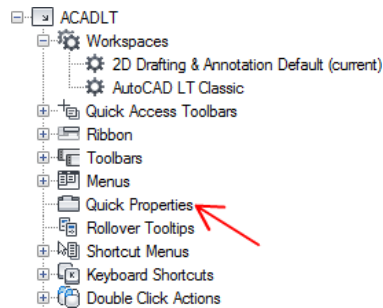
If an object type is checked, the properties for the object type are displayed on the Quick Properties palette when an object of the same type is selected

in the drawing window. Clear the check mark next to an object type to remove support for the object type from the Quick Properties palette.


- 5 Click OK.
- 6 In the Customize User Interface Editor, click Apply.

### To control the display of a property for an object on the Quick Properties palette

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Quick Properties.



- 3 In the Objects pane, select an object from the Object Type list.
- 4 In the Properties pane, select the properties you want displayed for an object type on the Quick Properties palette.

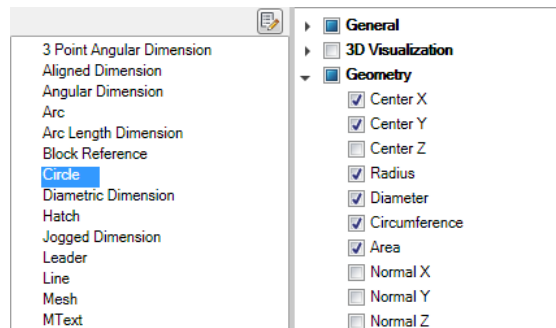


If a property is checked, the property is displayed on the Quick Properties palette when an object of the same type is selected in the drawing window.

Clear the check mark next to a property to remove the property for the selected object type from the Quick Properties palette.


- 5 Click Apply.

### To control the display of custom properties and attributes for block references on the Quick Properties palette

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Quick Properties.

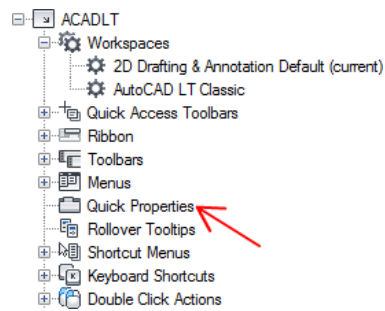

- 3 In the Objects pane, select Block Reference from the Object Type list.

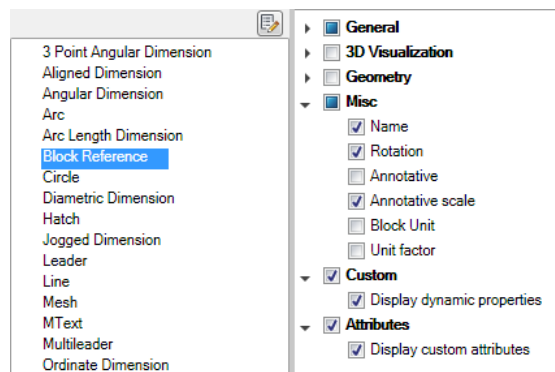


- 4 In the Properties pane, select the check box next to Custom and Attributes. If the Custom category is checked, the dynamic properties for a block are displayed on the Quick Properties palette. If the Attributes category is

checked, the attributes for a block are displayed on the Quick Properties palette


- 5 Click Apply.

### To override the general properties for all object types


- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Quick Properties.

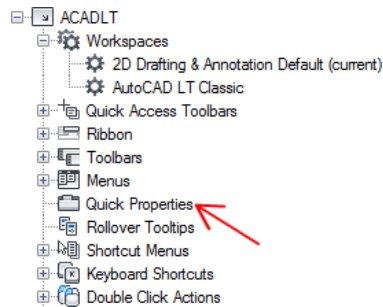

- 3 In the Properties pane, select the check boxes next to the general properties you want the Quick Properties palette to display for all object types.

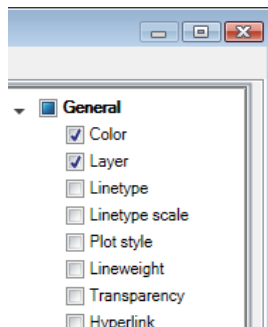

- 4 Click Reset Overrides.

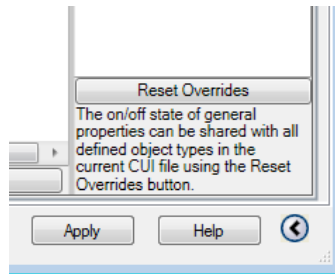


- 5 Click Apply.

### To restore the default settings for Quick Properties



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Quick Properties.
- 3 Click Restore Default.
- 4 Click Restore the Default Quick Properties Settings.

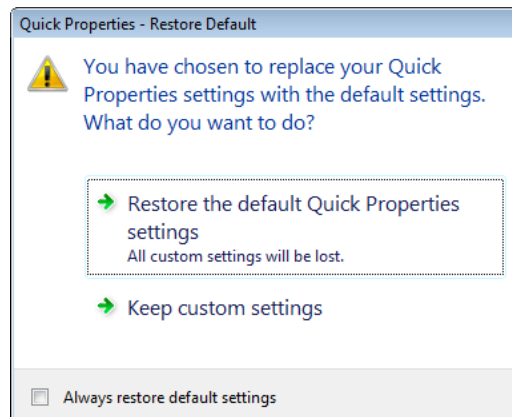


- 5 Click Apply.


## To synchronize Quick Properties with rollover tooltips



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Quick Properties.
- 3 Click Synchronize with Rollover Tooltips.

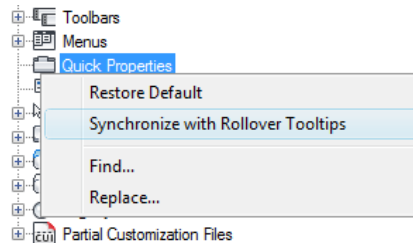

- 4 Click Apply Rollover Tooltips Settings to Quick Properties palette.

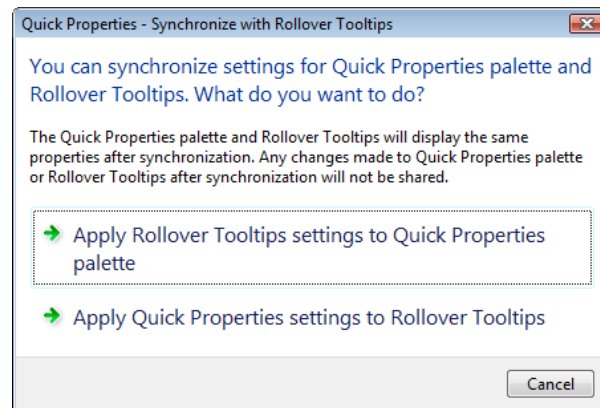

- 5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.



## DSETTINGS

Sets grid and snap, polar and object snap tracking, object snap modes, Dynamic Input, and Quick Properties.

## System Variables

### QPLOCATION

Sets the location mode of Quick Properties palette.

### QPMODE

Sets the on or off state of Quick Properties palette.

## Rollover Tooltips

Rollover tooltips display the current values of selected properties.

The properties and values that are displayed in a rollover tooltip can be customized by object type. When customizing the display of the properties for a rollover tooltip, you can display properties common to all object types or properties that are specific to an object type. The available properties are the same as those on the Properties and Quick Properties palettes.

---

**NOTE** You can synchronize the properties used for rollover tooltips with those displayed on the Quick Properties palette.

---

### Display Objects Properties on Rollover Tooltips

When customizing rollover tooltips, you control which object types display a tooltip when the cursor hovers over an object in the drawing window. You use the Objects pane to add and remove the object types for which you want to see a rollover tooltip. Once an object type is listed in the Objects pane, you can then specify which properties in the Properties pane are displayed on the rollover tooltip for the selected object type.

You can change the general properties for a selected object type or for all object types. Selecting an object type from the Objects pane allows you to control the display of the general and object specific properties for that selected object type. You can click the General button at the bottom of the Objects pane to override the general properties of all object types.

When the General button at the bottom of the Objects pane is clicked, a list of the general properties that can be used to override the properties of all object types is displayed along with the Reset Overrides button. Select the general properties that you want to display for all object types and click Reset

Overrides. However, after applying a general property to all object types you can deselect any general property for a specific object type by selecting the object type and deselecting the property.

---

**NOTE** When an object is not in the Object Type list on the Objects pane, the general properties that are checked for all object types are displayed on the rollover tooltips.


---

### Display Rollover Tooltips


Rollover tooltips are displayed for objects when the ROLLOVERTIPS system variable is set to 1. See Set Interface Options in the *User's Guide* for more information about controlling the display of rollover tooltips and other tooltip settings for the program.

### To control which objects support rollover tooltips


- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Rollover Tooltips.

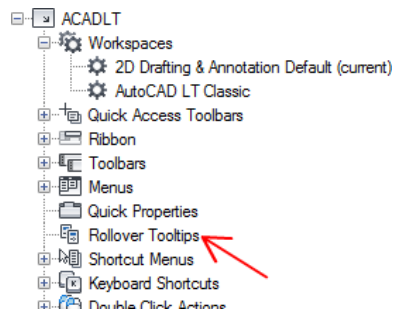

- 3 In the Objects pane, click Edit Object Type List.

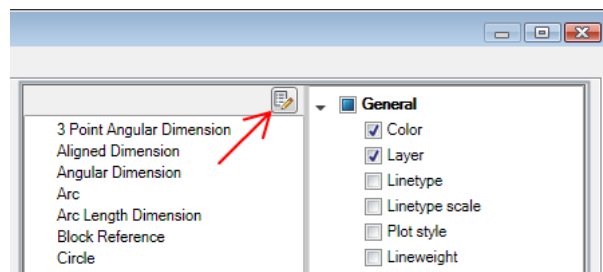

- 4 In the Edit Object Type List dialog box, select the object types you want to display properties for on a rollover tooltip.

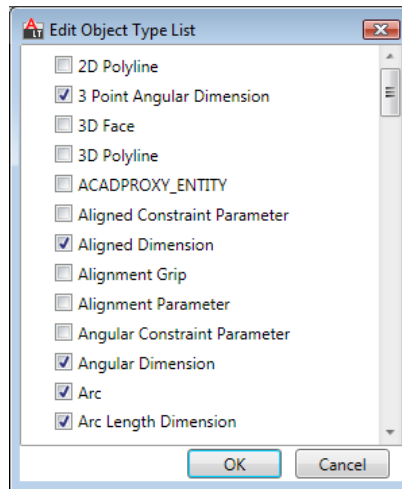


If an object type is checked, the properties for the object type are displayed on a rollover tooltip when the cursor hovers over an object of the same type. Clear the check mark next to an object type to remove support for the object type from rollover tooltips.

- 5 Click OK.
- 6 In the Customize User Interface Editor, click Apply.


### To control which properties are displayed on a rollover tooltip

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Rollover Tooltips.



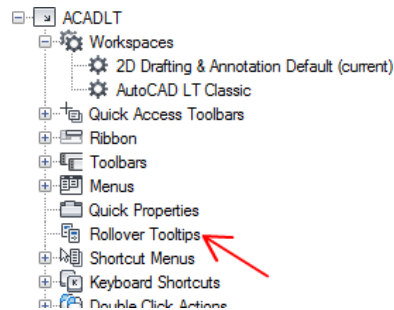

- 3 In the Objects pane, select an object from the Object Type list.

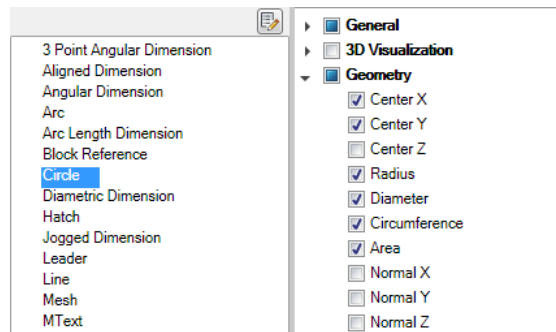


- 4 In the Properties pane, select the properties you want to display on a rollover tooltip.  
If a property is checked, the property is displayed on a rollover tooltip when the cursor hovers over an object of the selected object type in the drawing window. Clear the check mark next to a property to remove the property for the selected object type.
- 5 Click Apply.


### To override the general properties for all object types that support rollover tooltips




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, select Rollover Tooltips.

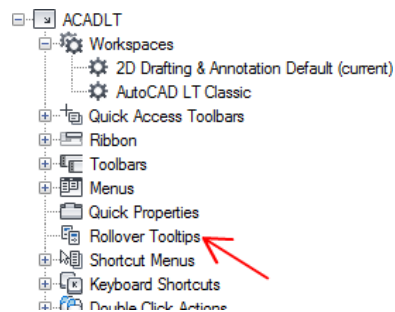

- 3 In the Properties pane, select the check boxes next to the general properties you want rollover tooltips to display for all object types.

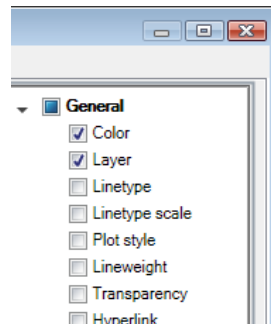

- 4 Click Reset Overrides.

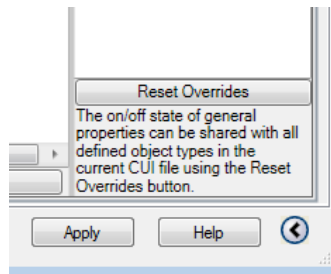


- 5 Click Apply.

### To restore the default settings for rollover tooltips


- 1 Click Manage tab ► Customization panel ► User Interface.



- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Rollover Tooltips.
- 3 Click Restore Default.

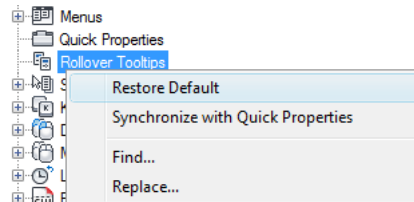

- 4 Click Restore the Default Rollover Tooltips Settings.

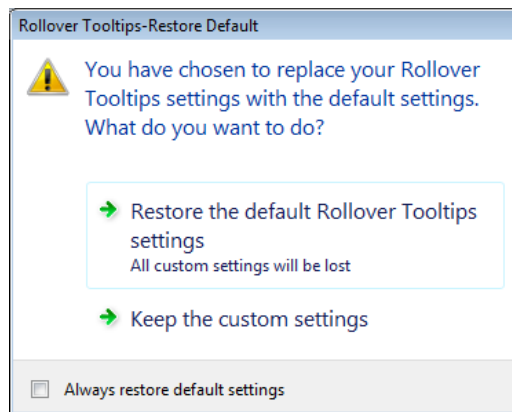


- 5 Click Apply.


#### To synchronize rollover tooltips with Quick Properties



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Rollover Tooltips.
- 3 Click Synchronize with Quick Properties.

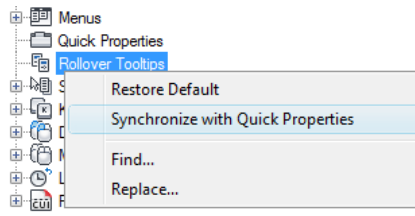

4 Click Apply Quick Properties Settings to Rollover Tooltips.

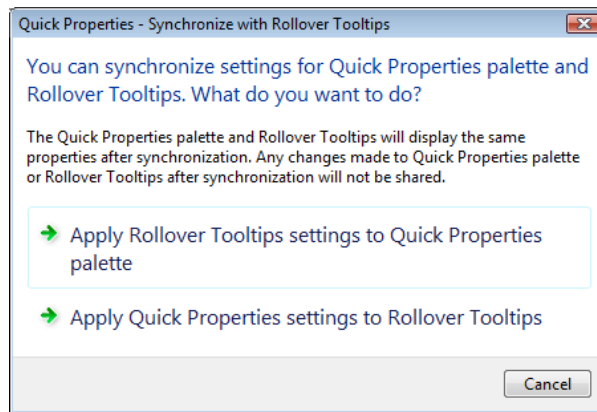

5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### OPTIONS

Customizes the program settings.

### System Variables

#### ROLLOVERTIPS

Controls the display of rollover tooltips in the application.

## Keyboard Shortcuts

Shortcut keys can be used to start commands and to be temporary override keys to execute a command or change a setting when a key is pressed.

## Shortcut Keys

You can assign shortcut keys (sometimes called accelerator keys) to commands you use frequently.

## Overview of Shortcut Keys

Shortcut keys are key combinations that start commands. For example, you can press Ctrl+O to open a file and Ctrl+S to save a file, which is the same as clicking Open and Save on the Quick Access toolbar or File menu.

To create a shortcut key, you start by dragging a command from the Commands List pane to the Shortcut Keys node in the Customizations In *<file name>* pane. Once you create a shortcut key, you assign a key combination to it.

The following table shows the properties of the Save shortcut key as they appear in the Properties pane.

Properties for the Save Shortcut Key		
Properties pane item	Description	Example
Name	String that is only used in the CUI Editor and is not displayed in the user interface.	Save
Description	Text used to describe the element; does not appear in the user interface.	Saves the current drawing
Extended Help File	Displays the file name and ID for the extended tooltip that is displayed when the cursor hovers over a toolbar or panel button.	
Command Display Name	String that contains the name of the command that is related to the command.	QSAVE



---

### Properties for the Save Shortcut Key

---

Properties pane item	Description	Example
Macro	The command macro. It follows the standard macro syntax.	^C^C_qsave
Key(s)	Specifies the keystroke combination that is used to execute the macro. Click the [ ] button to open the Shortcut Keys dialog box.	CTRL+S
Tags	Keywords associated to a command. Tags provide an additional field to search in the application menu.	
Element ID	Tag that uniquely identifies a command.	ID_Save

---


**NOTE** A shortcut key inherits its properties from the command that is used to create it.

---


### To create or modify a shortcut key

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, click the plus sign (+) next to Keyboard Shortcuts to expand it.
- 3 Click the plus sign (+) next to Shortcut Keys to expand it.
- 4 Do one of the following:
  - To create a shortcut key, in the Command List pane, drag the command to the Shortcut Keys node of the Customizations In <file name> pane.



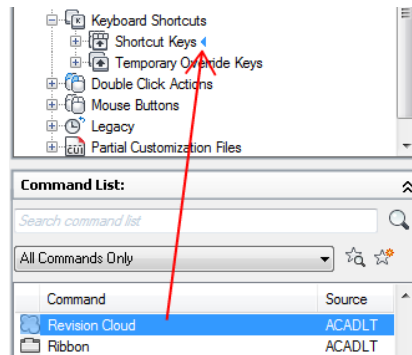


- To modify a shortcut key, select a shortcut key.

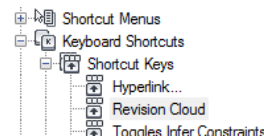

In the Properties pane, the properties for the shortcut key are displayed.

- 5 In the Key(s) box, click the [ ] button to open the Shortcut Keys dialog box.

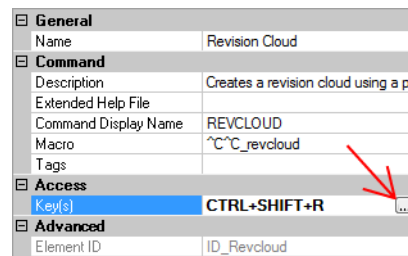


- 6 Hold down the modifier key Ctrl with a combination of Shift and Alt if desired and press a letter, number, function, or virtual key such as F1 or Insert. Valid modifier and key combinations include the following:
  - Function (Fn) keys containing no modifiers
  - Number Pad (NUMPADn) keys containing no modifiers
  - Ctrl+letter, Ctrl+number, Ctrl+function, Ctrl+virtual key
  - Ctrl+Alt+letter, Ctrl+Alt+number, Ctrl+Alt+function, Ctrl+Alt+virtual key

- Ctrl+Shift+letter, Ctrl+Shift+number, Ctrl+Shift+function, Ctrl+Shift+virtual key
- Ctrl+Shift+Alt+letter, Ctrl+Shift+Alt+number, Ctrl+Shift+Alt+function, Ctrl+Shift+Alt+virtual key

---

**NOTE** The virtual keys that are supported are Escape, Insert, Delete, Home, End, Page Up, Page Down, Left Arrow, Right Arrow, Up Arrow, and Down Arrow. The virtual key Escape can only be used by itself or with the modifier combination Ctrl+Shift+Alt.

---

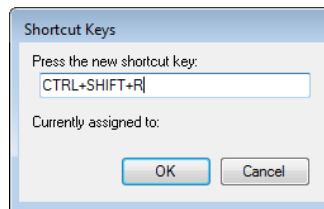


Currently Assigned To displays any current assignments for the entered key combination. If you do not want to replace the current key assignment, use a different key combination.

- 7 Click OK to assign the key combination and close the Shortcut Keys dialog box.
- 8 In the Customize User Interface Editor, click Apply.


### To print a list of shortcut keys or temporary override keys



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customizations In <file name> pane, click the Keyboard Shortcuts node.

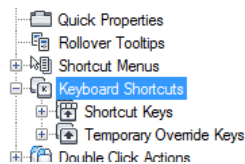

- 3 In the Shortcuts pane, filter the type and status of keyboard shortcuts to print.
  - In the Type drop-down list, select the type of keyboard shortcuts to display in the list. Choices include All Keys, Accelerator Keys, or Temporary Override Keys.
  - In the Status list, select the status of keyboard shortcuts displayed in the list. Choices include All, Active, Inactive, and Unassigned.
- 4 In the Shortcuts pane, click Print.

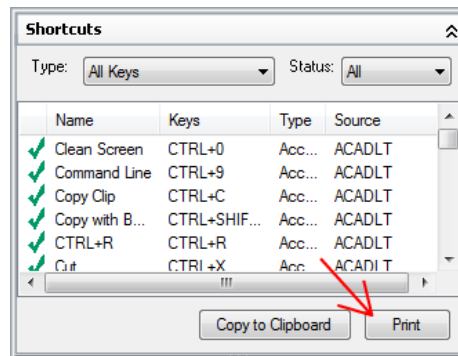

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

### System Variables

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

## Examples of Shortcut Keys

The CUIx file that ships with AutoCAD LT defines the default shortcut keys. You can use the default shortcut keys as examples when creating your own shortcut keys.

The following table lists the default actions for shortcut keys.

Shortcut Key Assignments	
Shortcut Key	Description
CTRL+0	Toggles Clean Screen
CTRL+1	Toggles Properties palette
CTRL+2	Toggles DesignCenter
CTRL+3	Toggles the Tool Palettes window
CTRL+7	Toggles Markup Set Manager
CTRL+8	Toggles the QuickCalc palette
CTRL+9	Toggles the Command Line window
CTRL+A	Selects all the objects in drawing that are not locked or frozen
CTRL+SHIFT+A	Toggles Groups
CTRL+B	Toggles Snap
CTRL+C	Copies objects to the Windows Clipboard
CTRL+SHIFT+C	Copies objects to the Windows Clipboard with Base Point
CTRL+E	Cycles through isometric planes
CTRL+F	Toggles running object snaps
CTRL+G	Toggles Grid
CTRL+H	Toggles PICKSTYLE
CTRL+SHIFT+H	Toggles the display of palettes with HIDE-PALETTES and SHOWPALETTES
CTRL+J	Repeats last command

Shortcut Key Assignments	
Shortcut Key	Description
CTRL+K	Inserts a hyperlink
CTRL+L	Toggles Ortho mode
CTRL+M	Repeats last command
CTRL+N	Creates a new drawing
CTRL+O	Opens an existing drawing
CTRL+P	Plots the current drawing
CTRL+SHIFT+P	Toggles the Quick Properties interface
CTRL+Q	Quits AutoCAD LT
CTRL+R	Cycles through the viewports on the current layout
CTRL+S	Saves current drawing
CTRL+SHIFT+S	Displays up the Save As dialog box
CTRL+T	Toggles Tablet mode
CTRL+V	Pastes data from the Windows Clipboard
CTRL+SHIFT+V	Pastes data from the Windows Clipboard as a Block
CTRL+X	Cuts objects from the current drawing to the Windows Clipboard
CTRL+Y	Cancels the preceding Undo action
CTRL+Z	Reverses the last action
CTRL+[	Cancels current command
CTRL+\	Cancels current command

Shortcut Key Assignments	
Shortcut Key	Description
CTRL+PAGE UP	Moves to the next layout tab to the left of the current tab
CTRL+PAGE DOWN	Moves to the next layout tab to the right of the current tab
F1	Displays Help
F2	Toggles Text Window
F3	Toggles OSNAP
F4	Toggles TABMODE
F5	Toggles ISOPLANE
F7	Toggles GRIDMODE
F8	Toggles ORTHOMODE
F9	Toggles SNAPMODE
F10	Toggles Polar Tracking
F11	Toggles Object Snap Tracking
F12	Toggles Dynamic Input

**NOTE** In the Customize User Interface (CUI) Editor, you can view, print, or copy a list of shortcut keys, temporary override keys, or both. The shortcut keys and temporary override keys in the list are those keys used by the CUIx files that are loaded in the program.

## Temporary Override Keys

Temporary override keys allow you to execute a command or change a setting when a key combination is pressed, and then restore settings changed or execute a command when a key combination is released.

## Overview of Temporary Override Keys

Temporary override keys are used to temporarily turn on or off drafting settings. For example, holding down the Shift key toggles the current setting of Ortho mode. The following table shows the Object Snap Override: Endpoint temporary override key properties as they appear in the Properties pane.

The creation of a temporary override key does not start with a command from the Commands List pane like a shortcut key does. Instead, you create a new temporary override key like you do a toolbar or ribbon panel, and that is by right-clicking over the Temporary Override Keys node and clicking New Temporary Override Key. Once a temporary override key is created you use the Properties pane to define its key up and key down behavior, and assign it a key combination.

The following table shows the properties of the Object Snap Override : Endpoint temporary override key as they appear in the Properties pane.


Properties for the Object Snap Override : Endpoint Temporary Override Key		
Properties pane item	Description	Example
Name	String that is only used in the CUI Editor and is not displayed in the user interface.	Object Snap Override : Endpoint
Description	Text used to describe the element; does not appear in the user interface.	Object Snap Override : Endpoint
Keys	Specifies the keystroke combination that is used to execute the temporary override. Click the [ ] button to open the Shortcut Keys dialog box.	SHIFT+E
Macro1 (Key Down)	Specifies the macro that should be executed when the keystroke combination is held down by the user.	^P!_osmode 1 \$(if,\$(eq,\$(getvar, osnapoverride),'_osnapoverride 1)
Macro2 (Key Up)	Specifies the macro that should be executed when the keystroke combination is released by the user. If left blank, AutoCAD LT restores any variables to their previous state.	



## To create a temporary override key



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, click the plus sign (+) next to Keyboard Shortcuts to expand it.
- 3 In the Customizations In <file name> pane, right-click Temporary Override Keys. Click New Temporary Override.

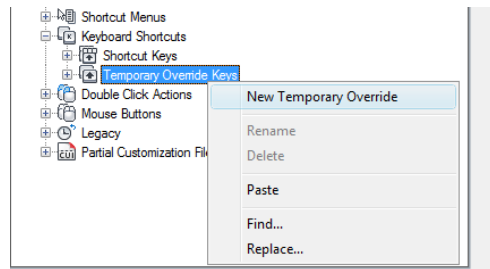

A new temporary override (named TemporaryOverride1) is placed at the bottom of the Temporary Override Keys tree.

- 4 Do one of the following:
  - Enter a new name over the default name TemporaryOverride1.
  - Right-click TemporaryOverride1. Click Rename. Enter a new temporary override name.
  - Click TemporaryOverride1, wait, and click again over the temporary override's name again to edit its name in-place.
- 5 Select the new temporary override in the tree view, and update the Properties pane:
  - In the Description box, enter a description for the temporary override key.
  - In the Key(s) box, click the [ ] button to open the Shortcut Keys dialog box. In the Shortcut Keys dialog box, click in the Press New Shortcut Key box to ensure the box has focus, and press a key. Valid modifier keys include function (Fn keys) with no modifiers, Shift+letter, or Shift+number key.

- In the Macro 1 (Key Down) box, enter a macro to be executed when the temporary override key is pressed. When no value is assigned, the default macro is ^c^c.
- In the Macro 2 (Key Up) box, enter a macro to be executed when the temporary override key is released. When no value is defined, key up restores the application to its previous state (before the temporary override was executed).

<b>General</b>	
Name	TemporaryOverride1
Description	
<b>Shortcut</b>	
Key(s)	
Macro 1 (Key Down)	^c^c
Macro 2 (Key Up)	

---

**NOTE** For information about creating a macro, see [Create Macros](#) on page 101.

---

- 6 Click Apply.

#### To modify a temporary override key



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, click the plus sign (+) next to Keyboard Shortcuts to expand it.
- 3 Click the plus sign (+) next to Temporary Override Keys to expand it.
- 4 In the Customizations In <file name> pane, click the temporary override key you want to modify.



- 5 Update the Properties pane as necessary:
  - In the Description box, enter a description for the temporary override key.

- In the Key(s) box, click the [ ] button to open the Shortcut Keys dialog box. In the Shortcut Keys dialog box, click in the Press New Shortcut Key box to ensure the box has focus, and press a key. Under the Press New Shortcut Key box, Currently Assigned To displays any current assignments for the key. If a key you select is not already assigned, click OK.
- In the Macro 1 (Key Down) box, enter a macro to be executed when the temporary override key is pressed. When no value is assigned, the default macro is ^c^c.
- In the Macro 2 (Key Up) box, enter a macro to be executed when the temporary override key is released. When no value is defined, key up restores the application to its previous state (before the temporary override was executed).

<b>General</b>	
Name	Toggles Orthogonal Mode
Description	Toggles Orthogonal Mode
<b>Shortcut</b>	
Key(s)	F8
Macro 1 (Key Down)	^P^_orthomode \$M=\$if,\$(and,\$(ge
Macro 2 (Key Up)	

---

**NOTE** For information about creating a macro, see [Create Macros](#) on page 101.

---


6 Click Apply.

### To print a list of shortcut keys or temporary override keys


1 Click Manage tab ➤ Customization panel ➤ User Interface.



2 In the Customizations In <file name> pane, click the Keyboard Shortcuts node.

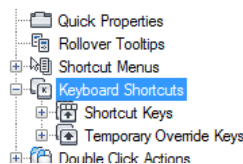

- 3 In the Shortcuts pane, filter the type and status of keyboard shortcuts to print.
  - In the Type drop-down list, select the type of keyboard shortcuts to display in the list. Choices include All Keys, Accelerator Keys, or Temporary Override Keys.
  - In the Status list, select the status of keyboard shortcuts displayed in the list. Choices include All, Active, Inactive, and Unassigned.
- 4 In the Shortcuts pane, click Print.

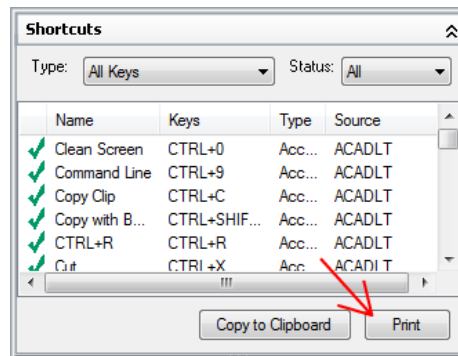

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

### System Variables

#### TOOLTIPS

Controls the display of tooltips on the ribbon, toolbars, and other user interface elements.

#### TEMPOVERRIDES

Turns temporary override keys on and off.

## Examples of Temporary Override Keys

The CUIx file that ships with AutoCAD LT defines the default temporary override keys. You can use the default temporary override keys as examples when creating your own temporary override keys.

The following table lists the default actions for temporary override keys on an English U.S. keyboard. For more information about default temporary override keys on other keyboards, see *Override Object Snap Settings* in the *User's Guide*.

Temporary Override Key Assignments	
Temporary Override Key	Description
F3	Toggles OSNAP
F8	Toggles ORTHOMODE
F9	Toggles SNAPMODE
F10	Toggles Polar Tracking
F11	Toggles Object Snap Tracking
F12	Toggles Dynamic Input
SHIFT	Toggles ORTHOMODE
SHIFT+'	Toggles OSNAP
SHIFT+,	Object Snap Override: Center
SHIFT+.	Toggles Polar Tracking
SHIFT+;	Enables Object Snap Enforcement
SHIFT+]	Toggles Object Snap Tracking
SHIFT+A	Toggles OSNAP
SHIFT+C	Object Snap Override: Center
SHIFT+D	Disable All Snapping and Tracking

Temporary Override Key Assignments	
Temporary Override Key	Description
SHIFT+E	Object Snap Override: Endpoint
SHIFT+L	Disable All Snapping and Tracking
SHIFT+M	Object Snap Override: Midpoint
SHIFT+P	Object Snap Override: Endpoint
SHIFT+Q	Toggles Object Snap Tracking
SHIFT+S	Enables Object Snap Enforcement
SHIFT+V	Object Snap Override: Midpoint
SHIFT+X	Toggles Polar Tracking

**NOTE** In the Customize User Interface (CUI) Editor, you can view, print, or copy a list of shortcut keys, temporary override keys, or both. The shortcut keys and temporary override keys in the list are those keys used by the CUIx files that are loaded in the program.

## Double Click Actions

You can create a double click action which starts an editing command when the cursor is positioned over an object in a drawing and a double-click event is registered from a pointing device.

### Overview of Double Click Actions

Double click actions execute a command that displays either the Properties palette or a specialized editor that is more powerful, convenient, or frequently used for the object type that is double-clicked in a drawing. The following


table shows the definition of the Attribute Block double click action in the CUI Editor.

#### Properties for the Attribute Block double click action

Properties pane item	Description	Example
Name	String used to identify the double click action in the CUI Editor.	Attribute Block
Description	Text used to describe the element in the CUI Editor.	
Object Name	Determines the type of object the double click action is associated to. For information on the object names that can be used, see <a href="#">Double Click Action Object Names</a> on page 266.	ATTBLOCKREF
Element ID	Uniquely identifies a double click action in the CUI Editor.	DC_0002

#### To create a double click action


- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click Double Click Actions. Click New Double Click Action.

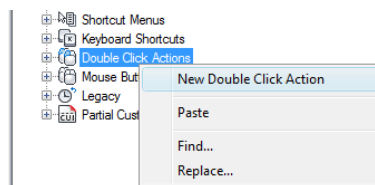


The new double click action (named DoubleClick1) is placed at the bottom of the Double Click Actions tree.

- 3 Do one of the following:
  - Enter a new name over the default name DoubleClick1.

- Right-click DoubleClick1. Click Rename. Enter a new double click action name.
  - Click DoubleClick1, wait, and click again over the double click action's name again to edit its name in-place.
- 4 In the Properties pane, do the following:
- In the Description box, enter a description for the double click action.
  - In the Object Name box, enter a DXF name or one of the special object names used for an insert, surface, or underlay object. The value will automatically be converted to uppercase after the box loses focus.

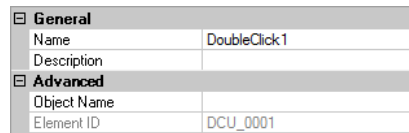

- 5 In the Command List pane, drag the command you want to add to the double click action in the Customizations In <file name> pane.

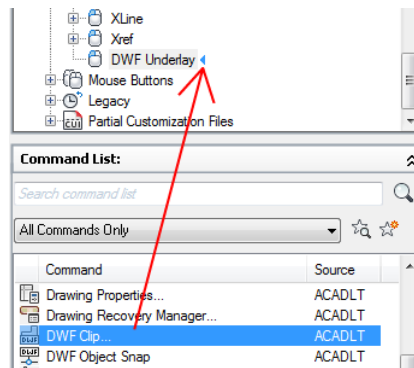

**NOTE** Only a single command can be associated with a double click action at a time.

- 6 Click Apply.


### To modify a double click action

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.





- 2 In the Customize User Interface Editor, Customize tab, click the plus sign (+) next to Double Click Actions to expand it.
- 3 Click a double click action.

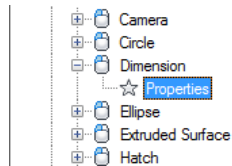


In the Properties pane, the properties for the double click action you selected are displayed.

- 4 In the Object Name box, enter a DXF name or one of the special object names used for an insert, surface, or underlay object.

General	
Name	Dimension
Description	
Advanced	
Object Name	DIMENSION
Element ID	DCU_0001

- 5 If you want to replace the current command assigned to the double click action, click in the Command List pane and drag a different command to the selected double click action in the Customizations In <file name> pane.

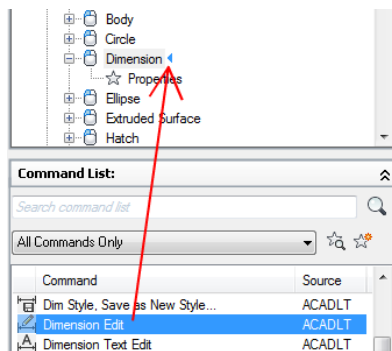

- 6 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### OPTIONS

Customizes the program settings.

### System Variables

#### DBLCLKEDIT

Controls the double click editing behavior in the drawing area.

#### PICKFIRST

Controls whether you select objects before (noun-verb selection) or after you issue a command.

## Double Click Action Object Names

The Object Name property of a double click action must be a valid drawing interchange format (DXF<sup>™</sup>) name, or a special name for insert objects.

There are some exceptions as to when the DXF name is not used for the Object Name property of a double click action. These exceptions apply to objects that use the INSERT DXF names. For example, the double click action named “Attribute Dynamic Block” in the *acadlt.cuix* file uses the object name ATTDYNBLOCKREF, which is used for insert objects that contain attributes and dynamic actions.

The following table shows the DXF names for many of the objects commonly found in a drawing. In most cases, the DXF name and the object name are the same value with the exception of the INSERT DXF name.

#### DXF Names for Commonly Used Objects

DXF Name	Description
ACAD_PROXY_ENTITY	Object of an unknown type
ARC	3-point arc
ATTDEF	Attribute definition that is not defined in a block

<b>DXF Names for Commonly Used Objects</b>	
<b>DXF Name</b>	<b>Description</b>
CIRCLE	Circle
DGNUNDERLAY	DGN file underlay
DIMENSION	Dimensions (all dimension objects)
DWFUNDERLAY	DWF file underlay
ELLIPSE	Ellipse and elliptical arc
EXTRUDESURFACE	3D extruded surface
HATCH	Hatch fill
IMAGE	Raster image
INSERT	<p>The Object Names for the different types of block reference objects are as follows:</p> <p><b>ATTBLOCKREF</b> Block reference with attributes</p> <p><b>ATTDYNBLOCKREF</b> Dynamic block reference with attributes</p> <p><b>BLOCKREF</b> Block reference without attributes</p> <p><b>DYNBLOCKREF</b> Dynamic block reference without attributes</p> <p><b>XREF</b> External reference (xref)</p>
LEADER	Legacy leader
LIGHT	Point light, spotlight, web light, and distant light
LINE	Line
LOFTEDSURFACE	3D lofted surface
LWPOLYLINE	Lightweight polyline

DXF Names for Commonly Used Objects	
DXF Name	Description
MLINE	Multiline
MLEADER	Multileader
MTEXT	Multiline text
PDFUNDERLAY	PDF file underlay
POINT	Point
POLYLINE	2D or 3D polyline
RAY	Ray
REGION	2D region
REVOLVEDSURFACE	3D revolved surface
SHAPE	Shape insert
SOLID	2D solid
SPLINE	B-spline curve
SWEPTSURFACE	3D swept surface
TABLE	Table
TEXT	Single-line text
TOLERANCE	Geometric tolerance
VIEWPORT	Floating viewport
WIPEOUT	Wipeout
XLINE	Construction line

---

**NOTE** If more than one object is selected or if an object type is not associated with a double click action, the default command used is PROPERTIES.

---

## Examples of Double Click Actions

The CUIx file that ships with AutoCAD LT defines the default double click actions. You can use the default double click actions as examples when creating your own double click actions.

The following table shows some of the object names that are set up in the *acadlt.cuix* file. Expand the Double Click Actions node in the Customize User Interface (CUI) Editor for a complete listing of all the actions that are defined.

Double click action assignments	
Object Type	Command (Macro)
ATTDEF	DDEDIT
ATTRIB	ATTIPEDIT
ATTBLOCKREF	ATTEDIT
ATTDYNBLOCKREF	ATTEDIT
BLOCKREF	\$M=\$(if,\$(and,\$(>,\$(getvar,blockeditlock),0)),^C^C_properties,^C^C_bedit)
DYNBLOCKREF	\$M=\$(if,\$(and,\$(>,\$(getvar,blockeditlock),0)),^C^C_properties,^C^C_bedit)
HATCH	HATCHEDIT
IMAGE	IMAGEADJUST
LWPOLYLINE	PEDIT
MTEXT	MTEDIT
POLYLINE	PEDIT
SPLINE	SPLINEDIT
TEXT	DDEDIT

---

**NOTE** Double click actions cannot be created for OLE and VIEWPORT objects.

---

# Mouse Buttons

You can change the standard behavior of pointing devices in the program.

## Overview of Mouse Buttons

Mouse buttons define how a Windows system pointing device functions. You can customize the behavior of a mouse or other pointing device in the Customize User Interface (CUI) Editor. If a pointing device has more than two buttons, you can change the behavior of the second and third buttons. The first button on any pointing device cannot be changed in the Customize User Interface (CUI) Editor.

By using the Shift and Ctrl keys, you can create a number of combinations to suit your needs. Your pointing device can recognize as many commands as it has assignable buttons. The Mouse Buttons section of the tree node is organized by keyboard combination such as Click, Shift+Click, Ctrl+Click, and Ctrl+Shift+Click. The tablet buttons are numbered sequentially. Drag a command to assign the command to a mouse button. Create additional buttons by dragging commands to a Click node.

The following table shows the Click mouse button properties as they appear in the Properties pane.

**Properties for the Click Mouse Button**


Properties Pane Item	Description	Example
Aliases	Specifies the aliases for the mouse button. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and it is used to reference the mouse button programmatically.	AUX1

### To add a mouse button combination

- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, click the Customize tab.



- 3 In the Customizations In <file name> pane, click the plus sign (+) next to Mouse Buttons to expand the list.
- 4 Right-click a mouse button section. Click New Button.

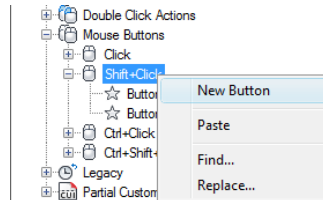

A new mouse button (named Buttonn) is placed at the bottom of the selected list.

- 5 In the Command List pane, drag the command you want to add to the mouse button in the Customizations In <file name> pane.
- 6 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

### System Variables

#### MBUTTONPAN

Controls the behavior of the third button or wheel on the pointing device.

## Accept Coordinate Entry in Button Menus

When you click one of the buttons on a multi-button pointing device, the program reads not only the button number but also the coordinate of the crosshairs at the time you click. By carefully constructing macros, you can choose to either ignore the coordinate or use it with the command activated by the button.

As described in [Pause for User Input in Macros](#) on page 106, you can include a backslash (\) in a command to pause for user input. For the Mouse and Digitize Buttons menus, the coordinate of the crosshairs is supplied as user

input when the button is clicked. This occurs only for the first backslash in the command; if the item contains no backslashes, the crosshairs coordinate is not used. Consider the following commands:

```
line  
line \
```

The first button starts the LINE command and displays the Specify First Point prompt in the normal fashion. The second button also starts the LINE command, but the program uses the current crosshairs location at the Specify First Point prompt and displays the Specify Next Point prompt.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Legacy Interface Elements

The term “legacy” refers to those user interface elements that are not commonly used with the current version of the program, but are still supported because some users prefer them to alternative user interface elements that are now provided.

## Create Tablet Menus

You can configure up to four areas of your digitizing tablet as menu areas for command input.

The nodes in the Customize User Interface (CUI) Editor are labeled Tablet Menu 1 through Tablet Menu 4 and define the macros associated with tablet selections.

The tablet menu areas that you define with the Cfg option of the TABLET command are divided into equal-sized menu selection boxes, which are determined by the number of columns and rows you specify in each area. These tablet menu selection boxes correspond directly with the lines that follow the Tablet section labels from left to right and top to bottom (whether or not they contain text).

For example, if you configure a menu area for five columns and four rows, the command on the line immediately following the Row label corresponds



to the left-most selection box in the top row. The program can recognize up to 32,766 commands in each tablet section, which should be more than enough for any tablet menu.

You can add your own macros to the Macros cell in the Properties pane. The command labels in this area correspond to the 225 boxes at the top of your tablet template (rows A through I and columns 1 through 25). You can add a macro using standard command syntax. The following table shows the Click mouse button properties as they appear in the Properties pane.

Properties for the Tablet Menu 1		
Properties pane item	Description	Example
Aliases	Specifies the aliases for the tablet menu. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and it is used to reference the tablet menu programmatically.	TABLET1, TABLET1STD
Rows	Number of rows that can be customized for the tablet menu.	9
Columns	Number of columns that can be customized for the tablet menu.	25

### To define rows and columns in a tablet menu



- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Legacy to expand it.
- 3 Click the plus sign (+) next to Tablet Menus to expand it.
- 4 Click the plus sign (+) next to a tablet menu to expand it.
- 5 Click the row that you want to define.
- 6 In the Command List pane, locate the command you want to add.
- 7 Drag the command to a column.
- 8 Click Apply.

### To clear a tablet menu assignment



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Legacy to expand it.
- 3 Click the plus sign (+) next to Tablet Menus to expand it.
- 4 Click the plus sign (+) next to a tablet menu to expand it.
- 5 Right-click the row or column that you want to clear. Click Clear Assignment.
- 6 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### TABLET

Calibrates, configures, and turns on and off an attached digitizing tablet.

## Customize Tablet Buttons

To customize tablet buttons, you follow the same procedures as for customizing mouse buttons.

Tablet buttons are the buttons that are found on the pointing device, also known as a puck, used with a digitizer tablet. Pucks come in a variety of shapes, sizes, and button configurations. You can customize all the buttons on a puck except for the first button.

Some hardware manufacturers utilize a slightly different button layout from one puck to another. One might start with the first button in the upper-left corner and count across and down from 1 through F, while another might start in the upper-left corner and have a different numbering scheme.

---

**NOTE** It is important to test your button assignments as they are assigned to ensure the proper button is being mapped. You may need to refer to your owners manual that came with your puck for how the buttons are laid out.

---

To customize tablet buttons, you follow the same procedures as for customizing mouse buttons.

For more information about customizing tablet buttons, see [Mouse Buttons](#) on page 270.

## Quick Reference

### Commands

#### CUI


Manages the customized user interface elements in the product.

## Create Image Tile Menus

The purpose of an image tile menu is to provide an image that can be selected instead of text. You can create, edit, or add image tiles and image tile slides.

An image tile dialog box displays images in groups of 20, along with a scrolling list box on the left that displays the associated slide file names or related text. If an image tile dialog box contains more than 20 slides, the additional slides are added to a new page. Next and Previous buttons are activated so that you can browse the pages of images.

The following is an example of an image tile menu.

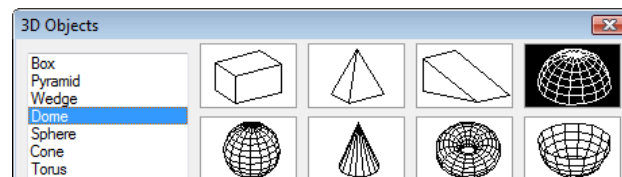

You define an image tile menu in the Customize User Interface (CUI) Editor. The following table shows the properties for an image tile menu.

<b>Properties for the Tiled Viewport Layout image tile menu</b>		
<b>Properties pane item</b>	<b>Description</b>	<b>Example</b>
Name	String that is used only in the CUI Editor and is not displayed in the user interface.	Tiled Viewport Layout
Description	Text that describes the element and does not appear in the user interface.	
Aliases	Specifies the aliases for the image tile menu. Click the [ ] button to open the Aliases dialog box. Each alias in the CUIx file should be unique and it is used to reference the image tile menu programmatically.	image_vporti

The following table shows the properties for an image tile slide.

<b>Properties of the Four: Equal tile slide on the Tiled Viewport Layout image tile menu</b>		
<b>Properties pane item</b>	<b>Description</b>	<b>Example</b>
Name	String displayed in the list box on the left side of the image tile menu dialog box. The string must include alphanumeric characters with no punctuation other than a hyphen (-) or an underscore (_).	Four: Equal
Command Name	The name of the command as it appears in the Command List pane.	Tiled Viewports, Four: Equal
Description	Text that describes the element; does not appear in the user interface.	
Macro	The command macro. It follows the standard macro syntax.	^C^C-vports 4
Element ID	Tag that uniquely identifies a command.	MM_0427

---

**Properties of the Four: Equal tile slide on the Tiled Viewport Layout image tile menu**

---

Properties pane item	Description	Example
Slide library	A file that is made up of multiple slides and created using the file slidelib.exe.	acadlt
Slide label	Name of a slide contained in the slide library file or a slide image that is stored separately.	vport-4

---

You can use any slide generated by AutoCAD LT as an image. Keep the following suggestions in mind as you prepare slides for an image tile menu.

- **Keep the image simple.** When an image tile menu is displayed, you must wait for all images to be drawn before making a selection. If you show numerous complex symbols, use simple, recognizable images rather than full renditions.
- **Fill the box.** When making a slide for an image, be sure to fill the screen with the image before starting MSLIDE. If the image is very wide and short, or long and thin, the image tile menu will look best if you use PAN to center the image on the screen before making the slide.  
Images are displayed with an aspect ratio of 3:2 (3 units wide by 2 units high). If your drawing area has a different aspect ratio, it can be difficult to produce image slides that are centered in the image tile menu. If you work within a layout viewport that has an aspect ratio of 3:2, you can position the image and be assured that it will look the same when it is displayed in the image tile menu.
- **Remember the purpose of the images.** Do not use images to encode abstract concepts into symbols. Image tiles are useful primarily for selecting a graphic symbol.

**To create an image tile slide**

- 1 In AutoCAD LT, draw the geometry that you want to appear in the slide.
- 2 Click View tab ► Navigate panel ► Zoom drop-down ► Center.
- 3 At the Command prompt, enter **mslide**.
- 4 In the Create Slide File dialog box, specify the file name.
- 5 Click Save, and add it to a slide library file if desired. You can associate this image slide to a new image tile.

### To view an image tile slide

- 1 At the Command prompt, enter **vslide**.
- 2 In the Select Slide File dialog box, browse to and select the slide file you want to view.
- 3 Click Open.  
The slide file should be displayed in the drawing window. Perform a Regen on the drawing to clear the slide file from the display.

### To create an image tile slide library

- 1 Place all your slides in a single folder location that you want to add to a slide library.
- 2 Click Start menu ► (All) Programs ► Accessories ► Command Prompt.
- 3 At the DOS prompt, enter **CD <folder location of slides>**.  
As an example: **CD "c:\slides"**
- 4 While in the location of the slide files, enter **dir \*.sld /b > <file name>**.  
As an example: **dir \*.sld /b > "myslides"**  
A text file will be created with the names of the slide files contained in the current folder.
- 5 With the text file created of all the slide files in the current folder, enter **<AutoCAD LT Install folder>\slidelib.exe <slide library file name> < <text file with slide names>**.  
As an example: **"C:\Program Files\AutoCAD LT 2011\slidelib.exe" "myslidelib" < "myslides"**
- 6 When you finish, close the DOS window.

---

**WARNING** After you create the slide library, place the individual slide files in a safe place so they do not accidentally get deleted. This is important if you need to rebuild the slide library one day.

---

### To create an image tile menu and assign an image tile slide

- 1 Click Manage tab ► Customization panel ► User Interface.



- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In *<file name>* pane, click the plus sign (+) next to Legacy to expand the list.
- 3 In the Legacy list, right-click Image Tile Menu. Click New Image Tile Menu.  
A new image tile menu (named ImageTileMenu1) is placed at the bottom of the Image Tile Menus tree.
- 4 Do one of the following:
  - Enter a new name over the default name ImageTileMenu1.
  - Right-click ImageTileMenu1. Click Rename. Then, enter a new image tile name.
  - Click ImageTileMenu1, wait, and click again over the image tile's name again to edit its name in-place.
- 5 In the Command List pane, drag a command to the new image tile menu in the Customizations In *<file name>* pane.
- 6 In the Properties pane, enter the properties for the new image tile slide as follows:
  - In the Name box, enter the text to display in the list box for the image tile.
  - In the Description box, enter a description for the image tile.
  - In the Slide library box, enter the name of the image tile slide library that contains the slide for the image tile. The image tile slide library must be in one of the folders that defines the Support File Search Path. If you do not have a slide library, but rather an image tile slide file, you enter its name in the image tile slide library box.
  - In the Slide label box, enter the name of the image tile slide file contained in the image tile slide library listed in the Slide library box.
- 7 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### MSLIDE

Creates a slide file of the current model viewport or the current layout.

#### VSLIDE

Displays an image slide file in the current viewport.

## Customize Workspaces

You can customize workspaces to create a drawing environment that displays only those commands on the Quick Access toolbar, toolbars, menus, ribbon tabs, and palettes that you select.

## Overview of Workspace Customization

Customization options for workspaces include creating a workspace using the Customize User Interface (CUI) Editor, changing the properties of a workspace, and displaying a toolbar in all workspaces.

### Create or Modify a Workspace Outside the Customize User Interface Editor

The easiest way to create or modify user interface elements in a workspace is by customizing them in the application window. From the application window, you can control the display and appearance of several of the most commonly used user interface elements.

Once you customize the workspace, you can save the changes to an existing or new workspace using the WSSAVE command. Once saved, you can access the workspace any time you need to draw within that workspace environment. For more information about customizing workspaces without the Customize User Interface Editor, see [Control User Interface Elements Outside the CUI Editor](#) on page 293.


### Create or Modify a Workspace Using the Customize User Interface Editor

In the Customize User Interface (CUI) Editor, you can create or modify workspaces with precise properties associated with the application and drawing




windows, and user interface elements (Quick Access toolbar, toolbars, menus, ribbon tabs, and palettes).

You customize a workspace by selecting a workspace from the Workspaces node in the Customizations In pane. The Workspace Contents and Properties panes are displayed. To modify a workspace, you click the Customize Workspace button in the Workspace Contents pane.

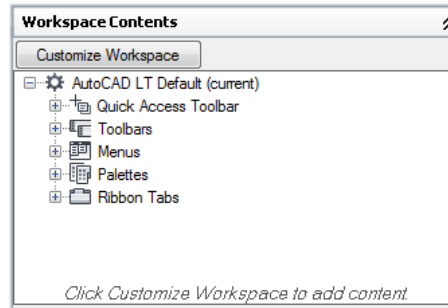

For more information about customizing workspaces with the Customize User Interface Editor, see [Control User Interface Elements in the CUI Editor](#) on page 296.

After you click Customize Workspace in the Workspace Contents pane, the Customizations In <file name> pane lists the user interface elements that can be added to the workspace that is currently being modified. Check boxes are displayed next to each user interface element in the loaded CUIx files. You use the check boxes to add or remove user interface elements from a workspace.

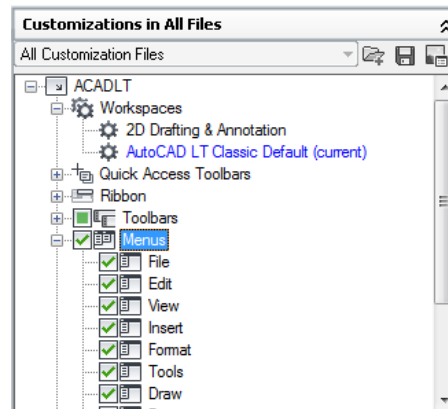

### Change the Properties of a Workspace

In the Customize User Interface (CUI) Editor, you can define workspace properties, such as the workspace name, description, whether the Model or layout tab is displayed or not, and so on. The following table shows the AutoCAD LT Classic workspace properties as they appear in the Properties pane.

Properties for the AutoCAD LT Classic Workspace		
Properties Pane Item	Description	Example
Name	String displayed in the drop-down box on the Workspaces toolbar, at the command prompt for the WORKSPACE command, under the Workspaces menu item in the Tools menu, and in the CUI Editor.	AutoCAD LT Classic
Description	Text that describes the workspace; does not appear in the user interface.	
Start On	Determines if the Model tab, last active layout tab, or the current active tab in the drawing is displayed when the workspace is restored or set current.	Model
Menu bars	Determines if the menu bar is displayed or not when the workspace is restored or set current.	On
Status bars	Determines if the status bars for the drawing window or application are displayed or not when the workspace is restored or set current. The available options are Application Only, All Off, All On, or Drawing Status Bar Only.	Application only
Model/Layout tabs	Determines if the Model/layout tabs are visible or not in the drawing window when the workspace is restored or set current.	On
Scroll bars	Determines if the scroll bars are visible or not when the workspace is restored or set current.	On

### Import a Workspace to a Main CUIx File

You can import a workspace to the main CUIx file using the Transfer tab of the Customize User Interface (CUI) Editor. Workspaces in partially loaded

CUIx files must be transferred to the main CUIx file if you want to set that workspace current.

### Set the Default Workspace


Workspaces in a CUIx file can be marked as default. This identifies which workspace in the CUIx file should be restored when the CUIx file is loaded into the program the first time, or after the CUIx file has been loaded with the CUILOAD command.


### Set a Workspace Current

Once a workspace is created or modified, it must be set current before the workspace can be used to control the current display of the user interface. You set workspaces current through the user interface or the Customize User Interface (CUI) Editor. From the user interface, you can set a workspace current with the Workspaces toolbar, Workspace Switching button on the status bar, Tools menu on the menu bar, and the WORKSPACE command.

You can also use the /w command line switch to set a workspace current when you double-click the desktop shortcut to start AutoCAD LT. For more information about command line switches, see Customize Startup in the *User's Guide*.


### To create a workspace using the CUI Editor

- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, right-click the Workspaces tree node, and select New Workspace.

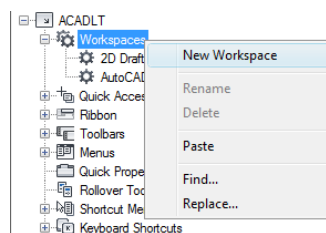

A new, empty workspace (named Workspace1) is placed at the bottom of the Workspaces tree node.

- 3 Do one of the following to rename the workspace:
  - Enter a new name over the default name Workspace1.
  - Right-click Workspace1. Click Rename. Then, enter a new workspace name.
  - Click Workspace1, wait, and click again over the workspace's name again to edit its name in-place.
- 4 In the Workspace Contents pane, click Customize Workspace.

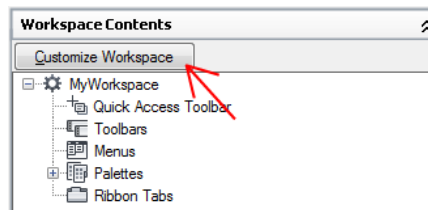


- 5 In the Customizations In <file name> pane, click the plus sign (+) next to the tree nodes to expand them.

---

**NOTE** The Quick Access toolbars, ribbon tabs, toolbars, menus, and partial CUIx file nodes now display check boxes next to them so you can easily add elements to the workspace.


---

- 6 Click the check box next to each user interface element that you want to add to the workspace.

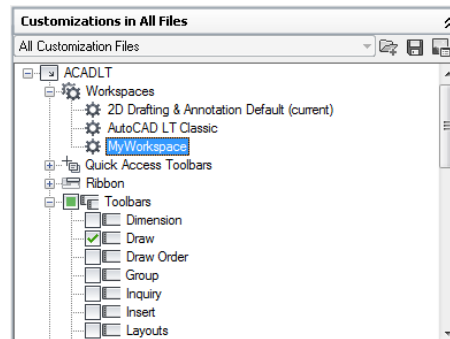

The selected user interface elements are added to the workspace.

- 7 In the Workspace Contents pane, click Done.

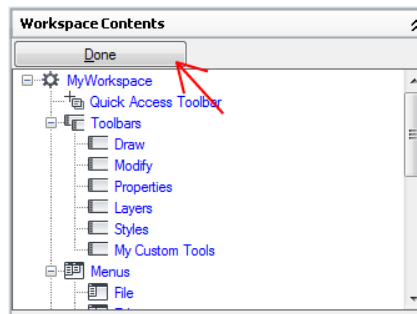


8 Click Apply.

### To save or create a workspace from the user interface

Do one of the following:


#### ■ To save a workspace from the Workspaces toolbar

- 1 Right-click over one of the visible toolbars that is currently displayed in the user interface and click Workspaces.




A check mark is displayed to the left of any toolbar that is currently displayed.

- 2 On the Workspaces toolbar, click the drop-down list and select Save Current As.

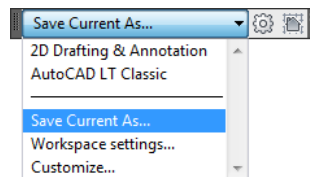


- 3 In the Save Workspace dialog box, Name box, enter a name to create a new workspace or select an existing workspace from the drop-down list to overwrite it.

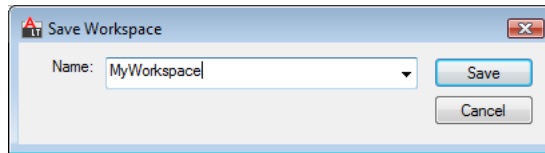


- 4 Click Save to create or modify the workspace.

#### ■ To save a workspace from the status bar

- 1 On the status bar, click Workspace Switching. Then click Save Current As.

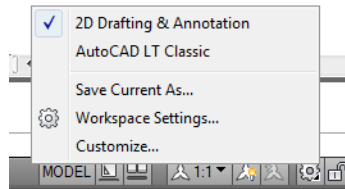

- 2 In the Save Workspace dialog box, Name box, enter a name to create a new workspace or select an existing workspace from the drop-down list to overwrite it.

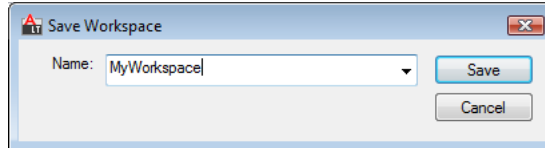

- 3 Click Save to create or modify the workspace.

---


**NOTE** You can also save a workspace from the Quick Access toolbar.

---


#### To change the properties of a workspace

- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the workspace whose properties you want to change.



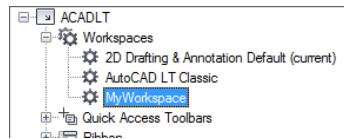

- 3 In the Properties pane, do any of the following:
  - In the Name box, enter a name for the workspace.
  - In the Description box, enter a description.
  - In the Start On box, select an option (Model, Layout, Do Not Change).
  - In the Menu Bar box, select an option (Off, On).
  - In the Status Bar box, select an option (Application Only, All Off, All On, Drawing Status Bar Only).
  - In the Model/Layout Tab box, select an option (On, Off, Do Not Change).
  - In the Scroll Bars box, select an option (On, Off, Do Not Change).

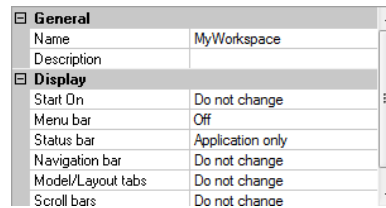


- 4 Click Apply.

### To duplicate a workspace



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Workspaces to expand it.
- 3 Right-click the workspace you want to duplicate. Click Duplicate.

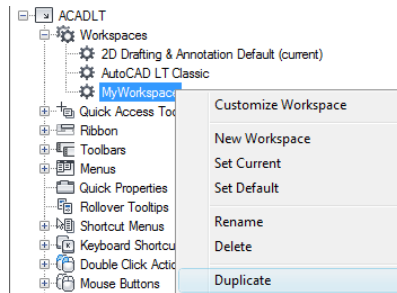


A duplicate of the workspace (named Copy of <workspace name>) is placed at the bottom of the Workspaces tree node).

- 4 Do one of the following to rename the duplicate workspace:
  - Enter a new name over the default name Copy Of <workspace name>.
  - Right-click Copy Of <workspace name>. Click Rename. Enter a new name for the workspace.
  - Click Copy Of <workspace name>, wait, and click again over the workspace's name again to edit its name in-place.
- 5 Modify the workspace as necessary.
- 6 Click Apply.

### To set a workspace current from the user interface


Do one of the following:

- **To set a workspace current from the Workspaces toolbar**
  - On the Workspaces toolbar, click the drop-down list and select the workspace you want to set current.

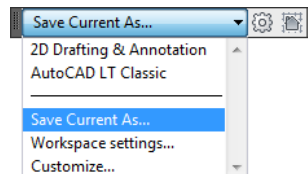


If the Workspaces toolbar is not displayed, right-click over one of the visible toolbars that is currently displayed in the user interface and click Workspaces.





### ■ To set a workspace current from the status bar

- On the status bar, click Workspace Switching. Then click the workspace you want to set current

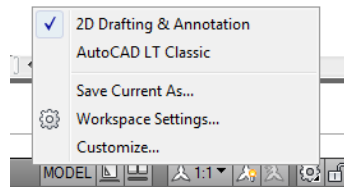


---

**NOTE** You can also set a workspace from the Quick Access toolbar.

---


### ■ To set a workspace current from the Tools menu on the menu bar

- On the menu bar, click Tools menu ► Workspaces ► select the workspace you want to set current.

### To set a workspace current from the CUI Editor



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Workspaces to expand it.
- 3 Right-click the workspace you want to set current. Click Set Current.

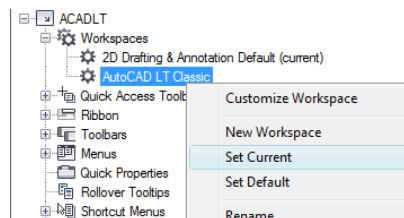


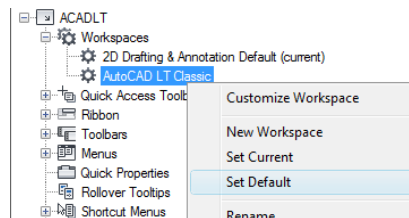
- 4 Click Apply.

### To restore the “classic” workspace

- From the status bar, click Workspace Switching. Click AutoCAD LT Classic.

### To set a workspace as default


- 1 Click Manage tab ► Customization panel ► User Interface. 
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to Workspaces to expand it.
- 3 Right-click the workspace you want to set as default. Click Set Default.



- 4 Click Apply.

### To restore a workspace with a command line switch


- 1 Right-click the program icon on the Windows desktop. Click Properties.

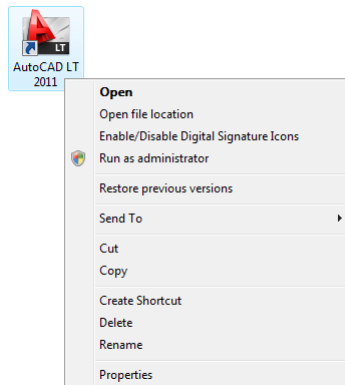

- 2 In the AutoCAD LT Properties dialog box, Shortcut tab, in the Target box, edit the parameters for the switch using the following syntax:

`"drive:\pathname\acadlt.exe" [/switch "name"]`

For Example, enter `"d:\AutoCAD LT 2011\acadlt.exe" /w "MyWorkspace"`

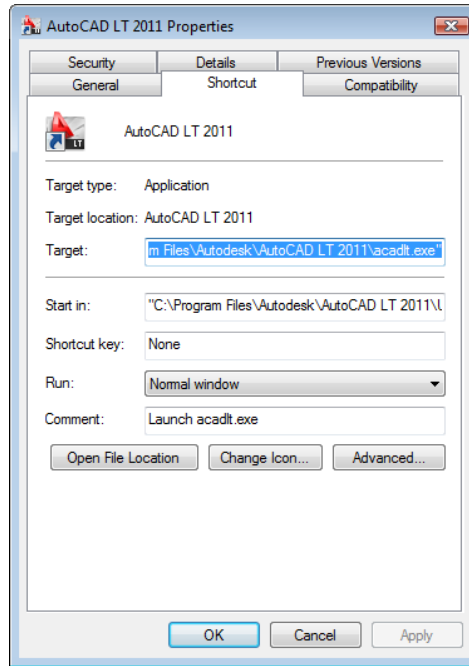


- 3 Click OK.


### To import a workspace to a main CUIx file



- 1 Click Manage tab ► Customization panel ► User Interface.  
The Transfer tab is displayed, with the main CUIx file displayed in the Customizations In <file name> pane (left side).
- 2 In the Customize User Interface Editor, Transfer tab, in the Customizations In <file name> pane (right side), click the Open Customization File button.

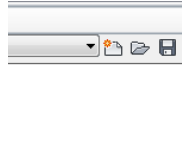

- 3 In the Open dialog box, locate and select the customization file that contains the workspace you want to add to the main CUIx file.
- 4 In the Customizations In <file name> pane (right side), drag the workspace from the CUIx file to the Workspaces node of the main CUIx file in the Customizations In <file name> pane (left side).

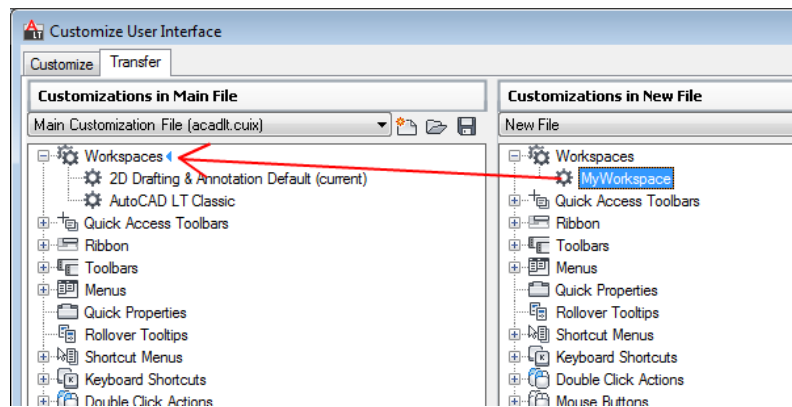

- 5 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### WORKSPACE

Creates, modifies, and saves workspaces and makes a workspace current.

#### WSSAVE

Saves a workspace.

### System Variables

#### WSCURRENT

Returns the current workspace name at the Command prompt and sets a workspace to current.

## Control User Interface Elements Outside the CUI Editor

Workspaces can be created and modified from the user interface with some limitations.

With the CUI Editor, you can customize the following user interface elements with a workspace:

- Quick Access toolbar
- Ribbon tabs
- Toolbars
- Palettes

### Control the Display of the Quick Access Toolbar

Customization of the Quick Access toolbar outside the Customize User Interface Editor is limited to controlling the placement of the Quick Access toolbar in relation to the ribbon, and adding or removing commands. To place and customize the Quick Access toolbar, you right-click the Quick Access toolbar or click the Customize button located on the far right end of the Quick Access toolbar.

The Customize button displays a menu where you add or remove the commands currently assigned to the Quick Access toolbar. You can also add buttons on the ribbon to the Quick Access toolbar. With the CUI Editor, you can create new Quick Access toolbars, which you can assign to a workspace. To create a new Quick Access toolbar, see [Quick Access Toolbars](#) on page 142.

### **Control the Display of the Ribbon Panels and Tabs on the Ribbon**

You can control the display of ribbon panels and tabs from the ribbon shortcut menu. You can display one of the ribbon tabs assigned to the current workspace or one of the ribbon panels assigned to the active ribbon tab. To control which ribbon tabs and panels are assigned to the current workspace, see [Control User Interface Elements in the CUI Editor](#) on page 296.

### **Control the Display of Toolbars**

You can display toolbars with the toolbar shortcut menu and the Tools menu on the menu bar. You select the toolbar you want to display. On the Tools menu, the Toolbars submenu contains all the toolbars in the loaded CUIx files.

With the CUI Editor, you can create new toolbars, which can be assigned to and displayed with a workspace. Along with creating new toolbars, you can also modify existing toolbars to display the commands you frequently use. For information about creating and modifying toolbars, see [Create and Edit Toolbars](#) on page 190.

### **Control the Display of Palettes**

Palettes are displayed using the ribbon, the Tools menu on the menu bar, or by entering a command. Once a palette is displayed, you can control many of the visual aspects of a palette from the application window. You can specify the position, size, transparency, and docking of a palette. For information about controlling the display of a palette, see Specify the Behavior of Dockable Windows in the *User's Guide*.

#### **See also:**

- [Control User Interface Elements in the CUI Editor](#) on page 296
- [To display the Quick Access toolbar above or below the ribbon from the user interface](#) on page 295 (Procedure)
- [To display toolbars from the user interface](#) on page 295 (Procedure)

- [To control the display of ribbon tabs and panels on the ribbon from the user interface](#) on page 295 (Procedure)
- [To display palettes from the user interface](#) on page 295 (Procedure)

#### **To display the Quick Access toolbar above or below the ribbon from the user interface**

- 1 Right-click on the Quick Access toolbar.
- 2 Do one of the following:
  - Click Show Quick Access Toolbar Below the Ribbon to display the Quick Access toolbar below the ribbon.
  - Click Show Quick Access Toolbar Above the Ribbon to display the Quick Access toolbar above the ribbon.

#### **To display toolbars from the user interface**

Do one of the following:

- On the menu bar, click Tools menu ► Toolbars, and click one of the listed toolbars.  
If the menu bar is not displayed, on the Quick Access toolbar, click the Customize button. Click Show Menu Bar.
- Right-click a visible toolbar, and click one of the listed toolbars.

#### **To control the display of ribbon tabs and panels on the ribbon from the user interface**

- 1 Right-click on the ribbon.
- 2 Do one of the following:
  - Click Tabs, and click the ribbon tab to display or hide.
  - Click Panels, and click the ribbon panel to display or hide.

#### **To display palettes from the user interface**

Do one of the following:

- On the ribbon, View tab ► Palettes panel, and click the buttons to display the desired palette.

- On the menu bar, click Tools menu ► Palettes, and click the desired palette.
- At the Command prompt, enter the command to display the desired palette and press Enter.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

### System Variables

#### MENUBAR

## Control User Interface Elements in the CUI Editor

The Customize User Interface (CUI) Editor provides a wide range of options to create and modify all the content that can be displayed with a workspace.

With the CUI Editor, you can customize the following user interface elements with a workspace:

- Application and drawing windows
- Quick Access toolbar
- Ribbon tabs
- Toolbars
- Menus
- Palettes

### Control the Display of User Interface Elements on the Application and Drawing Windows

Workspaces control the display of user interface elements such as toolbars and the menu bar. While a workspace primarily provides toolbars, menus, ribbon tabs, and palettes, you can also use a workspace to control user interface



elements for the application and drawing windows. A workspace can control the following:

- Which layout tab is set current when a drawing is opened
- Display of the menu bar
- Display of the application and drawing status bars
- If layout tabs are displayed along the bottom of the drawing window.
- Display of the legacy screen menu
- Display of scroll bars in the drawing window

### **Control the Display of the Quick Access Toolbar**

The Quick Access toolbar that is displayed on the application window is controlled by the current workspace. While a workspace does not directly control which commands are displayed on the Quick Access toolbar, it does control which Quick Access toolbar in the loaded CUIx files is displayed. For information about creating and editing Quick Access toolbars, see [Quick Access Toolbars](#) on page 142.

### **Control the Display of Ribbon Tabs and Panels on the Ribbon**

The display and order of ribbon tabs and panels on the ribbon are controlled through workspaces. You add and specify the order of ribbon tabs and their associated panels in the Workspace Contents pane. You add ribbon panels to a ribbon tab through the Customizations In *<file name>* pane.

After you assign ribbon tabs to a workspace, you can control the default display and behavior of both ribbon tabs and panels through the Properties pane. From the Properties pane, you can set the Tool Palette Group for a ribbon tab and orientation and resize order for a ribbon panel. For information about creating and editing ribbon content, see [Ribbon](#) on page 148 under [Customize User Interface Elements](#) on page 139.

### **Control the Display of Toolbars**

You can control which toolbars are displayed and how they are positioned in the application window (if they are floating or docked, and where they are in the application window). You add the toolbars through the Workspace Contents pane, and control the appearance of the toolbars in the Properties pane. For information about creating and editing toolbars, see [Toolbars](#) on page 190 under [Customize User Interface Elements](#) on page 139.

## Control the Display of Menus on the Menu Bar

Menus and the order in which they are displayed on the menu bar can only be controlled through the Workspace Contents pane. By default the menu bar is not displayed when the ribbon is. Set the system variable MENUBAR to 1 to display the menu bar above the ribbon. You can also set the Menu Bar property for a workspace to On to display the menu bar each time a workspace is set current. For information about creating and editing pull-down menus, see [Pull-down and Shortcut Menus](#) on page 212 under [Customize User Interface Elements](#) on page 139.

## Control the Display of Palettes

You set up a workspace to control the display, position, and appearance of palettes in the application window. They can be floating or docked. Unlike ribbon panels, ribbon tabs, and menus, palettes are available in any workspace. You can turn palettes on or off with a workspace. The display properties of palettes are modified through the Workspace Contents and Properties pane. For information about controlling palettes with workspaces, see [Control the Appearance of Palettes](#) on page 312.

### See also:


- [To display a Quick Access toolbar](#) on page 299 (Procedure)
- [To display the Quick Access toolbar above or below the ribbon from the CUI Editor](#) on page 300 (Procedure)
- [To display ribbon tabs from the CUI Editor](#) on page 301 (Procedure)
- [To reposition a ribbon tab on the ribbon](#) on page 302 (Procedure)
- [To reposition a ribbon panel on a ribbon tab](#) on page 303 (Procedure)
- [To control the display of ribbon tabs on the ribbon](#) on page 304 (Procedure)
- [To control the display of ribbon panels for a ribbon tab](#) on page 304 (Procedure)
- [To associate a tool palette group with a ribbon tab](#) on page 305 (Procedure)
- [To display toolbars using the CUI Editor](#) on page 306 (Procedure)
- [To change the properties of a toolbar](#) on page 307 (Procedure)
- [To display menus on the menu bar](#) on page 308 (Procedure)

- [To reposition menus on the menu bar](#) on page 310 (Procedure)
- [To display a palette using the CUI Editor](#) on page 311 (Procedure)


### To display a Quick Access toolbar




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

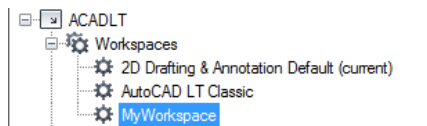


- 4 In the Workspace Contents pane, click Customize Workspace.

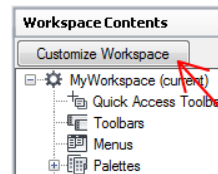

- 5 In the Customizations In <file name> pane, click the plus sign (+) next to the Quick Access Toolbars tree node or Partial Customization Files tree node to expand it.
- 6 Click the check box next to the Quick Access toolbar to add it to the workspace.

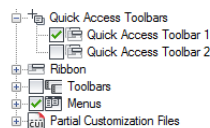

- 7 In the Workspace Contents pane, click Done.

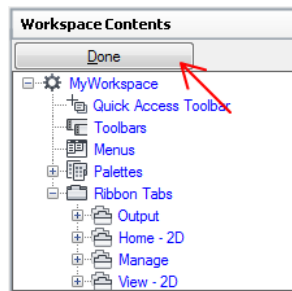


---

**NOTE** Make sure to set the workspace current to ensure the changes are displayed.


---

- 8 Click Apply.

### To display the Quick Access toolbar above or below the ribbon from the CUI Editor



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

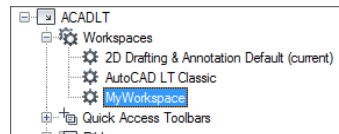


- 4 In the Workspace Contents pane, click the Quick Access Toolbar tree node.
- 5 In the Properties pane, click the Orientation box and select Above or Below from the drop-down list.  
Above displays the Quick Access Toolbar above the ribbon, while below sets the Quick Access Toolbar below the ribbon.
- 6 Click Apply.


## To display ribbon tabs from the CUI Editor




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

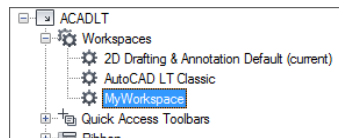

- 4 In the Workspace Contents pane, click Customize Workspace.

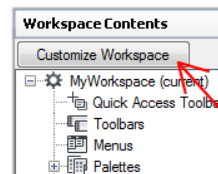


- 5 In the Customizations In <file name> pane, click the plus sign (+) next to the Ribbon Tabs tree node or Partial Customization Files tree node to expand it.
- 6 Click the check box next to each ribbon tab that you want to add to the workspace.

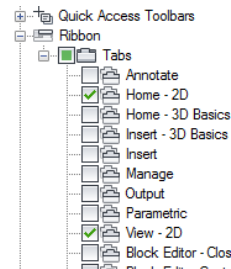

In the Workspace Contents pane, the selected elements are added to the workspace.

- 7 In the Workspace Contents pane, click Done.

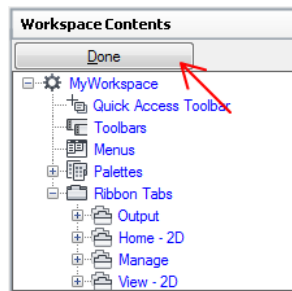


---

**NOTE** Make sure to set the workspace current to ensure the changes are displayed.


---

- 8 Click Apply.

### To reposition a ribbon tab on the ribbon



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that has the ribbon tab you want to reposition.
- 4 In the Workspace Contents pane, click the plus sign (+) next to the Ribbon Tabs tree node to expand it.
- 5 Drag the ribbon tab into the new location.

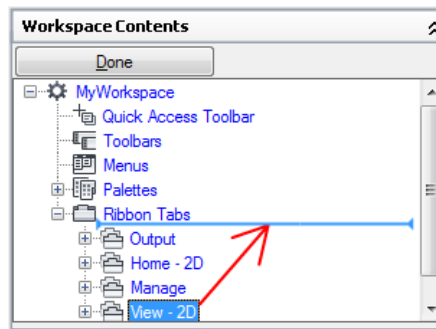

A splitter bar shows the new location for the ribbon tab.

- 6 Once the splitter bar is in the place where you want to insert the ribbon tab, release the pointing device button.

---

**NOTE** Make sure to set the workspace as current to ensure the changes are displayed.


---

- 7 Click Apply.

### To reposition a ribbon panel on a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.
- 4 In the Workspace Contents pane, click the plus sign (+) next to the Ribbon Tabs tree node to expand it.
- 5 Click the plus sign (+) next to the ribbon tab with the ribbon panel that you want to reposition to expand it.
- 6 Drag the ribbon panel into the new location.

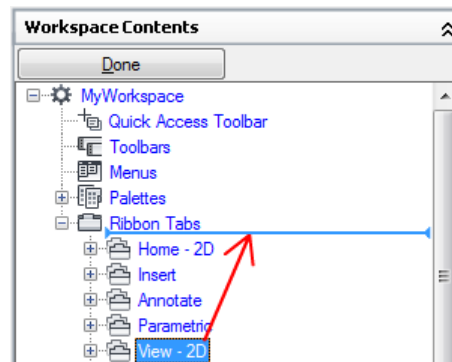

A splitter bar shows the new location for the ribbon panel.

- 7 Once the splitter bar is in the place where you want to insert the ribbon panel, release the pointing device button.

---

**NOTE** Make sure to set the workspace as current to ensure the changes are displayed.

---

- 8 Click Apply.

### To control the display of ribbon tabs on the ribbon



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that has the ribbon tab you want to change.
- 4 In the Workspace Contents pane, click the plus sign (+) next to the Ribbon Tabs tree node to expand it.
- 5 Select the ribbon tab that you want to change.
- 6 In the Properties pane, do any of the following:
  - In the Show box, select an option (Yes or No).
  - In the ToolPalette Group box, select one of the listed tool palette groups.

Appearance	
Show	Yes
Advanced	
ToolPalette Group	

- 7 Click Apply.

### To control the display of ribbon panels for a ribbon tab



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that has the ribbon tab for which you want to change the properties of the ribbon panels.



- 4 In the Workspace Contents pane, click the plus sign (+) next to the Ribbon Tabs tree node to expand it.
- 5 Click the plus sign (+) next to the ribbon tab for which you want to change the properties of the ribbon panels.
- 6 Select the ribbon panel that you want to change.
- 7 In the Properties pane, do any of the following:
  - In the Show box, select an option (Yes or No).
  - In the Orientation box, select an option (Docked or Floating).

Appearance	
Show	Yes
Orientation	Docked
Panel Resize Order	100


- 8 Click Apply.

#### To associate a tool palette group with a ribbon tab

- 1 At the Command prompt, enter **toolpalettes**.



- 2 Click Manage tab ► Customization panel ► User Interface.
- 3 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 4 Select the workspace that has the ribbon tab for which you want to assign a tool palette group.
- 5 In the Workspace Contents pane, click the plus sign (+) next to the Ribbon Tabs node to expand it.
- 6 Select the ribbon tab that you want to assign a tool palette group.
- 7 In the Properties pane, in the ToolPalette Group box, click the down arrow and select the tool palette group you want to assign to the ribbon tab.

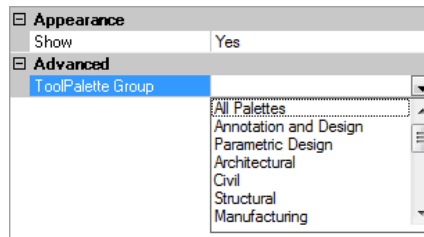


---

**NOTE** The Tool Palettes window must be displayed before you can assign a tool palette group to a ribbon tab.


---

- 8 Click Apply.


### To display toolbars using the CUI Editor




- 1 Click Manage tab ➤ Customization panel ➤ User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces tree node to expand it.
- 3 Select the workspace that you want to modify.

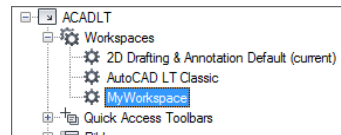

- 4 In the Workspace Contents pane, click Customize Workspace.

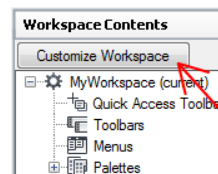


- 5 In the Customizations In <file name> pane, click the plus sign (+) next to the Toolbars tree node, or Partial Customization Files tree node to expand it.
- 6 Click the check box next to each toolbar that you want to add to the workspace.

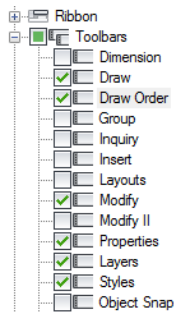

In the Workspace Contents pane, the selected elements are added to the workspace.

- 7 In the Workspace Contents pane, click Done.

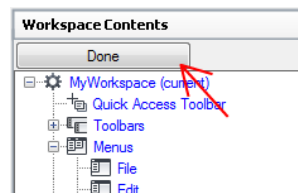


---

**NOTE** Make sure to set the workspace current to ensure the changes are displayed.


---

- 8 Click Apply.

### To change the properties of a toolbar




- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the workspace that contains the toolbar you want to modify.

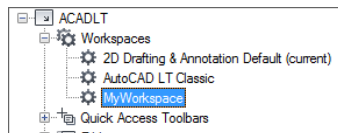

- 3 In the Workspace Contents pane, click the plus sign (+) next to the Toolbars tree node to expand it.

- 4 Select the toolbar that you want to modify.

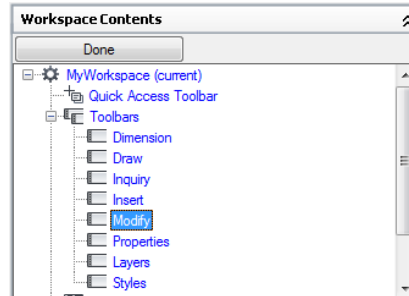

- 5 In the Properties pane, do any of the following:
  - In the Orientation box, select an option (Floating, Top, Bottom, Left, or Right).
  - In the Default X Location box, enter a number. A value of 0 starts the location of the toolbar at the left edge of the screen, as the number increases the further from the left the toolbar is placed. (Available only if Orientation is set to Floating.)
  - In the Default Y Location box, enter a number. A value of 0 starts the location of the toolbar at the top edge of the screen, as the number increases the further from the top the toolbar is placed. (Available only if Orientation is set to Floating.)
  - In the Rows box, enter a number. Enter a number to have the buttons on the toolbar wrap around to create the number of rows if possible. 0 is the default value. (Available only if Orientation is set to Floating.)

Appearance	
Orientation	Floating
Default X Location	0
Default Y Location	0
Rows	1


- 6 Click Apply.

### To display menus on the menu bar


- 1 Click Manage tab ► Customization panel ► User Interface.




- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

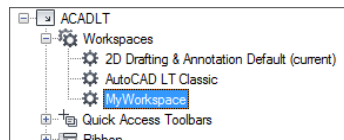

- 4 In the Workspace Contents pane, click Customize Workspace.

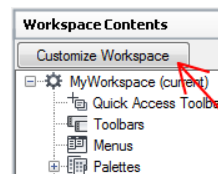


- 5 In the Customizations In <file name> pane, click the plus sign (+) next to the Menus tree node, or Partial Customization Files tree node to expand it.
- 6 Click the check box next to each menu that you want to add to the workspace.

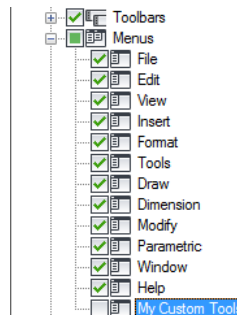

In the Workspace Contents pane, the selected elements are added to the workspace.

- 7 In the Workspace Contents pane, click Done.

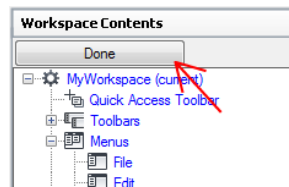


---

**NOTE** Make sure to set the workspace current to ensure the changes are displayed.


---

- 8 Click Apply.


### To reposition menus on the menu bar



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

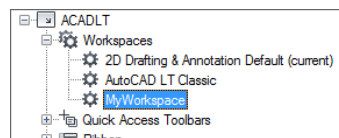

- 4 In the Workspace Contents pane, click the plus sign (+) next to the Menus node to expand it.
- 5 Drag the pull-down menu into the new location.

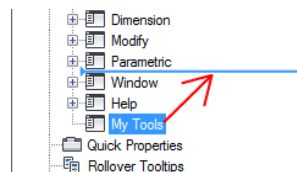

A splitter bar shows the new location for the pull-down menu.

- 6 Once the splitter bar is in the place where you want to insert the menu, release the pointing device button.

---

**NOTE** Make sure to set the workspace current to ensure the changes are displayed.

---


- 7 Click Apply.




### To display a palette using the CUI Editor



- 1 Click Manage tab ► Customization panel ► User Interface.
- 2 In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the plus sign (+) next to the Workspaces node to expand it.
- 3 Select the workspace that you want to modify.

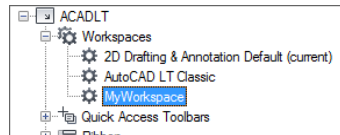

- 4 In the Workspace Contents pane, click the plus sign (+) next to the Palettes node to expand it.

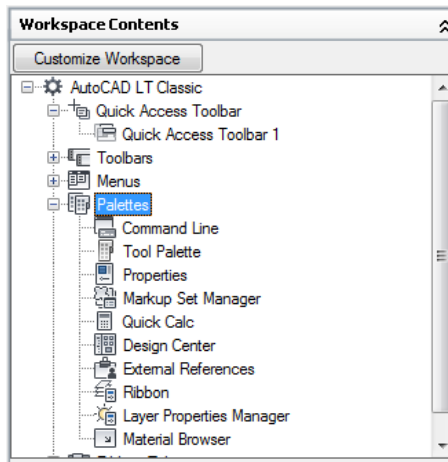

- 5 Select the palette you want to display.
- 6 In the Properties pane, under Appearance, Show box, click the drop-down list and select Show.
- 7 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Control the Appearance of Palettes

You can use workspaces to control the display and appearance of palettes.

Many windows, known as palettes, can be set to be docked, anchored, or floated in the application window. You can define the size, location, or appearance of these windows by changing their properties in the Workspace Contents pane of the Customize User Interface (CUI) Editor. These dockable windows include:

- Command Line
- DesignCenter
- External References
- Layer Properties Manager
- Markup Set Manager
- Properties
- QuickCalc
- Ribbon
- Tool Palette



The following table shows the properties as they appear in the Properties pane for a palette in the CUI Editor and as an example, the default values of the Tool Palettes window in the AutoCAD LT Classic workspace.

<b>Properties for the Tool Palettes window under the AutoCAD LT Classic workspace</b>		
<b>Properties pane item</b>	<b>Description</b>	<b>Example</b>
Show	Visibility state of the palette. The available options are No, Yes, or Do Not Change. Do Not Change keeps the last used state of the palette when the workspace is restored or set current.	Yes
Orientation	The on screen docking or floating state of the palette. The available options are Floating, Top, Bottom, Left, Right, or Do Not Change. Do Not Change keeps the last used state of the palette when the workspace is restored or set current. Some palettes like the Command Line also support a dock location of Top and Bottom.	Floating
Allow Docking	Controls if the user can dock the palette by dragging it to one of the designated docking areas. The available options are No, Yes, or Do Not Change. Do Not Change maintains the last used setting for the palette when the workspace is restored or set current.	Yes
Auto Hide	Controls if the palette rolls up when not in use. The available options are On, Off, or Do Not Change. Do Not Change maintains the last used setting for the palette when the workspace is restored or set current.	Off
Use Transparency	Controls if the palette appears transparent. The available options are No, Yes, or Do Not Change. Do Not Change maintains the last used setting for the palette when the workspace is restored or set current.	No
Transparency Amount	Controls how opaque the palette is displayed. The valid range is 0 through 100.	0
Default Group	Controls which of the user defined palette groups should be displayed.	All Palettes

Properties for the Tool Palettes window under the AutoCAD LT Classic workspace		
Properties pane item	Description	Example
Height	Determines how tall the palette is when it is floating.	598
Width	Determines how wide the palette is when it is floating.	172

See also:


- [To change the properties of a palette](#) on page 314 (Procedure)

To change the properties of a palette

- 1

Click Manage tab ➤ Customization panel ➤ User Interface.
- 2


In the Customize User Interface Editor, Customize tab, in the Customizations In <file name> pane, click the workspace that contains the palette you want to modify.

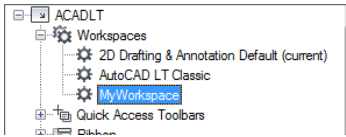

- 3

In the Workspace Contents pane, click the plus sign (+) next to Palettes to expand the list.
- 4

Click the palette that you want to modify.

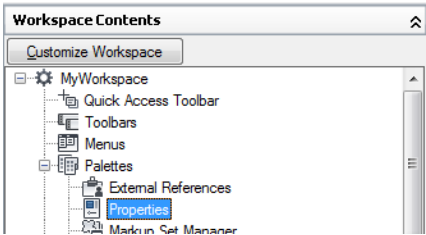

- 5

In the Properties pane, do any or all of the following:
- In the Show box, select an option (No, Yes, or Do Not Change).

- In the Orientation box, select an option (Floating, Top, Bottom, Left, or Right).
- In the Allow Docking box, select an option (No, Yes, or Do Not Change).

---

**NOTE** To specify that a window should be anchored, set Orientation to Left, Right, Top, or Bottom, and set Auto Hide to On.

---

- In the Auto Hide box, select an option (On, Off, or Do Not Change).
- In the Use Transparency box, select an option (No, Yes, or Do Not Change).
- In the Transparency Amount box, enter a number (if applicable).
- In the Default Group box, select a Tool Palette group (Tool Palettes window only).
- In the Height box, enter a number. A value of 0 is equivalent to Do Not Change.
- In the Width box, enter a number. A value of 0 is equivalent to Do Not Change.

☐ <b>Appearance</b>	
Show	No
Orientation	Floating
Allow Docking	Yes
Auto Hide	Off
Use Transparency	No
Transparency Amount	0
☐ <b>Size</b>	
Height	590
Width	280

6 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

## Transfer and Migrate Customization

You can transfer and migrate data from a customization or menu file from an earlier release using the Customize User Interface (CUI) Editor and the Migrate Custom Settings dialog box.

### Transfer Customization

The Customize User Interface (CUI) Editor can be used to transfer data in a CUI, MNU, or MNS file to a CUIx file without modifying the original customization or menu file. The new customization file that is created has the same name as the original file, but with a *.cuix* extension.

You can also transfer customization information between files. For example, you can transfer toolbars from a partial CUIx file to the main CUIx file so that the program can display the toolbar information. In addition, you can move customizations from the main CUIx file to partial CUIx files, or from a partial CUIx file to another partial CUIx file.

---

**NOTE** All elements can be transferred between two CUIx files with the exception of the property settings defined under the Quick Properties and Rollover Tooltips nodes.

---


If you transfer user interface elements that reference other user interface elements, such as a flyout, all the relevant information for that interface element is also transferred. For example, if you transfer the Draw toolbar, which references the Insert toolbar, the Insert toolbar is also transferred.

---

**NOTE** Button images may not appear in the program when you transfer a toolbar, pull-down menu, or ribbon panel from a CUIx file. If the images are loaded from an image file, those images must reside in a folder that is defined in the Options dialog box, Files tab under Support File Search Path or Custom Icon Location. If the images come from a third-party resource DLL, contact the party who created the resource DLL.

---

The following is an example of the Customize User Interface (CUI) Editor, Transfer tab. You use this tab to transfer user interface customization.

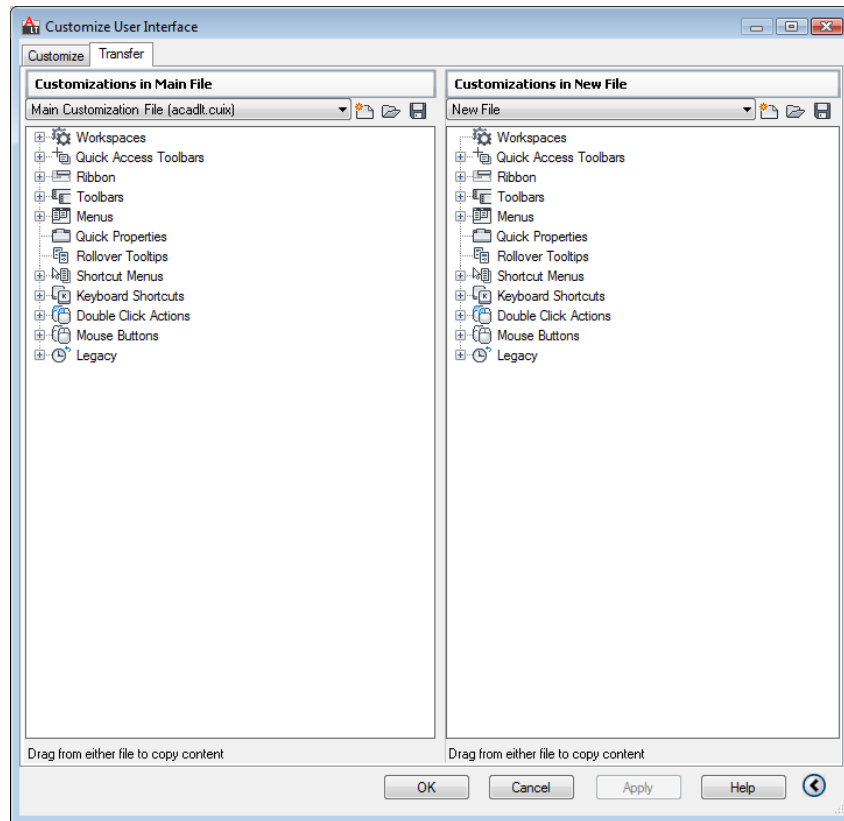

## Migrate Customization

As you make changes to the customization in a CUIx file, the changes are automatically tracked. The tracked changes are used when migrating customization from release to release with the Migrate Custom Settings dialog box. In the Migrate Custom Settings dialog box, you can migrate any changes made to the standard CUIx files that come with the program with the new shipping versions of the files with the same name. You can avoid manually migrating customization, which might result in the loss of customization.

---

**NOTE** The Migrate Custom Settings dialog box can be used to migrate user interface customization from previous releases. To access the Migrate Custom Settings dialog box, click Start menu (Windows) ➤ All Programs (or Programs) ➤ Autodesk ➤ *AutoCAD LT 2011* ➤ Migrate Custom Settings.


---

### To transfer customizations


- 1 Click Manage tab ► Customization panel ► Import Customizations.



- 2 In the Customize User Interface Editor, Transfer tab, in the left pane, click the Open Customization File button.

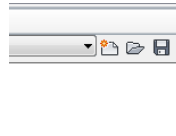

- 3 In the Open dialog box, locate the customization file (MNU, MNS, CUI, or CUIx) from which you want to import customizations, and select it. Click Open.
- 4 In the right pane, click the Open Customization File button.
- 5 In the Open dialog box, locate the customization file (MNU, MNS, CUI, or CUIx) to which you want to export customizations, and select it. Click Open.
- 6 In the left pane, click the plus sign (+) next to an interface element node to expand it. Expand the corresponding node in the right pane.
- 7 Drag interface elements from the right pane to the appropriate location in the left pane.

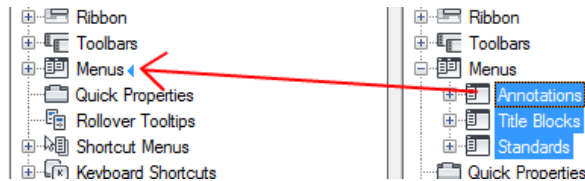

---

**NOTE** Interface elements can be dragged in either direction, from the left to the right pane or the right to the left pane.

---

- 8 Click Apply.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

## Customize User Interface (CUI) Editor FAQs

FAQs will help you to find answers to some of the most commonly asked questions about using the Customize User Interface (CUI) Editor.

### Migrating/Upgrading

#### How do I get my menu customization from a previous release to work in the new release?

In past releases this had to be done through a text editor, such as Notepad. With the CUI Editor, you use the Transfer tab to browse and select your MNS/MNU, CUI, or CUIx file that contains your menu customization. Once the previous customization file has been selected, you drag the user interface elements between two CUIx files. See [To transfer customizations](#) on page 318 for more information.

### Commands

#### How do I create a new command and add it to a user interface element, such as a pull-down menu?

Commands are created and managed through the Command List pane located in the lower-left corner of the Customize tab of the CUI Editor. See [To create a command](#) on page 95 for more information.

Once the command has been created, it can be added to or used to create a number of different user interface elements. To add the command to a menu

for example, expand the menu under the Menus node in the Customizations In <file name> pane that you want to add the command to and then drag the command under the menu. See [To create a pull-down menu](#) on page 214 for more information.

## Menus

### Why doesn't my menu display on the menu bar?

Workspaces are used to control the display of menus on the menu bar. See [To display menus on the menu bar](#) on page 308 for more information.

### How do I change the order of a pull-down menu?

Workspaces are used to control the positioning of menus on the menu bar. See [To reposition menus on the menu bar](#) on page 310 for more information.

## Toolbars

### Why do my toolbars not stay in the same place after I close and restart AutoCAD LT 2011?

This happens because of the way menus are loaded into AutoCAD LT at startup. This problem only happens when partial and enterprise CUIx files are used. To resolve this problem, you can use the new /w command line switch. This causes AutoCAD LT 2011 to re-initialize the workspace upon startup and place the toolbars in their correct locations. See [To restore a workspace with a command line switch](#) on page 290 for more information.

### Why do my icons on a toolbar display as a cloud with a question mark after I migrate them using the Transfer tab in the CUI Editor?

This happens because the images for the custom icons are not located in the AutoCAD LT support file paths. Locate the images using Windows Explorer and add the images location to the Support File Search Path node under the Files tab of the Options dialog box, or copy them into the folder:

(Windows XP) <drive>:\Documents and Settings\<user profile name>\Application Data\Autodesk\<product name>\<release number>\<language>\Support\Icons

(Windows Vista) <drive>:\Users\<user profile name>\AppData\Autodesk\<product name>\<release number>\<language>\Support\Icons



### **Why does my toolbar flyout not work?**

A flyout might not work for a few different reasons. There might not be any commands currently assigned to the toolbar that it is referencing or a control is part of the toolbar that is being referenced for the toolbar flyout. Launch the CUI Editor and verify that there are commands on the toolbar that is being referenced and if there are, make sure there are no controls on the toolbar such as the Layer list control.

### **Why do I get an AutoCAD LT message box when I try to use a toolbar flyout?**

The AutoCAD LT message box is displayed because the toolbar that is being referenced for the toolbar flyout is not found. AutoCAD LT can't find the toolbar because it no longer exists, is not currently loaded because the partial CUIx file it is in is not loaded, or the alias for the toolbar has been changed.

Launch the CUI Editor and select the flyout on the toolbar that currently is not working properly. In the Properties pane look at the Source Toolbar property. Use the Find option to look for a toolbar element with an alias that matches the text string in the Source Toolbar property of the flyout that does not work. If one is not located, remove the flyout from the toolbar and drag the toolbar that you want to reference as a flyout on the toolbar. Close the CUI Editor. The flyout should now work correctly once again.

## **Double Click Actions**

### **When I double-click an object nothing happens. Why is this happening?**

There are a few different reasons why when double-clicking on an object in the drawing nothing happens. The first and most common problem is with the system variable PICKFIRST is set to 0. PICKFIRST must be set to a value of 1 in order for double-click editing to work. The next possible solution is that double-click editing has been disabled. Double-click editing is controlled by the system variable DBLCLKEDIT. If it is set to 0 it is currently turned off. DBLCLKEDIT should be set to 1.

## **Workspaces**

### **Why do my changes not appear after I click Apply?**

This happens because the workspace that you made changes to is not the current workspace. To resolve this problem, you need to set the workspace current and then when changes are applied they will appear. See [To set a workspace current from the CUI Editor](#) on page 289 for more information.

## Enterprise CUIx Files

### How do I edit an enterprise CUIx file if it is read-only in the CUI Editor?

An enterprise CUIx file can only be edited when it is loaded as the main CUIx file or as a partial CUIx file to the main CUIx file. It is recommended that you load it as the main CUIx file when you need to make edits. If you are creating a workspace that needs to include user interface elements from the CUIx file that is normally designated as the main CUIx file, load the main CUIx file as the enterprise CUIx file. Make edits to the enterprise CUIx file. See [To modify an enterprise CUIx file](#) on page 84 for more information.

## Quick Reference

### Commands

#### CUI

Manages the customized user interface elements in the product.

#### CUIEXPORT

Exports customized settings from the main CUIx file to an enterprise or partial CUIx file.

#### CUIIMPORT

Imports customized settings from an enterprise or partial CUIx file to the main CUIx file.

#### CUILOAD

Loads a CUIx file.

#### CUIUNLOAD

Unloads a CUIx file.

#### OPTIONS

Customizes the program settings.

#### QUICKCUI

Displays the Customize User Interface Editor in a collapsed state.

#### WORKSPACE

Creates, modifies, and saves workspaces and makes a workspace current.

## **System Variables**

### **WSCURRENT**

Returns the current workspace name at the Command prompt and sets a workspace to current.



# DIESEL

# 5

You can use DIESEL (Direct Interpretively Evaluated String Expression Language) to alter the AutoCAD LT® status line through the MODEMACRO system variable. You can also use DIESEL in menu items as a macro language instead of AutoLISP®. DIESEL expressions accept strings and generate string results.

## Customize the Status Line

You can use the MODEMACRO system variable to display information on the status line.

## Overview of the MODEMACRO System Variable

The status line can provide the user with important information without interrupting the work flow. The MODEMACRO system variable controls the user-defined area on the status line. The calculated value of the MODEMACRO system variable is displayed in a left-aligned panel in the status bar at the bottom of the AutoCAD LT® window. This variable is set to the null string when you start AutoCAD LT. Its value is not saved in the drawing, the configuration file, or anywhere else.

The number of characters displayed on the status line is limited only by the size of the AutoCAD LT window (and your monitor). The default panels move to the right as the content of the MODEMACRO panel grows. It is possible to push the default panels completely off the screen (if you want to).

You can use the MODEMACRO system variable to display, in the status line, most data known to AutoCAD LT. With its calculation, decision, and editing facilities you can compose the status line to your precise specifications.

MODEMACRO is a user-string variable. It can be set to any string value. The maximum string value is 4095 characters. You can set MODEMACRO with

SETVAR or by entering **modemacro** at the command prompt. If you modify the MODEMACRO setting, you can experiment with various status line formats; however, the maximum number of characters you can enter in this manner is 255.

If you set MODEMACRO to the null string by entering a period (.), AutoCAD LT displays the standard status line.

## Quick Reference

### Commands

SETVAR

Lists or changes the values of system variables.

### System Variables

MODEMACRO

Displays a text string on the status line, such as the name of the current drawing, time/date stamp, or special modes.

## Set MODEMACRO Values

You can use text strings and DIESEL to display messages in the user-defined section of the status line.

The value of MODEMACRO determines what is displayed in the mode status line. The simplest (and least useful) MODEMACRO consists of constant text. For example, to display a company name in the status line, you enter the following:

Command: **modemacro**

New value for MODEMACRO, or . for none <"">: **Greg's Bank and Grill**

This MODEMACRO value always displays the same text; the status line does not reflect changes to the AutoCAD LT internal state. It doesn't change until you change MODEMACRO.

To make the status line reflect the AutoCAD LT current state, enter macro expressions using the DIESEL language in the following format:

```
$(somefun, arg1, arg2, ...)
```

In the macro expression, *somefun* is the name of the DIESEL function, and *arg1*, *arg2*, and so on, are arguments to the function, interpreted according

to the function's definition. DIESEL macro expressions have only one data type: strings. Macros that operate on numbers express the numbers as strings and convert back and forth as required.

For descriptions of the DIESEL functions, see [Catalog of DIESEL Functions](#) on page 331.

Now define a more interesting status line (for example, one that shows the current text style name):

Command: **modemacro**

New value for MODEMACRO, or . for none <"">: **Style: \$(getvar, textstyle)**

- **Style:** is a text string to be displayed on the status line.
- **\$(getvar,textstyle)** is a DIESEL function (*getvar*) and argument that retrieves the current value of the TEXTSTYLE system variable.

---

**NOTE** The examples in this topic may show the MODEMACRO string as more than one line of text. You enter it as one long string at the prompt.

---

You can retrieve any system variable by entering **\$(getvar, varname)**. The current setting of the system variable replaces the macro expression on the status line. Then, when you switch text styles, for example, MODEMACRO is reevaluated. If it changes, the new text style name is displayed on the status line.

Expressions can be nested, and they can be as complex as you want. The example that follows displays the current snap value and angle (in degrees) in the status line. It uses nested expressions to convert the snap angle from radians to degrees and truncates the value to an integer.

Command: **modemacro**

New value for MODEMACRO, or . for none <"">: **Snap: \$(getvar, snapunit) \$(fix,\$(\*,\$(getvar,snapang),\$(/,180,3.14159)))**

You can also display the values in the current linear and angular units modes.

Command: **modemacro**

New value for MODEMACRO, or . for none <"">: **Snap: \$(rtos,\$(index,0,\$(getvar,snapunit))),\$(rtos,\$(index,1,\$(getvar,snapunit))) \$(angtos,\$(getvar,snapang))**

DIESEL copies its input directly to the output until it comes to the dollar sign character (\$) or a quoted string. You can use quoted strings to suppress evaluation of character sequences that would otherwise be interpreted as DIESEL functions. You can include quotation marks in quoted strings by using

two adjacent quotation marks. In the following example, the current layer is set to LAYOUT, and MODEMACRO is set to the string.

Command: **modemacro**

New value for MODEMACRO, or . for none <"">: **\$(getvar,clayer)=  
""\$(getvar,clayer)""**

The status line displays the following:

**\$(getvar,clayer)="LAYOUT"**

## Quick Reference

### Commands

SETVAR

Lists or changes the values of system variables.

### System Variables

MODEMACRO

Displays a text string on the status line, such as the name of the current drawing, time/date stamp, or special modes.

## DIESEL Expressions in Macros

You can use DIESEL string expressions in customization (CUI) files as an additional method of creating macros.

These expressions can return string values (text strings) in response to standard AutoCAD LT commands. They can also return string values to the menu itself, thereby altering the appearance or content of a menu label.

A DIESEL expression that you use in a menu item must follow the `$section=submenu` format where the section name is `M` and the submenu is the DIESEL expression you want.

Consider the following example:

`^C^C^P$M=$(if,$(=,$(getvar,cvport),1),mspace,pspace)`

This string provides a way to toggle between paper space and model space if TILEMODE is set to 0. This expression is evaluated transparently. If the special character `^P` (which toggles MENU ECHO on and off) is omitted, the expression displays only the issued command.



This menu item uses the DIESEL expression:

```
^C^C^P$M=$(if,$(=,$(getvar,cvport),1),mspace,pspace)
```

The next example is based on these assumptions:

- The CUI excerpt is included in the current customization file.
- The symbols to insert are one unit high by one unit wide.
- The DIMSCALE variable is set to the drawing's scale factor (that is, a drawing to be plotted at a scale of 1" = 10' would have a scale factor of 120, or a 1/4" = 1' scale drawing would have a scale factor of 48).

The DIESEL expressions in the following example multiply the current value of DIMSCALE by the specified value, and return an appropriate scale factor.

```
$M=$(*,$(getvar,dimscale),0.375)
$M=$(*,$(getvar,dimscale),0.5)
$M=$(*,$(getvar,dimscale),0.625)
```

DIESEL expressions can also return string values to pull-down menu item labels, so that you can make menus unavailable or otherwise alter the way they are displayed. To use a DIESEL expression in a pull-down menu label, make sure that the first character is the \$ character.

In the next example, the current layer is set to BASE and the following DIESEL expression is used as the label.

```
$(eval,"Current layer: " $(getvar,clayer))
```

The result is that the appropriate pull-down menu is displayed and updated whenever the current layer changes.

Current Layer: BASE

---

**NOTE** The width of pull-down and shortcut menus is determined when the customization file is being loaded. Menu labels generated or changed by DIESEL expressions after a menu is loaded are truncated to fit within the existing menu width.

---

If you anticipate that a DIESEL-generated menu label will be too wide, you can use the following example to ensure that the menu width will accommodate your labels. This example displays the first 10 characters of the current value of the USERNAME system variable.

```
$(eval,"Current value: " $(getvar,username))+
$(if,$(eq,$(getvar,username),""), 10 spaces )^C^Cusername
```

You cannot use trailing spaces in a menu label to increase the menu width, because trailing spaces are ignored while the menu is being loaded. Any spaces you use to increase the width of a menu label must be within a DIESEL expression.

The next example uses the same DIESEL expression as the label and a portion of the menu item. It provides a practical way to enter the current day and date into a drawing.

```
$(edtime,$(getvar,date),DDD", "D MON YYYY)^C^Ctext +  
\\\ $M=$(edtime,$(getvar,date),DDD", "D MON YYYY);
```

Also, you can use a DIESEL macro to mark pull-down menu labels or make them unavailable. The following pull-down menu label displays an unavailable ERASE while a command is active. The text is displayed normally when a command is not active.

```
$(if,$(getvar,cmdactive),~)ERASE
```

You can use a similar approach to place a mark beside a pull-down menu item or to interactively change the character used for the mark.

You can use the CLIPBOARD system variable to enable or disable Clipboard commands on your menu. For example, the following DIESEL expression disables the Paste Special menu item when the Clipboard is empty:

```
$(If,$(getvar, clipboard),~,~)/Paste &Special...  
^C^C_pastespec
```

## Quick Reference

### System Variables

#### CLIPBOARD

Indicates the status of the Clipboard.

#### MENUECHO

Sets menu echo and prompt control bits.

#### USERNAME

Specifies the user name.

# Catalog of DIESEL Functions

Status retrieval, computation, and display are performed by DIESEL functions. All functions have a limit of 10 parameters, including the function name itself. If this limit is exceeded, you get a DIESEL error message.

## + (addition)

Returns the sum of the numbers *val1*, *val2*, ..., *val9*.

```
$(+, val1 [, val2, ..., val9])
```

If the current thickness is set to 5, the following DIESEL string returns 15.

```
$(+, $(getvar,thickness),10)
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## - (subtraction)

Returns the result of subtracting the numbers *val2* through *val9* from *val1*.

```
$(-, val1 [, val2 , ..., val9])
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## \* (multiplication)

Returns the result of multiplying the numbers *val1*, *val2*, ..., *val9*.

```
$(*, val1 [, val2, ..., val9])
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## / (division)

Returns the result of dividing the number *val1* by *val2*, ..., *val9*.

```
$ (/, val1 [, val2, ..., val9])
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## = (equal to)

If the numbers *val1* and *val2* are equal, the string returns 1; otherwise, it returns 0.

```
$ (=, val1, val2)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## < (less than)

If the number *val1* is less than *val2*, the string returns 1; otherwise, it returns 0.

```
$(<, val1, val2)
```

The following expression gets the current value of HPANG; if the value is less than the value stored in the system variable USERR1, it returns 1. If the value 10.0 is stored in USERR1 and the current setting of HPANG is 15.5, the following string returns 0.

```
$(<, $(getvar, hpang), $(getvar, userr1))
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## > (greater than)

If the number *val1* is greater than *val2*, the string returns 1; otherwise, it returns 0.

```
$(>, val1, val2)
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## != (not equal to)

If the numbers *val1* and *val2* are not equal, the string returns 1; otherwise, it returns 0.

```
$(!=, val1, val2)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## <= (less than or equal to)

If the number *val1* is less than or equal to *val2*, the string returns 1; otherwise, it returns 0.

```
$(<=, val1, val2)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## >= (greater than or equal to)

If the number *val1* is greater than or equal to *val2*, the string returns 1; otherwise, it returns 0.

```
$(>=, val1, val2)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

and

Returns the bitwise logical AND of the integers *val1* through *val9*.

```
$ (and, val1 [, val2,..., val9])
```

Quick Reference

System Variables

MENUECHO

Sets menu echo and prompt control bits.

angtos

Returns the angular value in the format and precision specified.

```
$ (angtos, value [, mode, precision])
```

Edits the given *value* as an angle in the format specified by the *mode* and *precision* as defined for the analogous AutoLISPfunction. (The values for *mode* are shown in the following table.) If *mode* and *precision* are omitted, it uses the current values chosen by the UNITS command.

Angular units values	
Mode value	String format
0	Degrees
1	De- grees/minutes/seconds
2	Grads
3	Radians
4	Surveyor's units

## Quick Reference

### System Variables

#### MENUECHO

Sets menu echo and prompt control bits.

## edtime

Returns a formatted date and time based on a given picture.

*\$ (edtime, time, picture)*

Edits the AutoCAD LT Julian date given by *time* (obtained, for example, from *\$ (getvar, date)* according to the given *picture*). The *picture* consists of format phrases replaced by specific representations of the date and time. Characters not interpretable as format phrases are copied literally into the result of *\$ (edtime)*. Format phrases are defined as shown in the following table. Assume that the date and time are Saturday, 5 September 1998 4:53:17.506.

edtime format phrases			
Format	Output	Format	Output
D	5	H	4
DD	05	HH	04
DDD	Sat	MM	53
DDDD	Saturday	SS	17
M	9	MSEC	506
MO	09	AM/PM	AM
MON	Sep	am/pm	am
MONTH	September	A/P	A
YY	98	a/p	a
YYYY	1998		



Enter the entire `AM/PM` phrase as shown in the preceding table; if `AM` is used alone, the `A` will be read literally and the `M` will return the current month.

If any `AM/PM` phrases appear in the picture, the `H` and `HH` phrases edit the time according to the 12-hour civil clock (12:00-12:59 1:00-11:59) instead of the 24-hour clock (00:00-23:59).

The following example uses the date and time from the preceding table. Notice that the comma must be enclosed in quotation marks because it is read as an argument separator.

```
$(edtime, $(getvar,date),DDD"," DD MON YYYY - H:MMam/pm)
```

It returns the following:

Sat, 5 Sep 1998 - 4:53am

If `time` is 0, the time and date at the moment that the outermost macro was executed is used. This avoids lengthy and time-consuming multiple calls on `$(getvar,date)` and guarantees that strings composed with multiple `$(edtime)` macros all use the same time.

## Quick Reference

### System Variables

**MENUECHO**

Sets menu echo and prompt control bits.

## eq

If the strings `val1` and `val2` are identical, the string returns 1; otherwise, it returns 0.

```
$(eq, val1, val2)
```

## Quick Reference

### System Variables

**MENUECHO**

Sets menu echo and prompt control bits.

## eval

Passes the string *str* to the DIESEL evaluator and returns the result of evaluating it.

```
$(eval, str)
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## fix

Truncates the real number *value* to an integer by discarding any fractional part.

```
$(fix, value)
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## getenv

Returns the value of the environment variable *varname*.

```
$(getenv, varname)
```

If no variable with that name is defined, it returns the null string.

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## getvar

Returns the value of the system variable with the given *varname*.

```
$ (getvar, varname)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## if

Conditionally evaluates expressions.

```
$ (if, expr, dotrue [, dofalse])
```

If *expr* is nonzero, it evaluates and returns *dotrue*. Otherwise, it evaluates and returns *dofalse*. Note that the branch not chosen by *expr* is not evaluated.

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## index

Returns the specified member of a comma-delimited string.

```
$(index, which, string)
```

Assumes that the *string* argument contains one or more values delimited by the macro argument separator character, the comma. The *which* argument selects one of these values to be extracted, with the first item numbered 0. This function is most frequently used to extract X, Y, or Z coordinate values from point coordinates returned by `$(getvar)`.

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## nth

Evaluates and returns the argument selected by *which*.

```
$(nth, which, arg0 [, arg1,..., arg7])
```

If *which* is 0, *nth* returns *arg0*, and so on. Note the difference between `$(nth)` and `$(index)`; `$(nth)` returns one of a series of arguments to the function, while `$(index)` extracts a value from a comma-delimited string passed as a single argument. Arguments not selected by *which* are not evaluated.

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## or

Returns the bitwise logical OR of the integers *val1* through *val9*.

```
$ (or, val1 [, val2,..., val9])
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## rtos

Returns the real value in the format and precision specified.

```
$ (rtos, value [, mode, precision])
```

Edits the given *value* as a real number in the format specified by the *mode* and *precision* as defined by the analogous AutoLISP function. If *mode* and *precision* are omitted, it uses the current values selected with the UNITS command.

Edits the given *value* as a real number in the format specified by *mode* and *precision*. If *mode* and *precision* are omitted, it uses the current values selected with the UNITS command.

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## strlen

Returns the length of *string* in characters.

```
$ (strlen, string)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## substr

Returns the substring of *string*, starting at character *start* and extending for *length* characters.

```
$(substr, string, start [, length])
```

Characters in the string are numbered from 1. If *length* is omitted, it returns the entire remaining length of the string.

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## upper

Returns the *string* converted to uppercase according to the rules of the current locale.

```
$(upper, string)
```

## Quick Reference

### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## xor

Returns the bitwise logical XOR of the integers *val1* through *val9*.

```
$(xor, val1 [, val2,..., val9])
```

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.

## DIESEL Error Messages

Generally, if you make a mistake in a DIESEL expression, what went wrong will be obvious. Depending on the nature of the error, DIESEL embeds an error indication in the output stream.

DIESEL error messages	
Error message	Description
<i> \$? </i>	Syntax error (usually a missing right parenthesis or a runaway string)
<i> \$(func,??) </i>	Incorrect arguments to <i>func</i>
<i> \$(func)?? </i>	Unknown function <i>func</i>
<i> \$(++) </i>	Output string too long—evaluation truncated

### Quick Reference

#### System Variables

MENUECHO

Sets menu echo and prompt control bits.





# Slides and Command Scripts

# 6

Slides are snapshots of drawing files that can be used for giving presentations, for creating image tile menus, and for viewing another drawing while you work.

A script reads and executes commands from a text file. You can run a script when you start AutoCAD LT®, or you can run a script from within AutoCAD LT using the SCRIPT command. A script provides an easy way to create continuously running displays for product demonstrations and trade shows.

## Create Slides

Slides are snapshots of drawing files. You can use slides for giving presentations, creating custom image tile menus, and viewing an image of another drawing while you work.

## Overview of Slides

A slide is a snapshot of a drawing. Although it contains a picture of the drawing at a given instant, it is not a drawing file.

You cannot import a slide file into the current drawing, nor can you edit or print a slide. You can only view it.

You can use slide files in the following ways:

- For making presentations within AutoCAD LT®
- For viewing a snapshot of a drawing while working on a different drawing
- For creating menus of image tiles within a dialog box

You create a slide by saving the current view in slide format. A slide created in model space shows only the current viewport. A slide created in paper space shows all visible viewports and their contents. Slides show only what was visible. They do not show objects on layers that were turned off or frozen or objects in viewports that were turned off.

When you view a slide file, it temporarily replaces objects on the screen. You can draw on top of it, but when you change the view (by redrawing, panning, or zooming), the slide file disappears, and AutoCAD LT redisplay only what you drew and any preexisting objects.

You can display slides one by one or use a script to display slides in sequence. Slides also can be used in custom menus. For example, if you create scripts that insert blocks containing mechanical parts you use frequently, you can design a custom image tile menu that displays a slide of each part. When you click the slide image on the menu, AutoCAD LT inserts the block into the drawing.

A slide library is a file containing one or more slides. Slide library files are used for creating custom image tile menus and for combining several slide files for convenient file management.

You cannot edit a slide. You must change the original drawing and remake the slide. If you use a low-resolution graphics monitor when creating a slide file and later upgrade to a high-resolution monitor, you can still view the slide. AutoCAD LT adjusts the image accordingly; however, the slide does not take full advantage of the new monitor until you remake the slide file from the original drawing.

### **To make a slide**

- 1 Display the view you want to use for the slide.
- 2 At the command prompt, enter **mslide**.
- 3 In the Create Slide File dialog box, enter a name and select a location for the slide.

AutoCAD LT offers the current name of the drawing as a default name for the slide and automatically appends the *.sld* file extension.

- 4 Click Save.  
The current drawing remains on the screen, and the slide file is saved in the folder that you specified.

## Quick Reference

### Commands

#### MSLIDE

Creates a slide file of the current model viewport or the current layout.

#### REDRAW

Refreshes the display in the current viewport.

#### VSLIDE

Displays an image slide file in the current viewport.

### System Variables

#### FILEDIA

Suppresses display of file navigation dialog boxes.

### Utilities

#### SLIDELIB

Compiles slide files listed in an ASCII file into a slide library file.

## View Slides

You can view slides individually using VSLIDE. To view a series of slides for a presentation, use a script file.

Be careful about using editing commands while you view a slide, which looks like an ordinary drawing. Editing commands affect the current drawing underneath the slide but not the slide itself.

Some commands may force redrawing, which removes the slide from display.

### To view a slide

- 1 At the command prompt, enter **vslide**.
- 2 In the Select Slide File dialog box, select a slide to view and click OK.  
The slide image is displayed in the drawing area.
- 3 Click View menu ► Redraw.  
The slide image disappears.

## Quick Reference

### Commands

#### REDRAW

Refreshes the display in the current viewport.

#### VSLIDE

Displays an image slide file in the current viewport.

## Create and View Slide Libraries

A slide library is a file containing one or more slides. Slide library files are used for creating custom image tile menus and for combining several slide files for convenient file management.

You can create slide libraries from slide files using the SLIDELIB utility. After you have set up a slide library, you can view slides by specifying the name of the slide library and the slide.

Do not delete the original slides after creating the slide library. The SLIDELIB utility cannot update a slide library once it is created. If you want to add or delete a slide, update the slide list file and remake the library with SLIDELIB. When you remake the slide library, all the slide files that you intend to include must be available.

### To create a slide library

- 1 Use a Windows ASCII text editor to create a list of slide files to include in the library. The file would look similar to this example:  

```
entrance.sld  
hall.sld  
stairs.sld  
study.sld  
balcony.sld
```
- 2 Name and save the file as a text file with a *.txt* file extension.
- 3 Click Start menu (Windows) ► All Programs (or Programs) ► Accessories ► Command Prompt.
- 4 In the Command Prompt window, at the prompt, enter **CD <folder location of slides>** to change folders.

As an example: **CD "c:\slides"**

- 5 At the prompt, enter the following syntax to create the slide library:

```
slidelib libraryname < list.txt
```

For example, if you named your text file *areas.txt*, you could create a library called *house.slb* by entering **slidelib house < areas.txt**. The SLIDELIB utility appends the file extension *.slb* to the slide library file.

### To view a slide in a slide library

- 1 At the command prompt, enter **filedia**.
- 2 Enter **0** and press ENTER.
- 3 At the command prompt, enter **vslide**.
- 4 Enter **library(slide name)** to specify the slide.  
For example, enter **house (balcony)** to open the *balcony* slide, which is stored in the *house* slide library file.
- 5 To remove the slide from the display, click View menu ► Redraw.

## Quick Reference

### Commands

#### MSLIDE

Creates a slide file of the current model viewport or the current layout.

#### REDRAW

Refreshes the display in the current viewport.

#### VSLIDE

Displays an image slide file in the current viewport.

### Utilities

#### SLIDELIB

Compiles slide files listed in an ASCII file into a slide library file.

## Create Command Scripts

A script is a text file that contains a series of commands. Common uses for scripts are to customize startup and to run slide shows.

## Overview of Command Scripts

A script is a text file with one command on each line.

You can invoke a script at startup, or you can run a script during a work session by using the `SCRIPT` command. A script also provides an easy way to create continuously running displays for product demonstrations and trade shows.

The `BACKGROUND PLOT` system variable must be set to 0 before a script can plot multiple jobs.

You create script files outside the program using a text editor (such as Microsoft® Windows® Notepad) or a word processor (such as Microsoft Word) that can save the file in ASCII format. The file extension must be `.scr`.

Each line of the script file contains a command. Each blank space in a script file is significant because `SPACEBAR` is accepted as a command or data field terminator. You must be very familiar with the sequence of prompts to provide an appropriate sequence of responses in the script file.

---

**NOTE** Keep in mind that prompts and command names may change in future releases, so you may need to revise your scripts when you upgrade to a later version of this program. For similar reasons, avoid the use of abbreviations; future command additions might create ambiguities.

---

A script can execute any command at the command prompt except a command that displays a dialog box. In most cases, a command that displays a dialog box has an alternative version of the command that displays command prompts instead of a dialog box.

Script files can contain comments. Any line that begins with a semicolon (;) is considered a comment, and it is ignored while the script file is being processed. The last line of the file must be blank.

All references to long file names that contain embedded spaces must be enclosed in double quotes. For example, to open the drawing *my house.dwg* from a script, you must use the following syntax:

```
open "my house"
```

The following commands are useful in scripts:

'**DELAY** Provides a timed pause within a script (in milliseconds)

'**GRAPHSCR** Switches from the text window to the drawing area

**RESUME** Continues an interrupted script

**RSCRIPT** Repeats a script file

'**TEXTSCR** Switches to the text window

When command input comes from a script, it is assumed that the settings of the PICKADD and PICKAUTO system variables are 1 and 0, respectively; therefore, you do not have to check the settings of these variables.

A script is treated as a group, a unit of commands, reversible by a single U command. However, each command in the script causes an entry in the undo log, which can slow script processing. If you like, you can use UNDO Control None to turn off the undo feature before running the script, or you can write it at the beginning of the script itself. Remember to turn it back on (UNDO Control All) when the script is finished.

The script that is running stops when another script command is invoked.

### **To create a script that changes settings in a drawing**

This script turns on the grid, sets the global linetype scale to 3.0, and sets layer 0 as the current layer with red as the color.

- 1 In a text editor, enter **grid on**.
- 2 On the next line, enter **ltscale 3.0**.
- 3 On the next line, enter **layer set 0 color red 0**.
- 4 Add a blank line.
- 5 Save the file as ASCII text (TXT file), with a file extension of **.scr**.

The script file may contain comments, as follows:

```
; Turn grid on
grid on
; Set scale for linetypes
ltscale 3.0
; Set current layer and its color
layer set 0 color red 0

; Blank line above to end LAYER command
```

## Quick Reference

### Commands

#### DELAY

Provides a timed pause within a script.

#### GRAPHSCR

Switches from the text window to the drawing area.

#### RESUME

Continues an interrupted script.

#### RSCRIPT

Repeats a script file.

#### SCRIPT

Executes a sequence of commands from a script file.

#### TEXTSCR

Opens the text window.

#### VSLIDE

Displays an image slide file in the current viewport.

## Run Scripts at Startup

A script that runs at startup can open a drawing and change its settings.

Suppose that every time you begin a new drawing, you turn on the grid, set the global linetype scale to 3.0, and set layer 0 as your current layer, with red as the color. You can do this using a drawing template, but you could do it instead with the following script and store it in a text file called *setup.scr*.

```
grid on
ltscale 3.0
layer set 0 color red 0
```

The first line turns on the grid. The second line sets the global scale for linetypes. The third line sets the current layer to layer 0 and sets its default color to red. AutoCAD LT assumes that in a script you want to use the version of LAYER command that displays command prompts rather than the dialog box version. The result is equivalent to entering **-layer** at the command prompt. The fourth line is blank, ending LAYER.



---

**NOTE** VBA and AutoLISP® scripts that run at startup should check for whether the AutoCAD LT process is visible or invisible. If the process is invisible, the script should not execute, because the process may be performing background plotting or publishing operations. To check for whether the AutoCAD LT process is visible or invisible, you can use the Visible property of the Application object in the AutoCAD LT Object Model.

---

You could run a script at startup to open a drawing by using the following syntax in the Run dialog box:

```
ACADLT drawing_name /b setup
```

All file names that contain embedded spaces must be enclosed in double quotes, for example, "guest house". You can also specify the view that is displayed when the drawing opens by using the /v switch and the view name. The /b switch and the script file must be the last parameter listed.

Including the file extensions .exe, .dwg, .dwt, and .scr is optional. If AutoCAD LT cannot find the script file, AutoCAD LT reports that it cannot open the file.

To run the same script at startup but create a new drawing using the *MyTemplate.dwt* file as the template, enter the following in the Run dialog box:

```
ACADLT /t MyTemplate /b setup
```

This command creates a new drawing and issues a sequence of setup commands from the *setup.scr* file. When the script has finished running, the command prompt is displayed. If you want to use the default template for the new drawing, you can omit the /t switch and the template file name.

---

**NOTE** You can no longer use this method to start a new drawing and give it a name. Name the drawing when you save it.

---

### To run a script at startup

- 1 Click Start menu (Windows) ► Run.
- 2 In the Run dialog box, enter **acadlt drawing\_name /b script\_name**.  
To start a new file, instead of a drawing file name, enter the /t switch and the name of a template file: **/t template drawing**.  
To open a drawing file to a particular view, follow the drawing name with the /v switch and the name of the view: **/v view\_name**.  
The name of the script file must be the last parameter listed. The file extensions are optional.

- 3 Click OK.

AutoCAD LT opens the drawing and executes the commands in the script file. When the script has been completed, the command prompt is displayed.

## Run Slide Shows from Scripts

Scripts are useful for creating slide shows.

Scripts are useful for creating slide shows. Ordinarily, the speed with which you can display slides is limited by the number of times AutoCAD LT must access the disk to read the slide file. You can, however, preload the next slide from disk into memory while your audience is viewing the current slide and then quickly display the new slide from memory.

To preload a slide, place an asterisk before the file name in VSLIDE. The next VSLIDE command detects that a slide has been preloaded and displays it without asking for a file name.

The disk-access time to load the next slide overlaps with the viewing time for the current slide. You can specify additional delays with the DELAY command. Each delay unit is equal to one millisecond.

To stop a repeating script press ESC. You can resume the script with RESUME.

If the script will run for a long time, it is recommended that you use UNDO Control None to turn off the Undo log file.

### To run slide shows from scripts

- 1 Create the slide library file as described in [To create a slide library](#) on page 348.
- 2 Create a script file using an ASCII text editor, as shown in [To create a script that preloads slides](#) on page 355.
- 3 At the command prompt, enter **script**.
- 4 In the Select Script File dialog box, select a script file and click Open.

### To create a script that preloads slides

In this example of a script that displays three slides (files *slide1.sld*, *slide2.sld*, and *slide3.sld*), the time it takes to access the disk drive and load the next slide into memory overlaps with the viewing time for the current slide.

- 1 On the first line of the script, enter **vslide slide1**.  
The first line begins the slide show and loads *slide1*.
- 2 On the second line, enter **vslide \*slide2**.  
The asterisk (\*) preceding the slide name on the second line preloads *slide2*.
- 3 On the third line, enter **delay 2000**.  
The third line specifies a delay of 2000 milliseconds to allow the audience to view *slide1*.
- 4 On the fourth line, enter **vslide**. On the fifth line, enter **vslide \*slide3**.  
On the sixth line, enter **delay 2000**.  
The fourth, fifth, and sixth lines display *slide2*, preload *slide3*, and specify a delay for viewing *slide2*.
- 5 On the seventh line, enter **vslide**. On the eighth line, enter **delay 3000**.  
The seventh and eighth lines display *slide3* and specify a delay for viewing *slide3*.
- 6 On the last line, enter **rscript** to repeat the script.
- 7 To stop a repeating script press ESC. To continue the script, enter **resume**.

The script may contain comments, as follows:

```
; Begin slide show, load SLIDE1
VSLIDE SLIDE1
; Preload SLIDE2
VSLIDE *SLIDE2
; Let audience view SLIDE1
DELAY 2000
; Display SLIDE2
VSLIDE
; Preload SLIDE3
VSLIDE *SLIDE3
; Let audience view SLIDE2
DELAY 2000
; Display SLIDE3
VSLIDE
; Let audience view SLIDE3
DELAY 3000
; Cycle
RSCRIPT
```

## Quick Reference

### Commands

#### DELAY

Provides a timed pause within a script.

#### GRAPHSCR

Switches from the text window to the drawing area.

#### RESUME

Continues an interrupted script.

#### RSCRIPT

Repeats a script file.

#### SCRIPT

Executes a sequence of commands from a script file.

#### TEXTSCR

Opens the text window.

## VSLIDE

Displays an image slide file in the current viewport.



# Index

## A

- absolute menu referencing 229
- accelerator keys 248, 253, 256, 261
- actions (user)
  - double click actions 262
- addition DIESEL function 331
- aliases
  - creating for commands 17
  - pull-down menus 213, 231
  - shortcut menus 217
- alignment
  - linetype patterns 21
- alternate font mapping files 11
- and DIESEL function 335
- angtos DIESEL function 335
- AutoCAD
  - customization 1
- AutoLISP (LSP) applications
  - macros and 101

## B

- backup files
  - customization files 73
- batch files 7
- borders (menu items) 114
- buttons
  - crosshair coordinates 271
  - customizing 190
  - drop-downs 167
  - flyouts 202
  - images on 190
  - moving 190
  - pointing device buttons 69, 270
  - ribbon controls 171
  - swapping 110, 231
  - tablet buttons 274

## C

- canceling commands 102
- caret syntax in macros 104
- cascading menus 213
- categories
  - commands 45
- characters
  - including in linetypes 24
  - macro control characters 101, 104
- clicking actions 262, 270
- command line
  - switches 353
- command line switches
  - running scripts and 353
- Command List pane (CUI editor) 45
- command scripts 350
- commands
  - about 92
  - aliases 17
  - canceling 102
  - categories 45
  - creating 94
  - customization FAQs 319
  - customizing 58, 92
  - double click actions 262
  - drop-downs 167
  - editing 94
  - flyouts 202
  - Help topics about 122
  - images for 129, 132, 134
  - listing 45
  - macros and 101–102
  - menu referencing 229
  - name validity 5
  - pausing for input 106
  - properties 92
  - pull-down menus 65, 212
  - Quick Access toolbar 142
  - rearranging 44

- repeating 109
- reusing 94
- ribbon panels and 149
- scripts 350
- shortcut menus and 67, 212
- status line messages 128
- submenus and 227
- swapping menu contents 110
- tablet buttons and 274
- tagging 119
- tooltips 122
- transparent commands 106
- comments
  - script commenting 350
- conditional expressions in macros 112
- configuration files (plotters)
  - multiple 6
- configuration files (pointing devices)
  - multiple 6
- contextual ribbon tabs 64, 187
- control characters in macros 104
- controls
  - ribbon controls 171
  - ribbon panels 149
  - toolbar controls 207
- coordinates
  - reading with pointing devices 271
- copying
  - buttons to other toolbars 190
  - customization file data 316
  - list of shortcut keys 248
- crosshairs
  - coordinates of 271
- CUI (customization) files
  - backwards compatibility 48
  - CUIx files 42
  - defined 55
  - migrating to CUIx 316
  - structure 50
- CUI Editor
  - about 39, 42, 58
  - changes in customization and 48, 319
  - Command List pane 45
  - Customizations In pane 44
  - customizing workspaces 70, 280, 296
  - Dynamic Display pane 47
  - FAQs 319
  - tree nodes 56
- CUIx (customization) files
  - backups 73
  - backwards compatibility 48
  - creating 73
  - CUI Editor 42, 58
  - customization FAQs 322
  - defined 54
  - enterprise CUIx files 82
  - finding items in 86
  - importing workspaces 282
  - menu swapping 232
  - migrating older files to 316
  - partial CUIx files 78
  - structure 50
  - XML-based format 48
- current workspaces 283
- custom icon files 11
- customization
  - about 1
- customization files (CUI)
  - backwards compatibility 48
  - CUIx files 42
  - defined 55
  - DIESEL expressions in 328
  - directory structure and 4
  - locating files 11
  - migrating to CUIx 316
  - structure 50
- customization files (CUIx)
  - about 42, 73
  - backups 73
  - backwards compatibility 48
  - creating 73
  - CUI Editor 58
  - customization FAQs 322
  - defined 54
  - enterprise CUIx files 82
  - finding items in 86
  - importing workspaces 282
  - menu swapping 232
  - migrating older menu files to 316



- partial CUIx files 78
- structure 50
- XML-based format 48
- customization groups 52, 54
- Customizations In pane (CUI editor) 44
- Customize User Interface editor
  - about 39, 42, 58
  - changes in customization and 48
  - Command List pane 45
  - Customizations In pane 44
  - customizing workspaces 70, 280, 296
  - Dynamic Display pane 47
  - FAQs 319
  - tree nodes 56
- customizing
  - about customization 39
  - AutoCAD functions and features 1
  - commands 58, 92
  - Customize User Interface editor 39, 58
  - double click actions 68, 262
  - FAQs for 319
  - glossary of terms for 54
  - hatch patterns 27
  - hatches 27
  - images for commands 132
  - legacy interface elements 272
  - linetypes 19
  - locating customized files 8
  - migrating older customization files 316
  - mouse button actions 69, 270
  - properties 233
  - pull-down menus 65, 212
  - Quick Access toolbar 142
  - ribbon 61, 149, 294
  - shortcut keys 68
  - shortcut menus 67, 212
  - status line 325–326
  - tablet buttons 274
  - templates 14
  - toolbars 60, 64, 190
  - tooltips 241
  - types of customized files 8
  - user interface 39, 73

- windows 296
- workspaces 70, 280, 293

## D

- dashboard panel 55
- dashes
  - hatch pattern definitions 30
  - linetype definitions 20
- dates
  - edtime DIESEL function 336
- delaying slide shows 354
- deleting
  - menus 231
  - ribbon items 155
  - toolbar buttons 190
- dialog boxes
  - image tile dialog boxes 275
- DIESEL expressions
  - about 325
  - customizing status line 326
  - error messages 343
  - macros and 101, 112, 328
  - nesting 327
  - pull-down menu labels 329
  - quoted strings in 327
- DIESEL functions
  - addition 331
  - and 335
  - angtos 335
  - catalog 331
  - division 332
  - edtime 336
  - eq 337
  - equal to 332
  - eval 338
  - fix 338
  - getenv 338
  - getvar 339
  - greater than 333
  - greater than or equal to 334
  - if 339
  - index 340
  - less than 333
  - less than or equal to 334
  - multiplication 331

- not equal to 333
- nth 340
- or 341
- rtos 341
- strlen 341
- substr 342
- subtraction 331
- upper 342
- xor 343
- digitizing tablets
  - buttons 270, 274
- directory paths
  - program and support files 4
- displaying
  - contextual ribbon tabs 64
  - hidden files 9
  - list of shortcut keys 248
  - menus 298
  - palettes 294, 298
  - Quick Access toolbar 293, 297
  - ribbon panels 294, 297
  - ribbon tabs 294, 297
  - slide shows 354
  - slides 347
  - toolbars 294, 297
  - tooltips 241
  - workspace toolbars 190
- division DIESEL function 332
- docked windows 56
- dots in linetype definitions 20
- double click actions
  - customization FAQs 321
  - customizing 68, 262
- drawing files (DWG)
  - folders and maintenance 7
  - slides of 345
- drop-down lists 171, 207
- drop-downs
  - ribbon panels 167
- Dynamic Display pane (CUI editor) 47
- Dynamic Help 53

## E

- echoes in macros 103

- editing
  - commands 94
  - double click actions for 262
  - shortcut keys 248
  - slide files and 347
  - toolbars 192
- edtime DIESEL function 336
- element IDs 55
- enterprise customization files
  - about 73
  - creating 82
  - customization FAQs 322
  - defined 55
- eq DIESEL function 337
- equal to DIESEL function 332
- error messages
  - DIESEL 343
- eval DIESEL function 338
- exporting images for commands 134
- extended help 122

## F

- files
  - locations 8
  - maintenance 7
  - roaming profiles and 9
- finding
  - commands in CUIx files 86
  - customized files 8
  - tagged commands 119
- fix DIESEL functions 338
- floating windows 56
- flyouts
  - buttons 202
  - toolbars 202
- FMP files (font mapping) 11
- font mapping files 11
- fonts
  - including in linetypes 24
- function keys (F1-F12) 248, 253, 256, 261

## G

- getenv DIESEL function 338

- getvar DIESEL function 339
- graphics for commands 129, 132, 134
- graying out menu item labels 113
- greater than DIESEL function 333
- greater than or equal to DIESEL function 334

## H

- hatch patterns
  - about 27
  - creating 27
  - examples 27, 31, 34
  - multiple lines 34
- hatches
  - creating 27
  - customizing 27
- Help
  - Dynamic Help 53
  - locating Help files 11
  - tooltip command Help 122
- hidden files 9
- hiding
  - toolbar buttons 190

## I

- if DIESEL function 339
- image tile menus
  - creating 275
  - menu swapping 231
  - slides and 348
- images for commands 129, 132, 134
- importing
  - customization file data 316
  - images for commands 134
  - workspace settings 282
- index DIESEL function 340
- input
  - pausing macros for 106
- inserting
  - menus 231
- interface
  - changes in customization process 48
  - customization FAQs 319

- Customize User Interface editor 39, 58, 296
- customizing 39
- legacy interface elements 272
- terminology 54
- workspaces 70

- interface elements
  - defined 55
  - swapping 110, 231
  - tree view 44
- interface items 55
- international character sets 109
- Internet
  - customizing templates for 14

## K

- keyboard input in macros 106
- keyboard shortcuts 68, 248, 253, 256, 261

## L

- languages
  - macro translations 109
- legacy interface elements 55, 272
- less than DIESEL function 333
- less than or equal to DIESEL function 334
- library search path 4
- LIN files (linetype library) 11, 19
- linetypes
  - about 19
  - creating 20
  - customizing 19
  - examples 20
  - simple 20
  - text characters in 24
- listing
  - commands 45
  - keyboard shortcuts 248
- loading
  - customization files 73
  - partial customization files 78

## M

### macros

- about 101
  - conditional expressions in 112
  - defined 56
  - DIESEL expressions in 112, 328
  - international language support 109
  - length 103
  - pausing for user input 103, 106
  - repeating commands 109
  - scripts 350
  - selecting objects with 110
  - shortcut keys and 248
  - special character codes for commands 104
  - suppressing echoes and prompts 103
  - swapping interface elements with 110
  - syntax 101
  - tablet menus and 272
  - terminating 103
- main customization files 56, 73
- menu files 49
- menu groups (customization groups) 52, 54
- menu items
- DIESEL expressions and 329
  - disabling 113
  - graying out 113
  - status line messages 128
- menu referencing 229
- menu resource files (MNR) 49
- menu swapping 110, 232
- menu template files (MNU) 48, 55
- menus
- creating 65, 67, 212
  - customization FAQs 320
  - customizing 65, 67, 212
  - international language support 109
  - legacy interface elements 55
  - menu files 49
  - menu referencing 229
  - pull-down menus 65, 213
  - rearranging commands 44

- removing 231
  - shortcut menus 67
  - submenus 227
  - swapping 110, 230
  - tablet menus 272
  - workspace arrangements 298
- migrating
- customization FAQs 319
  - menu files from previous releases 316
- MNC files 49
- MNL files (menu LISP)
- customization and 49
- MNR files (menu template) 49
- MNS files (source menu)
- changes in customization and 48
  - defined 55
  - migrating 316
- MNU files (menu template)
- changes in customization and 48
  - defined 55
  - migrating 49, 316
- model space
- slides created in 346
- modifying
- commands 94
  - double click actions for 262
  - shortcut keys 248
  - toolbars 192
- mouse
- coordinates of crosshairs 271
  - customizing button actions 69, 270
  - double click actions 262
  - swapping actions 110
- multiple configuration files 6
- multiple-line hatch patterns 34
- multiplication DIESEL function 331

## N

- naming
- linetypes 21
- networks
- enterprise customization files and 82

- nodes
  - interface customization 56
- not equal to DIESEL function 333
- nth DIESEL function 340
- number pad keys 248, 253, 256, 261

## O

- object properties
  - customizing 233
- objects
  - double click actions 266
  - properties 233
  - shortcut menus 218
- or DIESEL function 341

## P

- palettes
  - defined 56
  - displaying 294
  - workspaces and 298, 312
- paper space
  - slides created in 346
- partial customization files
  - about 73
  - creating 78
  - defined 56
  - toolbars and 232
- partial menu files 231
- PAT files 11
- patterns
  - linetypes 22
- pausing macros 103, 106
- PGP files (program parameters) 11
- plot styles
  - locating files 9
- plotter configuration files
  - locating files 10
  - multiple files 6
- PMP files (plot model parameter) 10
- pointing devices
  - coordinates of crosshairs 271
  - customizing button actions 270
  - double click actions 262
  - multiple configuration files 6

- swapping actions 110
- prefixes for commands 18
- preloading slides 354
- previous releases
  - backwards compatibility 48
  - changes in customization process 48
  - legacy interface elements 272
  - migrating custom settings from 316
- printing
  - lists of shortcut keys 248
- profiles 9
- prompts
  - suppressing 103
- properties
  - commands 92
  - customizing 233
  - Quick Properties panel 233
  - toolbars 190
  - workspaces 282
- PSF files 11
- Publish to Web wizard
  - customizing templates 14
- pull-down menus
  - creating 65, 213
  - customizing 65, 212, 231
  - menu referencing 229

## Q

- Quick Access toolbar 56, 60, 142, 293, 297
- Quick Properties panel 233

## R

- rearranging
  - menus 44
  - ribbon items 155
  - ribbon tabs 180
  - toolbar buttons 190
- referencing menus 229–230
- removing
  - menus 231
  - ribbon items 155
  - toolbar buttons 190
- repeating commands 109

replacing  
  commands in CUIx files 86

ribbon  
  command images 129, 132, 134  
  contextual tab states 64, 187  
  controls 171  
  customizing 61, 149  
  defined 56  
  drop-downs on panels 167  
  reorganizing command and  
    controls 155  
  ribbon panels 56, 61  
  ribbon tabs 63–64, 180  
  workspaces and 297  
ribbon panels  
  adding items to 155  
  controls for 171  
  creating 61  
  customizing 149, 294  
  defined 56  
  drop-downs on 167  
  rearranging 297  
ribbon tabs  
  contextual tab states 64, 187  
  creating 63, 180  
  customizing 294  
  rearranging 297  
roaming profiles 9  
rollover tooltips 241  
rows (ribbon) 149  
rtos DIESEL function 341

## S

SCR files (scripts) 350  
scripts  
  about 345, 350  
  file names and 350, 353  
  running at startup 352  
  running slide shows from 354  
  switches and 353  
search paths  
  default file locations 4  
searching  
  finding commands in CUIx files 86  
  finding tagged commands 119

selecting  
  objects with macros 110  
shortcut keys  
  assigning 248  
  customizing 68  
  defaults 253  
  temporary override keys 256, 261  
shortcut menus  
  aliases 217  
  context-sensitive shortcut  
    menus 217  
  creating 67, 217  
  customizing 67, 212  
  double click actions 262  
  menu referencing 229  
slide libraries 277, 348  
slide shows 354  
SLIDELIB utility 348  
slides  
  about 345  
  creating 345  
  editing commands and 347  
  image tile menus and 275, 277, 348  
  preloading 354  
  slide libraries 348  
  slide shows 354  
  viewing 347  
source menu files (MNS) 48–49, 55, 316  
spaces in linetypes 20  
special characters  
  commands and 227  
  image tile menus 275  
  macros and 101, 104, 227  
startup scripts 352  
status line 128, 325–326  
strings in CUIx files 86  
strlen DIESEL function 341  
submenus 227  
substr DIESEL function 342  
subtraction DIESEL function 331  
support files  
  locations 11  
suppressing echoes and prompts 103  
swapping  
  interface elements with macros 110  
  menus 230

- switches
  - running scripts and 353
- switching
  - toolbar controls 207
- symbols
  - commands and 227
  - image tile menus 275
  - macros and 101, 104, 227
- syntax
  - macros 101
- system variables
  - toggling values with macros 112

## T

- tablets
  - customizing buttons 270, 274
  - customizing menus 272
  - menu swapping 110, 231
- tags
  - element IDs 55
  - menu commands 119
- templates
  - customizing 14
- temporary override keys 255, 261
- terminating macros 103
- text
  - including in linetypes 24
- time
  - edtime DIESEL function 336
- toolbar buttons
  - customizing 190
  - images 190
  - rearranging 44, 190
- toolbars
  - command images 129, 132, 134
  - controls on 207
  - creating 64, 192
  - customization FAQs 320
  - customizing 64, 190
  - displaying 294
  - flyouts on toolbar buttons 202
  - naming 190
  - partial CUIx files and 232
  - properties 190
  - Quick Access toolbar 60, 142, 297

- rearranging elements on 44
  - workspace arrangements 297
- tooltips
  - command Help in 122
  - customizing 241
- transferring customization files 316
- translating macros 109
- transparent commands 106
- tree nodes 56

## U

- unique IDs (element IDs) 55
- unloading
  - partial customization files 78
- UNT files 11
- updating
  - customization files 316
- upgrading
  - customization FAQs 319
  - migrating customization files 316
- upper DIESEL function 342
- user input
  - pausing macros 106
- user interface
  - changes in customization process 48
  - customization FAQs 319
  - Customize User Interface editor 39, 58, 296
  - customizing 39
  - legacy interface elements 272
  - terminology 54
  - workspaces 70

## W

- web pages
  - templates 14
- windows
  - customizing 296
  - workspaces and 312
- workspaces
  - CUI Editor 280, 296
  - current 283
  - customization FAQs 321
  - customizing 70, 280, 293

defined 56  
importing 282  
properties 282  
ribbon tabs 180  
toolbars in 190

## **X**

XAML files 123  
xor DIESEL function 343