


How to use the DAC

Actually, the DAC is a USB sound card. So far as I know, there is no need to install driver for it. To start, first turn the "select" switch in the front panel to "USB", then power it up.

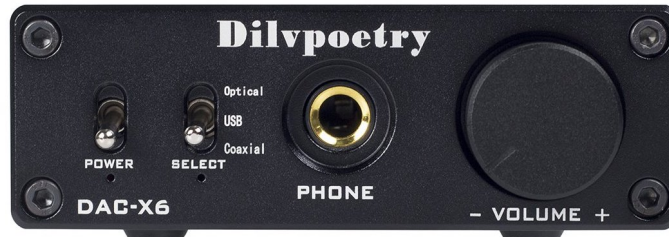

The output is in the back panel, you can use either "L out" or "R out". I do find any difference between them.



Connect the USB to a computer, you can find it in the sound control of the system. Select the device named "3-VIA USB Dongle", and then play the wav file (you can do it with a music player), the signal will output from the DAC.

Unlike the internal sound card, you can not change the amplitude of the DAC. Neither by software, nor by turning the knob in the front panel. All you can do is to change the amplitude of your wav file. For low frequency transmission system M21-320 & M620-102. The amplitude of 0.38 (0.76 peak to peak) in the wav file generate a output signal of 5.8 Vpp. This is the maximum you can input to the transmission system.

NEVER exceed this limit, otherwise there may be damage to the transmission system.

