
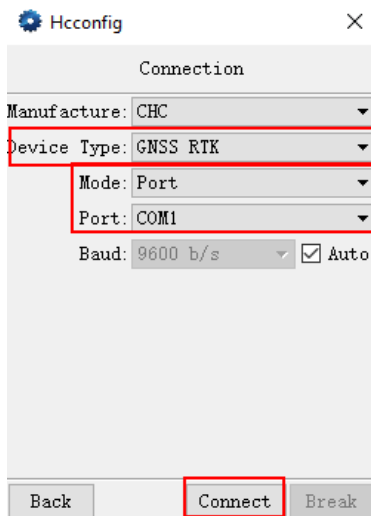


How to active pass-through with hcconfig

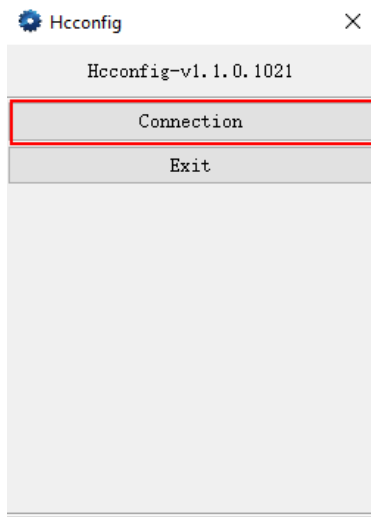

Prerequisites:

- Hardware: X900/X91/i80
- Software: hcconfig

Steps:

1. Open the hcconfig software and click connection.

2. Choose the right receiver type:

I80: Smart receiver


X91/X900: GNSS RTK

Choose right Mode and Port.


Click Connect.



FAQ

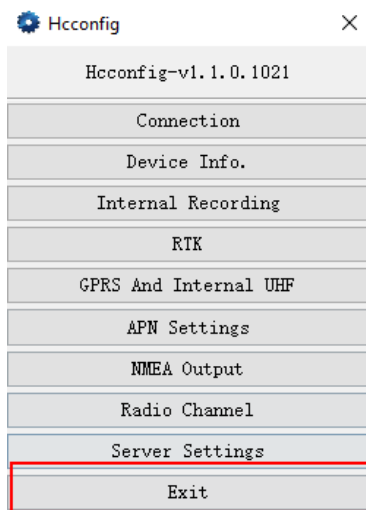

3. Click Exit.

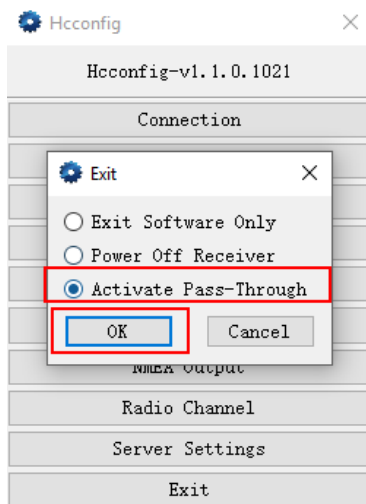

4. Click Activate Pass-Through

OK.

