



5. Remove the timing belt.
6. Remove the motor bracket by removing 4 bolts.
7. Remove the head gear from the motor.
8. Remove 4 bolts and remove M7 motor from the bracket.
9. Attach the head gear to the new motor.
10. Install the motor with attached head gear.
11. Reinstall all parts in the reverse order of removal.

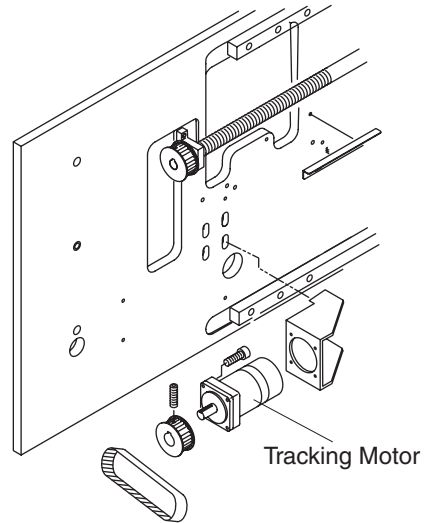

4.5.2 Replacing the Encoder

1. Turn the main power OFF.
2. Remove the back side cover.
3. Remove the two screws and remove the encoder with bracket.
4. Remove the encoder gear.
5. Remove the 4 screws and remove the encoder from the bracket.

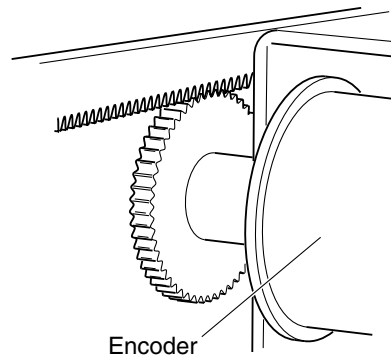

4.5.3 Tracking unit Adjustment

NOTE

- If you need replacement, replace the parts according to the parts list.

Tracking unit Adjustment

- Turn the main power supply ON.
- Remove the Tracking unit cover.
- Switch to the remote control screen's tracking adjustment.
- Set the encoder to count "20" at 20mm from the saddle without pulley.
- Move the tracking unit with rotating the pulley till the encoder counts 250.
- Adjust L plate so that the tracking sensor turns off at this position.
- Additionally, check if the encoder counts 490 at the position of above 20mm from the saddle which is the next of pulley).

