


WS2818 RGB LED Occupying pins GP48 DIN

Charging current selection jumper:  
Connect the BOOST jumper and increase the charging current from 100mA to 300mA.  
Only do this when your battery is greater than 500mAh! To avoid explosions.

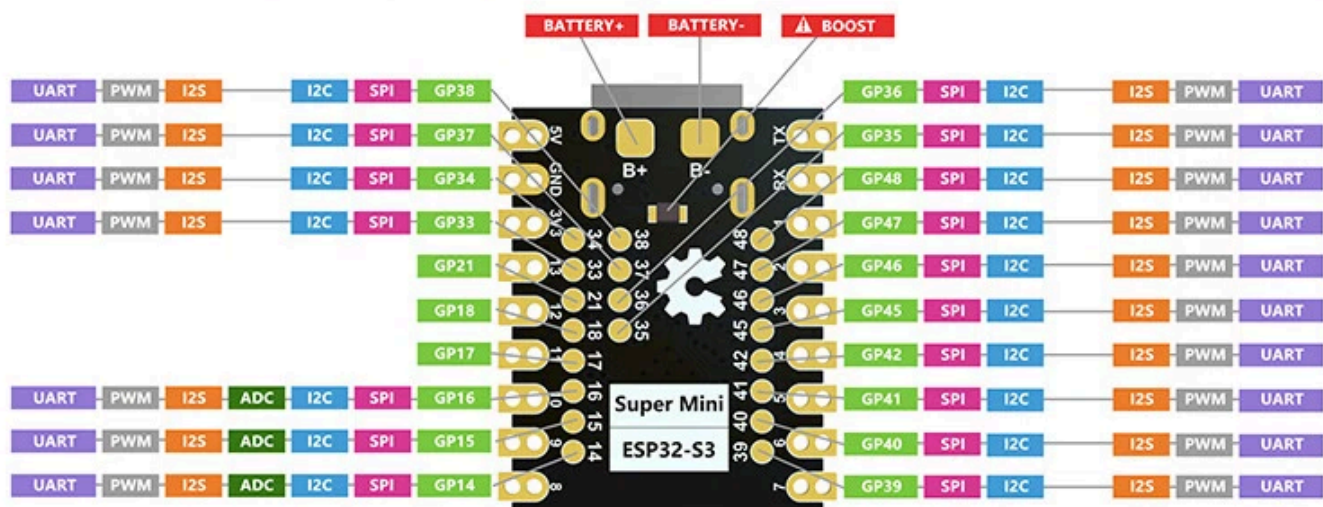

Power	Ground	UART	GPIO	SPI
ADC	SPI	Debugging	I2C	LED