


## REMOVAL

Remove the following:


- [Front wheel](#)
- [Front fender](#)
- [Inner cover](#)

Remove the bolt [1] and front wheel speed sensor [2] from the left fork.

! Left side only:

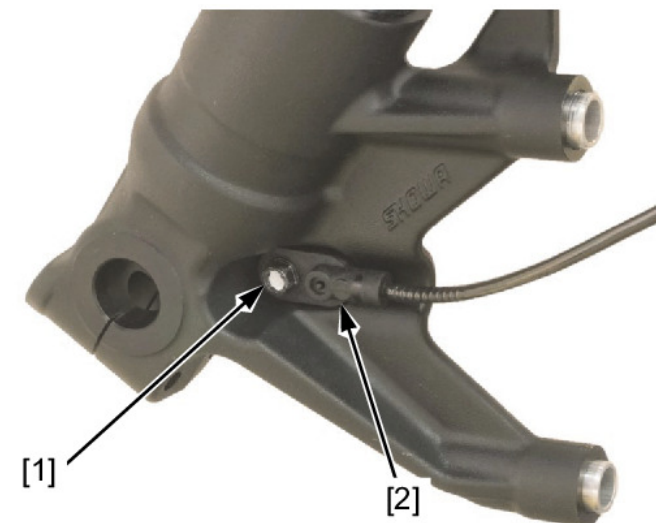


Loosen the pinch socket bolt [1] of the top bridge.

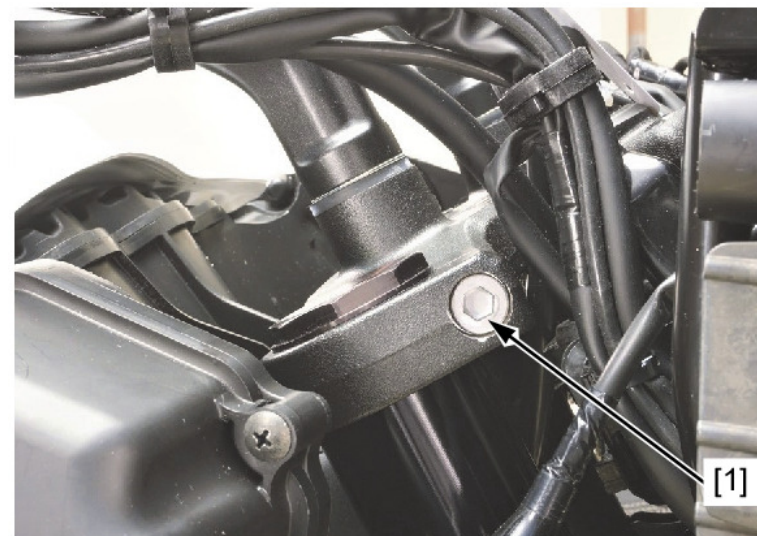

When the fork leg will be disassembled, loosen the fork cap [1], but do not remove it yet.

! Take care not to scratch the cap head.

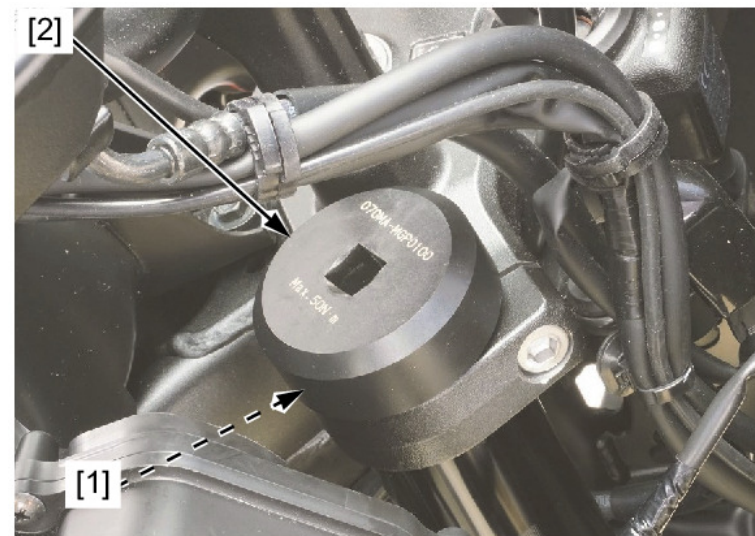**TOOL:****Fork bolt wrench [2]**[070MA-MGP0100](#)

While holding the fork leg, loosen the bottom bridge pinch bolts [1]. Pull the fork leg down and remove it out of the fork bridges.

