

ENGINE OIL FILTER


NOTE:

- DCT model:
Replace the clutch oil filter when the engine oil filter is replaced.

Drain the engine oil.

Remove and discard the oil filter cartridge [1] using the special tool.

TOOL:	
Oil filter wrench	07HAA-PJ70101

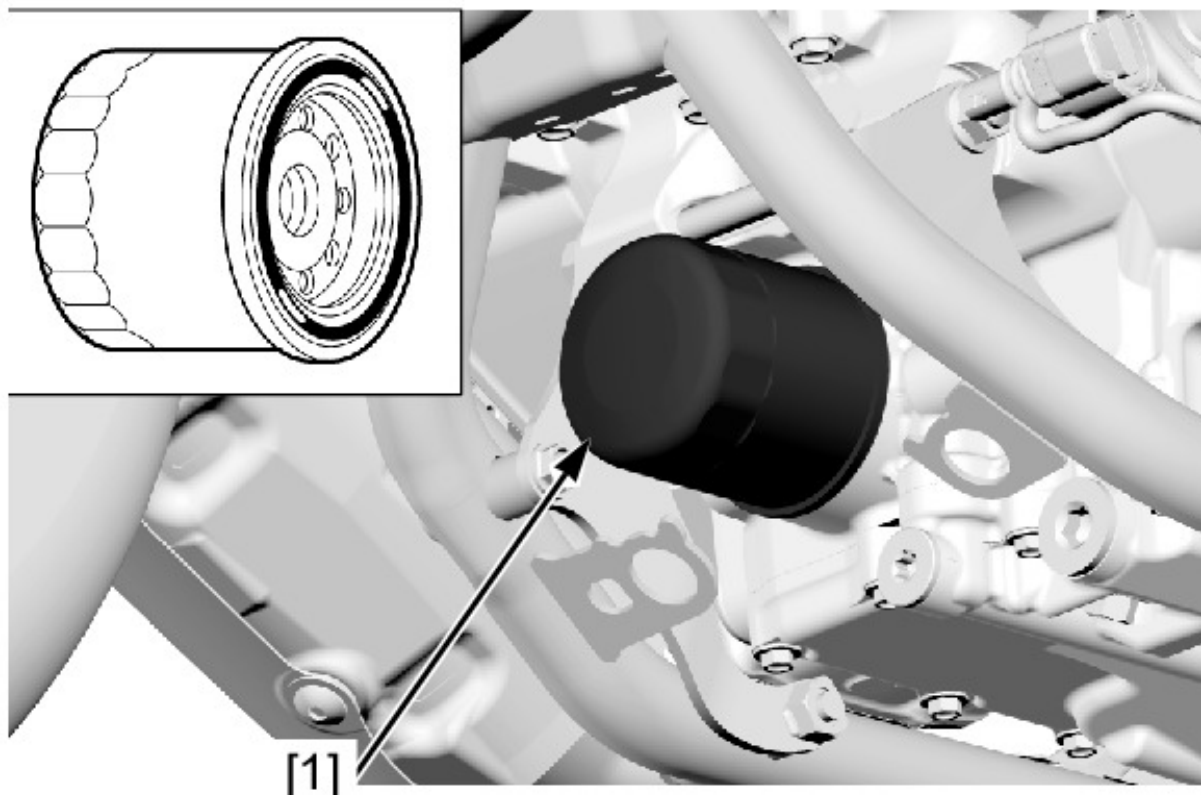


[1]

Check the oil filter boss [1] protrusion from the crankcase is within the specified length as shown.

SPECIFIED LENGTH:	15.5 – 16.5 mm (0.61 – 0.65 in)
------------------------------	--

NOTE:

- If the oil filter boss is removed, apply locking agent to the oil filter boss threads as shown and install it.

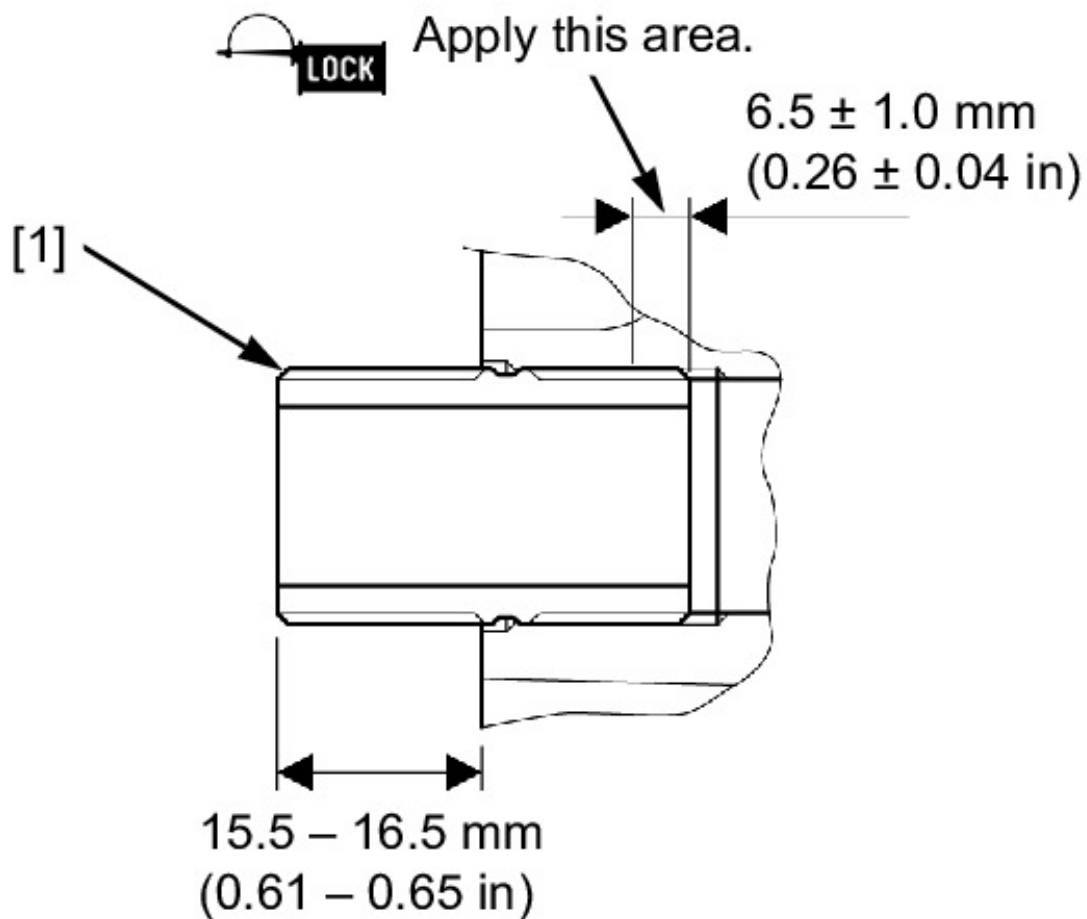

Clean the oil filter attaching surface of the crankcase.

Apply engine oil to new oil filter cartridge threads and O-ring.

Install and tighten the oil filter cartridge [1] to the specified torque using the special tool.

TOOL:**Oil filter wrench****[07HAA-PJ70101](#)****TORQUE:** 26 N·m (2.7 kgf·m, 19 lbf·ft)

[Fill the engine with the recommended engine oil and check that there are no oil leaks.](#)

