


## WHEEL BEARING REPLACEMENT

Drive the rear wheel distance collar B [1] out of the driven flange bearing using the special tools.

**TOOLS:**


|  |                               |
|--|-------------------------------|
| Driver handle, 15 x 135L [2]           | <a href="#">07749-0010000</a> |
| Bearing driver attachment, 28 x 30 [3] | <a href="#">07946-1870100</a> |
| Pilot 20 mm [4]                        | <a href="#">07746-0040500</a> |

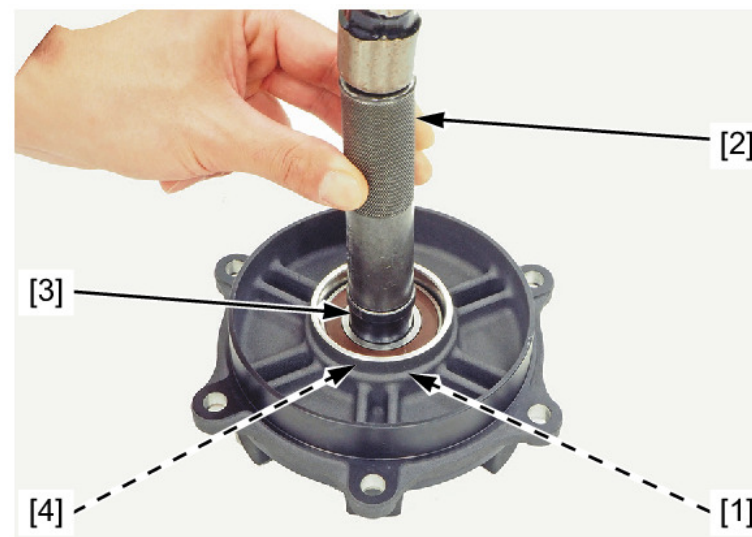

Drive the driven flange bearing [1] out of the driven flange [2] using the special tools.

**TOOLS:**

|                              |                               |
|------------------------------|-------------------------------|
| Driver handle, 15 x 135L [3] | <a href="#">07749-0010000</a> |
| Attachment, 42 x 47 mm [4]   | <a href="#">07746-0010300</a> |
| Pilot 28 mm [5]              | <a href="#">07746-0041100</a> |

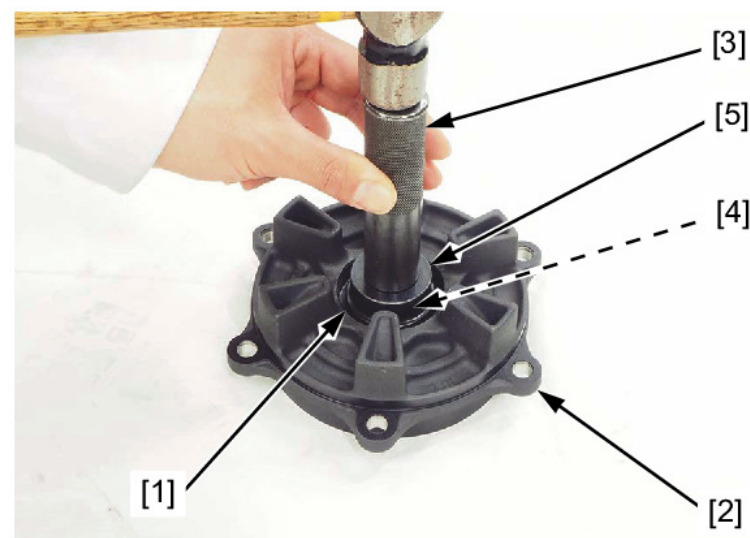

Install the remover head 20 mm [1] into the wheel bearing.

From the opposite side, install the bearing remover shaft 14 x 400L [2] and drive the wheel bearing out of the wheel hub.

**TOOLS:**

Remover head 20 mm [07746-0050600](#)

Bearing remover shaft 14 x 400L [07GGD-0010100](#)

Remove the distance collar and drive the other wheel bearing out.



Drive in a new right wheel bearing [1] squarely until it is fully seated.

**TOOLS:**

Driver handle, 15 x 135L [2] [07749-0010000](#)

Attachment, 42 x 47 mm [3] [07746-0010300](#)

Pilot 20 mm [4] [07746-0040500](#)

**NOTE:**

- Replace the driven flange and wheel bearings as a set.
- Do not reuse old bearings.

Install the distance collar.

Drive in a new left wheel bearing squarely until it is seated on the distance collar.




Drive in the rear wheel distance collar B [1] to a new driven flange bearing [2].

|  |                               |
|--|-------------------------------|
| <b>TOOLS:</b>                          |                               |
| Driver handle, 15 x 135L [3]           | <a href="#">07749-0010000</a> |
| Bearing driver attachment, 28 x 30 [4] | <a href="#">07946-1870100</a> |
| Pilot 20 mm [5]                        | <a href="#">07746-0040500</a> |

**NOTE:**

- Replace the driven flange and wheel bearings as a set.
- Do not reuse old bearing.

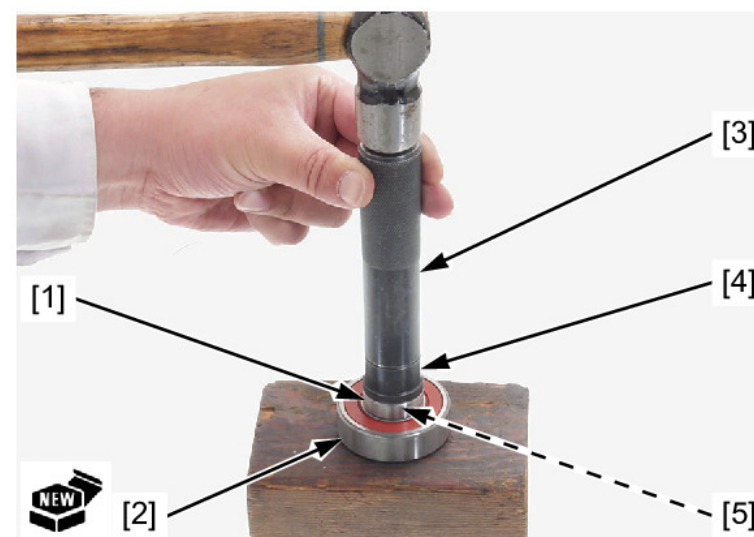

Drive in the driven flange bearing/rear wheel distance collar B [1] squarely with the rear wheel distance collar B side facing down until it is fully seated.

|                              |                               |
|------------------------------|-------------------------------|
| <b>TOOLS:</b>                |                               |
| Driver handle, 15 x 135L [2] | <a href="#">07749-0010000</a> |
| Attachment, 52 x 55 mm [3]   | <a href="#">07746-0010400</a> |
| Pilot 20 mm [4]              | <a href="#">07746-0040500</a> |

