

## REMOVAL/INSTALLATION


---

Remove the following:


- [Regulator/rectifier cover](#)
  - [Rear center cowl](#)
  - [Brake/taillight](#)
  - [Rear fender A](#)
  - [Battery](#)
- 

Release the following from the rear fender B:

- Power box [1]
- ABS FSR fuse box [2]
- Main2, DCT-M (DCT model), FI fuse box connector 4P (Black) clip [3]
- Main2 fuse box [4]
- DCT-M (DCT model), FI fuse box [5]
- Starter relay switch and cover [6]

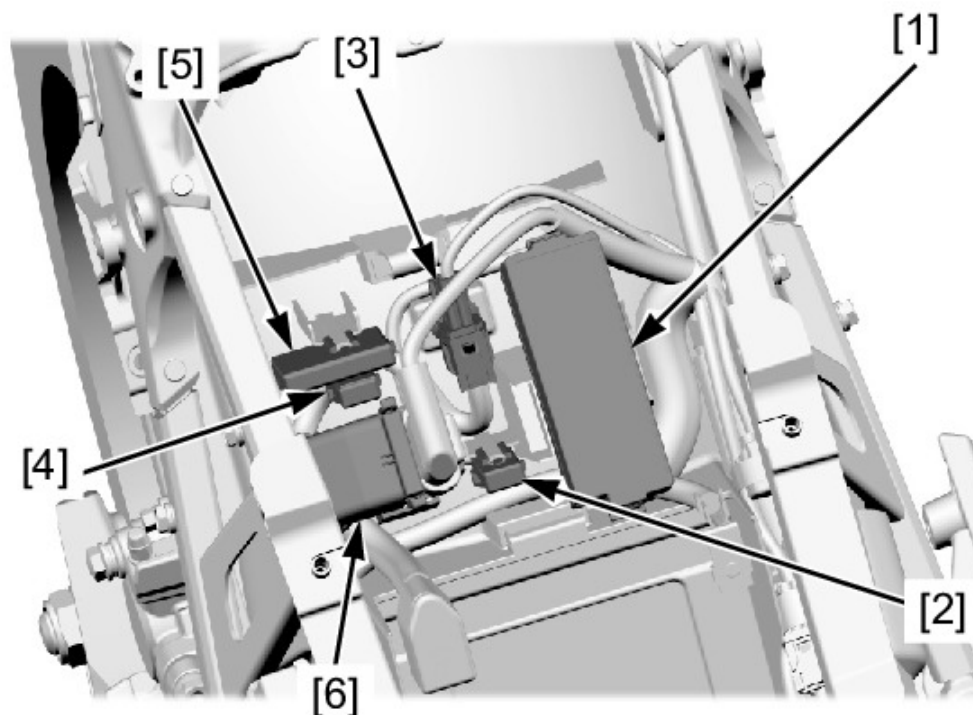



Release the connector cover [1] from the stay.  
Disconnect the license light 2P [2] and turn signal light 2P (Orange) [3] / (Light blue) [4] connector.

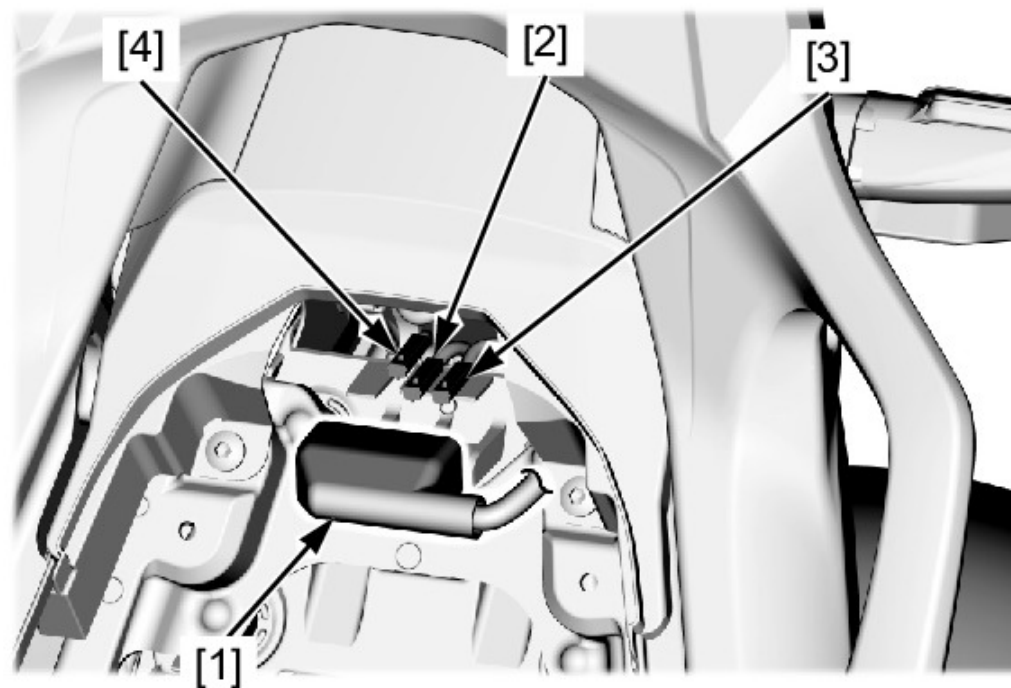

Release the following from the rear fender B:

- License light, turn signal light harness band clip [1]
- DLC [2]
- Brake/taillight harness band clip [3]

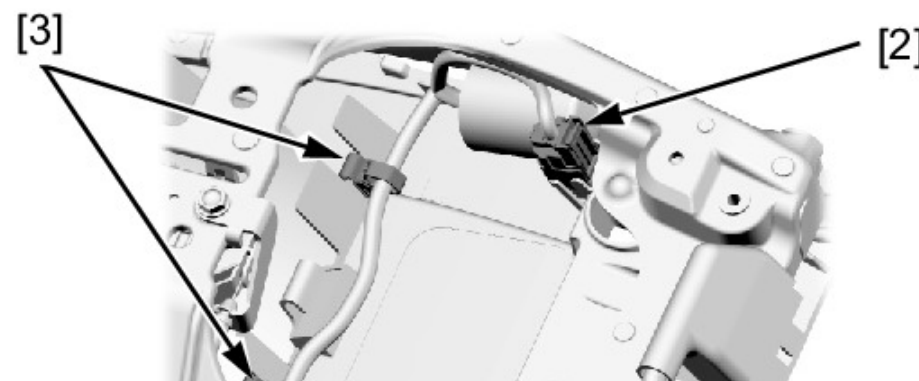


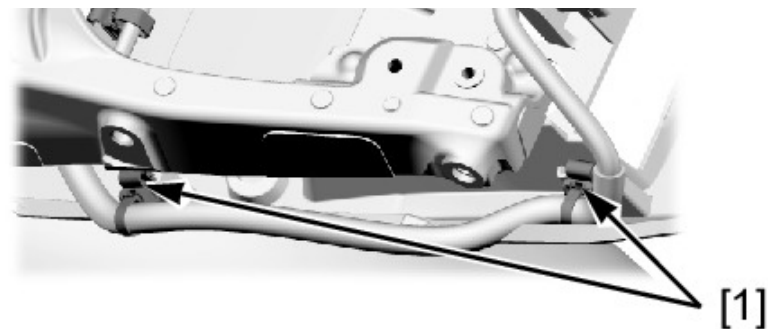

---


Release the following from the rear fender B:


- Brake/taillight and DLC harness band clip [1]
- Brake/taillight harness connector [2]

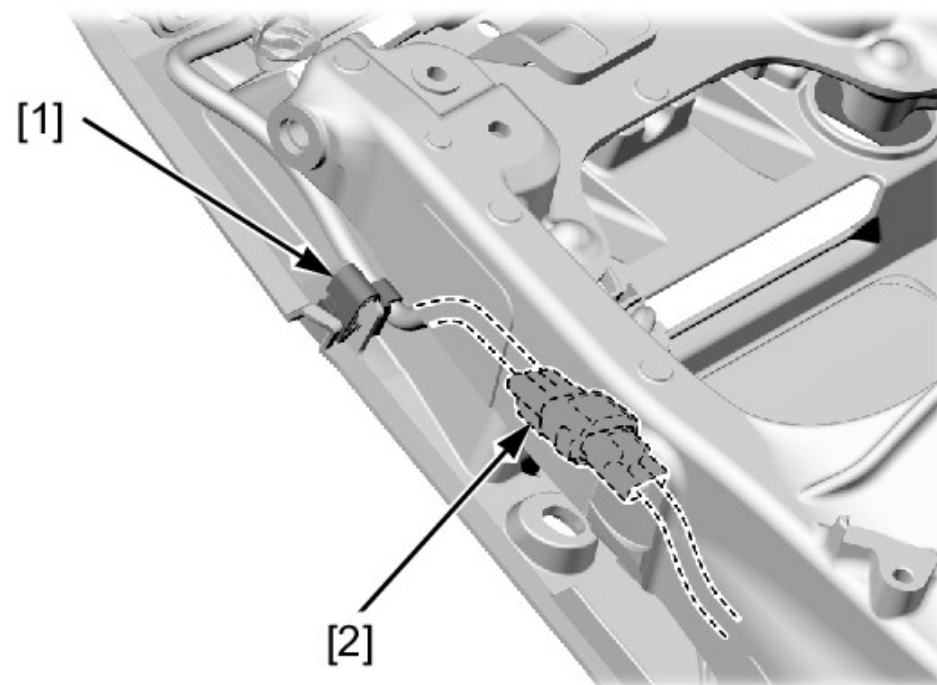

Remove the following from the rear fender B:

- Bolts [1]
- Washers [2]
- Collars [3]
- Rear fender A stay [4]

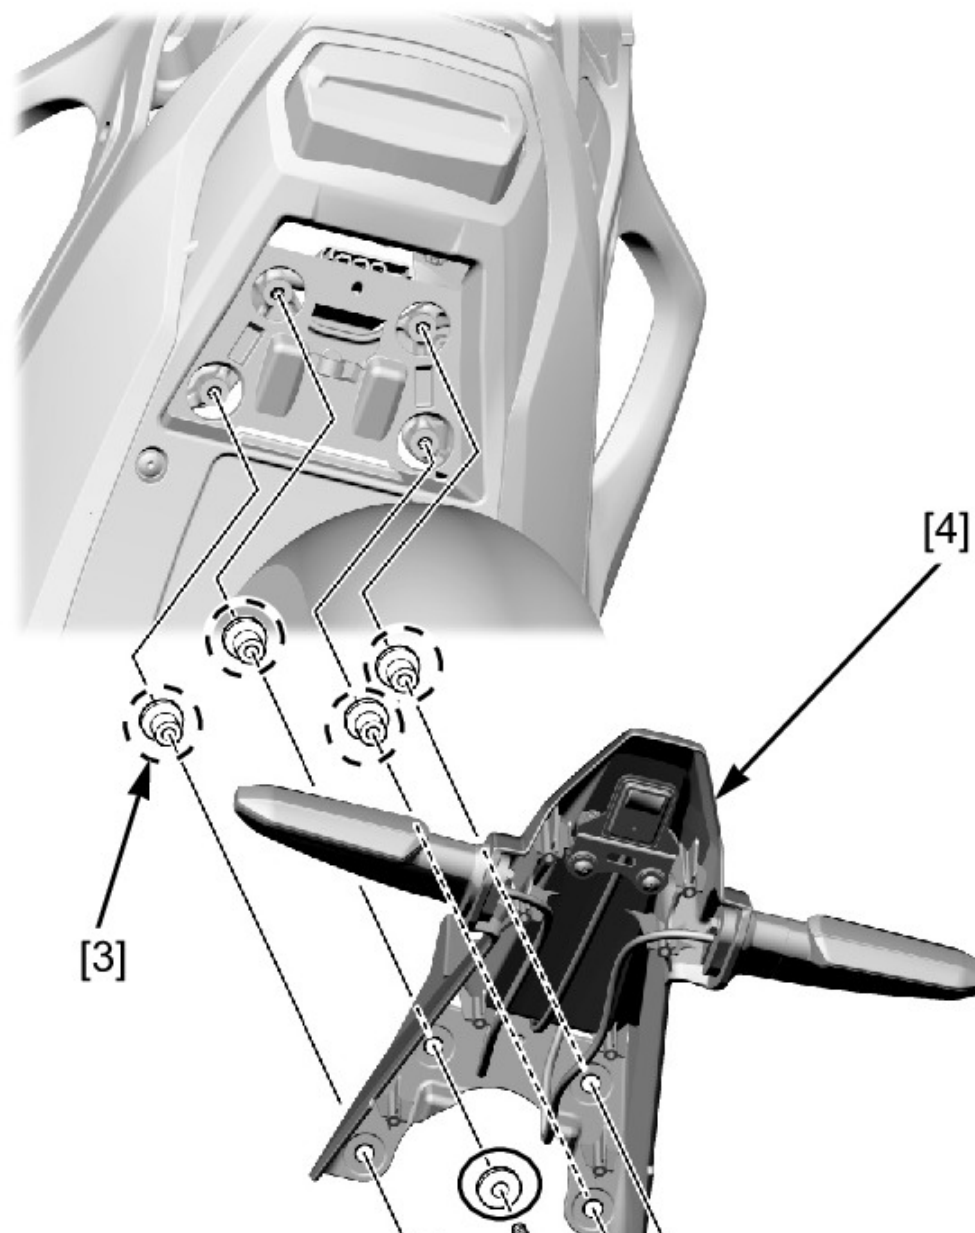

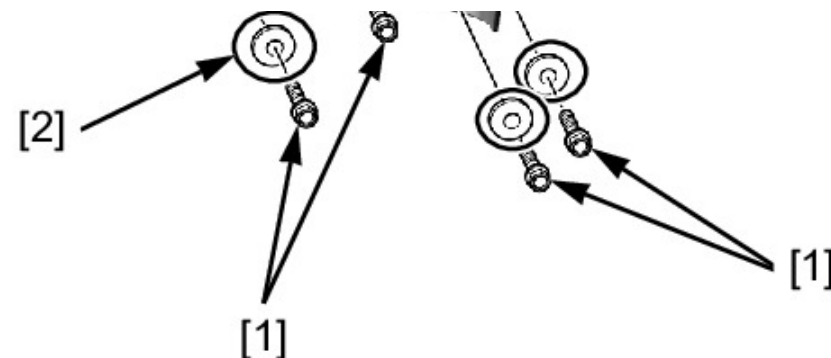

Remove the following:

- Socket bolts A [1]
- Socket bolts B [2]
- Rear fender B [3]

Installation is in the reverse order of removal.

**NOTE:**

- Place the rear fender B hooks [4] onto the seat rail [5].
- [Route the wires properly.](#)

