


ASSEMBLY


Replace the fuel filter [1] with a new one.
Apply engine oil to a new O-ring.
Install the O-ring [2] to new pressure regulator [3].
Install the pressure regulator.

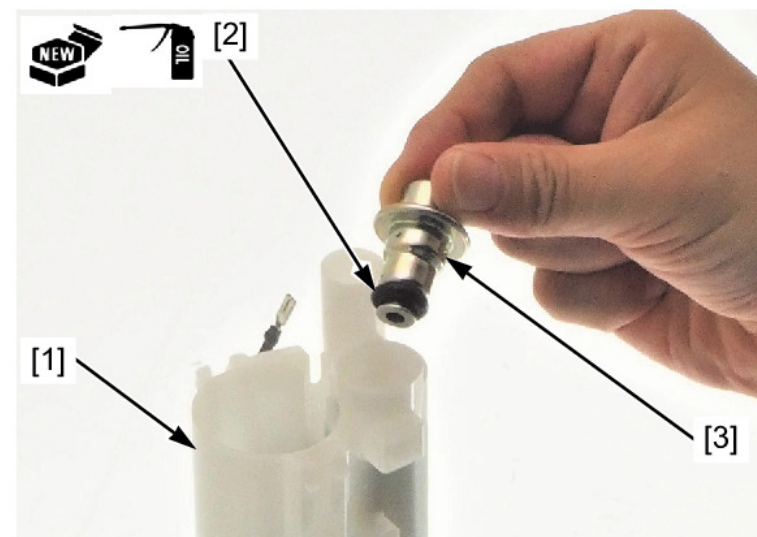


Apply engine oil to a new O-ring.
Install the O-ring [1] to the fuel pump [2].
Install the fuel pump.

NOTE:


- Align the Yellow wire [3] with the fuel filter groove [4].
- Lead the Green wire [5] through the hole [6] of the fuel filter as shown.

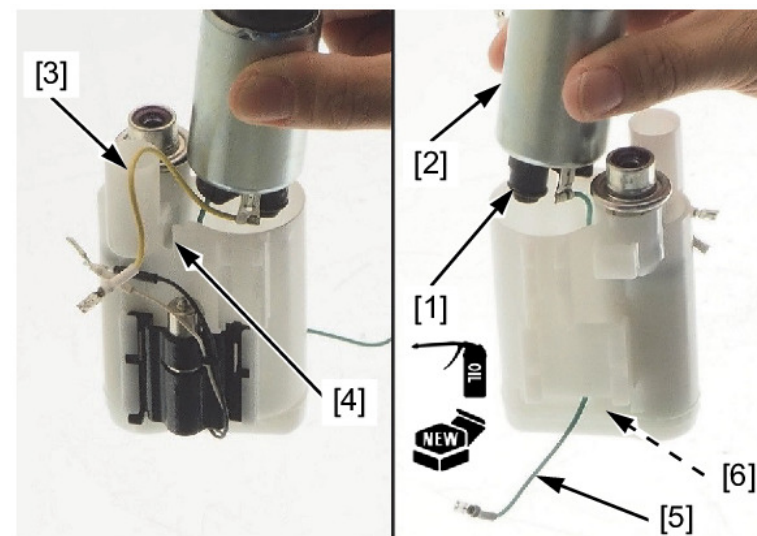

Set the Green wire [1] through the groove [2] of the fuel filter [3] as shown.

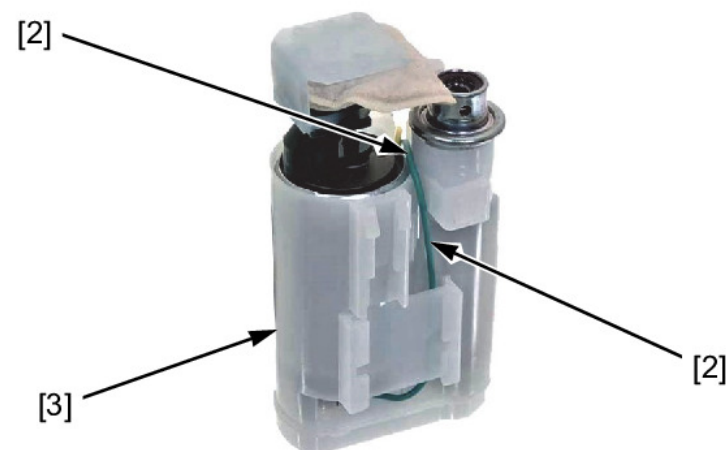

Apply engine oil to a new O-ring.
Install the O-ring [1] to the flange [2].
Install the fuel filter unit [3].

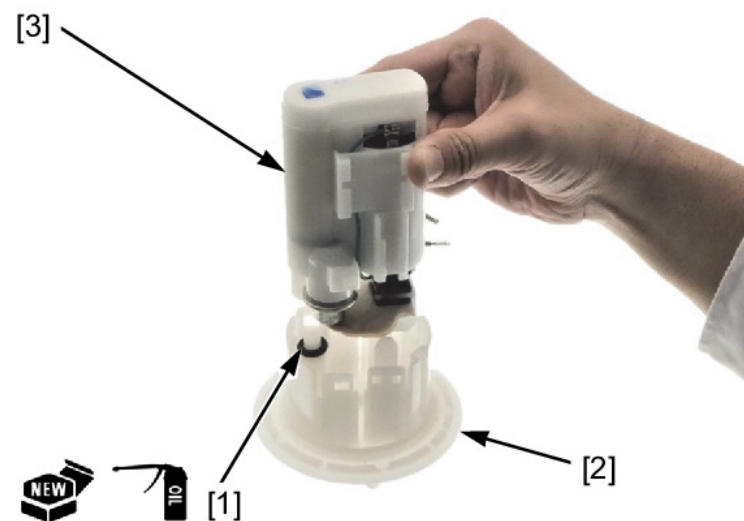

Install the following:

- Tabs [1]
- Yellow wire connector [2]
- Green wire connector [3]
- White wire connector [4]
- Black wire connector [5]

