

DTC READOUT

Start the engine and check the MIL.

[If the MIL stays on, connect the GST to the DLC or connect the MCS to the DLC.](#)

[Read the DTC, stored data and follow the DTC index.](#)

To read the DTC by the MIL blinks, refer to the following procedure.

Reading DTC with the MIL

Turn the ignition switch OFF.

[Remove the main seat.](#)

Remove the dummy connector [1] from the DLC.


Short the DLC terminals using a special tool.

TOOL:

SCS short connector [2] [070MZ-0010300](#)



CONNECTION: Yellow – Green/blue



[Turn the ignition switch ON, read, note the MIL blinks and refer to the DTC index.](#)

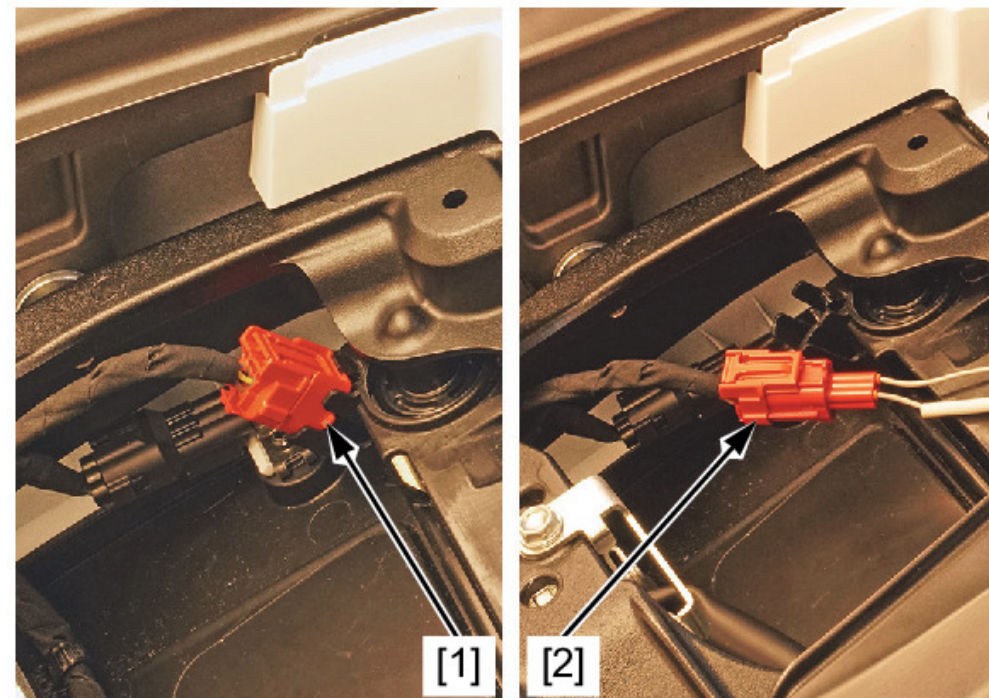

Reading DTC with the MID

1. Pull and hold the page switch [1] or touch the clock area [2] of the MID.
2. Select the "Settings", and then press the ENT switch [3].
Select the "Service" with pushing the sel up/down switch [4] or touch screen, and then press the ENT switch.
Select the "DTC" [5], and then press the ENT switch.

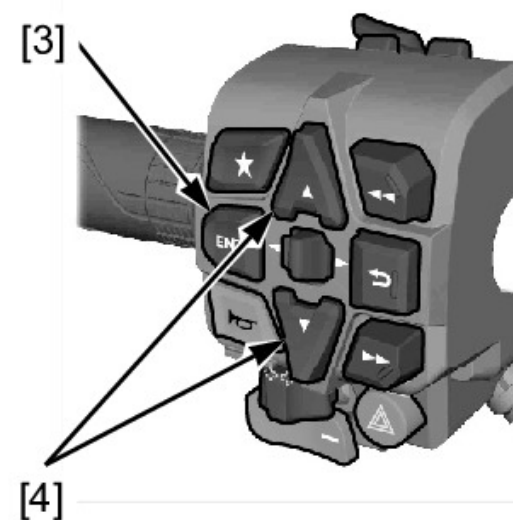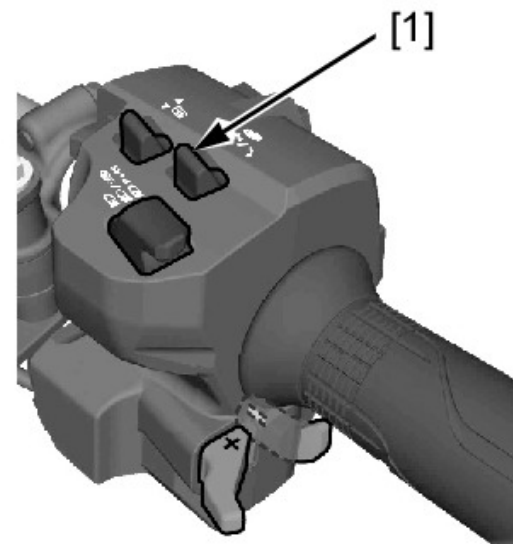

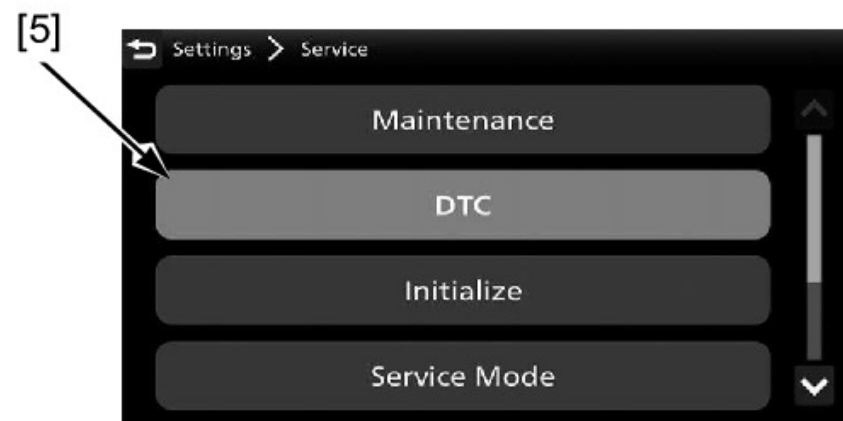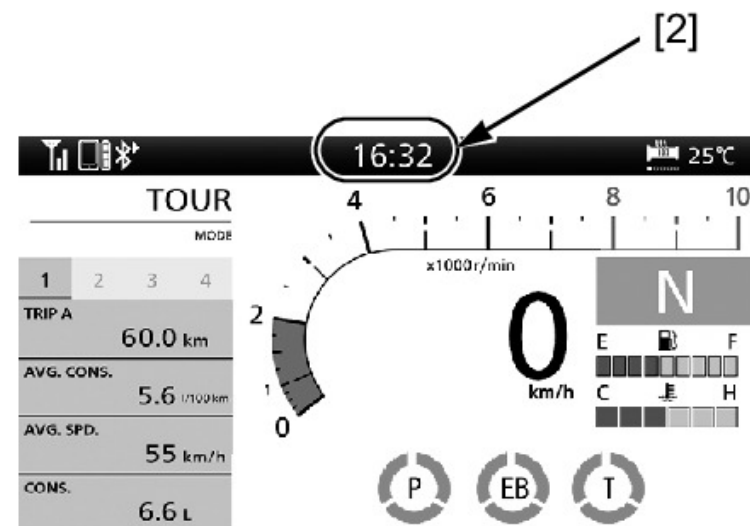

3. Read the DTC [1].

NOTE:

- For returning to the riding information, previous screen, or Home screen:

- Pull the page switch
- Touch the return icon [2] on the touch screen of the MID

