

REMOVAL/INSTALLATION

[Remove the shift spindle cover.](#)

! MT model:


Remove the following:

! DCT model:

- [Left rear cover](#)
- [Shift control motor cover](#)


Disconnect the sidestand switch 2P (Black) connector [1].

MT model shown:

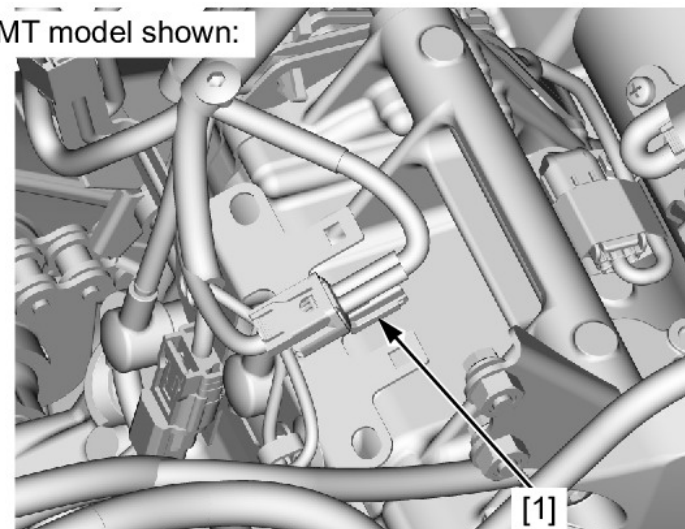


Remove the clamp [1].


! MT model:

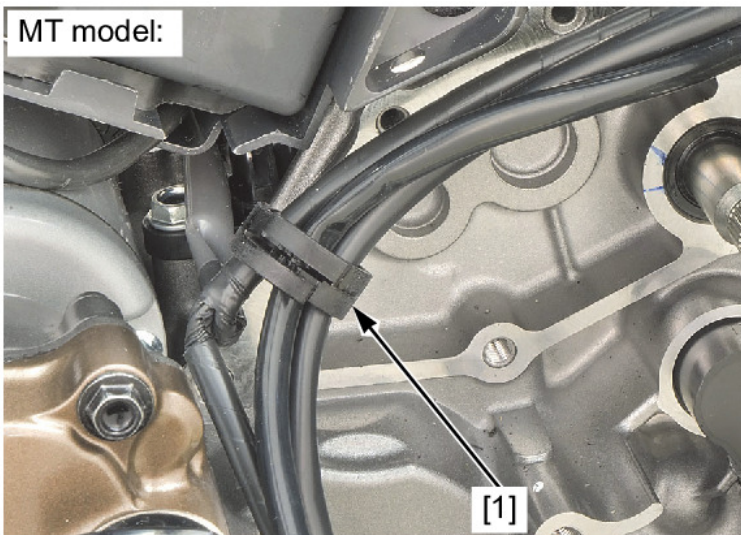

Remove the sidestand switch bolt [1] and sidestand switch [2].

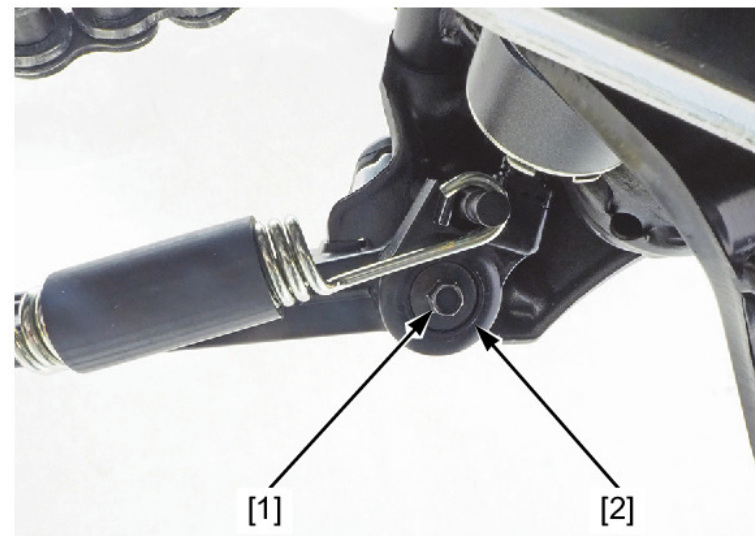

Remove the left main step bracket bolts [1] and left main step bracket [2].

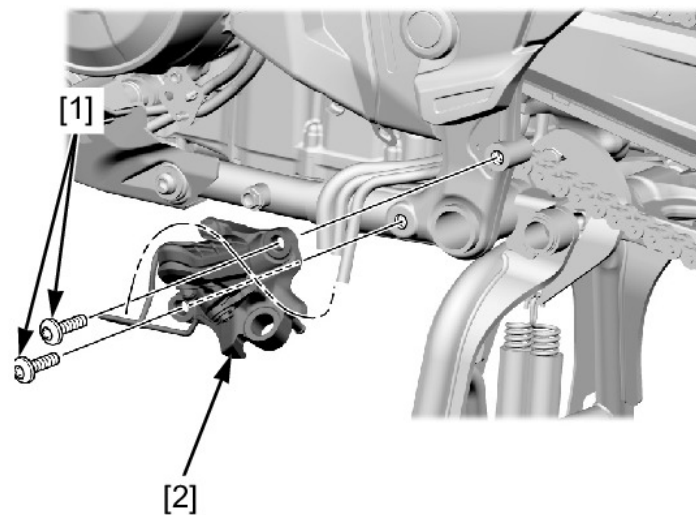

Installation is in the reverse order of removal.

TORQUE:**Left main step bracket bolt:****35 N·m (3.6 kgf·m, 26 lbf·ft)****Sidestand switch bolt:****10 N·m (1.0 kgf·m, 7 lbf·ft)****NOTE:**

- [Route the wires properly.](#)
- Align the sidestand switch tab [1] with the sidestand hole [2].
- Align the sidestand switch groove [3] with the return spring holding pin [4].
- Apply locking agent to the sidestand switch bolt [5] threads.
- Replace the sidestand switch bolt with a new one.

