

REMOVAL


Remove the fuel tank .

Clean around the fuel pump unit.

Loosen the fuel pump unit mounting nuts [1] in a crisscross pattern in 2 or 3 steps.

Remove the fuel pump unit mounting nuts.

Remove the set plate [2] and fuel pump unit [3].

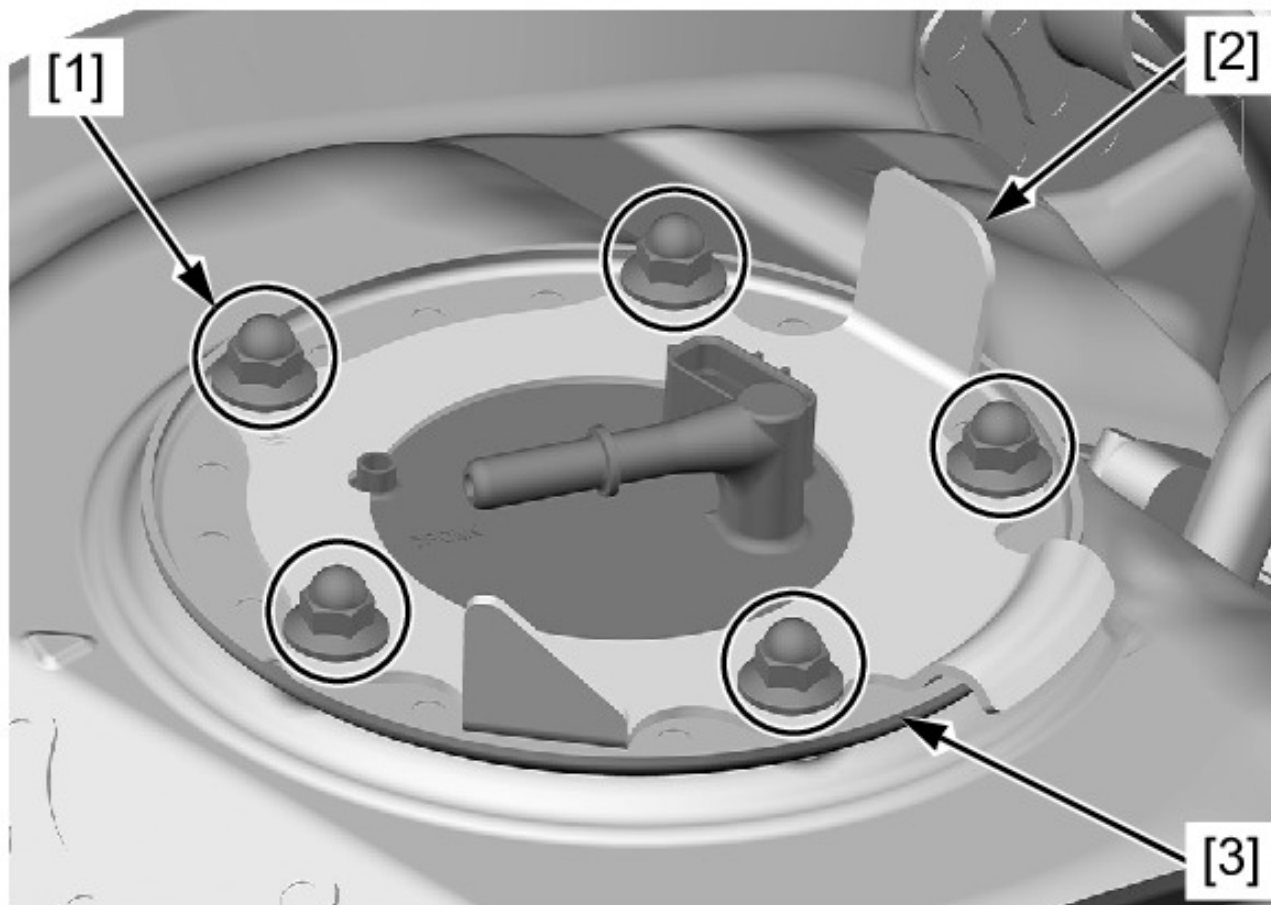

Remove the dust seal [1] and fuel pump gasket [2] from the fuel pump unit.

