


FRONT BRAKE PAD REPLACEMENT

Remove the front brake caliper mounting bolts [1] and front brake calipers [2].

NOTE:

- Do not operate the brake lever after removing the front brake calipers.

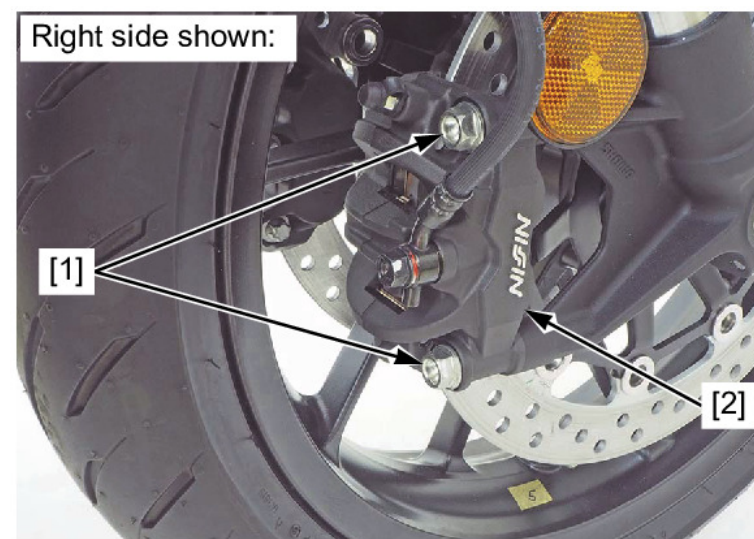

Remove the brake pads [1].
Check the pad spring [2] and replace if necessary.


NOTE:


- Install the pad spring with its arrow marks [3] facing up.

Install new brake pads.

NOTE:

- Align the pad lugs [4] with the caliper grooves [5].
- Make sure that the brake pads seat against the pad spring.

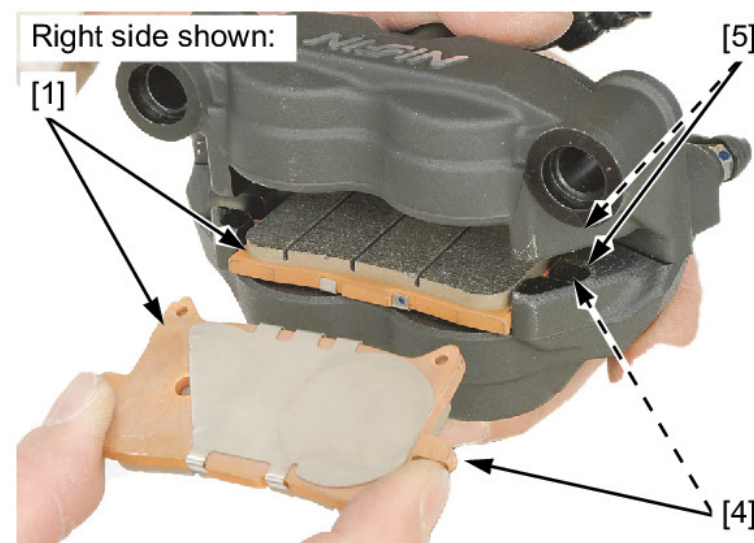

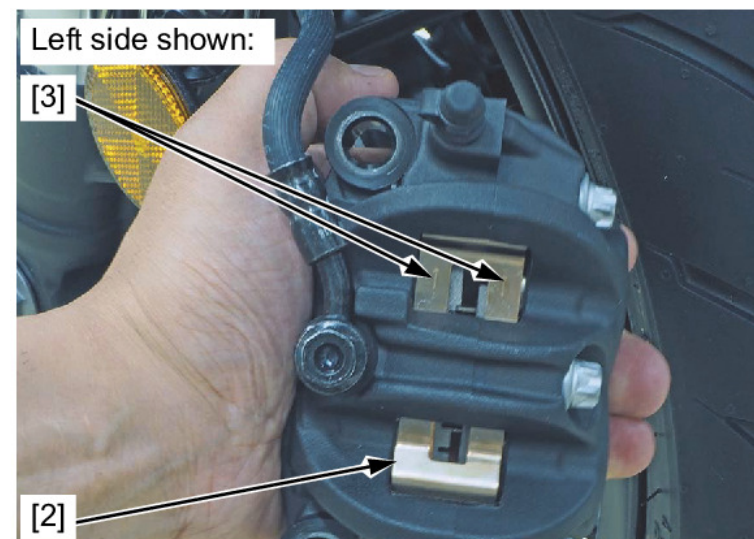

Apply locking agent to the front brake caliper mounting bolt [1] threads.
Install the front brake calipers [2] and new front brake caliper mounting bolts.

Tighten the front brake caliper mounting bolts to the specified torque.
TORQUE: 45 N·m (4.6 kgf·m, 33 lbf·ft)

Operate the brake lever to seat the caliper pistons against the pads.

