


IGNITION COIL TRAY REMOVAL/INSTALLATION

Remove the Following:

- [Radiator](#)
- [PAIR control solenoid valve stay](#)

Disconnect the No.1-2 spark plug cap [1].

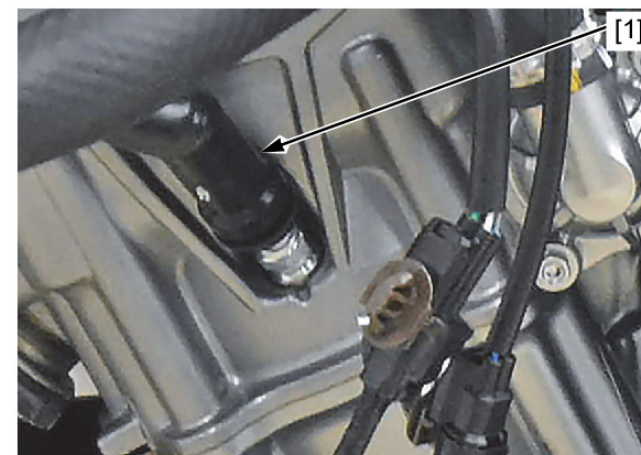


Disconnect the No.2-2 spark plug cap [1].



Release the immobilizer receiver 4P (Black) connector [1].
Disconnect the ignition sub harness 6P connector [2].



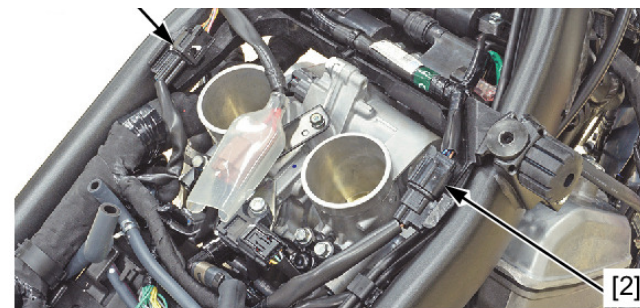

Release the bosses [1] from the grommets [2] by pulling the ignition coil tray assembly [3] rearward.
Disconnect the No.1-1 spark plug cap [4] and No.2-1 spark plug cap [5].

Remove the ignition coil tray assembly.

Installation is in the reverse order of removal.

NOTE:

- [Route the wires properly.](#)

