

AIR CLEANER

NOTE:

- The viscous paper element type air cleaner can not be cleaned because the element contains a dust adhesive.
- If the motorcycle is used in unusually wet or dusty areas, more frequent inspections are required.

[Remove the middle cowl.](#)

Release the tab [1] of the air duct from the inner cover.

Remove the screws [2].

Remove the air cleaner lid [3] from the air cleaner housing by pulling it forward to release the tabs [4].


Remove the air cleaner element mounting screws [5] and air cleaner element [6].

[Replace the air cleaner element in accordance with the MAINTENANCE SCHEDULE.](#)

Also replace the air cleaner element any time if it is excessively dirty or damaged.

Install the removed parts in the reverse order of removal.

Right side shown:

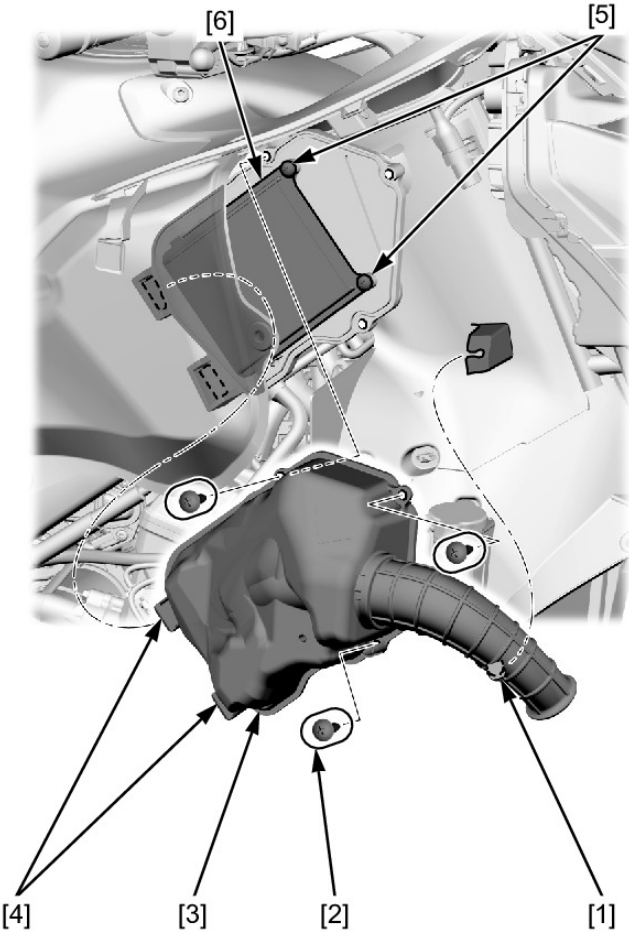

TORQUE:	
Air cleaner element mounting screw:	
1.1 N·m (0.11 kgf·m, 0.8 lbf·ft)	
Air cleaner cover screw:	
1.1 N·m (0.11 kgf·m, 0.8 lbf·ft)	