


SPROCKET INSPECTION

[Remove the left rear cover.](#)

Inspect the drive and driven sprocket teeth for wear or damage, replace if necessary.

Never use a new drive chain on worn sprockets.

Both chain and sprockets must be in good condition, or the replacement chain will wear rapidly.

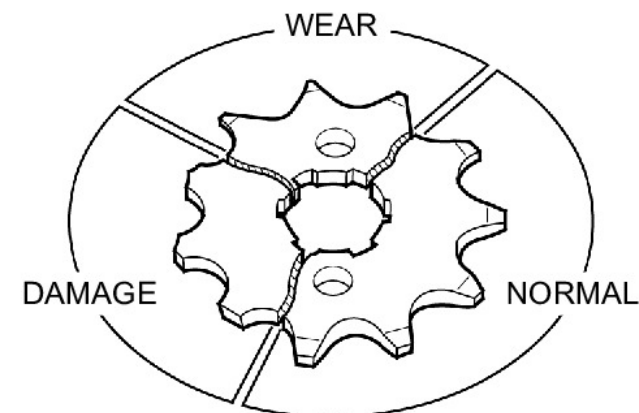

Check the drive sprocket bolt [1] and driven sprocket nuts [2] on the drive and driven sprockets. If any are loose, torque them.

TORQUE:

Drive sprocket bolt:
54 N·m (5.5 kgf·m, 40 lbf·ft)
Driven sprocket nut:
64 N·m (6.5 kgf·m, 47 lbf·ft)

[Install the left rear cover.](#)

