


## INSTALLATION

Install new dust seal [1] and fuel pump gasket [2] into the fuel pump unit properly.

**NOTE:**

- Always replace the packing with a new one.
- Be careful not to pinch any dirt or debris between the fuel pump unit and packing.

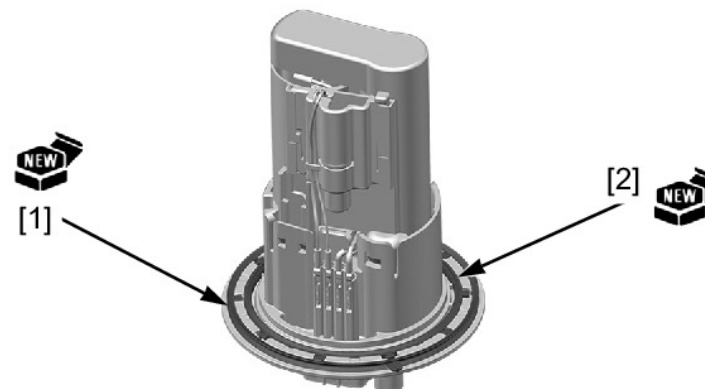

Install the fuel pump unit [1] and set plate [2] as shown.

Install the fuel pump mounting nuts [3] and tighten them to the specified torque in the sequence as shown.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

[Install the fuel tank.](#)

