


FUEL PRESSURE RELIEVING

NOTE:

- Before disconnecting the fuel hose, relieve pressure from the system as follows.

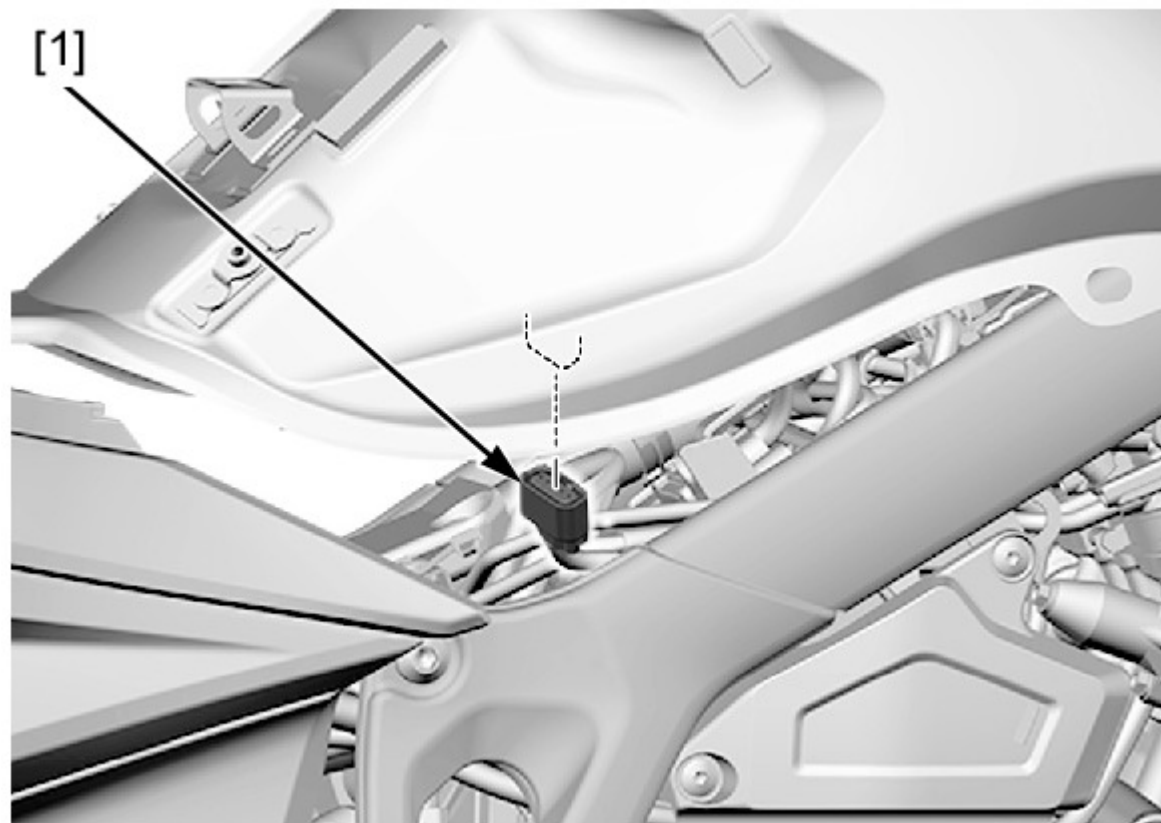

-
1. Turn the ignition switch OFF.
 2. [Lift and support the fuel tank.](#)
 3. Disconnect the fuel pump unit 5P (Black) connector [1].
 4. Start the engine and let it idle until the engine stalls.
 5. Turn the ignition switch OFF.

