

REMOVAL/INSTALLATION

NOTE:


- Clean around the spark plug base with compressed air before removing the spark plug, and be sure that no debris is allowed to enter the combustion chamber.
-

Remove the following:

- [Ignition coil tray](#)
- [Radiator](#)

Remove the No.1-2 plug [1] using the equipped spark plug wrench.

Remove the No.2-2 plug in the same manner.

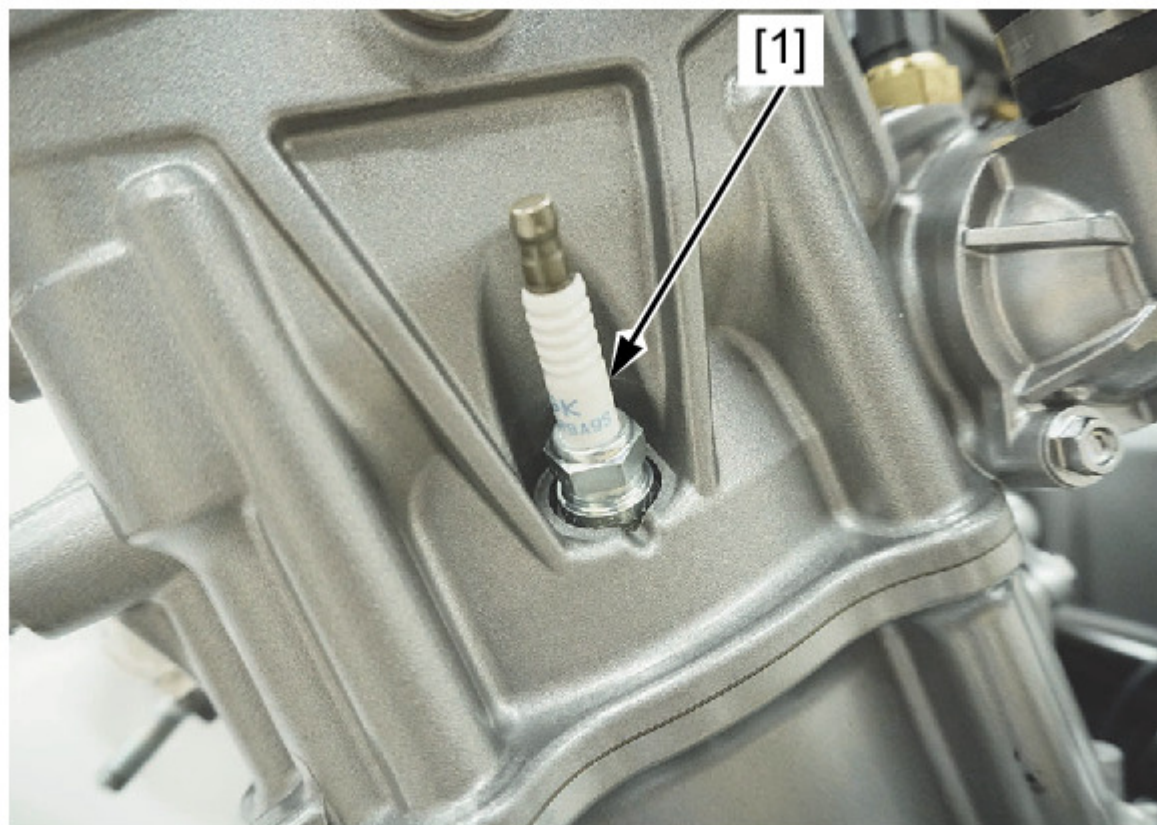

Remove the No.1-1 plug using the equipped spark plug wrench [1].

Remove the No.2-1 plug in the same manner.

[Inspect or replace the spark plugs as described in the MAINTENANCE SCHEDULE.](#)

Install and hand tighten the spark plug to the cylinder head, then tighten the spark plug to the specified torque using the spark plug wrench.

TORQUE:

Spark plug:

22 N·m (2.2 kgf·m, 16 lbf·ft)

NOTE:

- Replace new spark plugs as a set.

Install the following:

- [Radiator](#)
- [Ignition coil tray](#)

