

FUEL LINE


Remove the following:

- [Main seat](#)
- [Middle cowl](#)
- [Tank front cover](#)

Remove the bolt [1] and washer [2].

Lift the fuel tank [3] by releasing its grooves [4] from the mounting rubbers [5].

Support the fuel tank using a suitable support.

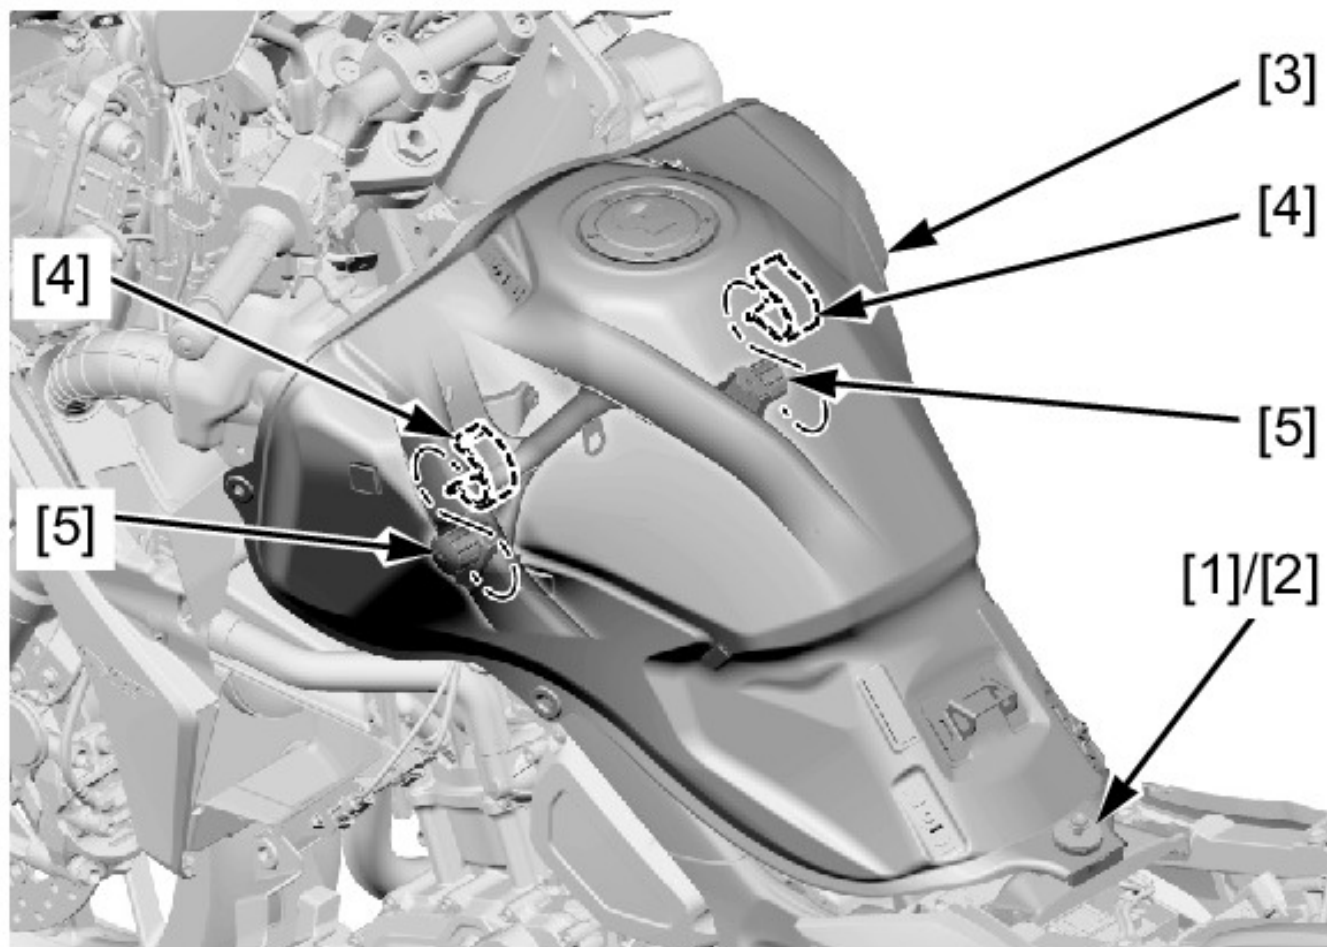

Check the fuel line [1] for deterioration, damage or leakage. Replace the fuel line if necessary.

Also check the fuel line fittings for leakage.

Install the removed parts in the reverse order of removal.

