


REMOVAL

[Remove the ignition coil tray.](#)

Release the following cable [1] to the clutch cable stay [2].


- Clutch cable (MT model)
- Parking brake cable (DCT model)

Remove the bolt [3] and cable stay.

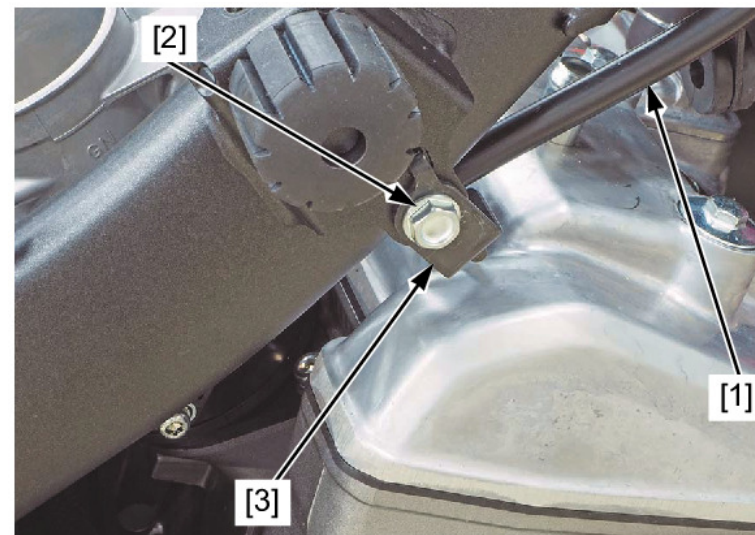


Disconnect the secondary air supply hose [1].

Remove the cylinder head cover bolts [2] and mounting rubbers [3].

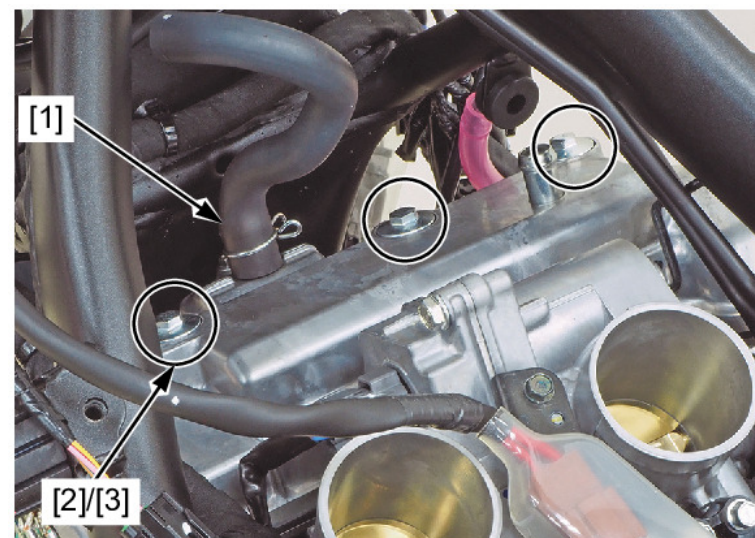

Remove the cylinder head cover [1] to the right side as shown.

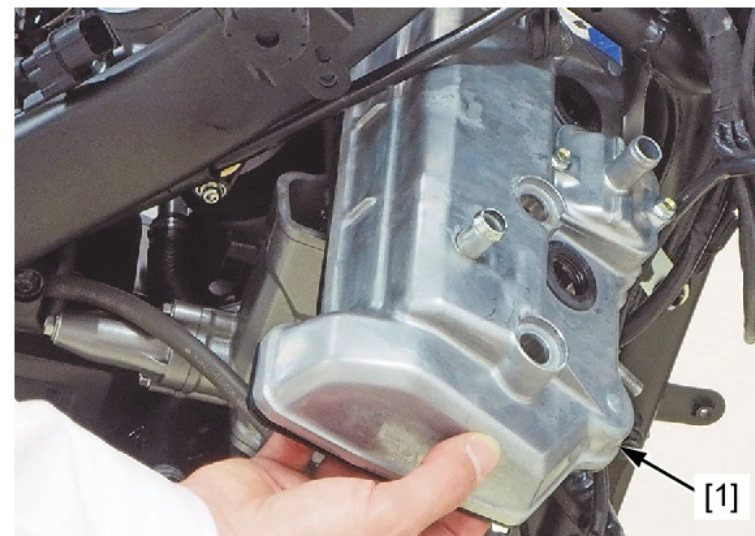

Remove the plug pipe seals [1] and cylinder head cover packing [2] from the cylinder head cover.

