

REMOVAL/INSTALLATION


Remove the following:

- [Heel guard](#)
 - [Pillion steps](#)
 - [Seat catch hook](#)
 - [ABS modulator](#)
 - [Rear fender B](#)
-

Remove the rear master cylinder reservoir mounting bolt [1] and release the rear master cylinder reservoir [2].

NOTE:


- Keep the rear master cylinder reservoir upright to prevent air from entering the hydraulic system.

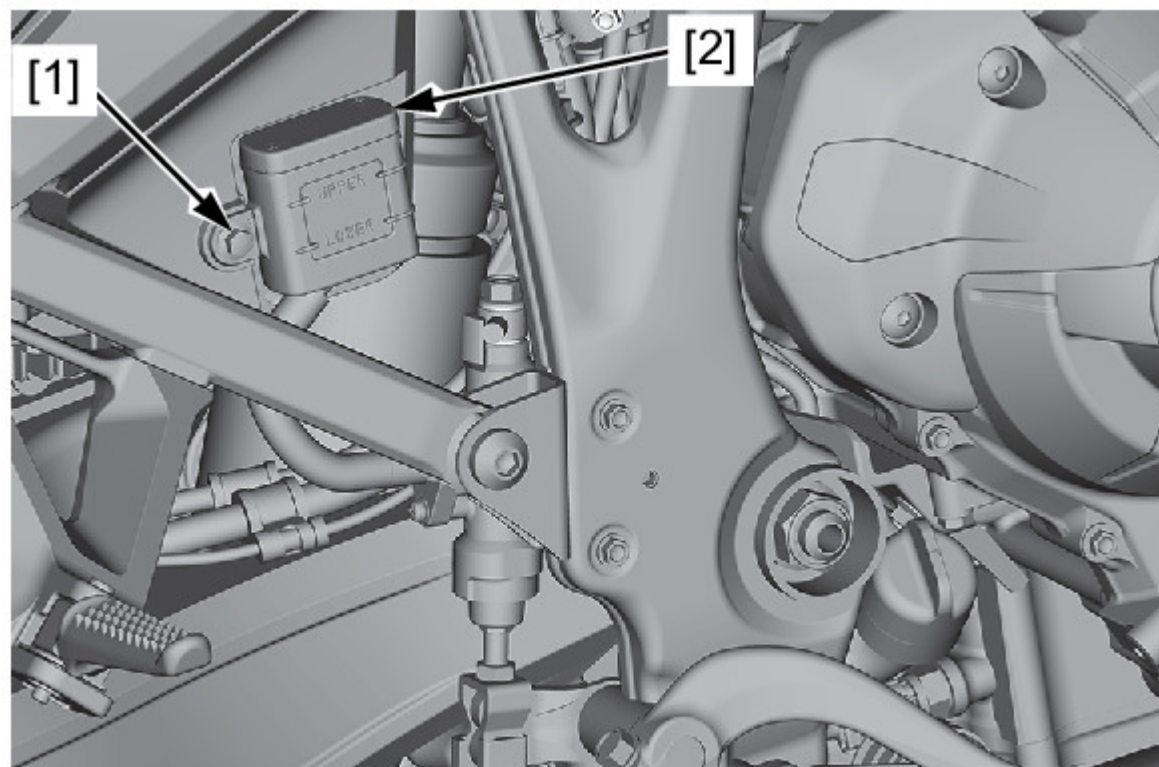



Remove the following:

- Seat rail socket bolts (short) [1]
- Seat rail socket bolts (long) [2]
- Washers [3]
- Nuts [4]
- Seat rail [5]

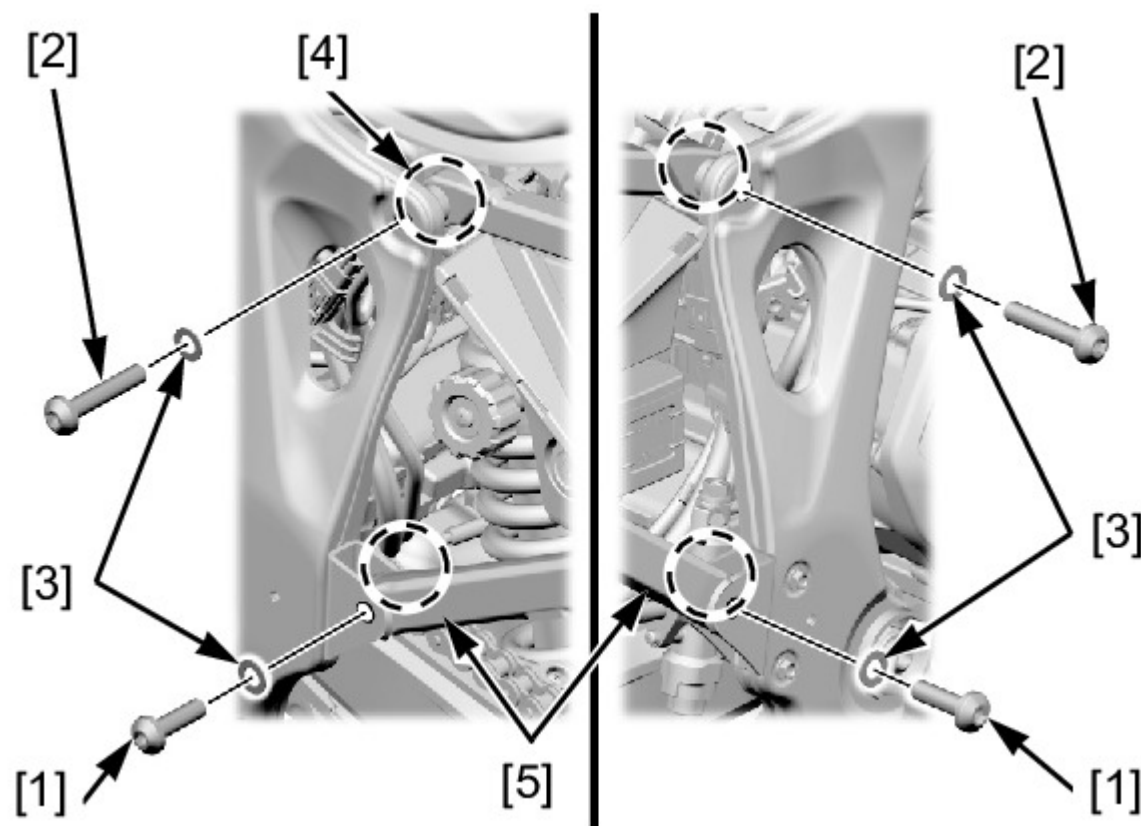

Remove the following from the seat rail [1]:

- Socket bolts [2]
- Left/right rear fender B covers [3]
- ABS modulator box [4]

[5]



- Collars [5]

Installation is in the reverse order of removal.

TORQUE:

Seat rail socket bolt:
44 N·m (4.5 kgf·m, 32 lbf·ft)
Rear master cylinder reservoir mounting bolt:
10 N·m (1.0 kgf·m, 7 lbf·ft)

NOTE:

- [Route the hose, wire, and cable properly.](#)
- [For seat lock cylinder removal/installation.](#)

