


INSPECTION

Visually inspect the thermostat [1] for damage.
Check the thermostat rubber [2] for damage and replace if necessary.

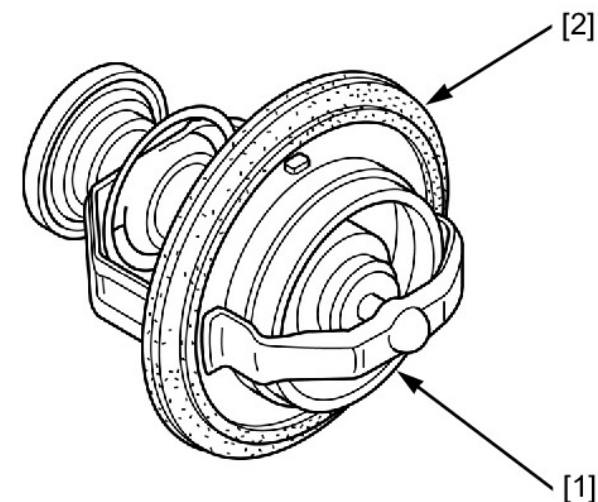

Heat a container of water with an electric heating element for 5 minutes.
Suspend the thermostat [1] in heated water to check its operation.

THERMOSTAT BEGIN TO OPEN:**80 – 84°C (176 – 183°F)****VALVE LIFT:****8 mm (0.3 in) minimum at 95°C (203°F)****NOTE:**

- Do not let the thermostat or thermometer [2] touch the container, or you will get a false reading.

Replace the thermostat if the valve opens at a temperature other than those specified.

