


REMOVAL

Remove the sidestand switch bolt [1] and sidestand switch [2].

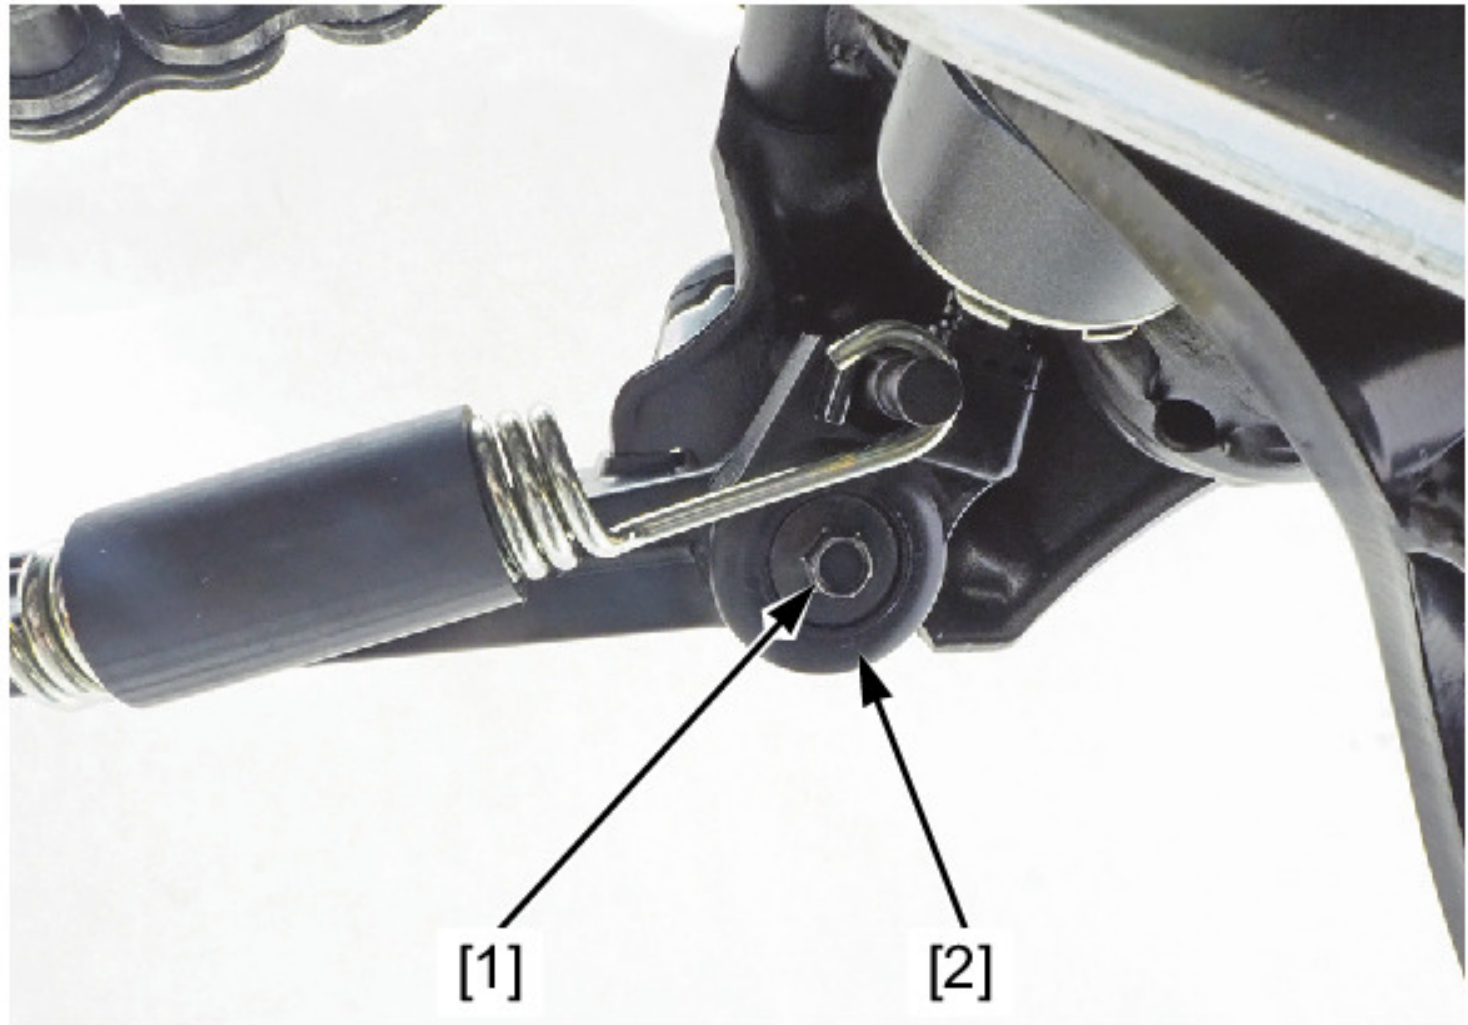

Support the motorcycle securely using a Mainstand, hoist or equivalent.

Remove the sidestand return spring [1].

Remove the sidestand pivot nut [2] and bolt [3], then remove the sidestand [4] and collar [5].

