


DISASSEMBLY/INSPECTION


Disconnect the following:

- Yellow wire connector [1]
- Green wire connector [2]
- White wire connector [3]
- Black wire connector [4]

Release the tabs [5].

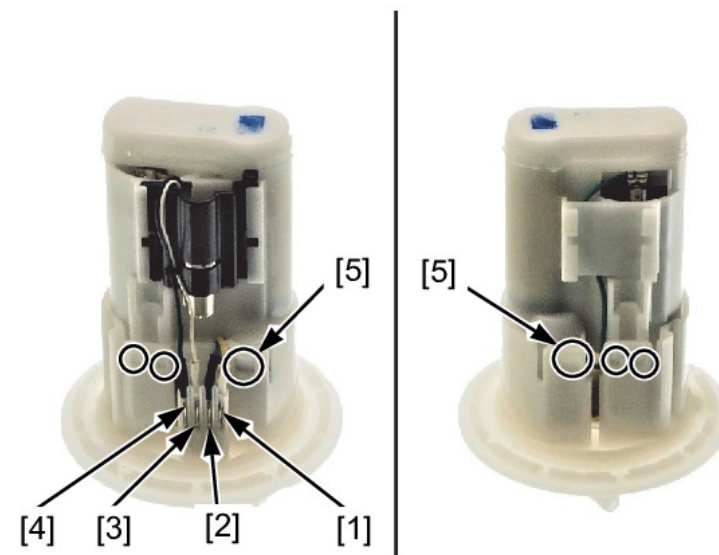

Remove the fuel filter unit [1] and O-ring [2] from the flange [3].

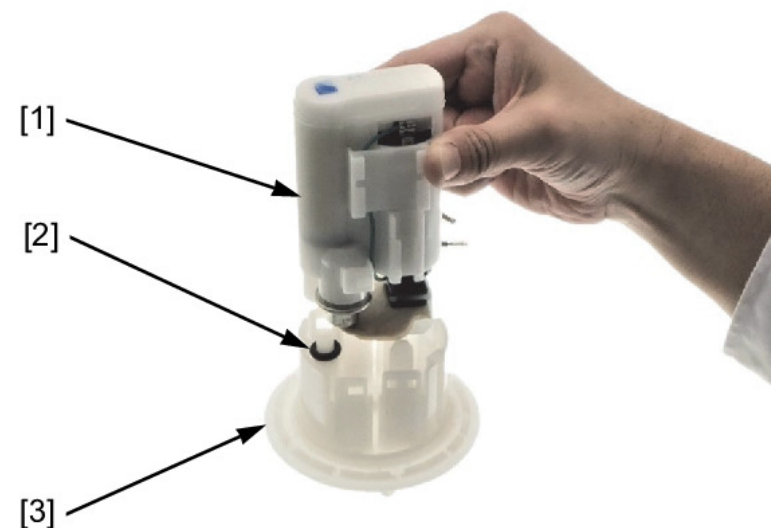

Remove the fuel pump [1] and O-ring [2].
Visually inspect the suction filter for dirt, debris, or any clogging.
Replace fuel pump unit as an assembly if the suction filter is abnormal.
Remove the pressure regulator [3] and O-ring [4] from the fuel filter [5].

