



REMOVAL/INSTALLATION

[Drain the coolant.](#)

[Remove the Inner covers.](#)

Release the following from the radiator shroud:


- Fog light 2P (Black) connectors [1]
- A/F sensor 4P (Black) connectors [2]
- Wire clips [3]

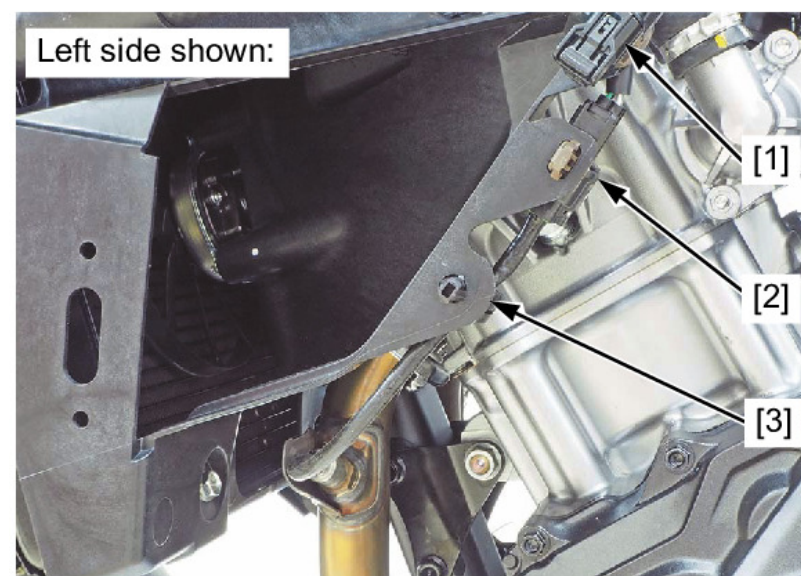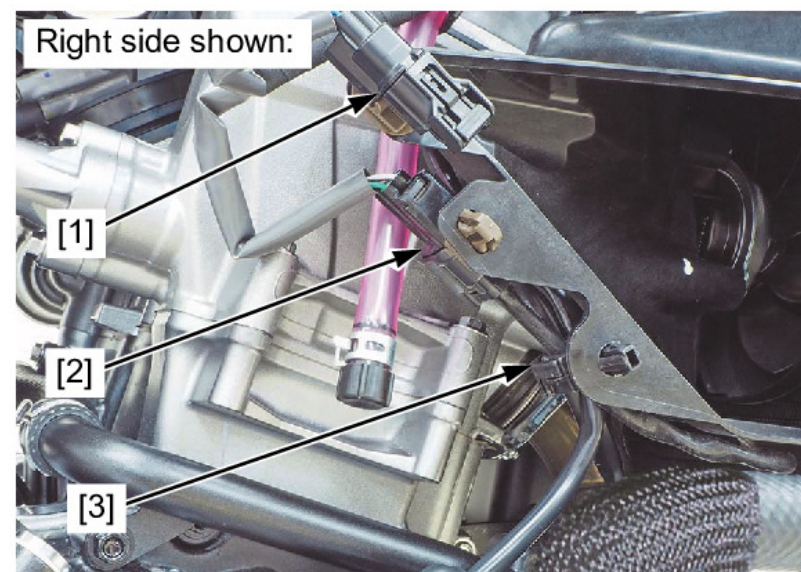


Disconnect the siphon hose [1].




Loosen the hose band screw [1].
Disconnect the lower radiator hose [2].

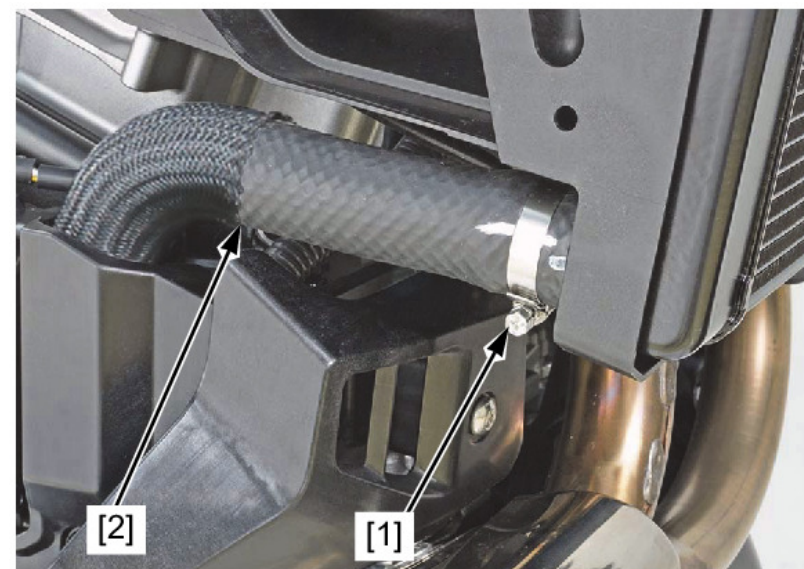


Loosen the hose band screw [1].
Disconnect the upper radiator hose [2].

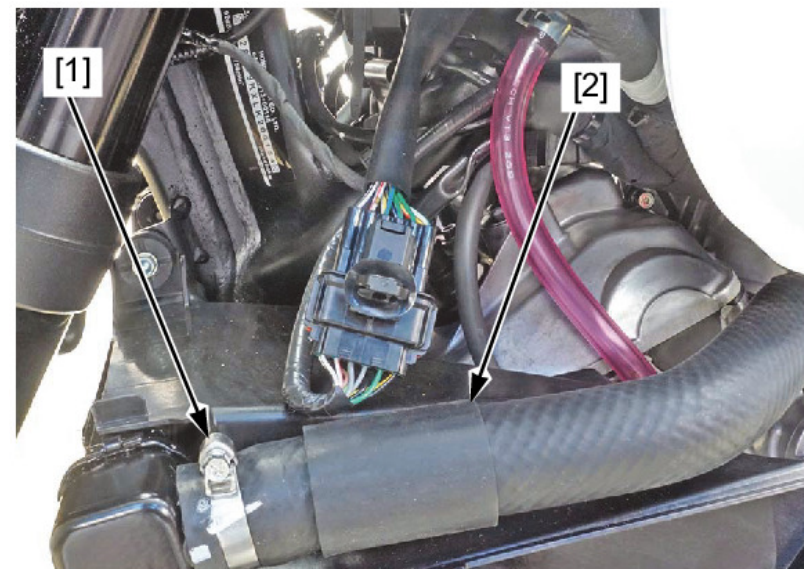


Remove the bolts [1].


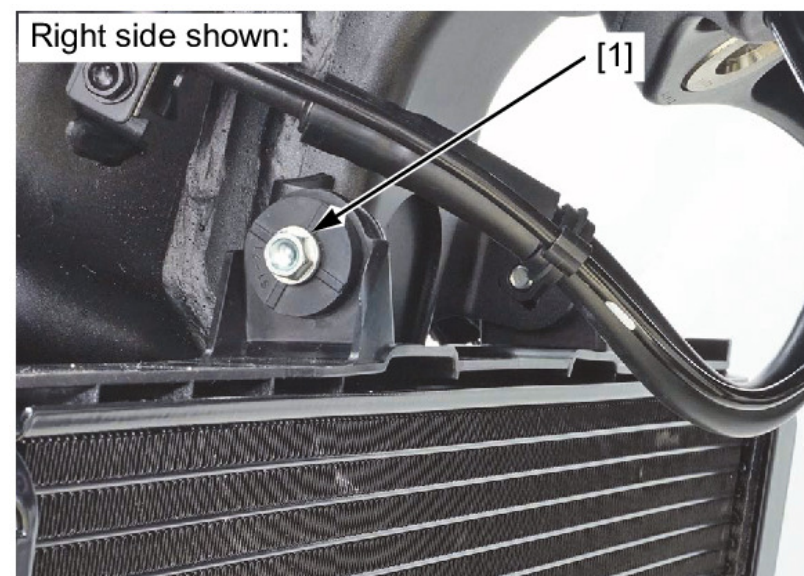


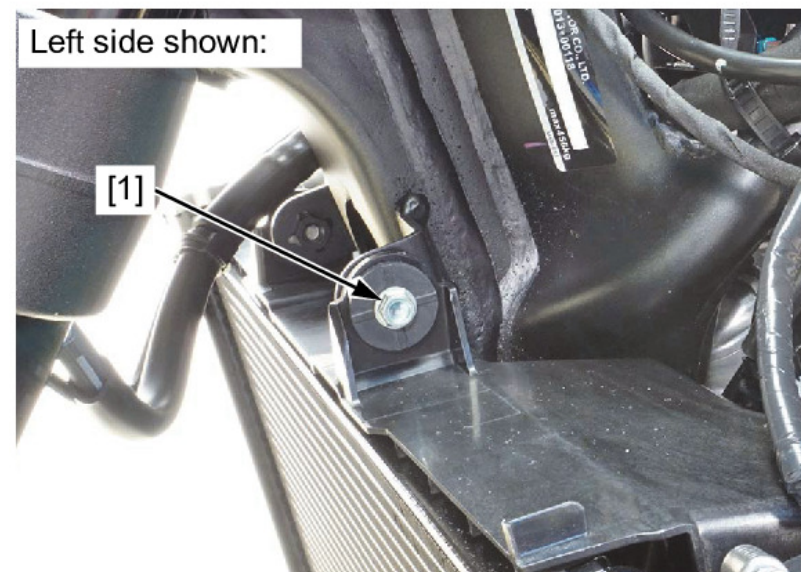

Flip the radiator forward.

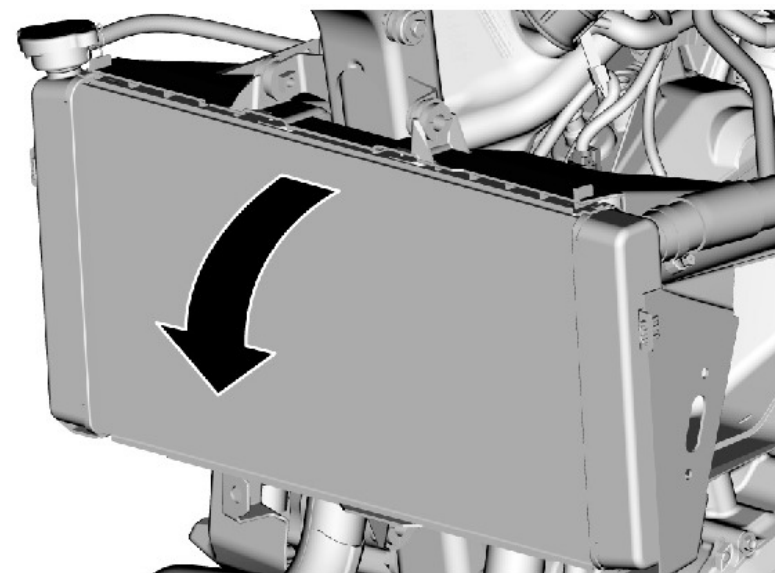


Disconnect the fan motor 2P (Black) connectors [1].

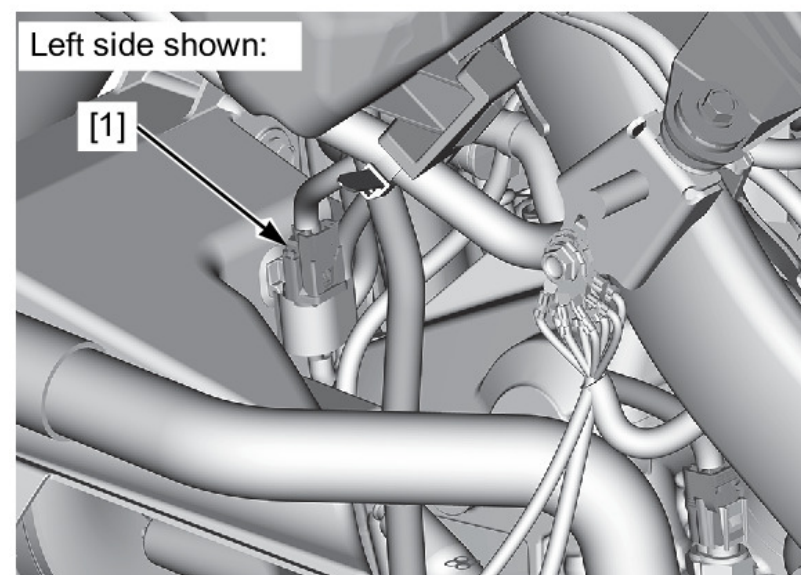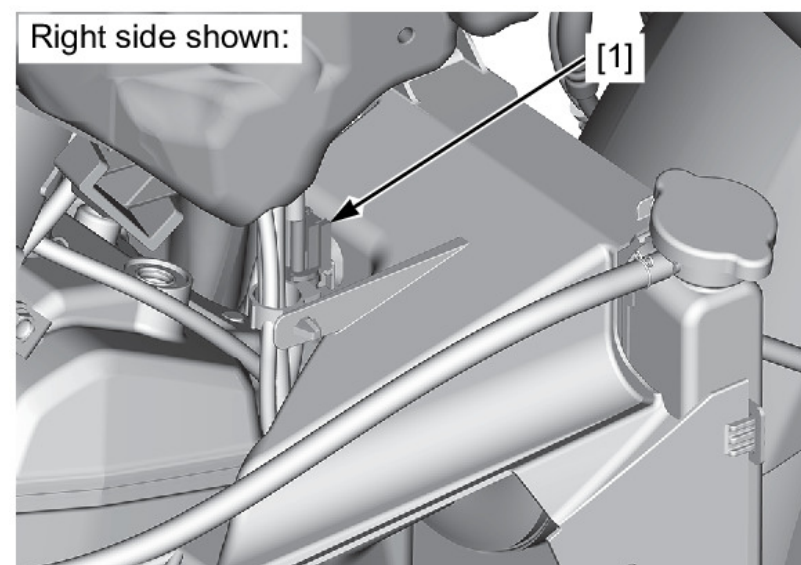

Remove the following:



- Bolt [1]
- Radiator

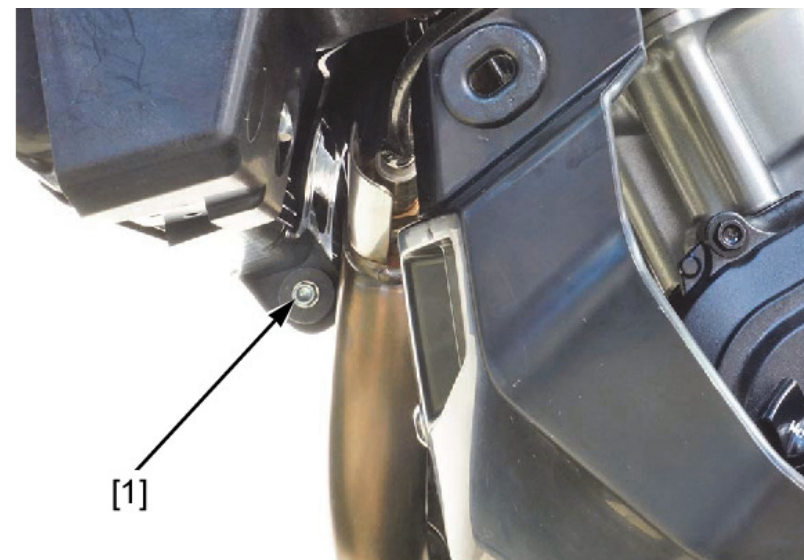

Installation is in the reverse order of removal.

NOTE:

- Tighten the water hose band screws to the specified range as shown.
- [Route the hoses and wires properly](#).

[Fill the recommended coolant mixture to the filler neck and bleed the air](#).

