


## REMOVAL/INSTALLATION

Remove the pinch bolt [1] and gearshift arm [2] from the gearshift spindle [3].

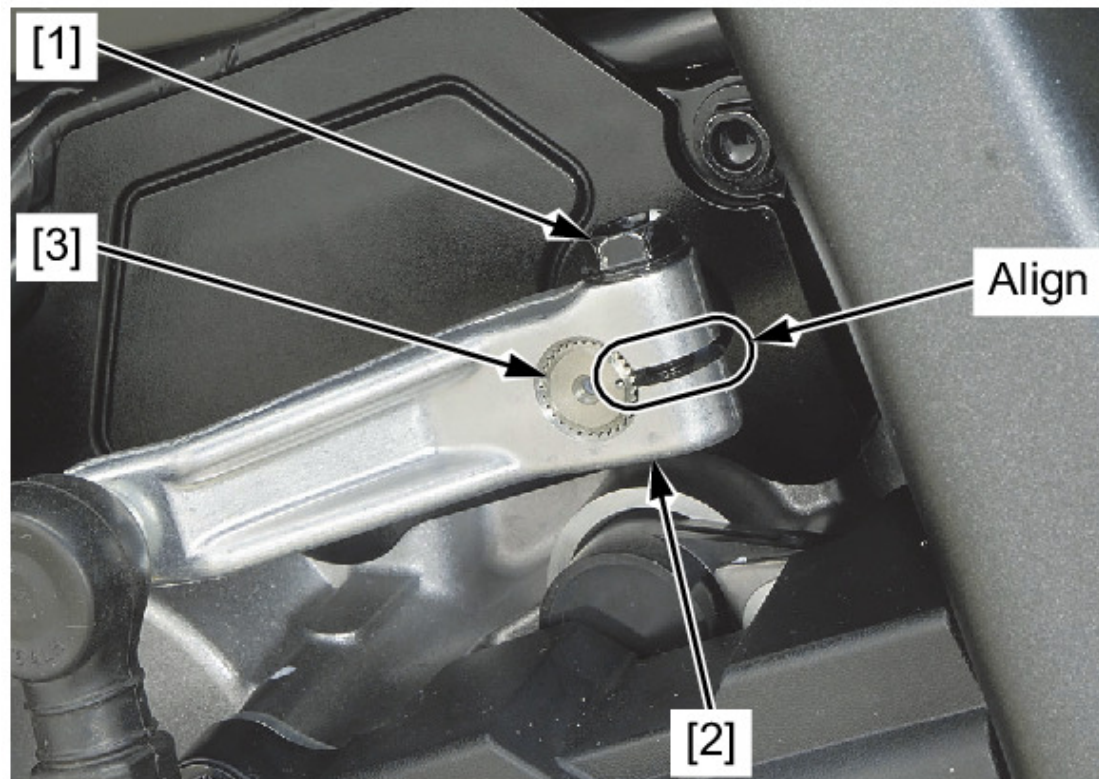


Remove the gearshift pedal pivot bolt [1].  
Remove the gearshift pedal [2] and washer [3].  
Remove the dust seals [4].  
Check the dust seals and tie-rod ball joint dust cover for deterioration or damage, replace them if necessary.  
Installation is in the reverse order of removal.

**TORQUE:**



**Gearshift pedal pivot bolt:****27 N·m (2.8 kgf·m, 20 lbf·ft)****NOTE:**

- Apply grease to the dust seal lips.
- Install the dust seals with the seal lip side facing out.
- Apply grease to the gearshift pedal pivot sliding area (grease groove) of the pivot bolt.
- Align the slit of the gearshift arm with the punch mark on the spindle.

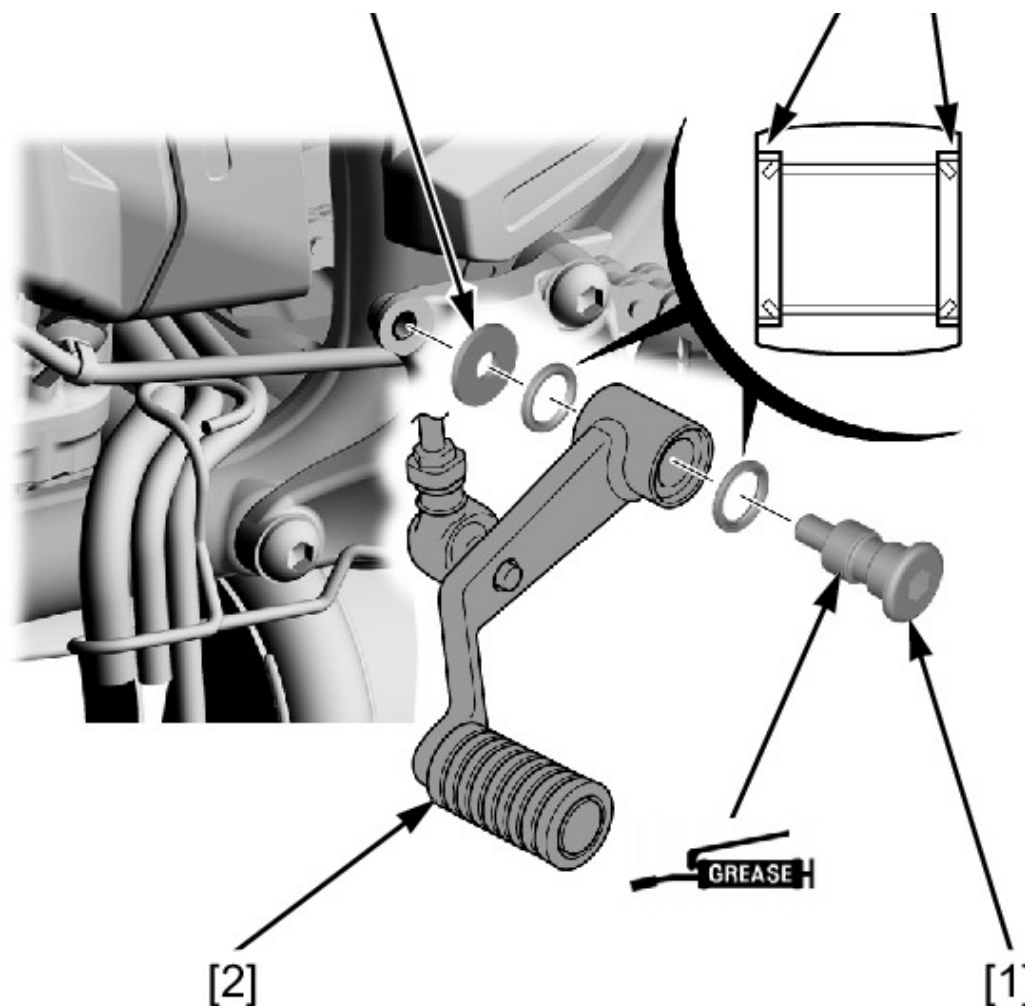

When adjusting the gearshift pedal height, perform the procedure as follows:

Loosen the lock nuts [1].

**NOTE:**

- The gearshift arm side lock nut has left hand threads.

Adjust the tie-rod [2] length so that the distance between the ball joint ends is standard length as shown.  
After adjustment, tighten the lock nuts securely.

