

HANDLEBAR LOWER HOLDER REMOVAL/INSTALLATION


Loosen the handlebar lower holder nuts [1].

Remove the following:

- Handlebar upper holder bolts [2]
- Handlebar upper holders [3]
- Handlebar [4]

Remove the following:

- Handlebar lower holder nuts
- Washers [5]
- Handlebar lower holders [6]
- Damper rubbers [7]

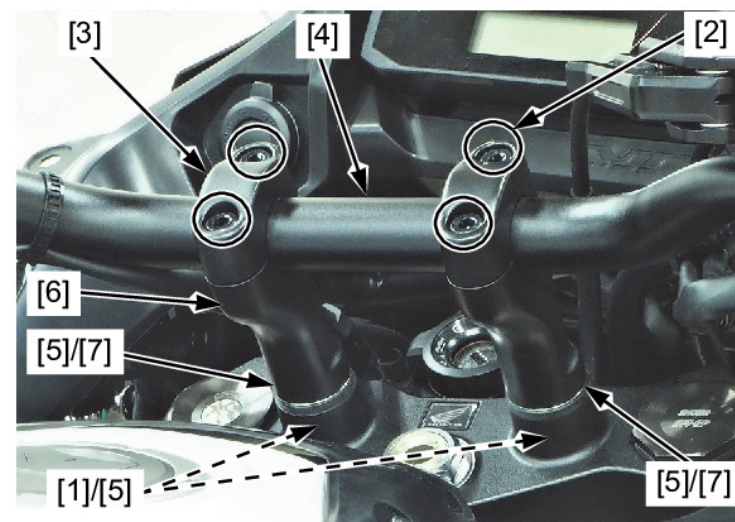

Hold the handlebar weight [1] and remove the handlebar weight mounting screw [2], then remove both handlebar weights.

Install the handlebar weight to the handlebar by aligning each cutout.

Hold the handlebar weight.

Install and tighten the handlebar weight mounting screw securely.

