

## REMOVAL/INSTALLATION


Remove the main seat.

Remove the trim clips [1], socket bolt A [2] and socket bolts B [3]. Remove the bosses [4] from the grommets [5]. Release the rear side cowl [6] from the rear center cowl boss [7]. Remove the rear side cowl by releasing its tabs [8] with sliding backward from the rear carrier [9]. Installation is in the reverse order of removal.


**NOTE:**

- Align the side cover tab [10] with the rear side cowl slot [11] correctly when installing.

Left side shown:

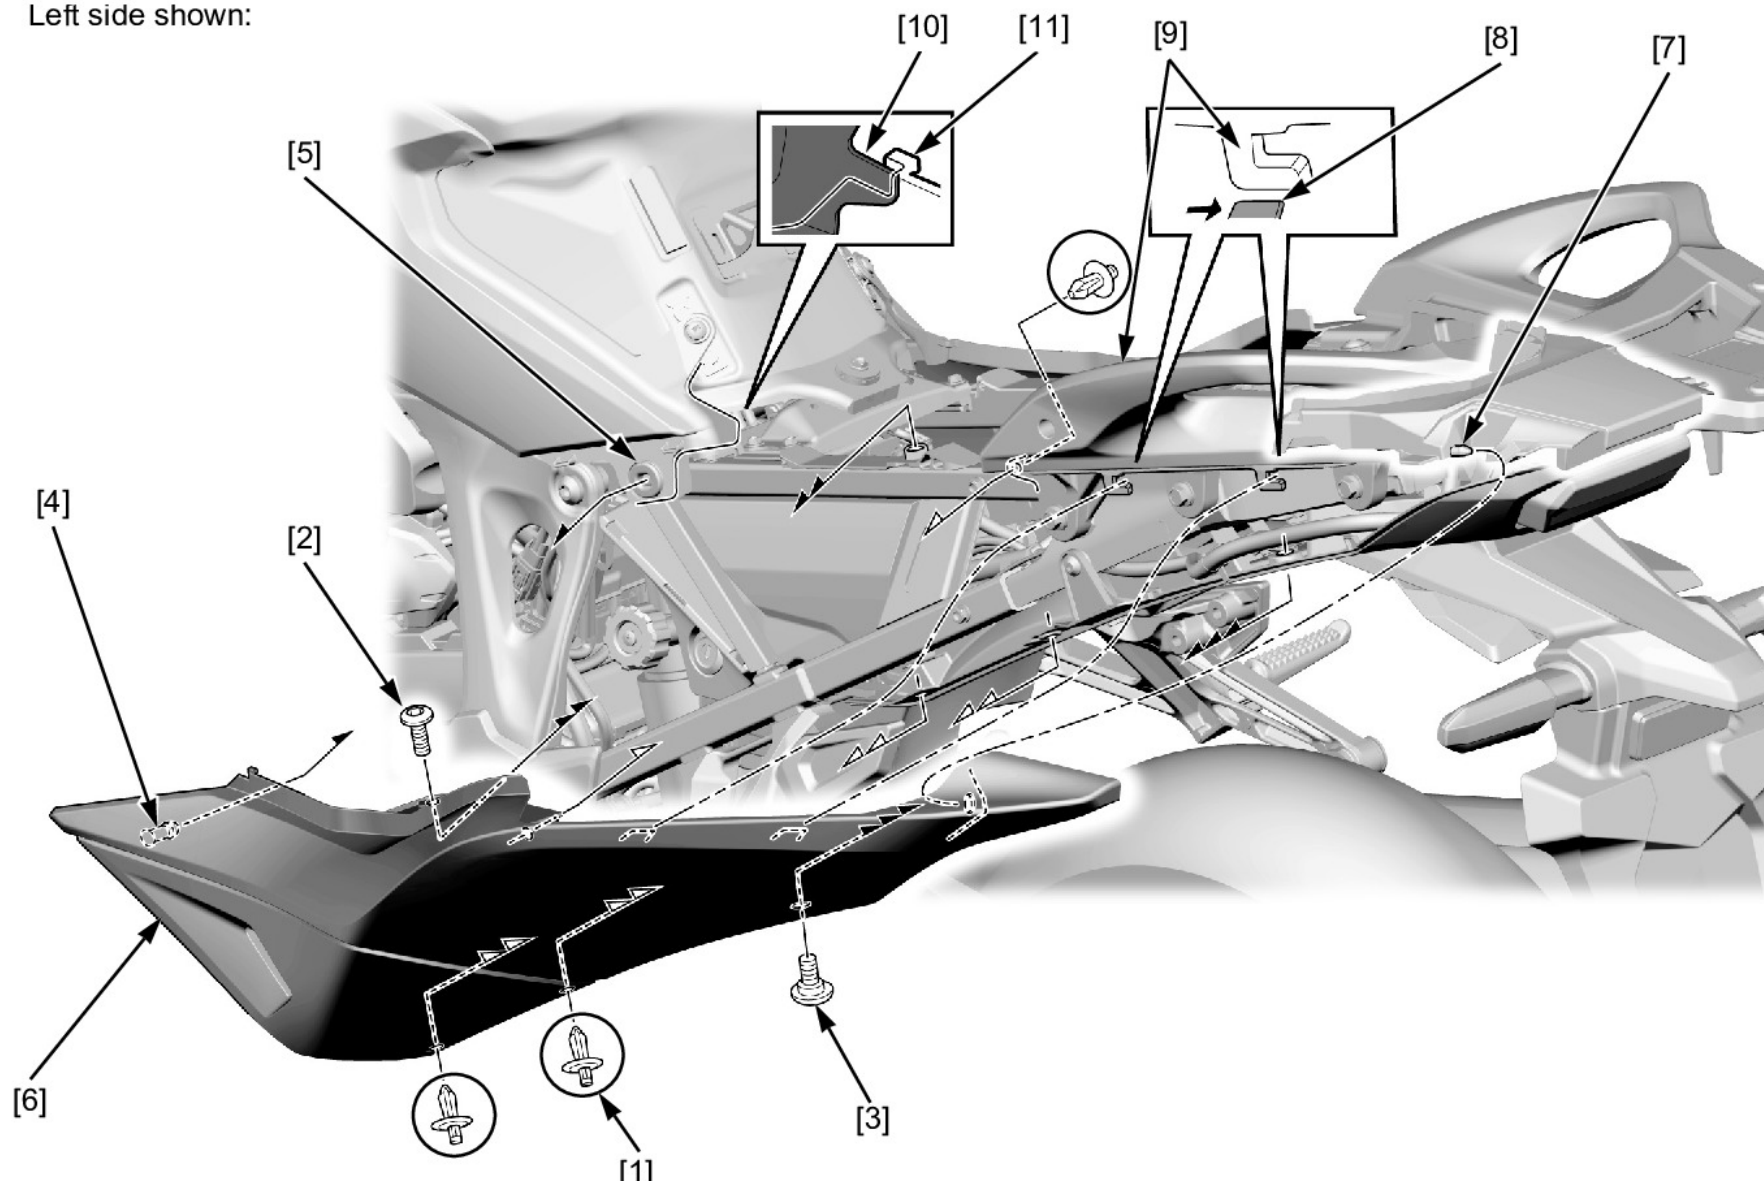

Left side shown:

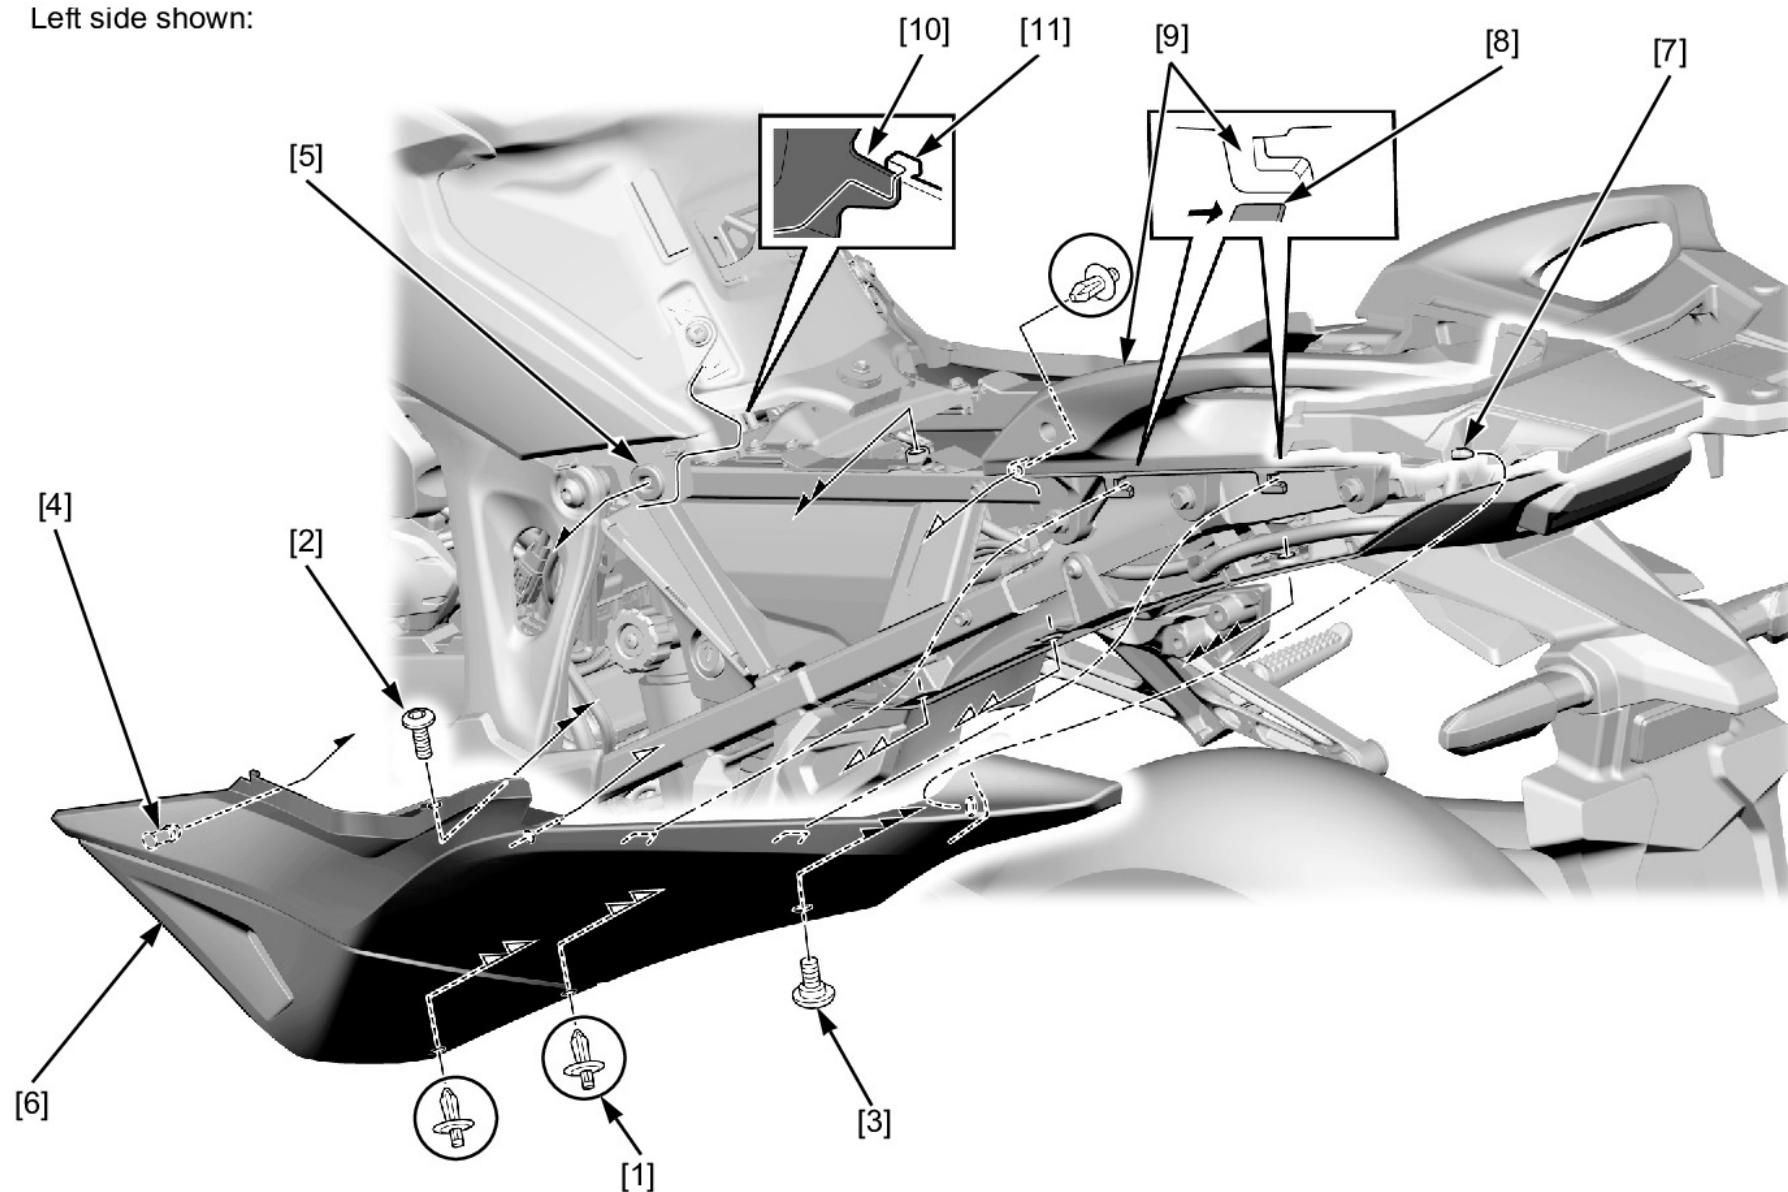

---

**NOTE:**

- Apply the masking tape [1] around the top of the rear side cowl [2] to prevent any damage when removal/installation.

Left side shown:

