


## REMOVAL

Remove the following:

- [Air cleaner housing](#)
- [Handlebar lower holder](#)
- [Forks](#)


Disconnect the following:

- Ignition switch 2P (Brown) connector [1]
- Immobilizer receiver 4P (Black) connector [2]

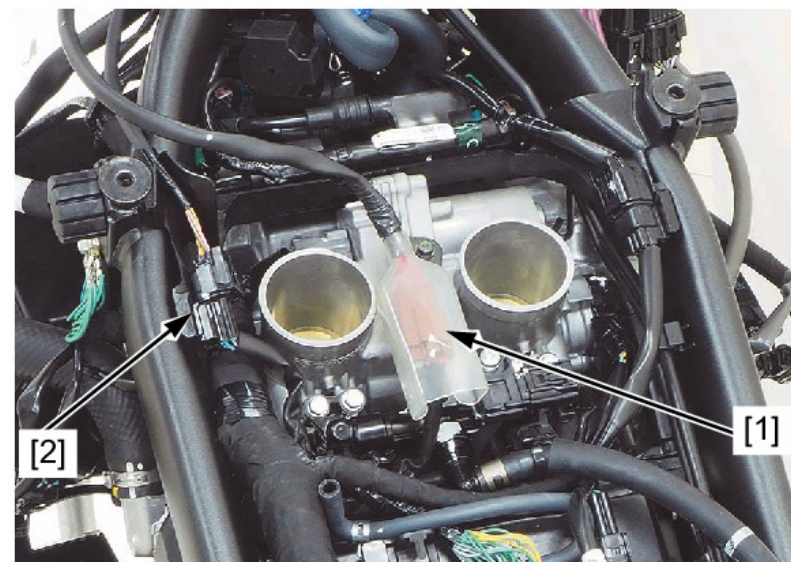

Remove the following:


- Steering stem nut [1] and washer [2].
- Top bridge [3]

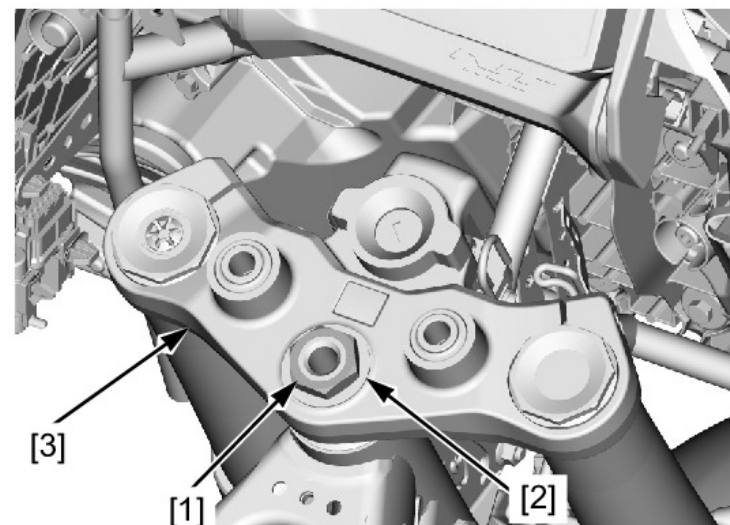


Disconnect the horn connector [1].

Remove the following:

- Bolts [2]
- Horn stay [3]
- Brake hose clamp [4]

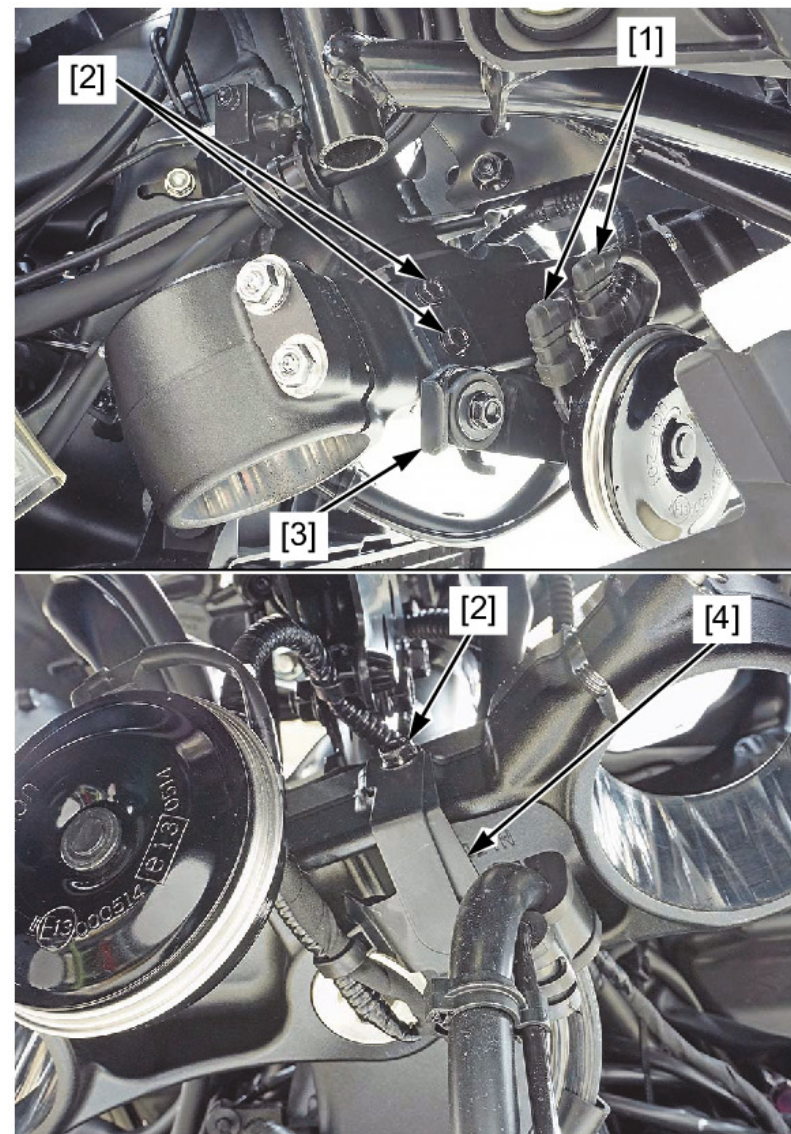


Straighten the lock washer tabs [1].  
Remove the lock nut [2] and lock washer.

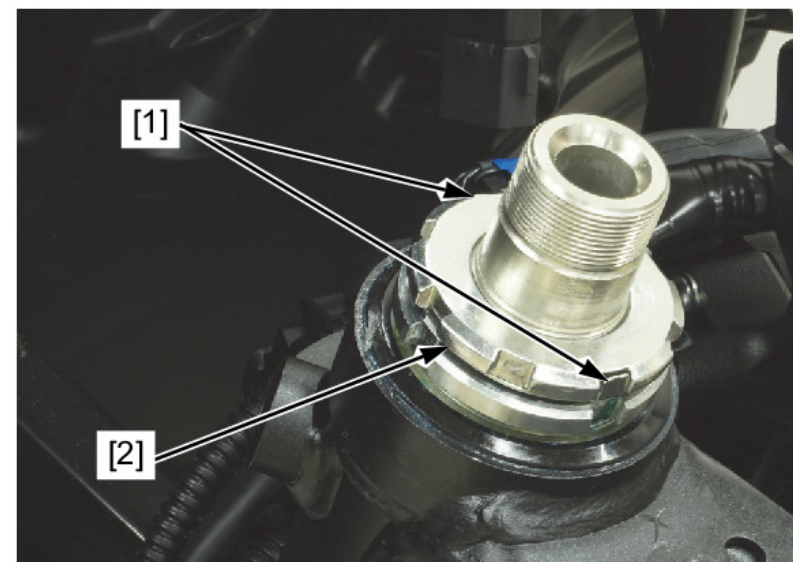

Loosen and remove the steering stem adjusting nut [1] using the special tool.

**TOOL:**

Locknut wrench 5.8 x 45 [2] [07916-KA50100](#)

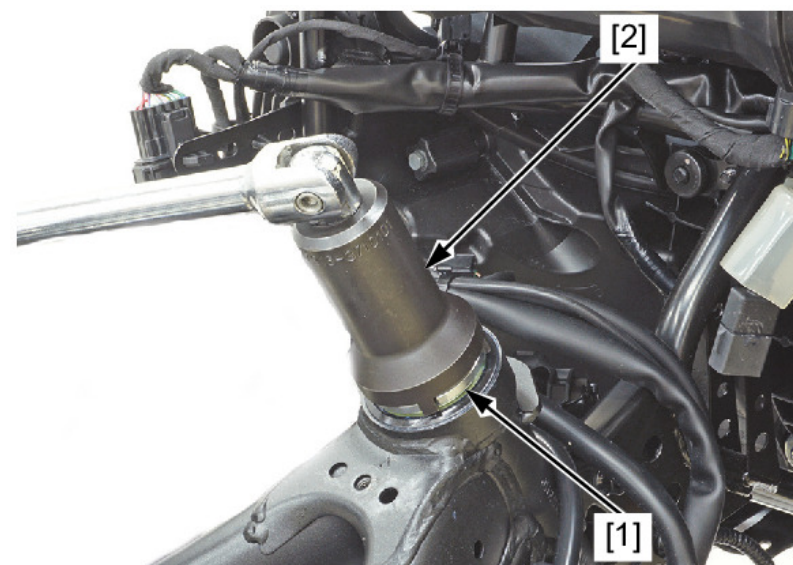



---

Remove the following:

- Upper dust seal [1]
- Upper inner race [2]
- Upper bearing [3]
- Steering stem [4]
- Lower bearing [5]

