


REMOVAL


Remove the front brake caliper mounting bolts [1] and front brake calipers [2].

NOTE:

- Do not suspend the front brake caliper from the brake hose. Do not twist the brake hose.
- Do not operate the brake lever after removing the front brake calipers.

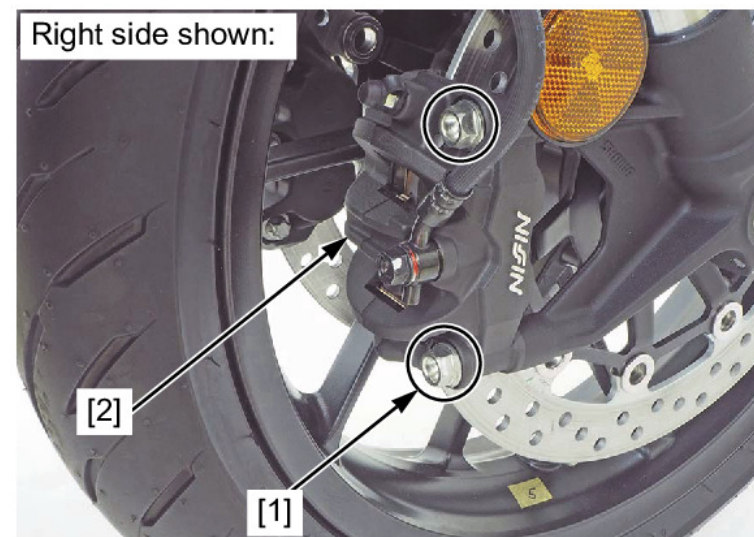

Remove the front axle bolt [1].
Loosen the left front axle holder pinch bolts [2].
Loosen the right front axle holder pinch bolts [3].
Support the motorcycle using a safety stand or hoist, raise the front wheel off the ground.
Remove the front axle [4] and front wheel.

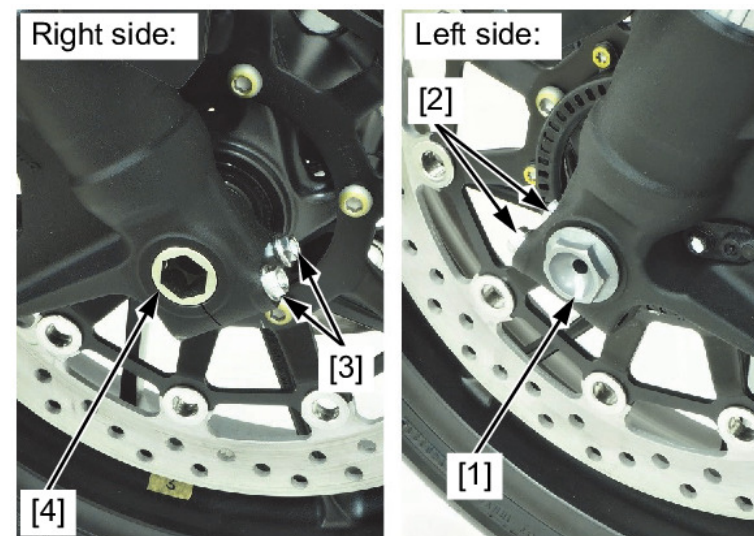

Remove the side collars [1].

