


REMOVAL/INSTALLATION

[Drain the coolant.](#)

[Remove the left side cover.](#)

Remove the thermostat cover bolts [1] and open the thermostat cover [2].

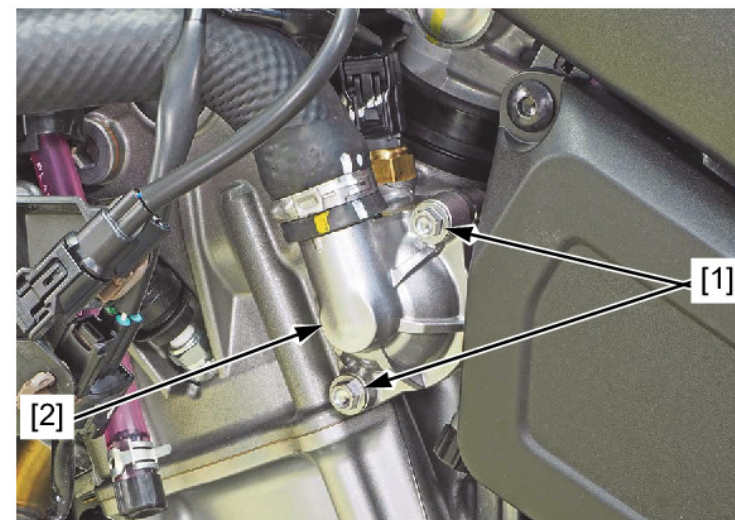

Remove the thermostat [1] from the cylinder head.
Installation is in the reverse order of removal.

TORQUE:

Thermostat cover bolt:

12 N·m (1.2 kgf·m, 9 lbf·ft)

NOTE:

- Install the thermostat with the air bleed hole [2] facing up.

