


REMOVAL/INSTALLATION


Remove the following:

- [Inner cover](#)
- [Fuel tank](#)


Open the clamp [1] and release the air cleaner housing drain hose [2].

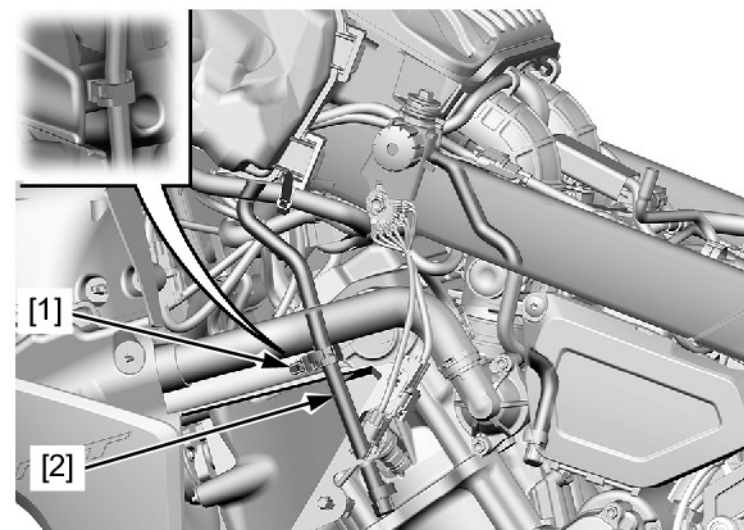

Open the clamp A [1].
Open the clamp B [2].
Release the air cleaner housing drain hose [3].

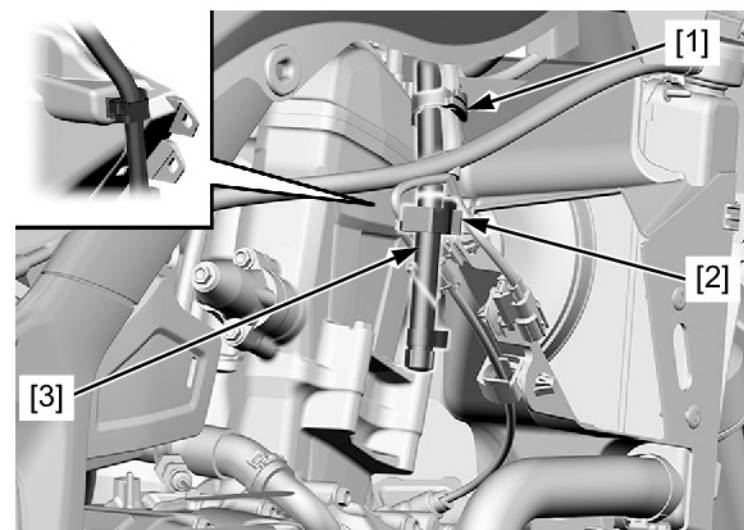

Release the ignition switch 2P (Brown) connector [1] from the stay.
Release the ignition switch wire [2] from the guide [3].
Disconnect the air suction hose [4].
Loosen the connecting hose band screws [5].

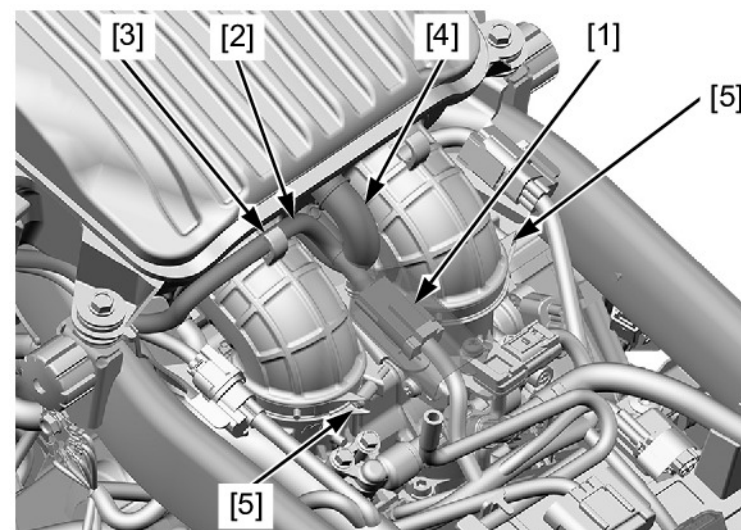



Remove the following:

- Bolts [1]
- Collars A [2]
- Bolt/washer [3]

Disconnect the air cleaner housing connecting hoses [4].
Pull the air cleaner housing [5] upward.
Disconnect the air suction hose [6] from the cylinder head cover.
Disconnect the IAT sensor 2P (Blue) connector [7].
Remove the air cleaner housing.
Remove the collars B [8].
Remove the following from the air cleaner housing:

- Grommets A [9]
- Collar C [10]
- Grommet B [11]

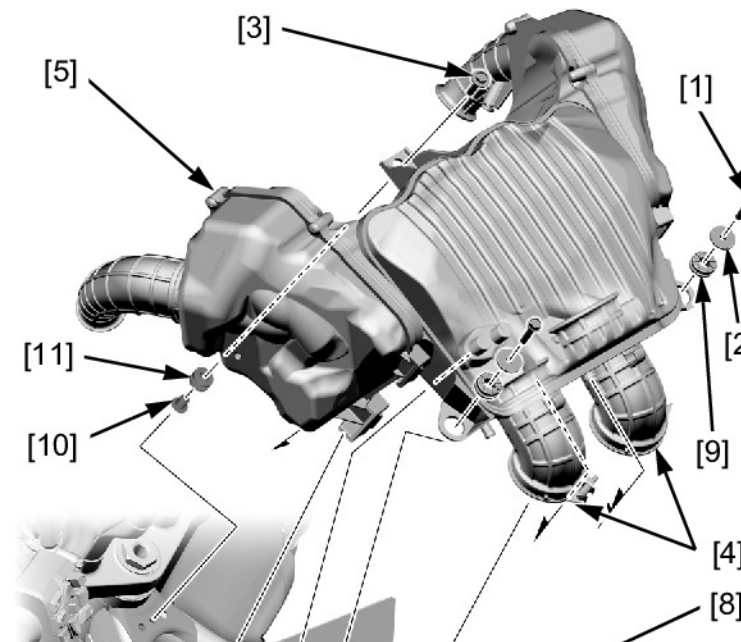

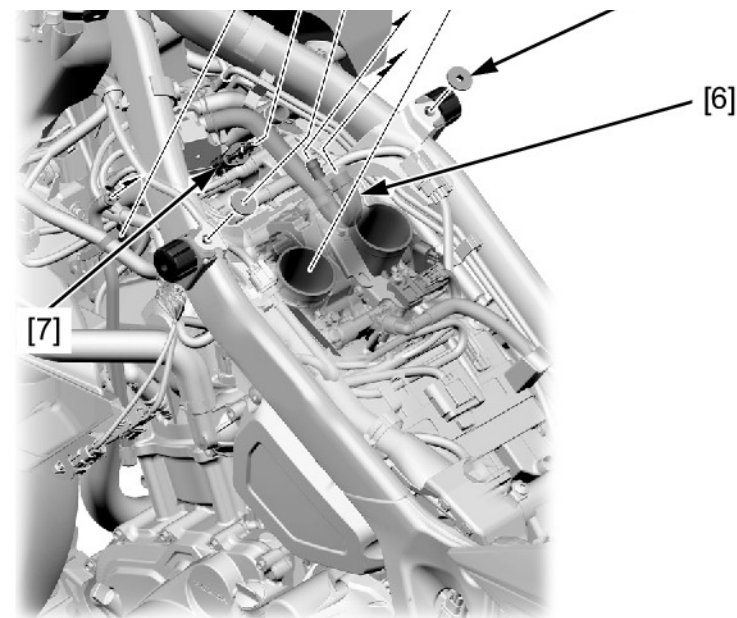

Installation is in the reverse order of removal.

NOTE:

- [Route the wires and hoses properly.](#)
- Align the hose band holes with the connecting hose bosses.
- Tighten the connecting hose band screws [1] until the collars [2] are fully seated.

