

ROBOTIS Co., Ltd.

FTDI Driver Reinstall

**Solution for FTDI
driver installation issue**

Latest edit date: 21-11-2013

Table of Contents

DRIVER CHANGE FOR WINDOWS 8	2
DRIVER CHANGE FOR WINDOWS VISTA / 7	4
DRIVER CHANGE FOR WINDOWS XP	8

Windows 8


Driver change for Windows 8's method is the same as for Windows Vista and 7.

However, driver signature enforcement must be disabled. The following steps is the procedure to disable such enforcement.


1. Open the Charms Bar (Windows key + I) and select Settings.




2. Select Change PC Settings.

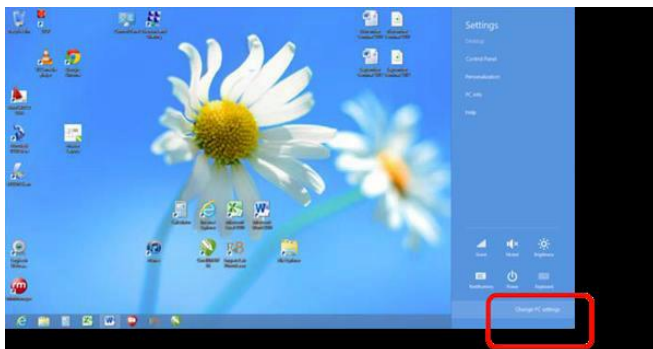


3. Select General.

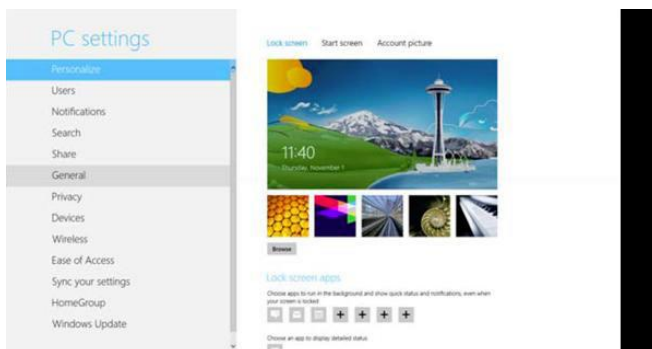


4. Scroll to the bottom of the page under Advanced Start-up click on Restart Now.

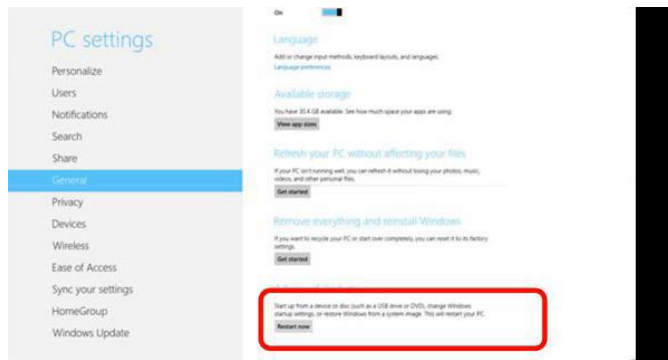


5. After reboot click on Troubleshoot.

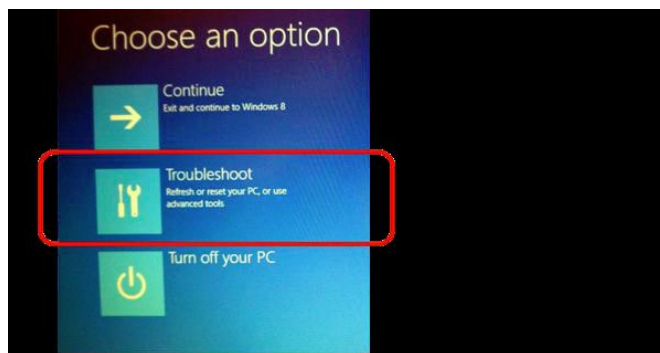


6. Select Advanced Options.

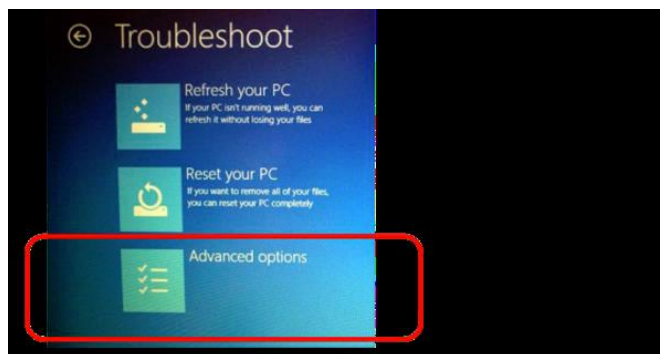


7. Select Startup Settings.

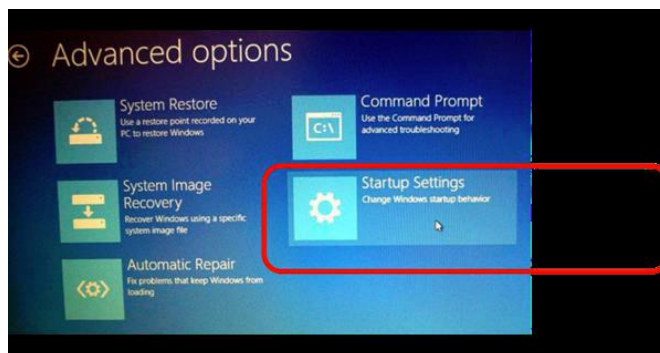

8. Click on the Restart button

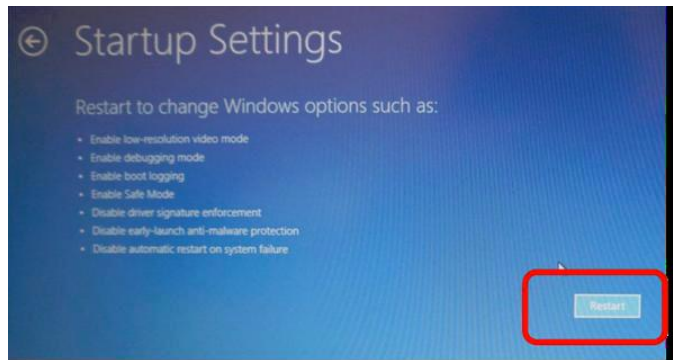

9. Select the 7th option Disable driver signature enforcement.

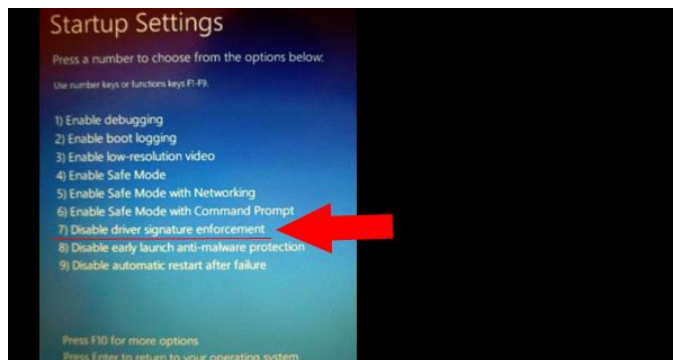


10. PC will reboot

After reboot follow the installation procedure for Windows Vista / 7.


Windows Vista / 7

1. Connect the USB device (LN-101, USB2Dynamixel, CM-530, etc) to the PCs USB port.
2. Click on Start then right-click on My Computer and select Manage.


(주)로보티즈

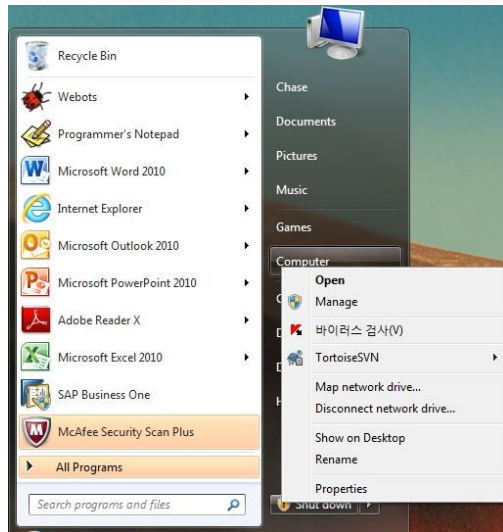


3. From (1)Device Manager expand the (2)Universal Serial Bus controllers node; right-click on (3)USB Serial Converter and select (4)Update Driver Software.

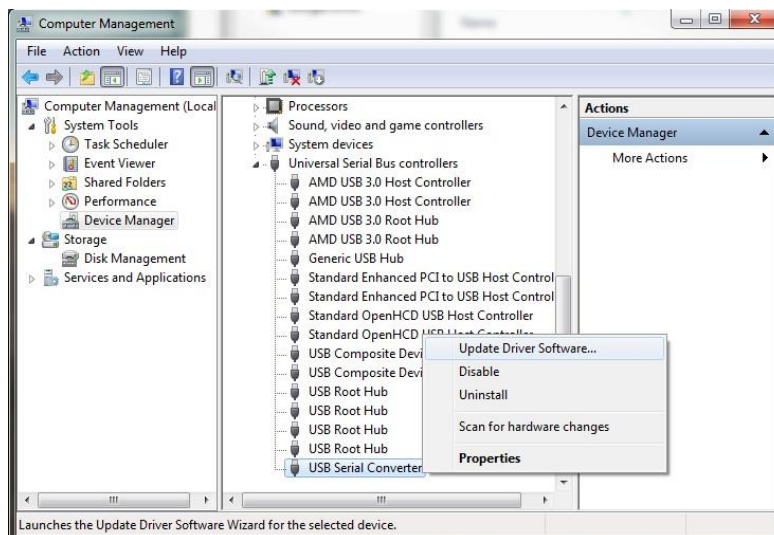


4. Click on Browse my computer for driver software.

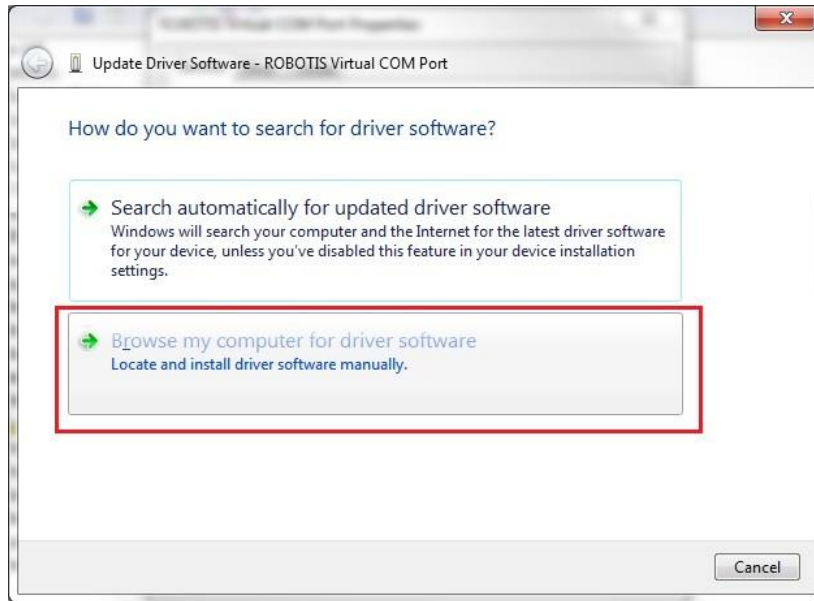


5. Select Let me pick a list of device drivers on my computer.

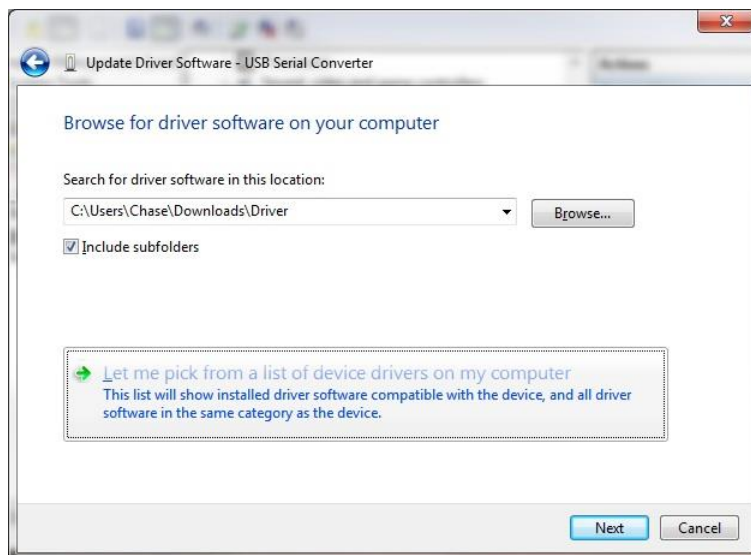


6. Click on Have disk.

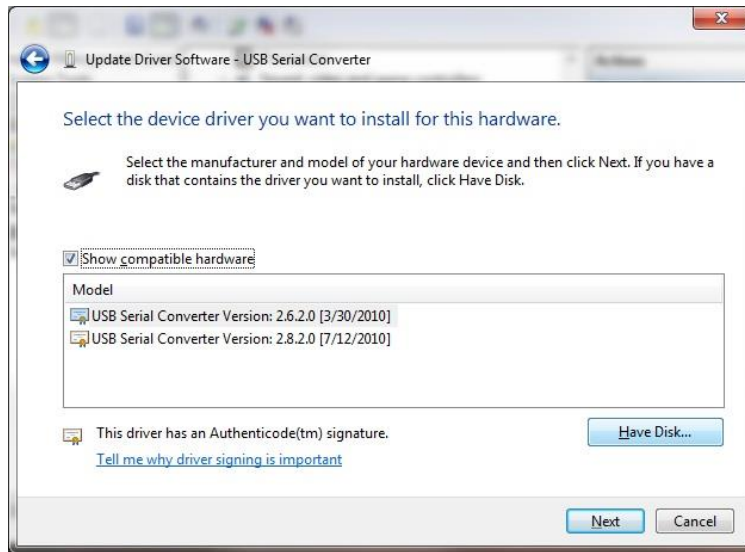

7. Click on Browse and go to the location of the driver file.

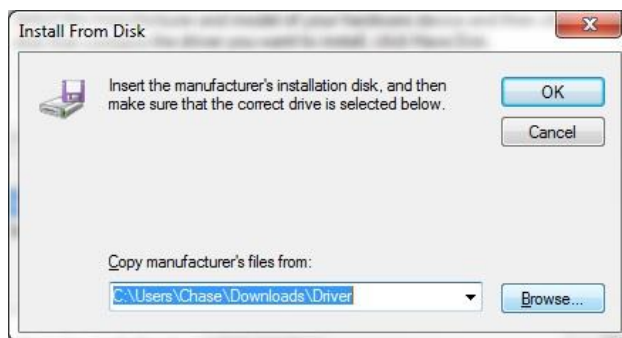

8. USB Serial Converter will appear on the list. Select the device and click on Next

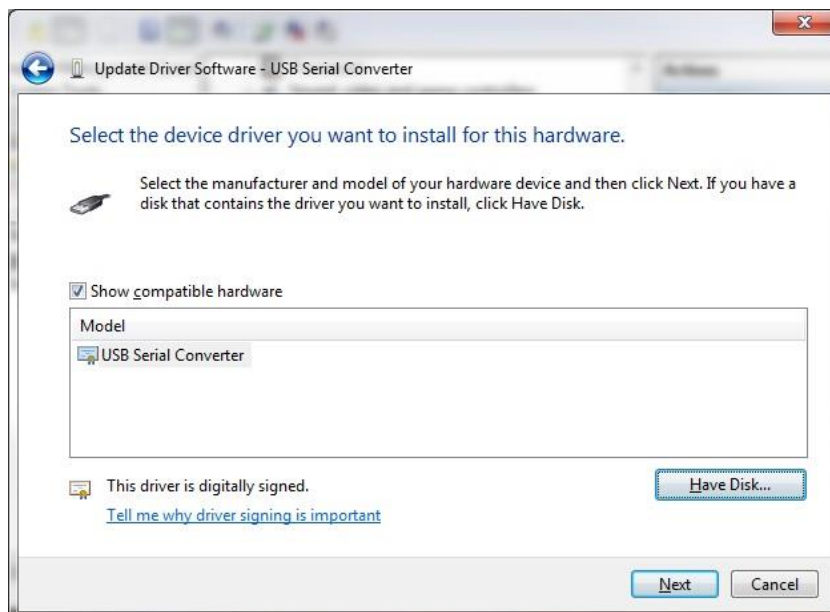

9. Windows Security may issue a warning. If so just click on Install this driver anyway.




10. Driver successfully installed.




Windows XP

1. Connect USB device (LN-101, USB2Dynamixel, CM-530, etc) to the PCs USB port.
2. Click on Start then right-click on My Computer and select Manage.

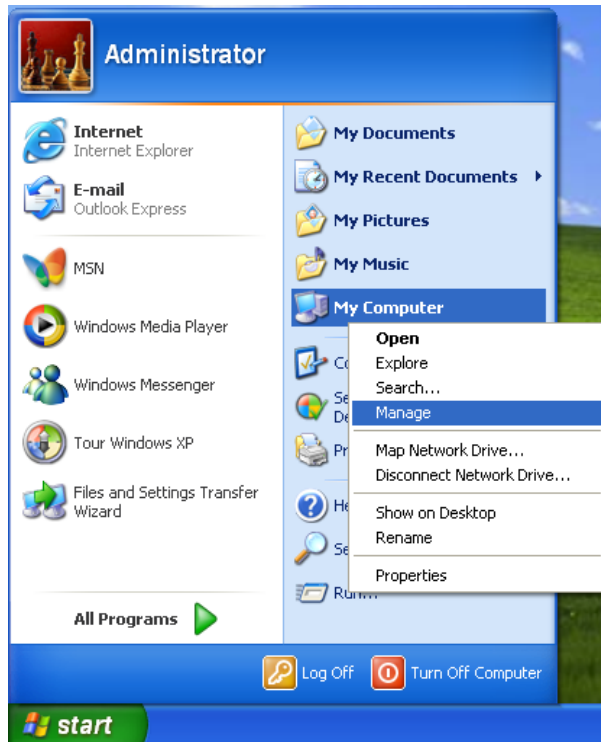


3. From (1)Device Manager expand the (2)Universal Serial Bus controllers node; right-click on (3)USB Serial Converter and select (4)Update Driver.

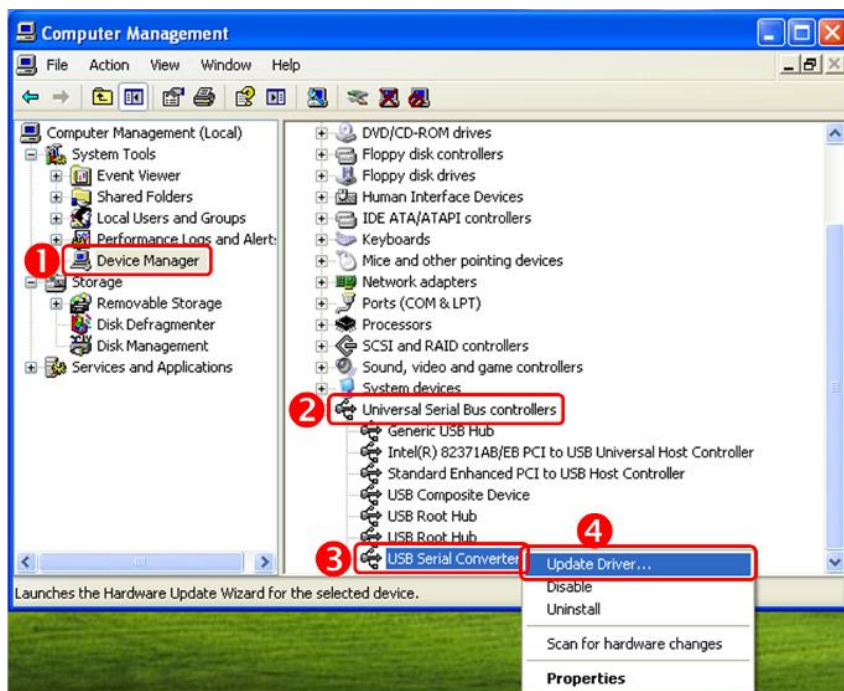


4. From the Hardware Update Wizard select No, not this time and click on Next.




5. Select Install from a list or specific location (Advanced) and click on next.

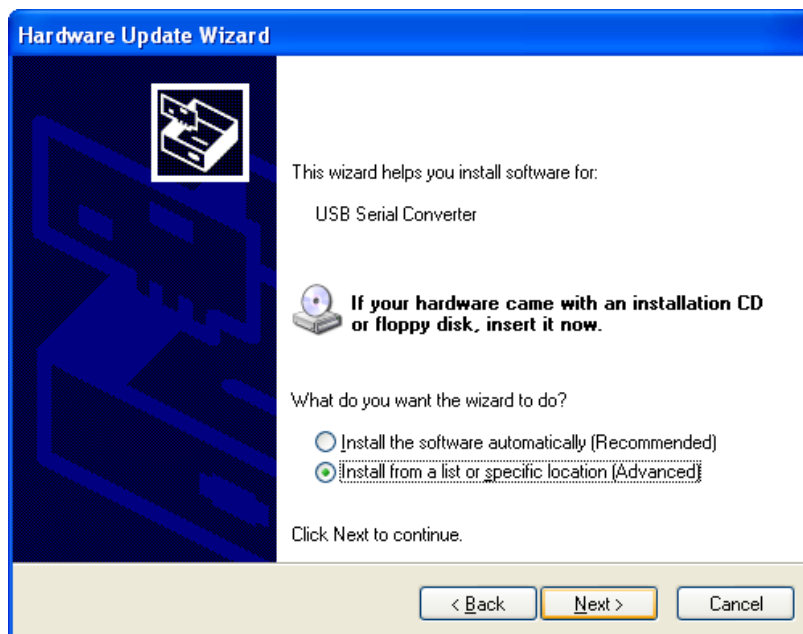


6. Select Don't search, I will choose the driver to install and click on Next.

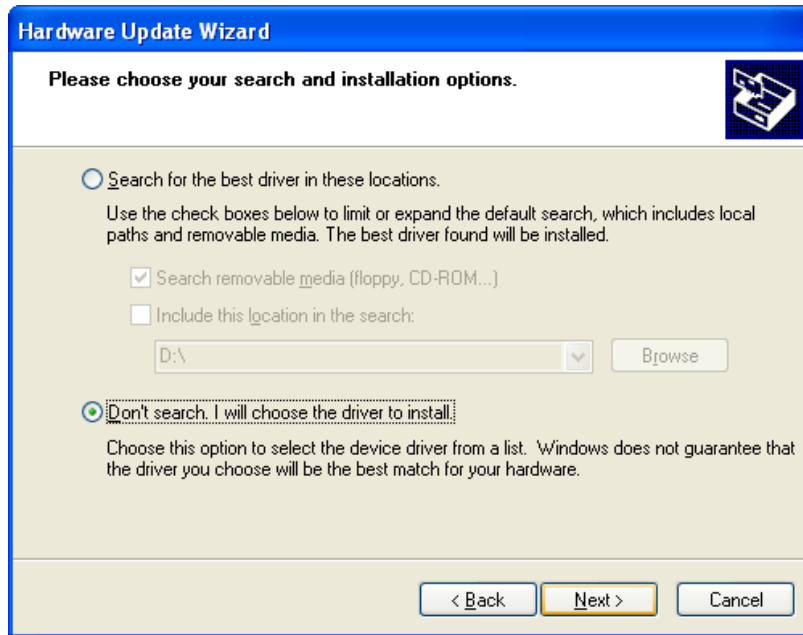


7. Click on Have disk.

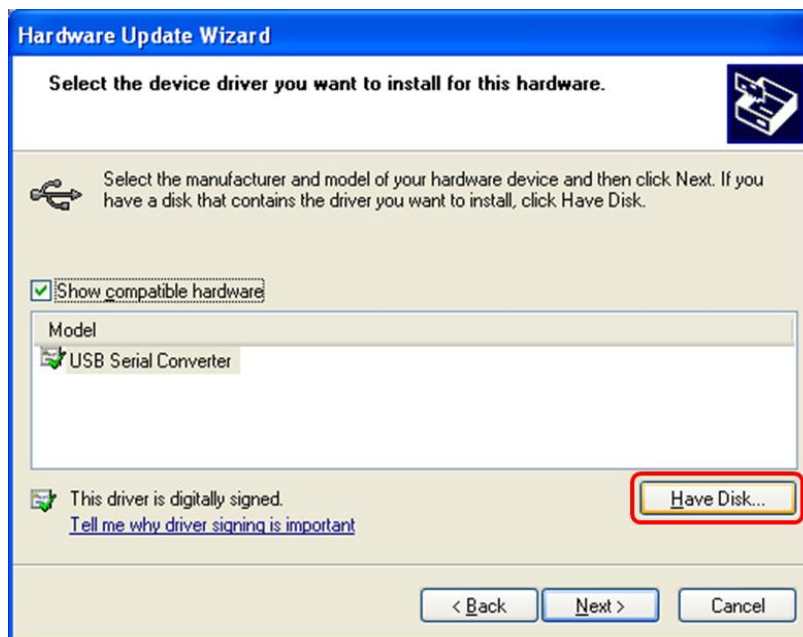


8. Click on Browse and go to the location of the driver file.

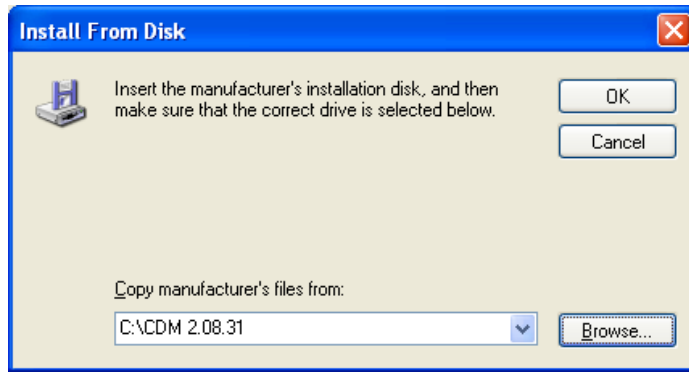

9. USB Serial Converter will appear on the list. Select the device and click on Next.

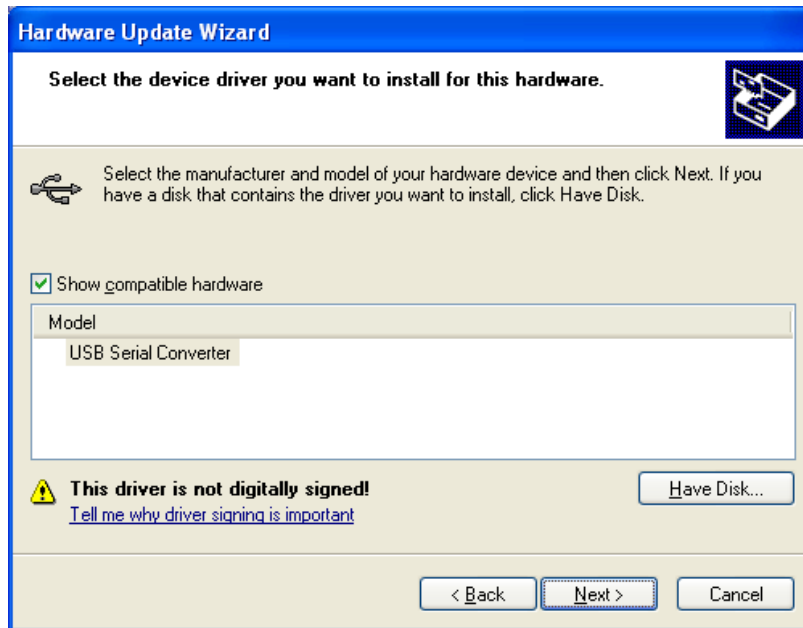

10. If Confirm File Replace pop-up appears click on Yes to confirm overwrite.

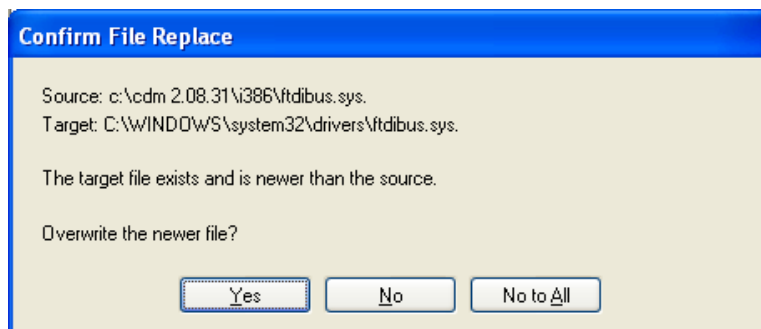

11. Installation is finished. Restart the PC to complete driver install.

