

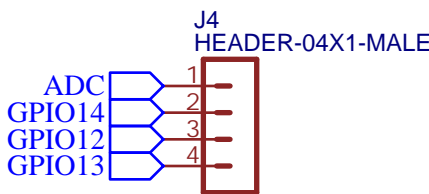
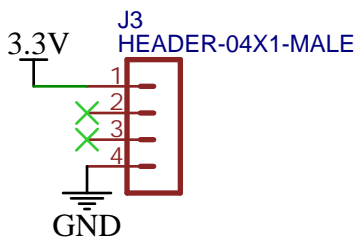


ESP-12E,ESP-12F, ESP-12S or ESP-07 can be used

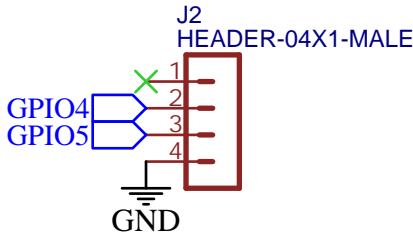

USB to SERIAL + auto-reset

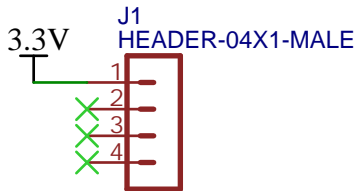