


BACnet-over-Ethernet Gateways

Installation and Setup Manual

Termination Diagram and DIP Switch Settings

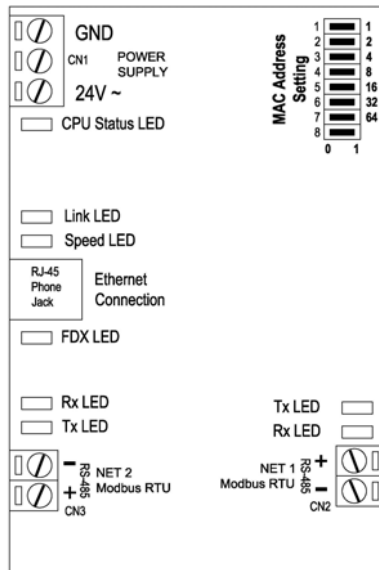

① Gateway MAC address DIP switches

② Auto Detect of Supported Slave Devices Connected to Network Ports

① Gateway MAC Addressing

The DIP switch is a binary switch. Each individual DIP switch represents a unique value, which forms the gateway MAC address when added together. To set the address, simply move the switches that add up to the gateway's desired address to the ON position.

Example: If the gateway is to be address 7 on the network, set the switches numbered 1, 2 and 4 (equals 7) to the ON position.


Note: Each gateway on the same MS/TP network segment must have a unique DIP switch address.

② Auto Detect of Supported Slave Devices Connected to Network Ports

When gateway is powered up first time and initialized, it will automatically detect the model numbers of slave devices connected to NET 1 and NET 2 ports, wait for response from these slave devices and implement communication based on the model numbers discovered. The slave device model numbers supported by the gateway are those covered by the NT10/NT50 Series, NC24 A Series, NC24T Series and NSM Series.

Notes: Both the NET 1 and NET 2 ports must be connected to the slave devices of the same series or type. Each network trunk supports 32 slave devices, totaling 64 slave devices in one gateway.

Dimensions in mm

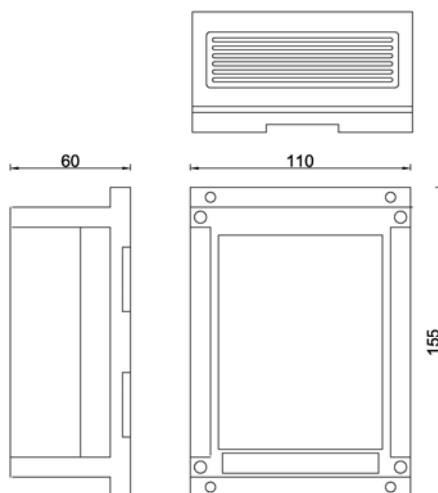

Network, Cabling and Step-down Transformer Requirements

To ensure network stability and reliable communications, it is imperative that the following network and cabling requirements are adhered to:

Item	Description
Network Trunk Cabling	It is recommended to use networking cabling that matches the following specifications: <ul style="list-style-type: none">Balanced 100 to 120 ohms nominal impedance, 22 or 24 AWG Twisted Shielded Pair (TSP) CableNominal capacitance of 52 pF/m or lowerNominal velocity of propagation of 66% or higherTerminating the shield to ground at one end only for each isolated segment will prevent ground loops in the shield and drain RF energy to ground. Grounding at the BACnet router or controller is preferred.
10Base-T Cabling	<ul style="list-style-type: none">Cat 5e cable with twisted pairs are recommended.
Topology	Ensure the Modbus RTU network cable is installed as a daisy chain from one device to the next.
Maximum Nodes	The maximum number of devices is 32 per Modbus RTU network and 64 per gateway.
Terminator	A terminator of 120-ohm impedance must be installed at each end of each Modbus RTU network. Ensure that this requirement is not overlooked in laying out the network architecture and ordering product.
Cable Shielding	Use a shielded, twisted pair cable for communications. Never directly ground wire in more than one point on the shield. Doing so can induce large currents and result in communication problem.
Repeater	A repeater is not necessary unless the Modbus RTU network is extended beyond 1,000 m.
Step-down Transformer	A separate isolated double-wound transformer is recommended for supplying 24 VAC power to each gateway. If and when the same transformer is shared with other devices, observe the polarities of the power supply of all devices including the gateway.

Language and Gateway Instance ID Setup Procedure

System Setting Objects

There are 2 objects for system setup defined as:

Object Name	Object	Value	Unit	Object Type	Read/Write	Priority Array
*** SYS SELECT	10123.AV1	*1	None	Analog Variable	R/W	None
*** SYS VALUE	10123.AV2	*1	None	Analog Variable	R	None

Note: *1 System setting can be changed by writing value to *** SYS SELECT.

Write property value to ***SYS SELECT	Function Description
2012	Change all descriptions to CHINESE. New setting will take effect after entering a restart command 3003 followed by reloading descriptors at the BMGE Manager.
2014	Change all descriptions to ENGLISH. New setting will take effect after entering a restart command 3003 followed by reloading descriptors at the BMGE Manager.
3003	Restart
2004	To set device instance ID. This is a two-step operation: after writing 2004 to ***SYS SELECT, wait until *** SYS VALUE changes to -1, then write an integer 'n' (where 0≤n≤12799) to ***SYS SELECT. Assuming the DIP switches' MAC address is set as 'm', the device instance ID is 'n*100 + m'. New setting will take effect after entering a restart command 3003 followed by a discovering new devices at the BACnet workstation.
Notes:	After all new entries have taken effect, the new data will be saved to the EEPROM. Power restart will resume all data saved before power failure.

IP Address Setting

Open internet browser and enter the IP address of 192.168.10.32 in the address field. Confirm after the following data are displayed:

BMGE Ethernet Device
Chip: DM9051 (DAVICOM)
MAC Address: xx: xx: xx: xx: xx: xx
IP: 192.168.10.32
Gateway: 192.168.10.1
Mask: 255: 255: 255: 0

Note: BACnet operator workstation's IP address and BMGE's IP address must be in the same network segment or otherwise the BMGE will not be discovered via the browser.

Dynamic Created Objects

The gateway spontaneously detects the presence of a NT10 ,NT50, NSM, NC24A or NC24T slave that goes online in its NET 1 or NET 2 network and automatically creates a number of pre-defined objects associated with this NT10 ,NT50, NC24A, NC24T or NSM slave's MAC address. When this NT10 ,NT50, NSM, NC24A or NC24T slave goes offline, these objects will be automatically deleted.

Notes:

1. When the device is connected to NET 1 port, its #xx range is 01 to 32. Example: MAC address = 01 and y = 1, object name and object will be displayed as #01NT.1-Temperature Setpoint and 10123.AO11 respectively.
2. When the device is connected to NET 2 port, its #xx range is 33 to 64. Example: MAC address = 01 and y = 2, object name and object will be displayed as #33NT.2-Temperature Setpoint and 10123.AO331 respectively.

For NT10 and NT50 networking Room Thermostat with Modbus RTU Communication Protocol

If the device's address is xx and its network port is y, where xx is 01 to 64 and y is either 1 or 2, its associated objects are:

Object Name	Object	Value	Unit	Type	Read/Write	Priority Array
#xxNT.y - Temperature Setpoint	10123.AOxx1	(5-35) / (41-95)	None	Analog Output	R/W	16
#xxNT.y - Operating Mode	10123.BOxx1	Stop/Run	None	Binary Output	R/W	16
#xxNT.y - Control Mode	10123.MOxx1	Heat/Cool/ Fan Only/Auto	None	Multi-State Output	R/W	16
#xxNT.y - Fan Speed Command	10123.MOxx2	High/Medium/ Low/Auto	None	Multi-State Output	R/W	16
#xxNT.y - Ambient Temperature	10123.AIxx1	(5-35) / (41-95)	None	Analog Input	R	None
#xxNT.y - Valve 1 Output Status	10123.AIxx2	(0-100)	%	Analog Input	R	None
#xxNT.y - Valve 2 Output Status	10123.AIxx3	(0-100)	%	Analog Input	R	None
#xxNT.y - Temperature Eng. Unit	10123.BIxx1	°C/°F	None	Binary Input	R	None
#xxNT.y - Unoccupied Mode	10123.BIxx2	Off/On	None	Binary Input	R	None
#xxNT.y - Binary Input	10123.BIxx3	Open/Closed	None	Binary Input	R	None
#xxNT.y - Window Mode ^a	10123.MIxx1	Off/On/None	None	Multi-State Input	R	None
#xxNT.y - Fan Totalizator	10123.AVxx1	0-999999	hr	Analog variable	R/W	None
#xxNT.y - Cooling Totalizator	10123.AVxx2	0-999999	hr	Analog variable	R/W	None
#xxNT.y - Heating Totalizator	10123.AVxx3	0-999999	hr	Analog variable	R/W	None
*** SYSTEM SELECT	10123.AV1	*1	None	Analog variable	R/W	None
*** SYSTEM SELECT	10123.AV2	*1	None	Analog variable	R	None
BMGE_MANAGER_10123	10123.DEV10123	Operational	None	Device	R	None

^a This object is not applicable to and omitted in NT50 Series. Its value is displayed as Off/On in NT10 Series.

For NSM Setpoint Module with Modbus RTU Communication Protocol

If the device's address is xx and its network port is y, where xx is 01 to 64 and y is either 1 or 2, its associated objects are:

Object Name	Object	Value	Unit	Type	Read/Write	Priority Array
#xxNS.y - Module Setpoint	10123.AOxx1	-99 to 999	None	Analog Output	R/W	16
#xxNS.y - Operating Mode	10123.BOxx1	Stop/Run	None	Binary Output	R/W	16
#xxNS.y - Analog Input Type	10123.AIxx1	0 or 1 [^]	None	Analog Input	R	None
#xxNS.y - Analog Input Value	10123.AIxx2	-99 to 999	None	Analog Input	R	None
#xxNS.y - Set Display Lower	10123.AVxx1	-99 to 999	None	Analog Variable	R/W	None
#xxNS.y - Set Display Upper	10123.AVxx2	-99 to 999	None	Analog Variable	R/W	None
#xxNS.y - Remote Set Lower	10123.AVxx3	-99 to 999	None	Analog Variable	R/W	None
#xxNS.y - Remote Set Upper	10123.AVxx4	-99 to 999	%	Analog Variable	R/W	None
*** SYSTEM SELECT	10123.AV1	*1	None	Analog Variable	R/W	None
*** SYSTEM SELECT	10123.AV2	*1	None	Analog Variable	R	None
BMGE_MANAGER_10123	10123.DEV10123	Operational		Device	R	None

Notes: [^] 0 denotes 0-10 VDC input and 1 denotes temperature sensor input.

For NC24A Networking Controller with Modbus RTU Communication Protocol

If the device's address is xx and its network port is y, where xx is 01 to 64 and y is either 1 or 2, its associated objects are:

Object Name	Object	Value	Unit	Type	Read/Write	Priority Array
#xxNC.y - Controller Setpoint	10123.AOxx1	-99 to 999	None	Analog Output	R/W	16
#xxNC.y - X1 Analog Input Value	10123.AIxx1	-99 to 999	None	Analog Input	R	None
#xxNC.y - X2 Analog Input Value	10123.AIxx2	-99 to 999	None	Analog Input	R	None
#xxNC.y - ECO Mode Status	10123.BIxx1	Off/On	None	Binary Input	R	None
#xxNC.y - Day/Night Mode Status	10123.BIxx2	Day/Night	None	Binary Input	R	None
#xxNC.y - Engineering Unit	10123.MIxx1	°C/°F/%/None	None	Multi-State Input	R	None
#xxNC.y - Application Number	10123.AVxx1	1 to 9	None	Analog Variable	R	None
#xxNC.y - Setpoint Differential	10123.AVxx2	(1 to 20)/(1 to 99)	None	Analog Variable	R	None
#xxNC.y - Control Bandwidth	10123.AVxx3	-99 to 99	None	Analog Variable	R	None
#xxNC.y - Y1 Output Status	10123.AVxx4	0 to 100	%	Analog Variable	R	None
#xxNC.y - Y2 Output Status	10123.AVxx5	0 to 100	%	Analog Variable	R	None
#xxNC.y - Q1 Output Status	10123.AVxx6	0 to 100	%	Analog Variable	R	None
#xxNC.y - Proportional Band	10123.AVxx7	(1 to 20)/(1 to 99)	K	Analog Variable	R	None
#xxNC.y - Integral Time	10123.AVxx8	0 to 30	min	Analog Variable	R	None
*** SYSTEM SELECT	10123.AV1	*1	None	Analog Variable	R/W	None
*** SYSTEM SELECT	10123.AV2	*1	None	Analog Variable	R	None
BMGE_MANAGER_10123	10123.DEV10123	Operational		Device	R	None

For NC24T Networking Controller with Modbus RTU Communication Protocol

If the device's address is xx and its network port is y, where xx is 01 to 64 and y is either 1 or 2, its associated objects are:

Object Name	Object	Value	Unit	Type	Read/Write	Priority Array
#xxNC.y - Controller Setpoint	10123.AOxx1	-99 to 999	None	Analog Output	R/W	16
#xxNC.y - X1 Analog Input Value	10123.AIxx1	-99 to 999	None	Analog Input	R	None
#xxNC.y - X2 Analog Input Value	10123.AIxx2	-99 to 999	None	Analog Input	R	None
#xxNC.y - ECO Mode Status	10123.BIxx1	Off/On	None	Binary Input	R	None
#xxNC.y - Day/Night Mode Status	10123.BIxx2	Day/Night	None	Binary Input	R	None
#xxNC.y - Engineering Unit	10123.MIxx1	°C/°F/%/None	None	Multi-State Input	R	None
#xxNC.y - Application Number	10123.AVxx1	1 to 12	None	Analog Variable	R	None
#xxNC.y - Setpoint Differential	10123.AVxx2	(1 to 20)/(1 to 99)	None	Analog Variable	R	None
#xxNC.y - Control Bandwidth	10123.AVxx3	-99 to 99	None	Analog Variable	R	None
#xxNC.y - Main Output Status	10123.AVxx4	0 to 100	%	Analog Variable	R	None
#xxNC.y - Secondary Output Status	10123.AVxx5	0 to 100	%	Analog Variable	R	None
#xxNC.y - Valve Stroke Time	10123.AVxx6	10 to 240	sec	Analog Variable	R	None
#xxNC.y - Proportional Band	10123.AVxx7	(1 to 20)/(1 to 99)	K	Analog Variable	R	None
#xxNC.y - Integral Time	10123.AVxx8	0 to 30	min	Analog Variable	R	None
*** SYSTEM SELECT	10123.AV1	*1	None	Analog Variable	R/W	None
*** SYSTEM SELECT	10123.AV2	*1	None	Analog Variable	R	None
BMGE_MANAGER_10123	10123.DEV10123	Operational		Device	R	None