


1700 Series Room Thermostats Installing Instructions

Figure 1: Mounting Details

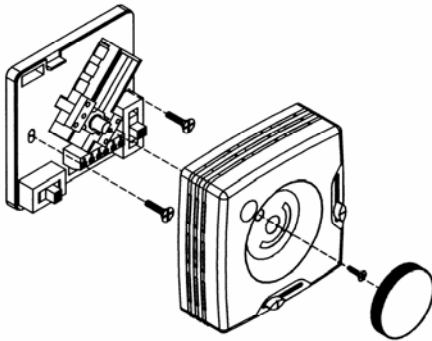


Field Calibration Procedure


To obtain a precise thermostat set point, measure the room temperature with a thermometer when the air conditioning unit is running. Remove the dial plate from the knob after removing the knob from the cover. Reinstall the knob and replace the dial plate with the nearest set point value corresponding to the measured temperature pointing to the index.

Figure 5: Wiring Diagrams


**1711x
HEATING ONLY OR COOLING ONLY, 2-PIPE SYSTEM**

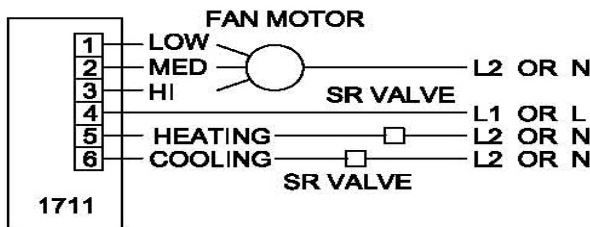


**1713x
HEATING/COOLING 4-PIPE SYSTEM**

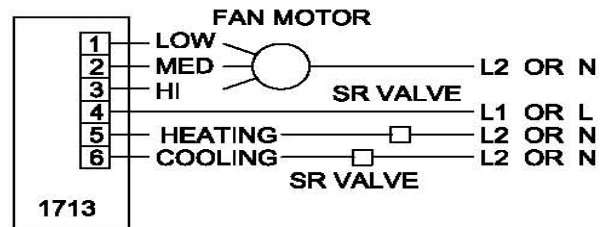

**1712x
HEATING/COOLING 2-PIPE SYSTEM**

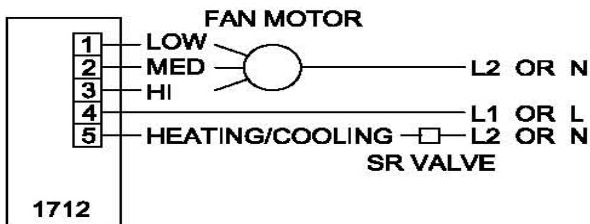

**1733x
HEATING/COOLING 4-PIPE SYSTEM**

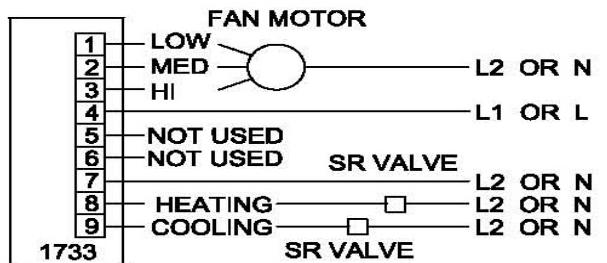

SR VALVE = SPRING RETURN VALVE
h = RISE IN TEMPERATURE