


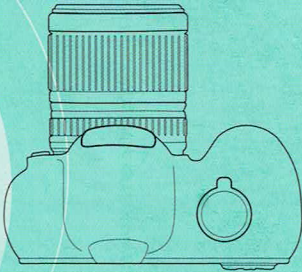

FOR CHILDREN  
**DIGITAL MINI SLR CAMERA**

A FUN AND PRACTICAL DIGITAL CAMERA  
CHILDREN'S DIGITAL CAMERA




## TABLE OF CONTENTS

---

English .....	1-7
German .....	8-14
Italian .....	15-21
Spanish .....	22-28
French .....	29-35
Russian .....	36-42



## Children's toys Mini DSLR camera introduction

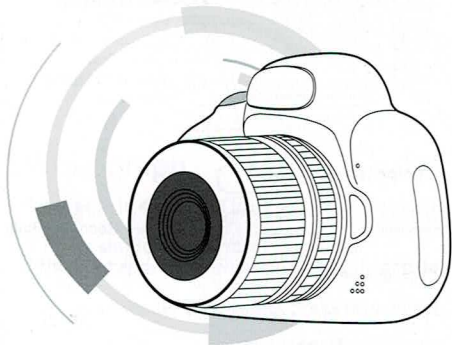


Please read the introduction very carefully before use which contains very important information. The guideline should be well kept in case of occasional use in the future.

**Warning:** Small parts inside which may cause children stifled if swallowed. Not for children less than 3.

## |button/port introduction

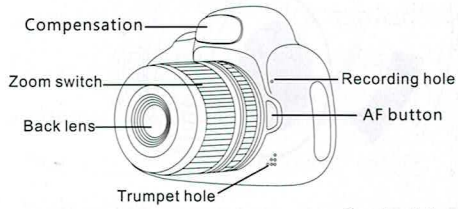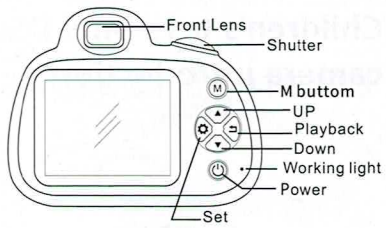

Important remind: Camera doesn't work when the reset switch is at reset shutdown station after reset, instead, move the button to shutdown first then move it back to start station..

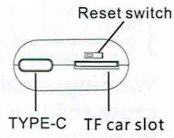


## I Start up

Inset the TF card, press the power button till the machine starts.



## I Photograph

1. Press M to switch the front and back lens in ON state.
2. Press shutter button to take pictures.
3. Press playback to review photos by up and down buttons.
4. Press set to deposit picture; press M to delete pictures.




**M** confirm

## I Focus

### ·Manual operation

In photo mode, turn the zoom button clockwise to zoom in objects, otherwise to zoom out facing the screen. Press the shutter to shot or press AF to have the machine shot itself after focus successfully

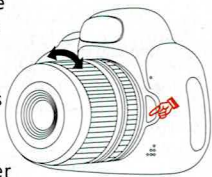

### ·Auto focus


In photo mode, press AF, the machine will focus itself and take a shot after 3s.

## I Set of light comprehensive

- 1、 press the set for 4 timing continuously to go to the light setting interface.
- 2、 press direction button to choose the comprehensive options
- 3、 Press M to confirm the selection
- 4、 quit then shut or restart it.

## I Picture mode

- 1、press set for 1 time to go to photograph mode
- 2、press direction keys to choose the modes, 8 mode inside totally, smile, Purikura, continuous capture, auto-timier, normal mode.
- 3、Press M to choose. Quit then photo in the mode you choose



## I Video recoding

- 1、press set twice to go to video setting
- 2、8 modes, press M to choose
- 3、Enter video mode to shoot
- 4、press M to start recording

## I date/parameter setting

- 1、press set thrice to enter the interface to set data
- 2、Press set for 5 times to enter the parameter setting. Language, photo size, auto shutdown, time, power frequency, formatting, reset, sound of keys.

## **Charge**

Charge the camera when the low battery indicate warns using type-C plug with 5V/1A. indicate red when charging, extinguish when charging done.this product can not be used in the state of charge.

## **Reset**

Reset is needed when there is an error or wrong operation. move reset button forth and back to reset the machine.

Maintenance: This product should not be used in water or in humid environment. Please wipe the surface stains with dry cloth.

## **Warning!**

Small parts inside, prohibited to be used by children less than 3. Don' t have the camera close to fire, use under guard of adults.



I Notice

Check the wire, plug shell and the other parts periodically, stop using if there is damage. Repair it before use.

charging power must be lower than 5V.

recommended charger only (DC5V-1A)

3.7V battery inside, un disassemble or replaceable, contact service if there is a damage.

use in guarding of adults

Charger is not a toy, prohibited to be used by children less than 3

disconnect power before clean

Don' t flash people' s eyes when the comprehensive light on in case of hurts to eyes.

MADE IN CHINA  
FABRIQUE EN CHINE  
HERGESTELLT IN  
CHINA  
HECHO EN CHINA



CE UK  
CA

 **WARNING:**  
CHOKING HAZARD-Small parts  
Not for children under 3yrs.