

Cuisinart®




Follow us @cuisinart

OPERATING INSTRUCTIONS

Check that the crumb tray is installed and the toasting slots are free from debris before plugging in the power cord.

1. Insert slice(s) of bread into toasting slots.
2. Select desired toast shade.

3. Press the carriage lever until it locks into the down position.
4. If desired, select Bagel, Defrost, or Reheat.
5. To finish the toasting cycle early, press the Cancel button.

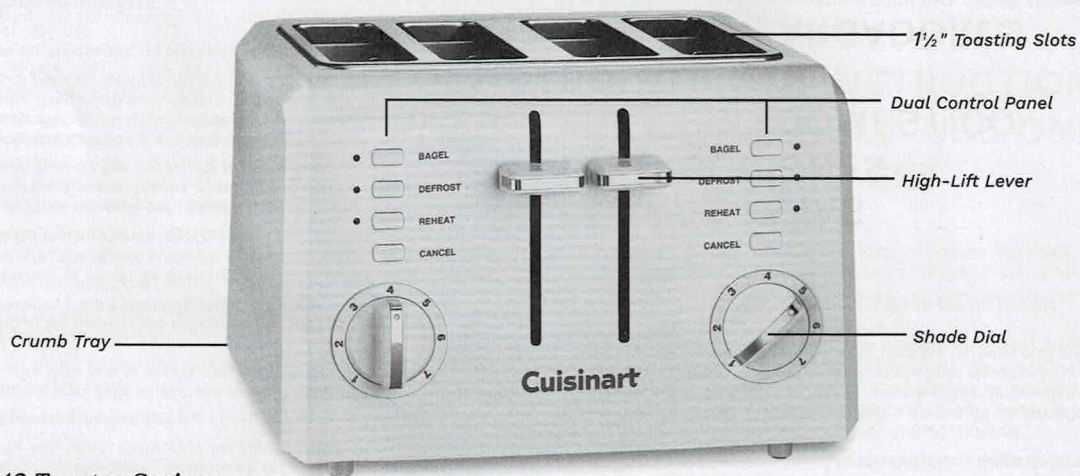

CPT-142 Toaster Series



Scan Now
For User Guide & Warranty

For your safety and continued enjoyment of the product, always read the full user guide for this product before using. The full user guide and important warranty information can be accessed using the QR code or at <https://conair.bc5.io/5/13?u=CPT-142> or by calling 1-800-726-0190.

IMPORTANT SAFEGUARDS

For your safety and continued enjoyment of this product, always read the full user guide carefully before using.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.
3. Do not touch hot surfaces. Use handles or lever.
4. To protect against electric shock, do not immerse cord or plug or place any part of the toaster in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination or repair or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for anything other than its intended use.
12. When heating toaster pastries, always use the lightest toast color setting.
13. Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
14. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation. Do not operate under wall cabinets.
15. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
16. To avoid possibility of fire, do not leave toaster unattended during use.
17. To disconnect, push the Cancel button, then remove plug from outlet.
18. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
19. Any servicing should be performed by an authorized service representative.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

X PG-39997A