


hykolity

ASSEMBLY INSTRUCTIONS

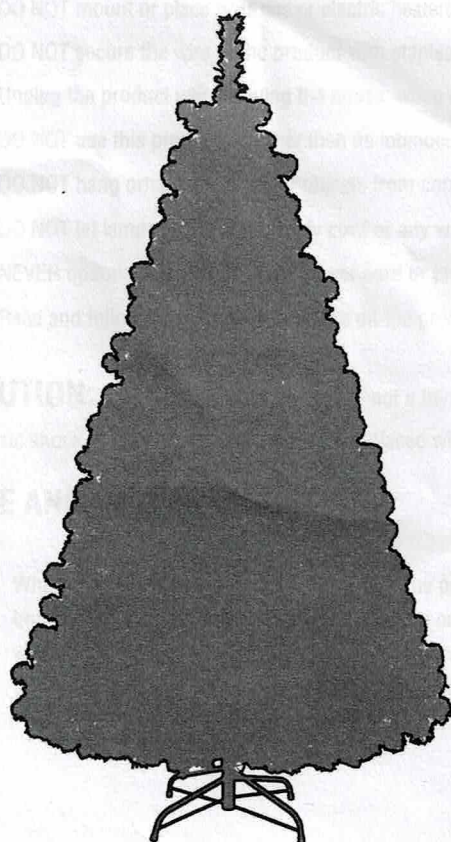

Pre-Lit Tree
with Color Changing LED Lights

CTA-1658(6.5ft)

CTA-1659(7.5ft)

CTA-1661(6.5ft)

CTA-1661(7.5ft)

SAVE THESE INSTRUCTIONS

Retain Carton for Storage Purposes

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- **DO NOT use this seasonal product outdoor.**
- This seasonal use product is not intended for permanent installation or use.
- DO NOT mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- DO NOT secure the wire of the product with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- DO NOT use this product for other than its intended use.
- DO NOT hang ornaments or other objects from cord, wire or light string.
- DO NOT let lamps rest on the supply cord or any wire.
- NEVER operate this product if the power cord or plug is damaged.
- Read and follow all instructions that are on the product or provided with the product.

CAUTION: This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.

USE AND CARE INSTRUCTIONS

- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

SAVE THESE INSTRUCTIONS
Retain carton for storage purposes

Assembly


For these pre-lit tree with color changing LED lights, each carton contains:

- Trunk Section x3
- Metal Stand x1
- Pedal Control x1
- Adapter x1
- Assembly Instruction x1

NOTE:


* The 6.5ft, 7.5ft trees are designed with 3 trunk sections, labeled as A,B,C from top to bottom.

1. Unfold the tree stand and insert the eye bolt provided properly. Place it on a level surface, see fig.1

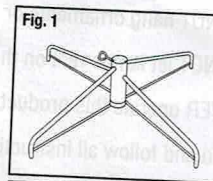

2. Remove the **protective plastic cap** from the end of the very bottom section (**section C for 6.5ft, 7.5ft trees**) and put it into the assembled stand. Make sure the pole is seated properly and tighten the eye bolt. See fig.2.

Note: The plastic cap on the end of the bottom section and middle section(s) are for protective use during transportation. Remove it before install the tree.

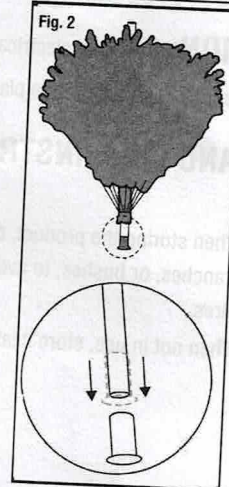

3. Same way as Step2 to assemble the middle section(s) in sequence.

Note:


1 middle section for 6.5ft, 7.5ft trees, namely Section B;

Assembly(Cont.)

4. Light Strings Connecting.

- Connect the male plug and female socket tagged with the same label. Make sure they are connected tight and firmly.
- Connect the pedal switch onto the adapter plug, then plug into the power outlet(120V,60Hz).

Note: 6.5ft ,7.5ft trees come with section A,B,C;

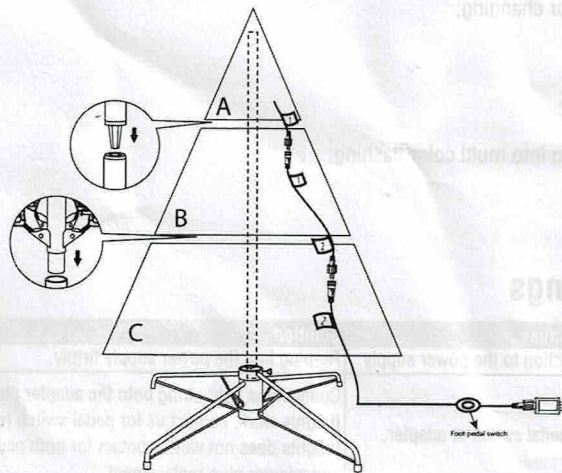


5. Shaping/Fluffing.


Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in a genuinely beautiful and appealing holiday centerpiece.

- Every tree is packed with the tips of each branch compressed to the center .
- Each branch tip must be shaped to its proper position to give the tree a natural look. This is done by gently grasping the left and right wing tips and spreading them out away from the center branch.
- Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance.
- As you shape closer to the top, the branches will not have wing tips, but will otherwise shape in the same manner as lower sections.


For further instructions on shaping/fluffing, please scan the QR code as below

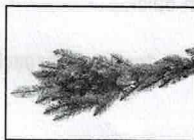

Branches when unpacking

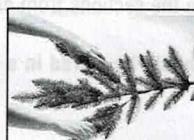

Shaping/Fluffing

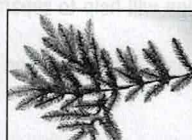

Fluffed Branches

Fluff Instruction



Color Changing Mode

The pedal control operates the functions of the lights. 11 functions in total, each one is activated with the press of the foot switch .Functions occur in the following order:

- (1) Warm white steady on;
- (2) Multi color steady on;
- (3) Warm white random twinkling;
- (4) Multi color random twinkling;
- (5) Continuous dual color changing;
- (6) Warm white Fading;
- (7) Multi Fading;
- (8) Warm white flashing;
- (9) Multi color flashing;
- (10) Warm white flashing into multi color flashing;
- (11)Lights off.

Trouble Shootings

Problem	Possible Cause	Solution
All the lights fail to work.	Bad connection to the power supply	Re-plug into the power supply firmly.
	Defective pedal switch or adapter.	Connect the light string onto the adapter plug directly: If lights work, contact us for pedal switch replacement. If lights does not work, contact for both pedal switch and adapter plug replacement
Part of the lights fail to work.	Bad connection among light strings.	Recheck the light strings connections. Connect every male plug and female socket tagged with the same label.
Tree leans	1. Trees placed on an uneven ground 2. Bottom section does not fit properly into the stand. 3. Defective stand.	1. Clean the ground/palce the tree on an even ground. 2. Replug the bottom section and secure the eye bolts. 3. Contact us for stand replacement.

Storage

Remove all holiday decorations. Gently press tips back into center branch. Raise all branches to original upright position taking care not to place undue pressure on the attached ends of the branches. When disassembling tree, a twisting motion will help to separate the sections from each other.

*** NOTE: All tree parts can be replaced in carton and should be stored in a cool, dry place, especially for the snow flocked tree.**