

FURRION

LED HD TV/DVD Combo 12V

Instruction Manual



* Product picture is for reference only.



Model: FEHD24S3D

Welcome

English

Thank you for purchasing this Furrion® LED HD TV/DVD COMBO 12V. Before operating your new product, please read these instructions carefully. This will ensure safe use and reduce the risk of injury. This instruction manual contains information for installation, maintenance of the product and safe use.

Please keep this instruction manual in a safe place for future reference. Be sure to pass on this manual to any new owners of this product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.

If you have any questions regarding our products, please contact us at:
support@furrion.com

Contents

English

Welcome	2
Contents	3
Safety Warnings.....	4
Important Safety Instructions	4
Safety Precautions	7
Function Overview	9
Control Panel	9
Rear Panel.....	10
Remote Control	11
About Your LED HD TV	13
Features	13
Power Source	13
Before Operation	14
What's in the Box	14
Preparation of your Remote Control.....	14
Getting Started	15
Settings	17
Picture menu.....	17
Sound menu	18
Channel menu	19
Feature menu.....	20
Setup menu	24
USB Operation	25
Media Operation	25
DVD Operation	29
DVD Player Setup	29
DVD Player Controls.....	30
Loading a Disc.....	31
DVD/VCD/SVCD Playback.....	31
Video/Audio/Picture Playback.....	31
Troubleshooting.....	33
Specifications	34
Warranty.....	35

Safety Warnings



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This 'bolt of lightning' indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The 'exclamation mark' calls attention to features within the enclosed literature to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain, moisture placed in the vicinity or objects filled with liquids (such as vases).

CAUTION: To prevent electric shock, fully insert the plug. For regions with polarized plugs: Please match wide blade to wide slot.

Important Safety Instructions


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as if the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus should not be exposed to dripping or splashing, and objects filled with liquids, such as vases, should not be placed on the apparatus.



Safety Warnings

16. An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to eliminate touching power lines or circuits as contact might be fatal.
17. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Never push objects of any kind into this product through openings as they may touch short-out parts or dangerous voltage points that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. If an outside antenna or cable system is connected to the unit, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
20. When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
21. Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks to determine that the unit is in proper operating condition.
22. When you connect the product to other equipment, turn off the power and unplug from the wall outlet. Failure to do so may cause an electric shock and serious personal injury. Read the owner's manual of the other equipment carefully and follow the instructions when making any connections.
23. Sudden high volume may cause hearing or speaker damage. When you use headphones (if the unit is equipped with a headphone jack), keep the volume at a moderate level. If you use headphones continuously with high volume, you may suffer hearing damage.
24. Do not allow the product to output distorted sound for extended periods of time. This may cause speaker overheating and fire.
25. This reminder is provided to call the cable TV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.
26. The socket-outlet must be installed near the unit and easily accessible.
27. The main plug is used as the disconnect and shall remain readily operable.

EXAMPLE OF ANTENNA GROUNDING AS PER THE NATIONAL ELECTRICAL CODE

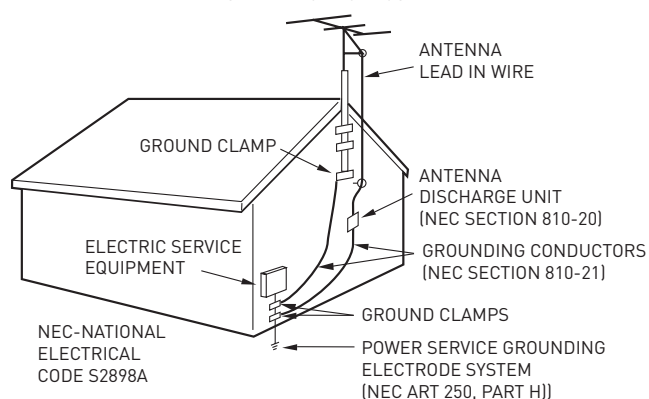

Safety Warnings

English

CONDENSATION

Moisture will form in the operating section of the unit if the unit is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens the unit's performance will be impaired. To prevent this, let the unit stand in its new surroundings for about an hour before switching on, or make sure the room temperature rises gradually.

Condensation may also form during the summer if the unit is exposed to the breeze from an air conditioner. In such cases, change the location of the unit.

HOW TO HANDLE THE LCD PANEL

- Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.
- If the LCD panel is broken, make absolutely sure you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult your doctor after rinsing for at least 15 minutes in clean water.

Possible Adverse Effects on LCD Panel: If a fixed (non-moving) pattern remains on the LCD panel for long periods of time, the image can become permanently engrained and cause subtle but permanent ghost images. This type of damage is NOT COVERED BY YOUR WARRANTY. Never leave your LCD panel on for long periods of time while it is displaying the following formats or images:

- Fixed images, such as stock tickers, video game patterns, TV station logos and websites.

- Special formats that do not use the entire screen. For example, viewing letterbox style (16:9) media on a normal (4:3) display (black bars at top and bottom of screen); or viewing normal style (4:3) media on a wide screen (16:9) display (black bars on left and right sides of screen).

The following symptoms are not signs of malfunction but technical limitation. Therefore we disclaim any responsibility for these symptoms.

- LCD panels are manufactured using an extremely high level of precision technology, however sometimes parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
- Do not install the LCD panel near electronic equipment that produces electromagnetic waves. Some equipment placed too near this unit may cause interference.
- Effect on infrared devices – there may be interference while using infrared devices such as infrared cordless headphones.

Power source: This LED TV is designed to operate on 100~240 volt 50/60 Hz, AC current. Insert the power cord into a 100~240 volt 50/60 Hz outlet.

To prevent electric shock, do not use the LED TV's (polarized) plug with an extension cord, receptacle, or other outlet unless the blades and ground terminal can be fully inserted to prevent blade exposure.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Safety Warnings

Caution: Never remove the back cover of the LED TV as this can expose you to very high voltages and other hazards. If the TV does not operate properly, unplug the LED TV and call your authorized dealer or service center.

Adjust only those controls that are covered in the instructions, as improper changes or modifications not expressly approved by Furrion could void the user's warranty.

Declaration of Conformity

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.


Safety Precautions

WARNING: Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The unit emits heat when in operation. Do not place any covers or blankets on the unit, this may cause overheating. Do not block ventilation holes, or set up near radiators. Do not place in direct sunlight. When placing on a shelf leave 4 inches (10 cm) free space around the entire unit.

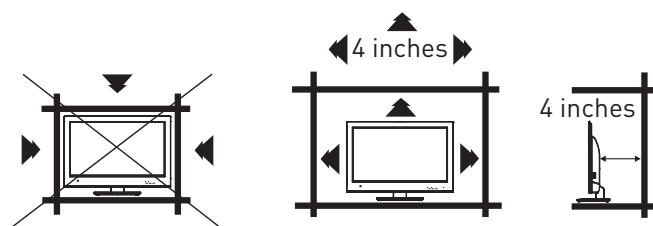

Safety Warnings

English

Notes when mounting the LED TV on the wall


If the unit is to be mounted on the wall, contact the retailer where you purchased the LED TV for advice, and have the equipment professionally installed. Incomplete or improper installation may cause injury to you and/or damage to the LED TV.

Please refer to the table below to ensure the correct VESA mounting is used for the TV.

VESA MOUNTING PATTERN				
TV Model	Width mm	Height mm	Screw Size	Quantity
FEHD24S3D	100	100	BM4*8mm	4

Notice for TV Cabinet

If the unit is to be mounted on a cabinet smaller than the length of the unit, it could result in an unstable location. The unit may tumble over, making a risk of personal, possibly fatal injury. This would also damage the product seriously. Accordingly, Furrion accepts no responsibility or liability for any injuries or property damage resulting from the improper installation.

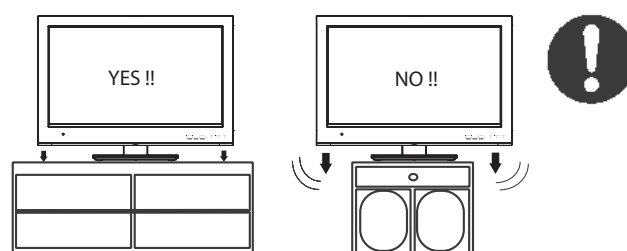


WARNING:

- Do not use this TV with wall mounts that allow the TV to tilt vertically. Vertical tilting wall mounts may cause structural damage to the TV.
- Use ONLY fixed or horizontal swiveling wall mounts with this TV.

Function Overview

Control Panel

English

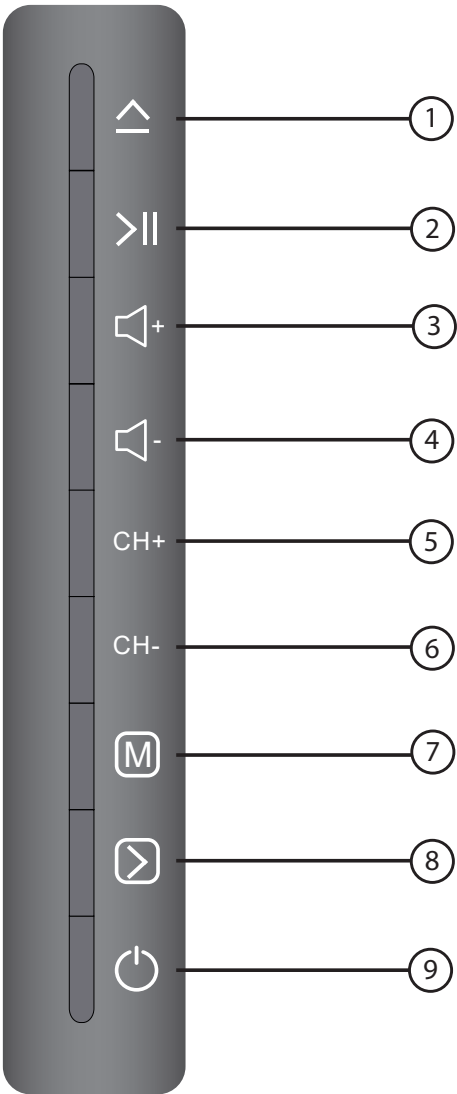


Control Panel		
①		Eject DVD/ CD; Enter the channel search mode
②		Start or pause the playback
③		Increase the volume
④		Decrease the volume
⑤	CH+	Skip to the next channel
⑥	CH-	Skip to the previous channel
⑦		Enter the main menu
⑧		Select the input source
⑨		Switch the TV on/off

* Please note that the button layout of the controls may vary from model to model.

Function Overview

English

Rear Panel

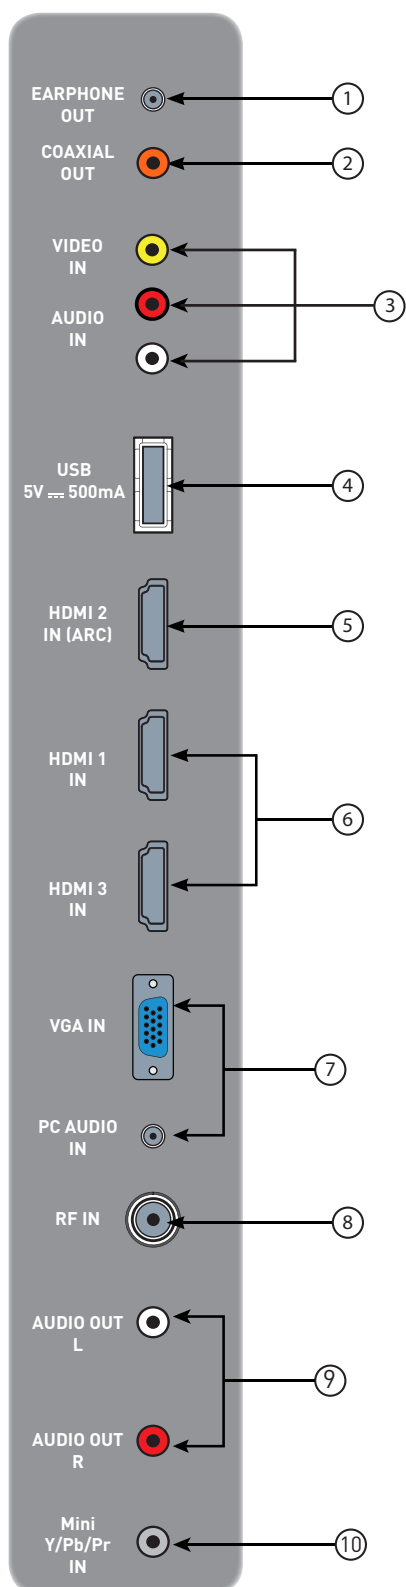


①	EARPHONE OUT	Connect to 3-conductor (TRS) phone connector of earphone, compatibility of earphone with 4-conductor (TRRS) phone connector is not guaranteed
②	COAXIAL OUT	Connect to the COAXIAL AUDIO IN port of an audio device.
③	VIDEO IN AUDIO IN	Connect to the COMPOSITE VIDEO/ AUDIO OUT ports of a DVD Player, Cable Box or other compatible device.
④	USB	USB Port, view pictures/movies/ text and listen to MP3s via a compatible USB stick.
⑤	HDMI 2 IN (ARC)	Connect to the HDMI OUT port of a DVD Player, Games Console, Cable Box or other HDMI device. ARC Audio Return Channel When connected with a HDMI 1.4 cable to an ARC compatible audio system, the TV links with the device to give extra audio functionality.
⑥	HDMI 1 IN HDMI 3 IN	Connect to the HDMI OUT port of a DVD Player, Games Console, Cable Box or other HDMI device. CEC Consumer Electronics Control When connected to the CEC compatible Furion Entertainment Systems or other CEC Compatible devices, the TV links with the system to give extra functionality.
⑦	VGA IN +PC AUDIO IN	Connect to the VGA OUT port of a PC to use the TV as a monitor. Connect to the AUDIO OUT port of a PC.
⑧	RF IN	Connect to the ANTENNA, CABLE, or CABLE BOX .
⑨	AUDIO OUT L/R	Connect to the AUDIO IN ports of an audio device.
⑩	Mini Y/Pb/Pr IN	Connect to the COMPONENT VIDEO OUT ports of a DVD Player, Cable Box or other compatible device.

* The configuration of the connection ports may vary from model to model.

Function Overview

Remote Control

English

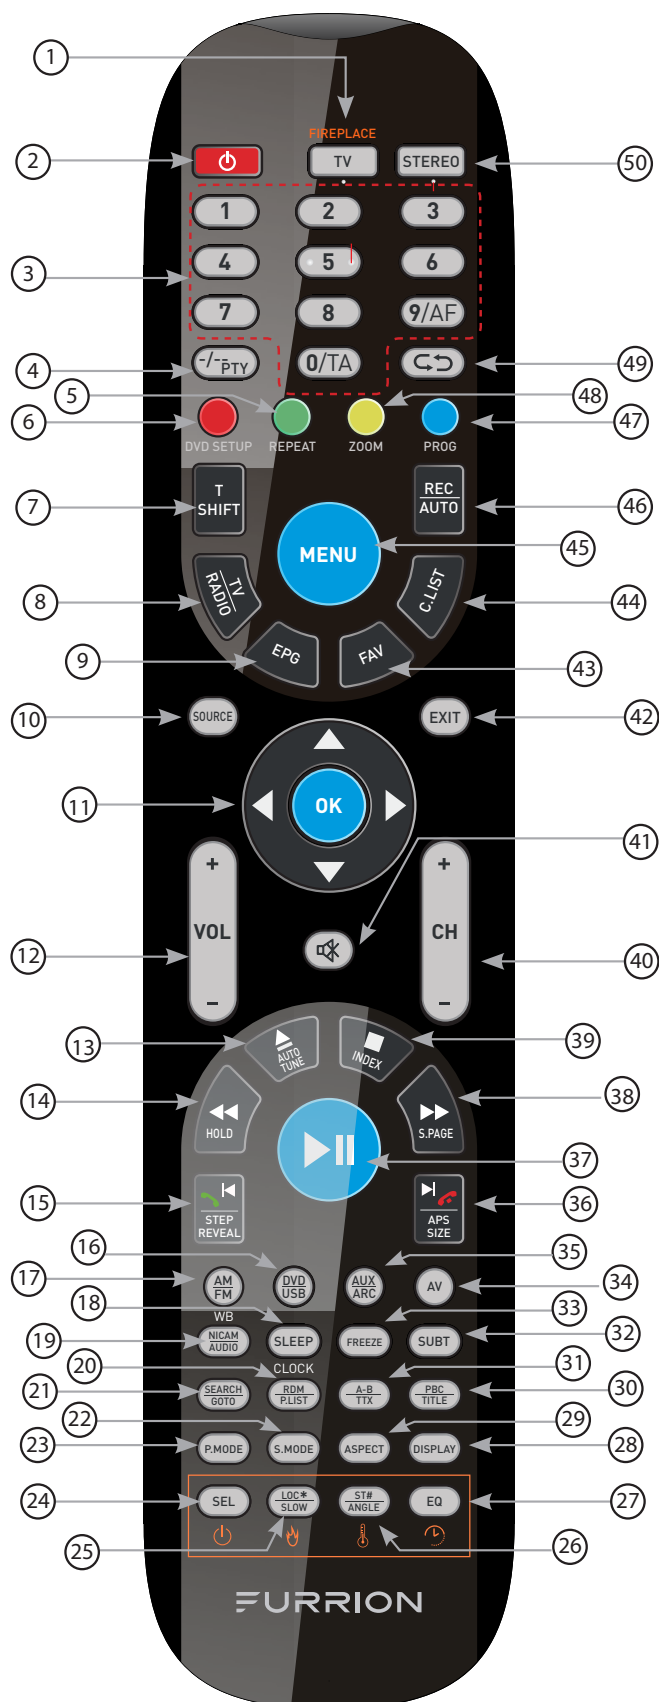








No.	Button	Function
1	TV	Switch to TV mode
	TV/ FIREPLACE	Select Furrion Fireplace remote control functions * Please refer to your Furrion Fireplace manual for more information.
2	Power	Turn the TV/Entertainment System on/off
3	NUMBER BUTTONS	Enter numbers or select channels
4	-/PTY	Toggle between single & double digit input
5	REPEAT	Change the playing mode
6	DVD SETUP	DVD menu setup
7	T.SHIFT	Pause current DTV program and start recording
8	TV/RADIO	Switch between DTV and radio programs
9	EPG	Display EPG information
10	SOURCE	Cycle through input sources
11	NAVIGATION BUTTONS	Confirm selections
12	VOL+/-	Increase/decrease volume
13	▲ / AUTO TUNE	Eject DVD/ CD; Directly enter the channel search mode
14	◀◀ / HOLD	During playback, select the previous track/chapter; Hold On/Off the current page display in Teletext mode
15	▶▶ / STEP REVEAL	Play forward frame by frame during DVD/ VCD playback. Dial or accept a call (when the system is connected to a cell phone)
16	DVD/USB	Select DVD/USB
17	AM/FM	Select AM/FM/WB Radio
18	SLEEP/ CLOCK	Set the sleep timer

Function Overview

English

No.	Button	Function
①9	NICAM / AUDIO	Cycle through NICAM sound modes
②0	RDM / P.LIST	Toggle random playback mode on & off; Display the recorded segment
②1	SEARCH / GOTO	Jump to a specific time on a DVD/VCD/MP3/WMA or CD
②2	S.MODE	Select the different sound mode directly
②3	P.MODE	Select the different picture mode directly
②4	SEL	Toggle between Volume, Bass, Treble & Balance; Hours & Minutes for adjusting
②5	LOC*/SLOW	Adjust radio reception strength; Start slow motion playback.
②6	ST#/ANGLE	Select Stereo & Mono sound; Switch viewing angles on compatible media.
②7	EQ	Select the sound mode Cinema, Rock, Classic & Flat
②8	DISPLAY	Toggle on screen on the selected source On & Off
②9	ASPECT	Cycle through available display aspect ratios
③0	PBC/TITLE	Start the programmed playback function
③1	A-B/TTX	Start the A-B repeat function (playback loop of a segment of track); Turn the Teletext On/Off
③2	SUBT	Select subtitle language (DVD)
③3	FREEZE	Freeze current picture
③4	AV	Select AV Mode
③5	AUX/ARC	Select AUX/ ARC Mode

No.	Button	Function
③6	 /  / APS SIZE	Scan radio stations: Press it to search through each stored station. Press & hold it to scan and store the 6 strongest stations; End or reject a call (when the system is connected to a cell phone)
③7		Pause the playback
③8	 / S.PAGE	During playback, select the next track/ chapter; Display a sub-page of upper options
③9	 / INDEX	Stop playback; Return to the index/initial page
④0	CH+/-	Channel Up/Down
④1		Toggle audio On or Off
④2	EXIT	Exit the current menu
④3	FAV	Add the channel to favorite list
④4	C.LIST	Display the channel list
④5	MENU	Enter the main menu
④6	REC / AUTO	Record the program immediately Automatically adjust the picture in PC mode
④7	PROG	Start the programmed playback function
④8	ZOOM	Enlarge screen images
④9		Toggle between the current and previous channel
⑤0	STEREO	Switch to Stereo mode

About Your LED HD TV

Features

Integrated Digital Tuner - You can view digital broadcasts without using a Digital TV Set-Top Box.

Closed Caption Decoder With Full Text Mode - Displays text captions or full screen text on the screen for hearing impaired viewers.

Picture Adjustments Using The Remote Control - The On-Screen display allows precise remote control adjustment of BRIGHTNESS, CONTRAST, COLOR, TINT and SHARPNESS.

Programmable TV Sleep Timer - Operable from the remote control, the TV can be programmed for up to 240 minutes to turn off automatically.

On-Screen 3 Language Display - You can select one of 3 languages, English, Spanish or French for on-screen programming.

HDMI/Component Video Jacks - A VCR, DVD player, satellite receiver or other audio/video component can be connected to this unit.

Power Source

NOTE:

- Please make sure to insert the cord securely at both the LED TV and the wall outlet.

WARNING:

- DO NOT CONNECT THIS UNIT TO THE POWER USING ANY DEVICE OTHER THAN THE SUPPLIED 12V CIGARETTE ADAPTER. THIS COULD CAUSE FIRE, ELECTRICAL SHOCK, OR DAMAGE.
- DO NOT USE WITH A VOLTAGE OTHER THAN THE POWER VOLTAGE SPECIFIED. THIS COULD CAUSE FIRE, ELECTRICAL SHOCK, OR DAMAGE.

CAUTION:

- WHEN THIS UNIT IS NOT USED FOR A LONG TIME, (E.G., AWAY ON A TRIP) IN THE INTEREST OF SAFETY, BE SURE TO UNPLUG IT FROM THE AC OUTLET.
- DO NOT PLUG/UNPLUG THE 12V CIGARETTE ADAPTER (INCLUDED) OR AC/DC POWER ADAPTER (EXCLUDED) WHEN YOUR HANDS ARE WET. THIS MAY CAUSE ELECTRICAL SHOCK.
- IF YOU NEED TO REPLACE THE SUPPLIED 12V CIGARETTE ADAPTER OR AC/DC POWER ADAPTER (EXCLUDED), THE SPECIFIED ONE IS RECOMMENDED. CONTACT THE DEALER THAT YOU PURCHASED THE UNIT FROM.

Before Operation

What's in the Box

Thanks for purchasing this Furrion LED HD TV. This manual will help you set up and begin using your TV. Please read this manual thoroughly and keep this manual in a safe place for future reference.

First, check the contents of your box with the parts checklist below:


- LED HD TV
- 12V Cigarette Adapter
- Remote Control
- AAA Battery × 2
- Instruction Manual
- Warranty Card
- Wall Mount Screws
- Bottom Mount Stand and Screws
- 240V Power Adapter
- YPbPr Adapter

Now you can get started!


Preparation of your Remote Control

BATTERY INSTALLATION

1. Open battery compartment cover.

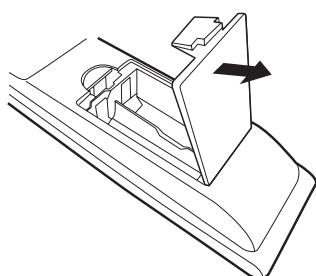

2. Install two AAA batteries.

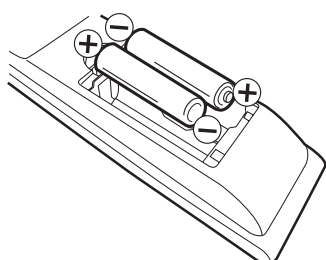

3. Close the cover of the battery compartment.

NOTE: Use two “AAA” size batteries. The batteries may last approximately one year depending on how much the remote control is used. For best performance, it is recommended that batteries should be replaced on a yearly basis, or when the remote operation becomes erratic. Do not mix old and new batteries or different types.

BATTERY PRECAUTIONS

These precautions should be followed when using batteries in this device:

- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
- Please use caution when inserting batteries to avoid battery damage. If the spring terminal in the remote control remains in contact with a side of a damaged battery it can cause a short circuit. Never use damaged batteries as they can become very hot and are dangerous.


Getting Started

The **Auto Installation** window appears the first time you turn on the TV. It will assist you to configure the TV.


1. Press **⏻** button on the TV control panel or on the remote control to switch on the TV. The power indicator will change to green. The **Auto Installation** window appears on the screen.

NOTE: It may take a few seconds before the **Auto Installation** window appears on the screen.

2. Use **▲** or **▼** to highlight the option you would like to reset.

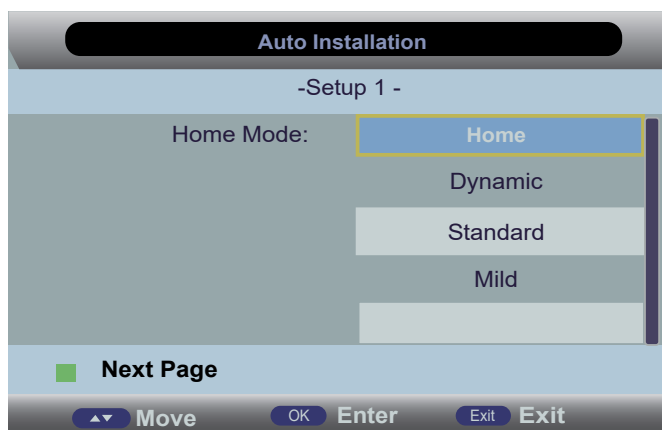


3. Press **OK** on the remote control, a new window will pop up. Use **◀** or **▶** to select **OK** to enter the submenu or select **Cancel** to return.

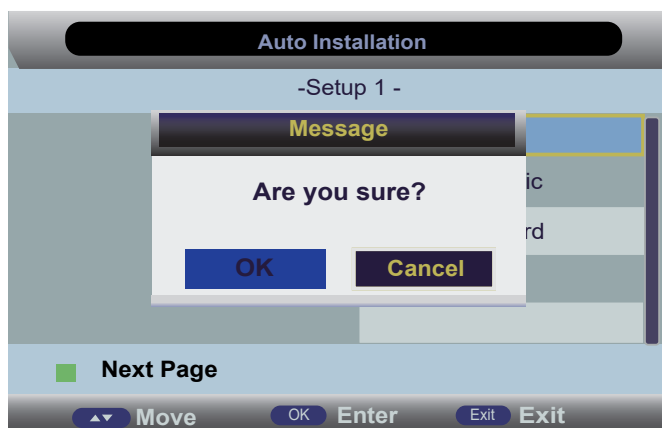


4. Use **▲** or **▼** to select your desired country, then press **OK** to confirm your selection. Press **MENU** or **DVD SETUP** (red button) on the remote control to

return to previous page or press **REPEAT** button (green button) to skip to next page.

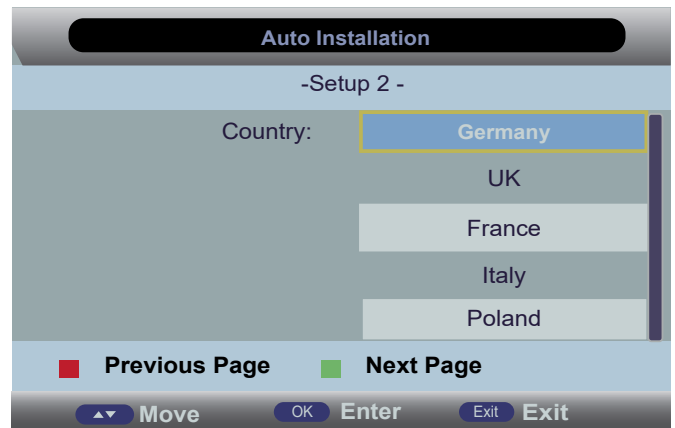


5. Use **▲** or **▼** to select your desired language, then press **OK** to confirm your selection and skip to the next setting. Press **MENU** or **DVD SETUP** (red button) on the remote control to return to previous page or press **REPEAT** button (green button) to skip to next page.

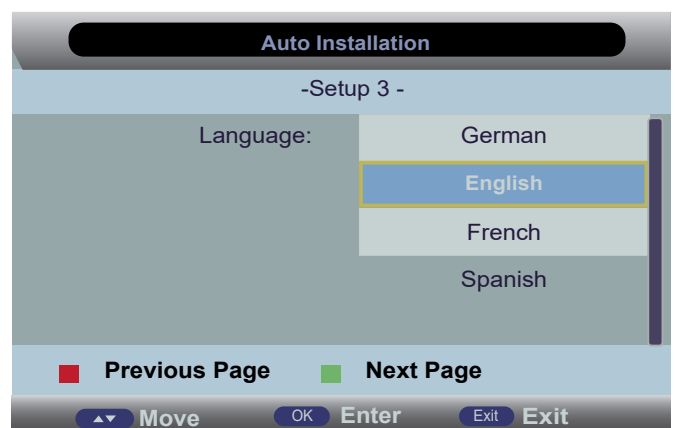


Getting Started

English

6. Use **▲** or **▼** to select the screen auto shut off time, then press **OK** to confirm your selection. Press **MENU** or **DVD SETUP** (red button) on the remote control to return to previous page or press **REPEAT** button (green button) to skip to next page. Select your desired auto power off setting, then press **OK** to confirm your selection and skip to the next setting.

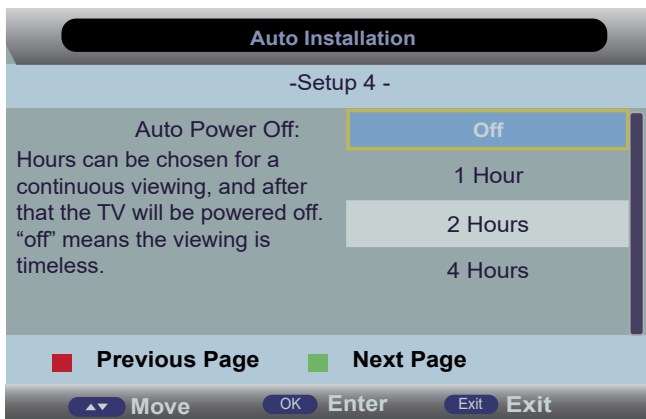

7. Use **▲** or **▼** to select **ATV**, **DTV** or both channel search mode, then press **OK** to confirm your selection. Press **MENU** or **DVD SETUP** (red button) on the remote control to return to previous page to select, then press **OK** to confirm your selection and skip to the next setting.

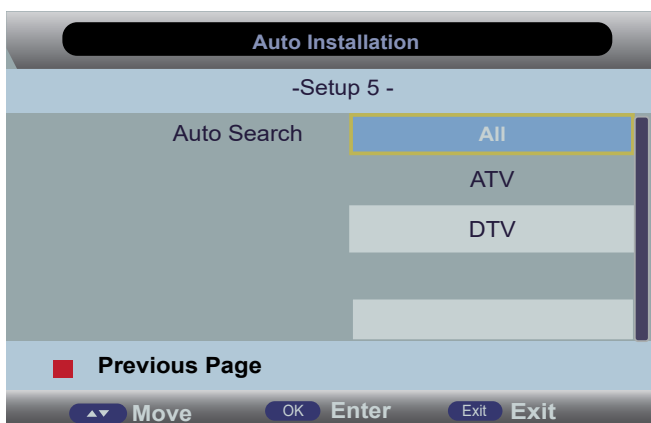


8. The TV will start to search channels under current selected mode. Or press **EXIT** on the remote control to exit channel scan.

Change Settings

Picture menu

English

1. Press **MENU** button to display the main menu.
2. Use **▲** or **▼** to highlight **Picture** mode, then press **►** or **OK** to enter the **Picture** menu settings.
3. Use **▲** or **▼** to highlight the option you want to reset.
4. Press **►** to show the list of the selected menu, then use **▲** or **▼** to highlight your desired setting.
5. Press **►**, **OK** or **MENU** button to confirm your selection.
6. Press **◀** or **MENU** button to return to the previous menu or press **EXIT** at any time to exit the setting.

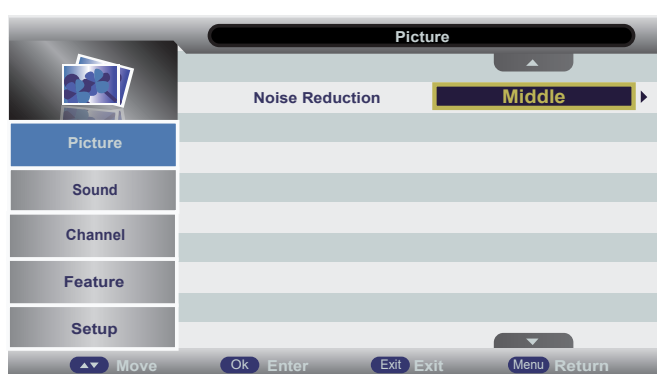

Picture	
Picture Mode	Press ► to show the list, then use ▲ or ▼ to select Dynamic, Standard, Mild or User . * You can press P.MODE button on the remote control to change the picture mode directly.
Brightness	Use ◀ or ► to adjust the visual perception output of the entire picture. (*Only adjustable under User mode).
Contrast	Use ◀ or ► to adjust the highlight intensity of the picture. (*Only adjustable under User mode)
Sharpness	Use ◀ or ► to adjust the peaking in the detail of the picture. (*Only adjustable under User mode)
Colour	Use ◀ or ► to adjust the colour. (*Only adjustable under User mode)
Tint	Press ◀ or ► to adjust the tint (NTSC mode only)
Colour Temperature	Change the overall colour cast of the picture. Use ▲ or ▼ to select Warm, Cool or Standard .
Aspect Ratio	Press ► to show the list, then use ▲ or ▼ to select AUTO, 4:3, 16:9, Full, Zoom1, Zoom2 or Cinema
Noise Reduction	Press ► to show the list, then use ▲ or ▼ to select Off, Low, Middle or High

Change Settings

English

Sound menu

1. Press **MENU** button to display the main menu.
2. Use **▲** or **▼** to highlight **Sound** mode, then press **▶** or **OK** to enter the **Sound** menu settings.
3. Use **▲** or **▼** to highlight the option you want to reset.
4. Press **▶** to show the list of the selected menu, then use **▲** or **▼** to highlight your desired setting.
5. Press **▶**, **OK** or **MENU** button to confirm your selection.
6. Press **◀** or **MENU** button to return to the previous menu or press **EXIT** at any time to exit the setting.




Sound			
Sound Mode	Press OK or ▶ to show the list, then use ▲ or ▼ to select Standard , Movie , Music , Speech , or User . * You can press S.MODE button on the remote control to change the sound mode directly.		
Bass	Press ◀ or ▶ to adjust the level of the lower-pitched sounds. (*Only adjustable under User mode)		
Treble	Press ◀ or ▶ to increase or decrease high-pitched sounds. (*Only adjustable under User mode)		
Balance	Press OK or ▶ to enter the setting page and use ◀ or ▶ to adjust the audio output between left and right track.		
Surround	Press OK or ▶ to show the list, then use ▲ or ▼ to set On or Off .		
AVL	Press OK or ▶ to show the list, then use ▲ or ▼ to select On or Off .		
SPDIF	Press OK or ▶ to show the list, then use ▲ or ▼ to select Off , PCM or Auto .		
Audio Description	Press OK or ▶ to enter the Audio Description setting page.	Mode	Press OK or ▶ to show the list, then use up or down to select On/Off .
		Volume	Press ▶ to enter the volume setting page and use ◀ or ▶ to change the volume setting.

Change Settings

Channel menu

English

1. Press **MENU** button to display the main menu.
2. Use **▲** or **▼** to highlight **Channel** mode, then press **►** or **OK** to enter the **Channel** menu settings.
3. Use **▲** or **▼** to highlight the option you want to reset.
4. Press **►** to show the list of the selected menu, then use **▲** or **▼** to highlight your desired setting.
5. Press **►**, **OK** or **MENU** button to confirm your selection.
6. Press **◀** or **MENU** button to return to the previous menu or press **EXIT** at any time to exit the setting.

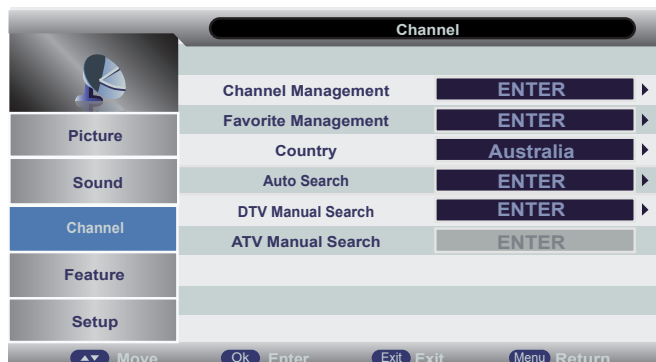

Channel			
Channel Management	Press OK or ► to enter the Channel Management page and manage the channels saved.	Del	Press RED button to sign the channels you want to delete , it will hint you when you exit.
		Lock	User must set the "Lock enable"(Feature-Lock- Lock enable) as ON to active this function. Press GREEN button to sign (lock) or cancel (unlock) the channel. You have to enter the password to view the program.
		Skip	Press YELLOW button to skip the channel or cancel the setting, and the program will not be programed by CH +/- button.
		Swap	Press BLUE button to sign the channel, press ▲ or ▼ to move. Press OK or ► to swap the position.
Favorite Management	Press OK or ► to add or remove favorite channels by the color buttons. Up to 4 favorite lists are available, RED-Fav1 , GREEN-Fav2 , YELLOW-Fav3 , BLUE-Fav4 .		
Country	Press OK or ► to select the Country .		
Auto Search	Press OK or ► to enter the auto Search menu.	All	Use ▲ or ▼ to select All mode. Press OK or ► to enter All search channels according DTV and ATV .
		DTV	Use ▲ or ▼ to select DTV mode. Press OK or ► to enter Auto search channels for DTV .
		ATV	Use ▲ or ▼ to select ATV mode. Press OK or ► to enter Auto search channels for ATV .
		NOTE: When the TV is auto running, you could press MENU button to stop auto tuning and return to preview menu.	
DTV Manual Search	Press OK or ► to enter the auto search channels for DTV .	Press ▲ or ▼ to select the Channel , Frequency(KHz) or BandWidth(MHz) . Press OK or ► to confirm your selection. Use ▲ or ▼ to select Start mode. Use OK or ► to enter Start . When the TV is auto running, you could press MENU button to stop auto tuning and return to preview menu.	


Change Settings

English

Channel			
ATV Manual Search	Press ▲ or ▼ to select the ATV Manual Search , and use OK or ► to confirm your selection. Press Red button to save the setting.	Current Channel	Use ▲ or ▼ to select Current Channel mode. Press OK or ► to enter Current Channel . Display the Current Channel info.
		Frequency	Display the current Frequency info.
		Search	Use ▲ or ▼ to select Search mode. Press OK or ► to enter Search .
		Fine Tune	Use ▲ or ▼ to select Fine Tune mode. Press OK or ► to enter Fine Tune .
		Color System	Press ► to show the list, then use ▲ or ▼ to select Auto , PAL or SECAM .
		Sound System	Press ► to show the list, then use ▲ or ▼ to select BG , DK or I
		NOTE: When the TV is auto running, you could press MENU button to stop auto tuning and return to previous menu.	

Feature menu

1. Press **MENU** button to display the main menu.
2. Use **▲** or **▼** to highlight **Feature** mode, then press **▶** or **OK** to enter the **Feature** menu settings.
3. Use **▲** or **▼** to highlight the option you want to reset.
4. Press **▶** to show the list of the selected menu, then press **▲** or **▼** to scroll among list.
5. Press **▶**, **OK** or **MENU** button to confirm your selection.

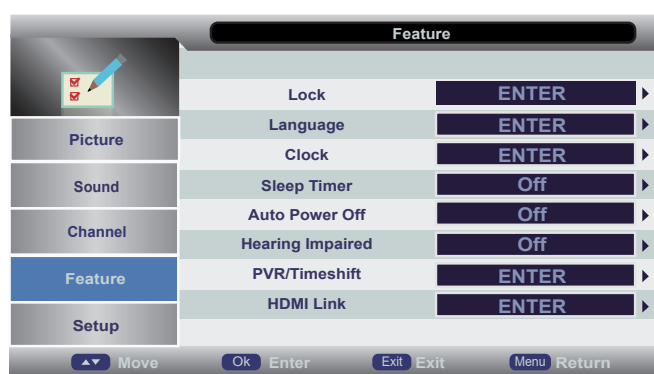

Change Settings

Feature		
Lock	This menu allows you to lock certain features of the TV program so that it can not be used or viewed. For example, you don't want some channels viewed by children , or you want some channels to be locked when the television is to be used in a hotel. When you enter the system lock menu you will be asked for a password. The default password is 0000 .	Lock Channel Use ▲ or ▼ to turn On/Off the Lock function. Press OK or ► to confirm your selection Note: When it is turned on, the functions of Parental Guidance and Change Pin code as below will be locked, and the functions with Channel Management of Auto Search , DTV Manual Search , ATV manual Search in Channel menu will also be locked.
		Parental Guidance Use ▲ or ▼ to select the Parental Guidance mode, No Block or Block All the function. (*Only adjustable under signal)
		Change Pin Code Use ▲ or ▼ to firstly enter the current password ,then enter a new password and confirm your new password. (*Only adjustable when Lock Channel mode is On)
		Hotel Mode Use ▲ or ▼ to enter the Hotel setting menu, please review Hotel Mode section.
Language	OSD Language	Press ► to show the list, then use ▲ or ▼ to select Language from German, English, French or Spanish .
	Preferred Subtitle	Press ► to show the list. Use ▲ or ▼ to select the available language.
	Preferred Audio	Press ► to show the list. Use ▲ or ▼ to select the available language.
	DTV Teletext Language	Press ► to show the list,. Use ▲ or ▼ to select the available language.
	ATV Teletext Language	Press ► to show the list. Use ▲ or ▼ to select the available language.
Clock	Use ▲ or ▼ to set the Clock (by default the information is taken automatically from the digital signal).	
Sleep Timer	Use ▲ or ▼ to select Sleep Timer mode. Press OK or ► to enter the Sleep Timer menu settings, then use ▲ or ▼ to select your decision.	
Auto Power Off	Press OK or ► to enter the Auto Power Off menu settings, then use ▲ or ▼ to select Off , 1 Hour , 2 Hours or 4 Hours . Press OK or ► to select your decision.	
Hearing Impaired	Press OK or ► to enter the Hearing Impaired menu settings, then use ▲ or ▼ to select Off or On . Press OK or ► to select your decision.	

Change Settings

English

Feature			
PVR/ Timeshift	Press OK or ▶ to enter the PVR/ Timeshift menu settings.	Partition Select	Use ▲ or ▼ to highlight the USB drive in the list and press the red button on the remote control, then highlight "OK" and press the OK button . When formatting completes, the USB drive will be ready for recording.
		Auto Timeshift	Press ▶ to show the list, then use ▲ or ▼ to select Off or Auto
		Timeshift Buffer	Press ▶ to show the list, then use ▲ or ▼ to select Auto, 30 Mins, 1hr or 2hr .
		Timer	Press OK or ▶ to adjust Timer. Press Blue button to Edit Timer list from PVR/Timeshift . (Please review Feature - Timer - Edit section.)
		Record List	Press OK or ▶ to enter the Record List menu settings. Press Red button to Delete Record List.
		Recorder Start	Press OK or ▶ to Start Recorder , and a new window will pop up. Use ◀ or ▶ to select OK to enter the submenu or select Cancel to return. You may select to record directly by pressing the EPG button on remote control, see " Recording Directly by Using EPG " section.
HDMI Link	Please review HDMI Link section.		

Feature - Lock - Hotel Setting	
Channel Lock	Press ▶ to select Off or On .
Picture Lock	Press ▶ to select Off or On .
Sound Lock	Press ▶ to select Off or On .
Feature Lock	Press ▶ to select Off or On .
Setup Lock	Press ▶ to select Off or On .
Key Lock	Press ▶ to select Off or On .
Source Lock	Press ▶ to select DTV, ATV, AV, YPbPr, HDMI1, HDMI2, HDMI3, PC, Media or DVD mode, then press ◀ or ▶ to select Off or On .
Set Source	Press ◀ or ▶ to select DTV, ATV, AV, YPbPr, HDMI1, HDMI2, HDMI3, PC, Media, DVD mode or Off .
Channel Number	Press ◀ or ▶ to adjust the Channel Number from 1 to 100.
Max Volume	Press ◀ or ▶ to adjust the Max Volume from 1 to 100.
Default Volume	Press ◀ or ▶ to adjust the Max Volume under Default Volume mode .
Next Page	Press OK to go to Next Page .
Clear Lock	Press ▶ to adjust Clear Lock .
DataBase Export	Press ▶ to DataBase Export Hotel Setting to your USB . Make sure a flash drive is inserted into the USB port before entering the USB mode.
DataBase Import	Press ▶ to DataBase Import Hotel Setting. Make sure a flash drive is inserted into the USB port before entering the USB mode.
Previous Page	Press OK to go to Previous Page .

Change Settings

Feature-Timer - Edit	
Recorder	Press OK or ▶ to show the list, then use ▲ or ▼ to select Off or On .
Type	Press OK or ▶ to show the list, then use ▲ or ▼ to select DTV or Radio .
Channel	Press OK or ▶ to show the list, then use ▲ or ▼ to select your selection .
Start Time	Press OK or ▶ to edit the Start Time , then use 0~9 button to edit Start Time setting. Press OK or ▶ to enter the Start Time setting.
Duration	Press OK or ▶ to edit the Duration , then use 0~9 button to edit Duration . Press OK or ▶ to enter the Duration . (Only adjustable when Recorder mode is On .)
Date	Press OK or ▶ to edit the Date , then use 0~9 button to edit Date ., Press OK or ▶ to enter the Date .
Mode	Press OK or ▶ to show the list, then use ▲ or ▼ to select Once , Daily , Weekly or Monthly .
Note: <ul style="list-style-type: none"> Press ▲ or ▼ to move menu. Press 0~9 button to edit number. Press OK or ▶ to enter your selection. Press Menu button to save menu. 	

Scheduled Recording using the EPG

Press the **EPG** button on the remote control, navigate to the program you wish to record then press the green button on the remote control 2 times only.

A red “R” symbol will appear next to the program, indicating that it is set to record.



Scheduled Viewing using the EPG

Press the **EPG** button on the remote control, navigate to the program you wish to record then press the green button on the remote control 1 time only. This will activate “**Scheduled Viewing**” for that program, and a red clock symbol will appear next to the program. This function will not record but will change channels at the scheduled time for viewing of the program.

Change Settings


English

Feature - HDMI Link	
Enable HDMI Link	Use ▲ or ▼ to highlight Enable HDMI Link , press MENU or ▶ to set as Off or On . Press OK or ▶ key to confirm your selection.
Auto PowerOn	Use ▲ or ▼ to Setup menu for Auto PowerOn . Press MENU or ▶ to set as Off or On . Press OK or ▶ key to confirm your selection.
Auto Standby	Use ▲ or ▼ to Setup menu for Auto Standby . Press MENU or ▶ to set as Off or On . Press OK or ▶ to confirm your selection.
Amplifier Support ARC	Use ▲ or ▼ to Setup menu for Amplifier Support ARC . Press MENU or ▶ to set as Off or On . Press OK or ▶ to confirm your selection.
Device List	Press OK or ▶ to show the Device List .
Device Menu	Press OK or ▶ to adjust the Device Menu .

Setup	
OSD Timer	Use ▲ or ▼ to adjust the amount of time the On Screen Menu stays on the screen before disappearing.
PC Setup	Use ▲ or ▼ to change the PC Settings in PC mode (Press SOURCE button to in INPUT list, then press ▲ or ▼ to select PC mode).
Blue Screen	Use OK or ▶ to show the list, then use ▲ or ▼ to set as On or Off .
Home Mode	Use OK or ▶ to show the list, then use ▲ or ▼ to select Home, Dynamic, Standard or Mild .
Reset TV Setting	Change to factory default settings. Press OK or ▶ to enter and use ◀ or ▶ to select OK to enter the submenu or select Cancel to return. Press OK to confirm your selection.
Software Upgrade	Press OK or ▶ to enter Software Upgrade .

Setup menu

1. Press **MENU** button to display the main menu.
2. Use **▲** or **▼** to highlight **Setup** mode, then press **▶** or **OK** to enter the **Setup** menu settings.
3. Use **▲** or **▼** to highlight the option you want to reset.
4. Press **▶** to show the list of the selected menu, then press **▲** or **▼** to scroll among list.
5. Press **▶**, **OK** or **MENU** button to confirm your selection.

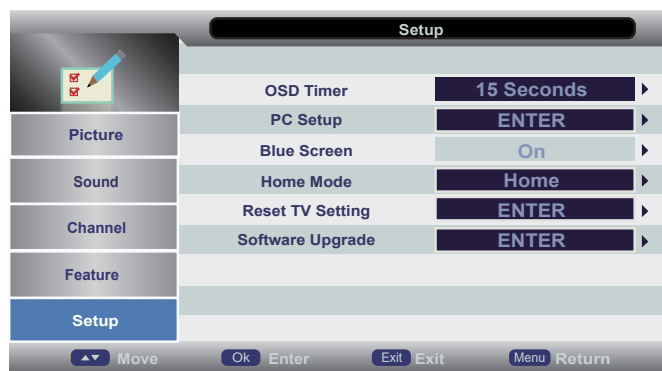


USB Operation

Media Operation

Make sure a flash drive is inserted into the **USB** port before entering the **USB** mode.

1. Press **SOURCE** button on the remote control to display the input source menu. Use **▲** or **▼** to highlight **Media** source, and press **OK** button to enter the **Media** menu.
2. Use **◀** or **▶** to select **Photo / Music / Movie / e-Book**. Press **OK** to enter.

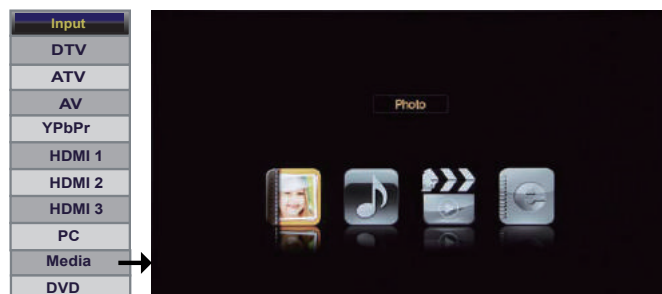


Photo

1. Use **◀** or **▶** to select **Photo**. Press **OK** to enter.
2. Use **▲** or **▼** to navigate the files or folders saved in the flash drive, press **OK** to enter. **NOTE:** When a file is selected, the file information will appear on the right.
3. Use **◀** or **▶** to select the option on the table, and press **OK** button to enter the previous menu. Press **EXIT** at any time to return to the main **USB** menu.




4. Use **▲** or **▼** to highlight folder in flash

drive. Press **OK** or **▶** to enter the file list, and press **◀** to return to the previous menu. Press **EXIT** at any time to return to the main **USB** menu.

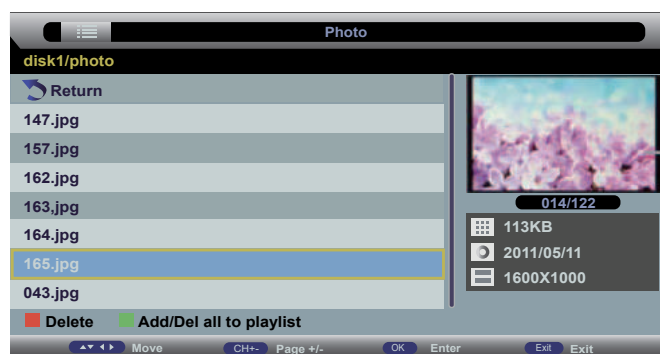

5. Press **▲** or **▼** to move , and press **OK** button to select the file or unfold the folder.
6. Press **◀** to return to the previous menu.
7. Press **EXIT** to select the file view type list.
8. Press **EXIT** again to return to the root **MENU**.
9. Then press **▶** to program the files (be signed) in the fold you select.
10. Press **RED** button to delete the file; Press **GREEN** button to sign or cancel all the files to play list.
11. Press **▶||** to enter display.
12. Press **EXIT** to stop and exit the full screen program, please note the hints on the bottom.

Play the photo

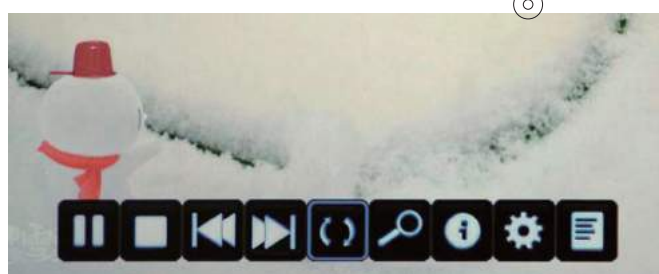


USB Operation

Photo	
	Play/Pause the photo playing.
	Stop and exit the full screen program.
	Play the previous file directly.
	Play the next file directly.
	Rotate the picture (0, 90, 180, 270).
	Zoom in/out the picture, you could move the picture by cursor left/right/up/down button in Zoom mode.
	Display the information of the current file.
	Display the photo setup menu, and select the Repeat mode, Background Music, Slide Time or Effect.
	Display the play list.


Note: Use ◀ or ▶ to select the option on the table, and press **OK** button to change.
You could press **OK** button to display the option table when it disappears.

Music

- Use ◀ or ▶ to select **Music**. Press **OK** to enter.
- Use ▲ or ▼ to navigate the files or folders saved in the flash drive, press **OK** to enter.
NOTE: When a file is selected, the file information will appear on the right.
- Use ◀ or ▶ to select the option on the table, and press **OK** to enter the previous menu. Press **EXIT** at any time to return to the main **USB** menu.

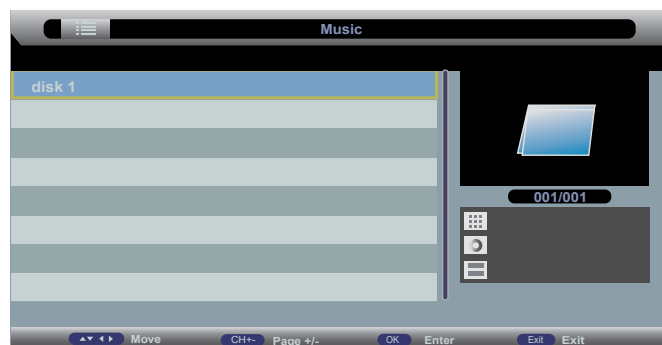

drive, and press **OK** or ▶ to enter the file list. Press ◀ to return to the previous menu. Press **EXIT** at any time to return to the main **USB** menu.

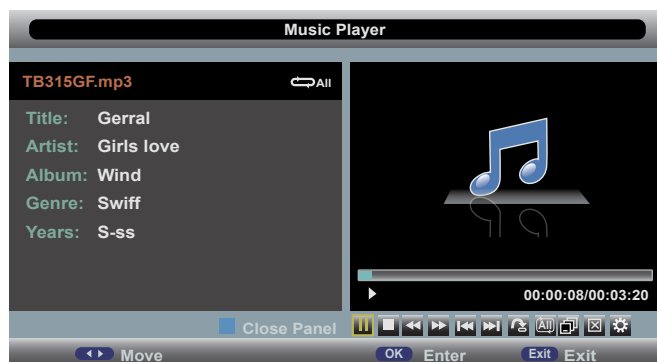

Music Player	
	Play/Pause the music playing.
	Stop and exit the music playing.
	Fast backward.
	Fast forward.
	Play the previous song.
	Play the next song.
	Input the time and start playing directly.
	Select the repeat mode for playing music.
	Switch the window between "Information" and "Play list".
	Switch off the screen displaying (BLUE button as quick button). It will be turned on by pressing power button.


Note: Use ◀ or ▶ to select the option on the table, and press **OK** to change.
You could press **OK** to display the option table when it disappears.

- Use ▲ or ▼ to highlight folder in flash

USB Operation

Movie

1. Use ◀ or ▶ to select **Movie**. Press **OK** to enter.
2. Use ▲ or ▼ to navigate the files or folders saved in the flash drive, press **OK** to enter.
NOTE: When a file is selected, the file information will appear on the right.
3. Use ◀ or ▶ to select the option on the table, and press **OK** to enter the previous menu. Press **EXIT** at any time to return to the main **USB** menu.

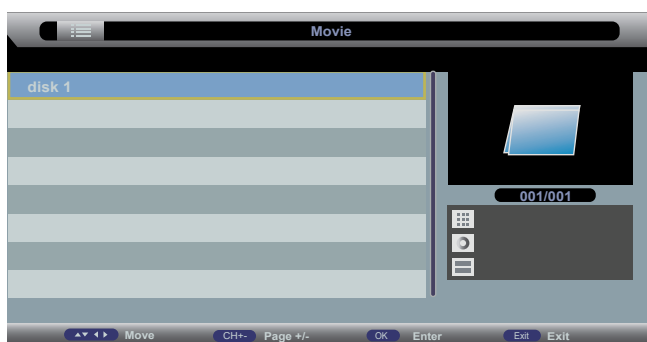

Movie	
▶	Play the movie in slow mode.
⏮	Play the movie in step mode.
🔄	Set the A-B repeat playing mode.
⏪	Play the previous file directly.
⏩	Play the next file directly.
📋	Display the playing list.
ℹ	Display the information of the current file.
⚙	Display the movie setup menu, and set up the Program, Subtitle, Audio, Repeat mode.
🕒	Goto mode, input the time and start playing directly.
Note: Use ◀ or ▶ to select the option on the table, and press OK to change. You could press OK to display the option table when it disappears.	

Play the movie



Movie	
⏮	Play/Pause the movie playing.
⏹	Stop and exit the movie playing.
⏪	Fast backward.
⏩	Fast forward.


USB Operation

English

e-Book

1. Use ◀ or ▶ to select **e-Book**, and press **OK** to enter.
2. Use ◀ or ▶ to navigate the files or folders saved in the flash drive, press **OK** to enter.
NOTE: When a file is selected, the file information will appear on the right.
3. Use ◀ or ▶ to select the option on the table, and press **OK** to enter the previous menu. Press **EXIT** at any time to return to the main USB menu.

Note: Use ◀ or ▶ to select the option on the table, and press **OK** to change. You could press **OK** to display the option table when it disappears.

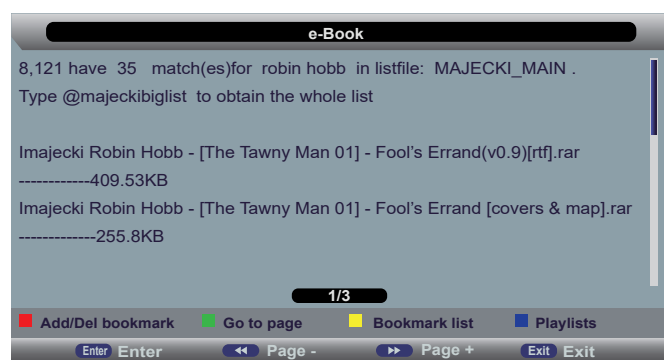


e-Book	
RED button	Add or delete the bookmark.
GREEN button	Goto the appointed page.
YELLOW button	Display the bookmark.
BLUE button	Display the playlist.
OK button	Show Quick Menu , then use ▲ or ▼ to select Background Music , Music source or Encode Type

DVD Operation

DVD Player Setup

English

1. During disc playback, press **SETUP** to go to **Preference Page**.
2. Use ◀ or ▶ to switch among **General Page**, **Audio Setup Page** and **Preference Page**.
3. Use ▲ or ▼ to highlight the item you would like to reset.
4. Press ▶ to select the switch to the submenu, use ▲ or ▼ to select your desired setting.
5. Press ▶ to return to the previous menu or press **SETUP** at any time to exit the setting.

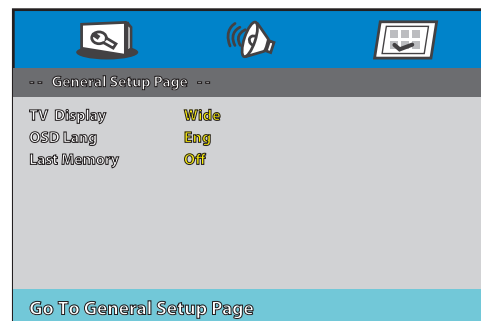

General Setup

TV Display	Set the picture ratio	Press ◀ or ▶ to select desired picture ratio
OSD Lang	Set the OSD language	Press ◀ or ▶ to select the desired language
Screen Saver	Turn the screen saver On or Off	Press ◀ or ▶ to set the screen saver On or Off
Last Memory	Turn the Last Memory option On & Off . Last Memory memorizes when playback is stopped and recalls when the disc is next played.	Press ◀ or ▶ to set the Last Memory On or Off

Sound Setup

Downmix	Set the Audio Downmix mode	Press ◀ or ▶ to select Stereo/ LT/ RT
----------------	-----------------------------------	----------------------------------------------


Preferences

TV Type	Set the Output type	Press ◀ or ▶ to select Auto/ PAL/ NTSC
Audio	Set the preferred DVD audio language	Press ◀ or ▶ to select the desired language
Subtitle	Set the preferred subtitle language	Press ◀ or ▶ to select the desired language
Disc Menu	Set the preferred DVD Menu language	Press ◀ or ▶ to select the desired language
Parental	Set a parental lock on compatible DVD discs	Press ◀ or ▶ to select KID SAF, G, PG, PG 13, PGR, R, NC17 or ADULT
Password	Set a password for the parental lock	Use the numerical buttons to enter a password
Default	Restore the DVD player settings to its original settings	Press ◀ or ▶ to select Reset

DVD Operation

English

DVD Player Controls

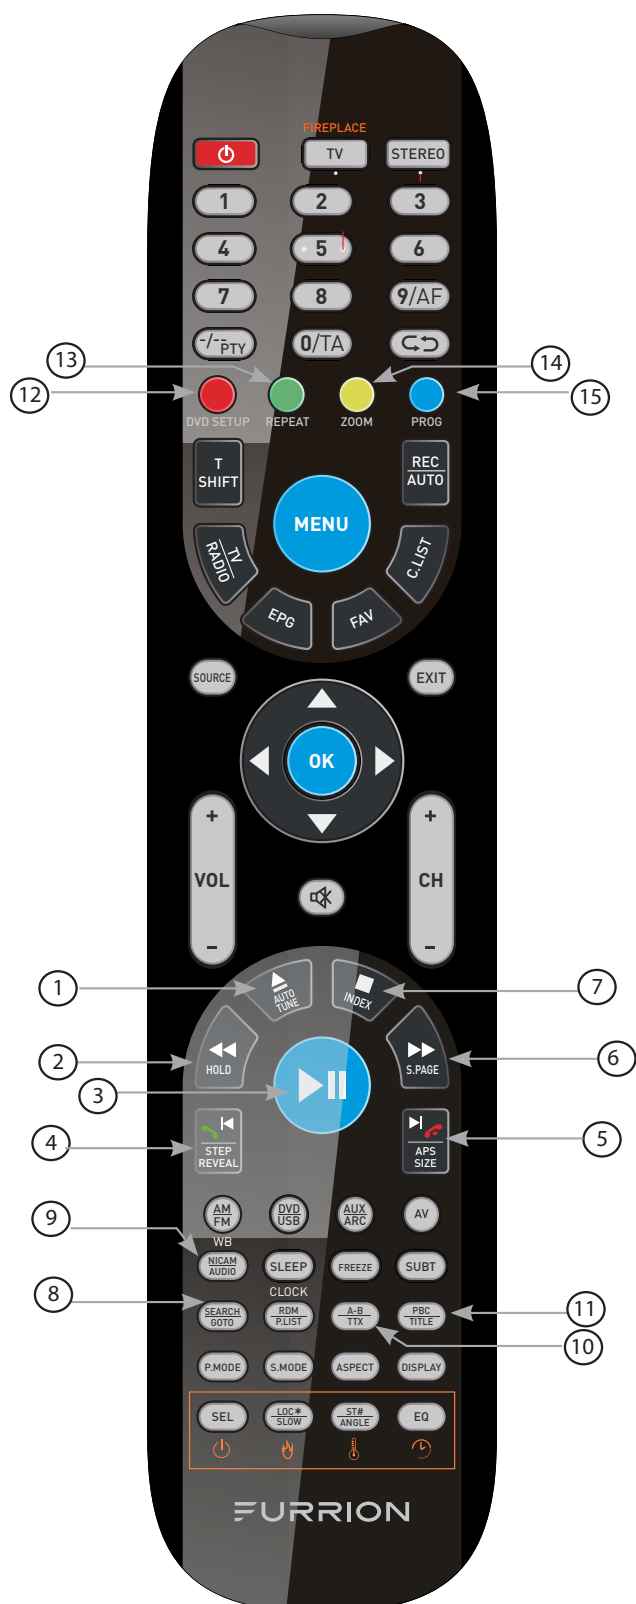

No.	Button	Function
①	AUTO TUNE	Eject DVD/CD
②	HOLD	Select the previous track/chapter during playback
③		Start, pause or restart the playback
④	STEP REVEAL	Play the previous file directly
⑤	APS SIZE	Play the next file directly
⑥	S.PAGE	Select the next track/chapter during playback
⑦	INDEX	Stop playback
⑧	SEARCH GOTO	Jump to a specific time on a DVD/VCD/MP3/WMA or CD
⑨	NICAM AUDIO	Cycle through NICAM sound modes
⑩	A-B TTX	Start the A-B repeat function (playback loop of a segment of track)
⑪	PBC TITLE	Display DVD/VCD Title
⑫		Enter the DVD SETUP
⑬		Repeat
⑭		Enlarge the screen images
⑮		Start the programmed playback function

DVD Operation

Loading a Disc

Before loading a disc into the disc compartment:

- Check and make sure there is no disc in the disc compartment.
 - Make sure the label side of the disc is facing back when inserting a disc.
 - Do not use excessive force when inserting a disc.
1. Press **⏻** button on the control panel or on the remote control to switch on the TV.
 2. Press **SOURCE** button on the remote control to display all the available input source for your TV. Use **▲** or **▼** to highlight **DVD** mode and press **OK** to enter.
 3. Insert a compatible disc into the disc compartment on the right side of the TV.
 4. Depending on the disc format, the playback may automatically start or a menu will appear on screen allowing playback of files.

Compatible Media	
Type	Compatibility
Disc (12 cm Disc Only)	DVD / DVD-R / DVD+R / DVD-RW / DVD+RW VCD / SVCD CD / CDR / CDRW
Multimedia Format	MP3 / WMA / JPEG / MPEG-1 / MPEG-2 / MPEG-4 DIVX3.xx / DIVX5.xx

DVD/VCD/SVCD Playback

When playing a DVD/ VCD/ SVCD/ CD

- Press **▲** to eject the disc.
- Press **▶||** to Start, Pause or restart the playback.
- Press **■** to stop the playback.
- Press **◀** or **▶** during playback to skip to the previous or next chapter/track.
- Press **⏮** to play the previous file directly

- Press **⏭** to play the next file directly
- Press **A-B** to start the A-B repeat function. Press once for the desired start point and press again for the end point.
- Press the number buttons **0~9** to select the chapter or track to play.

When playing a DVD


- Press **PBC/SUBTITLE** to display the DVD menu.
- Press **SUBT** to display subtitles on compatible media. Press repeatedly to cycle through subtitle options
- Press **MTS/ AUDIO** to change the audio track/language. Press repeatedly to cycle through available tracks.

When playing a DVD/ VCD/SVCD

- Press **ZOOM** to enlarge the playback display. Press repeatedly to cycle through zoom levels.



Video/Audio/Picture Playback

When a disc with compatible video/ audio/picture files is inserted into the disc compartment, a file navigation menu will appear on the screen.

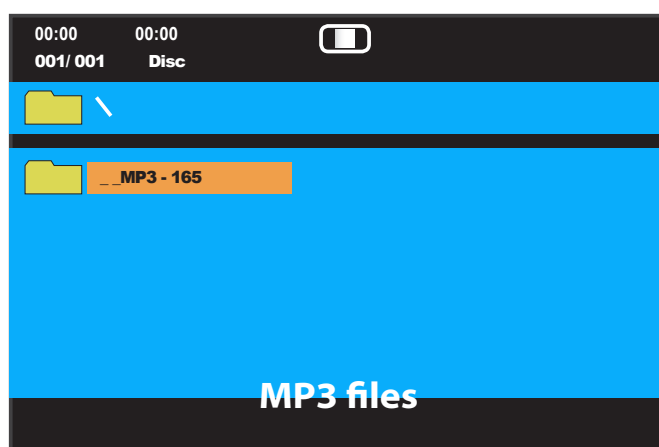

DVD Operation

English

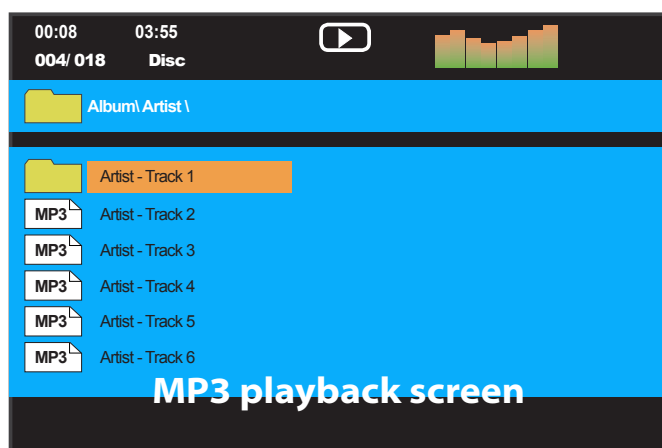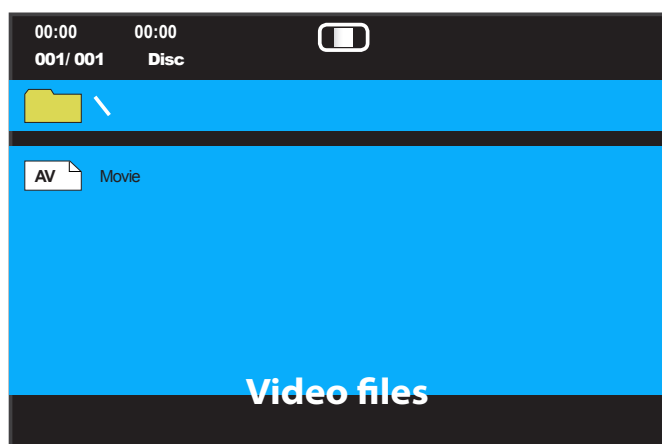

When playing Video/ Audio files from a disc

- Press **▲** to eject the disc.
- Press **▶||** to start, pause or restart the playback.
- Press **■** to stop the playback.
- Press **◀◀** or **▶▶** during playback to skip to the previous or next chapter/track.

When viewing a picture


- Press **ZOOM** to enlarge the display. Press repeatedly to cycle through zoom levels.
- Press **◀◀** or **▶▶** to display the previous or next picture.

Troubleshooting

Problem	Solution/Issue
TV does not operate	<ul style="list-style-type: none"> • Make sure the power cord is plugged in. • Try another AC outlet. • Power is off, check fuse or circuit breaker. • Unplug unit for an hour, then plug it back in.
Normal picture, but no sound	<ul style="list-style-type: none"> • Check the volume settings. • Sound muted? Press MUTE button. • Try another channel. • Check audio cable connections.
The remote control does not work	<ul style="list-style-type: none"> • Make the remote control is in range with no obstructions. • Check the batteries. • Correct operating mode set: TV, VCR etc.
Poor sound or no sound	<ul style="list-style-type: none"> • Station or Cable TV experiencing problems, tune to another station. • Check sound adjustments (Volume or Mute). • Check for sources of possible interference.
Poor picture or no picture	<ul style="list-style-type: none"> • Station or Cable TV experiencing problems, tune to another station. • Make sure channels are set into memory. • Check antenna or Cable TV connections, adjust antenna. • Check for sources of possible interference. • Check picture control adjustments.
Poor TV reception	<ul style="list-style-type: none"> • Ensure the antenna amplifier is turned on for Antenna TV. • Adjust the antenna position to a stronger signal receiving angle. • Check the Antenna connection is tight to the TV. • Check there is power supplied to the Antenna distribution box. • Confirm your incoming cable is connected to the correct cable / antenna wall connection inside the RV. • Ensure the internal RV coax jump cable is connected to the correct port.
Poor Cable / Satellite TV Reception	<ul style="list-style-type: none"> • Ensure antenna amp is turned off for cable signal. • Check incoming Cable is connected correctly to RV. • Ensure cable splitter box has power. • Confirm the incoming cable is connected to the correct cable / Satellite wall connection inside your RV. • Ensure the internal RV coax jump cable is connected to the correct port. • Check Dish has not obstruction.
TV shuts off	<ul style="list-style-type: none"> • Sleep Timer is set. • Power interrupted.
Black and white image from the connected AV device	<ul style="list-style-type: none"> • Check video connections on both the TV and connected AV device. Ensure the colors match between the connectors and sockets: green (Y), blue (Pb/Cb) and red (Pr/Cr) for component connection, and yellow (VIDEO) for composite connection. • Ensure all video cables are connected firmly.

Specifications

English

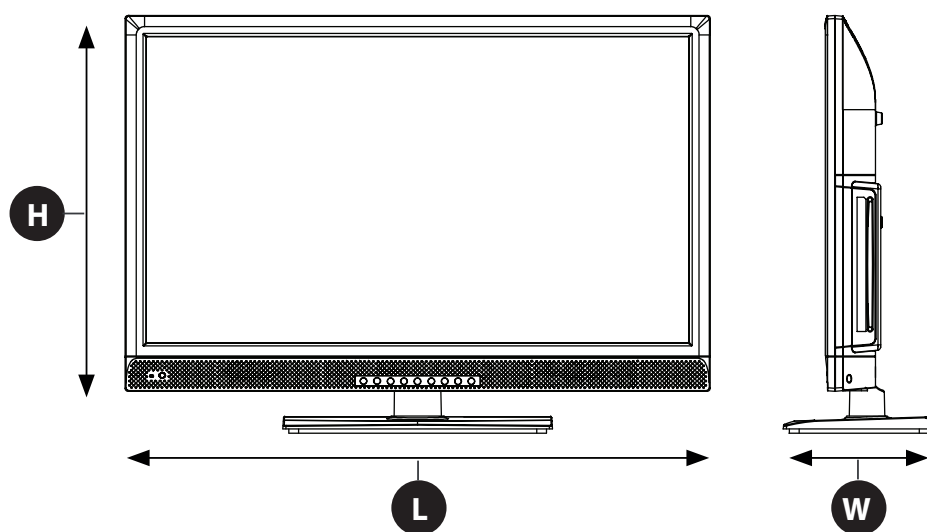

MODEL, DIMENSION & RESOLUTION

TV Model	Dimension without Stand (L*H*W)	Dimension with Stand (L*H*W)	Max Resolution
FEHD24S3D	22 ¹ / ₄ " x 14 ⁵ / ₁₆ " x 2 ³ / ₁₆ " (565 x 363 x 55mm)	22 ¹ / ₄ " x 15 ⁷ / ₈ " x 5 ³ / ₄ " (565 x 403 x 146mm)	1366 x 768 @ 60Hz HD

INPUT & OUTPUT CONNECTIONS

TV Model	HDMI in	VGA (PC) in	Audio (PC) in	Coaxial Audio Out	USB	Audio/Video Out	Audio/Video in	Component YP _b P _r Video In	Earphone Out	RF in
FEHD24S3D	3	1	1	1	1	1 x Right (Red) 1 x Left (White)	1 x Right (Red) 1 x Left (White) 1 x Video (Yellow)	1 (Mini - use inclusive adapter)	1	1

Warranty

Furrion warrants for a period of 1 year from date of retail purchase by the original end-use purchaser, that this product, when delivered to you in new condition, in original packaging, from a Furrion authorized reseller and used in normal conditions, is free from any defects in manufacturing, materials, and workmanship. In case of such defect, Furrion shall replace or repair the product at no charge to you. This warranty does not cover: products where the original serial numbers have been removed, altered or cannot readily be determined; damage or loss caused by accident, misuse, abuse, neglect, product modification, failure to follow instructions in instruction manual, commercial or industrial use; damage or loss caused to the decorative surface of product; to any data, software or information; and normal wear and tear. This warranty only protects the original end-user ("you") and is not transferable; any attempt to transfer this warranty shall make it immediately void. This warranty is only valid in the country of purchase.

THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. FURRION SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF FURRION CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

No Furrion reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

FURRION IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF ANY EQUIPMENT OR PROPERTY, ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH FURRION PRODUCTS. FURRION'S TOTAL LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THIS PRODUCT PURSUANT TO THE TERMS OF THIS WARRANTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR EXCLUSIONS OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OR CONDITIONS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY STATE OR (WHERE APPLICABLE IN THE COUNTRIES WHERE FURRION HAS NON-US/CANADIAN AUTHORIZED DEALERS) COUNTRY. NO ACTION OR CLAIM TO ENFORCE THIS WARRANTY SHALL BE COMMENCED AFTER THE EXPIRATION OF THE WARRANTY PERIOD.

Keep your receipt, delivery slip, or other appropriate payment record to establish the warranty period. Service under this warranty must be obtained by contacting Furrion at **warranty@furrion.com**

Product features or specifications as described or illustrated are subject to change without notice.

FURRION

Furrion Innovation Center & Institute of Technology

- 52567 Independence Ct., Elkhart, IN 46514, USA ● Toll free:1-888-354-5792
- Email: support@furrion.com

©2007-2019 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

IM-FAV00052 V1.0