

Enabling AMP on Grass Valley Servers


This section explains how to enable AMP protocol on Grass Valley Servers. Instructions are included for each of the following products:

- “Turbo™ iDDR” on page 2
- “M-Series” on page 3
- “K2 Server” on page 4


Turbo™ iDDR

On the Turbo iDDR, you can enable AMP for Ethernet and RS-422 from the front panel or the AppCenter Workstation view.

Front panel operation:

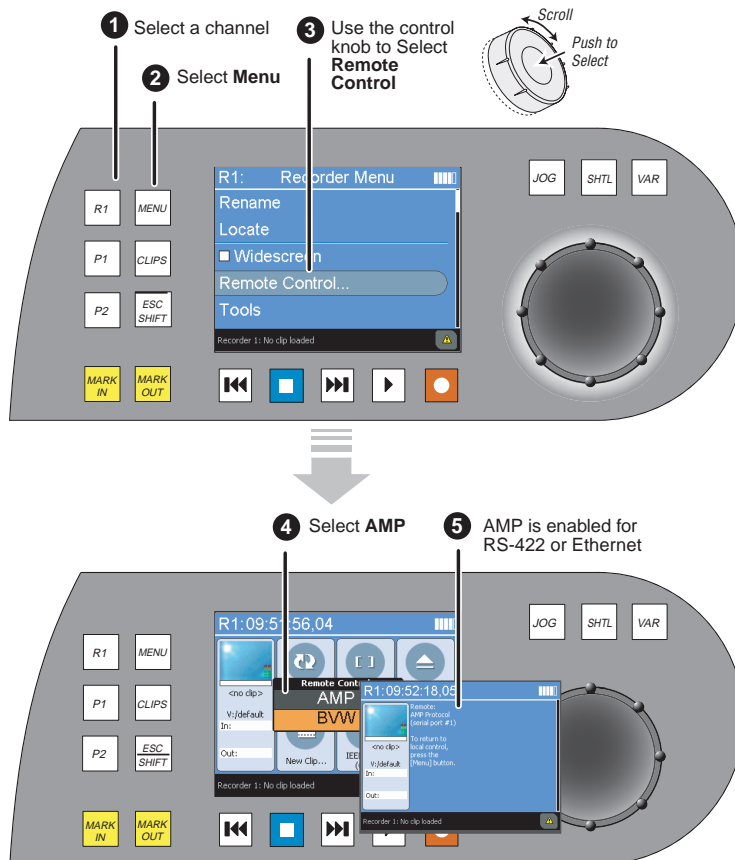


Workstation operation:

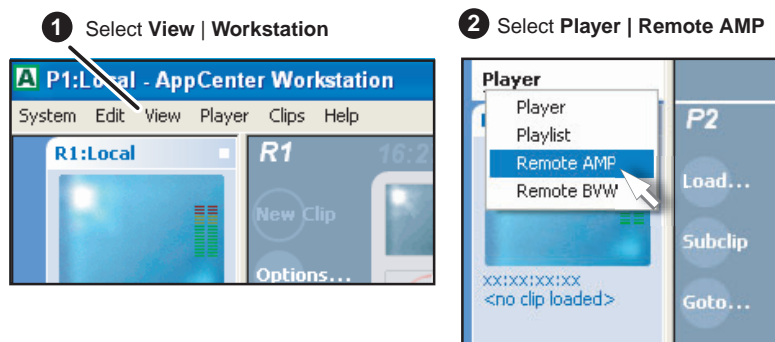

M-Series


Enable an AMP channel on the M-Series from either the touchscreen or the AppCenter as follows:

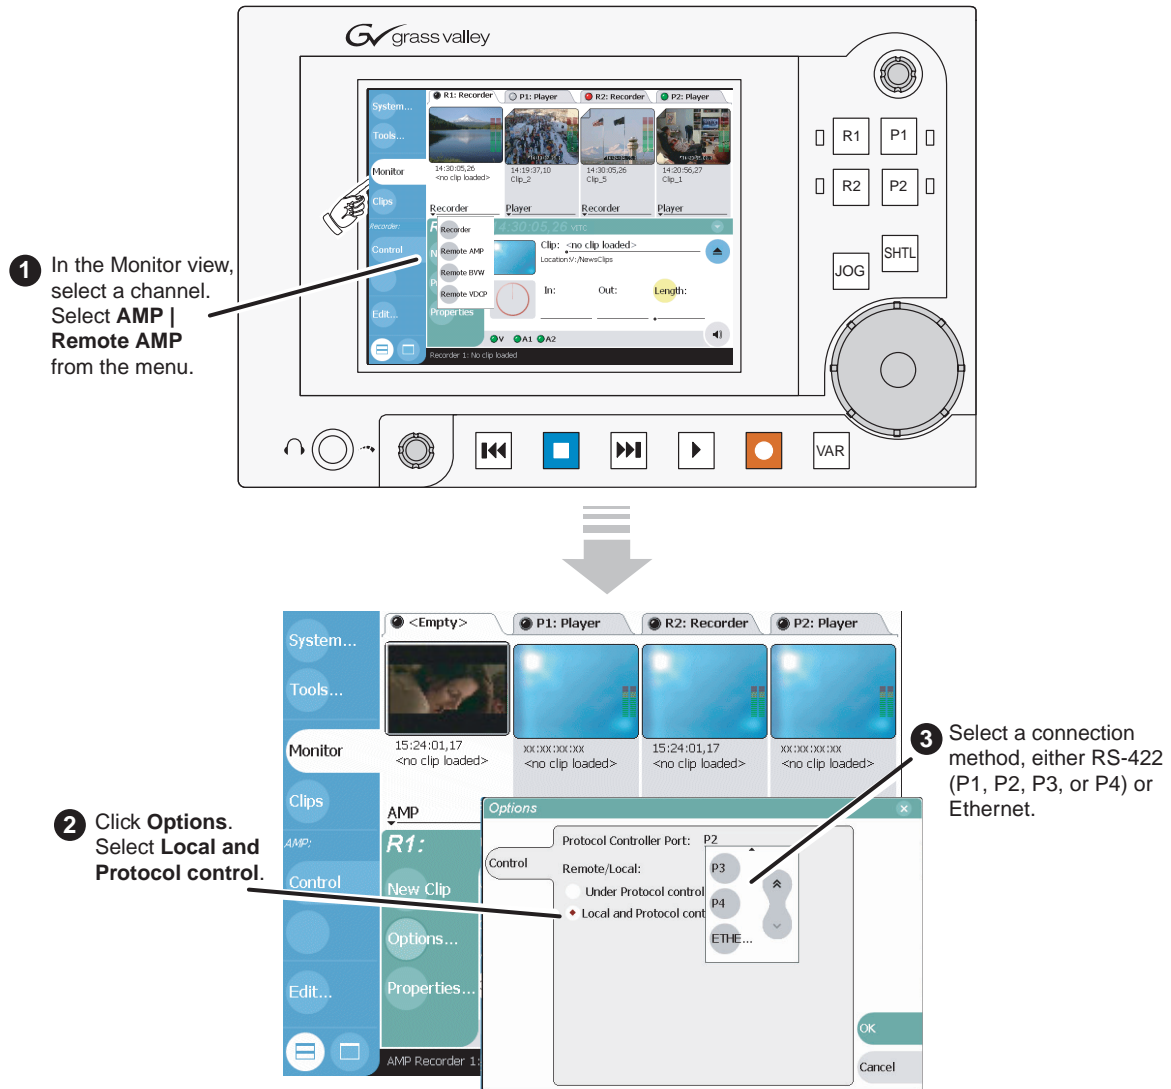

To access channel-less Ethernet connection on the M-Series, you must first enable a channel to AMP-Ethernet.

K2 Server

Enable an AMP channel on the K2 Server from the AppCenter as follows:

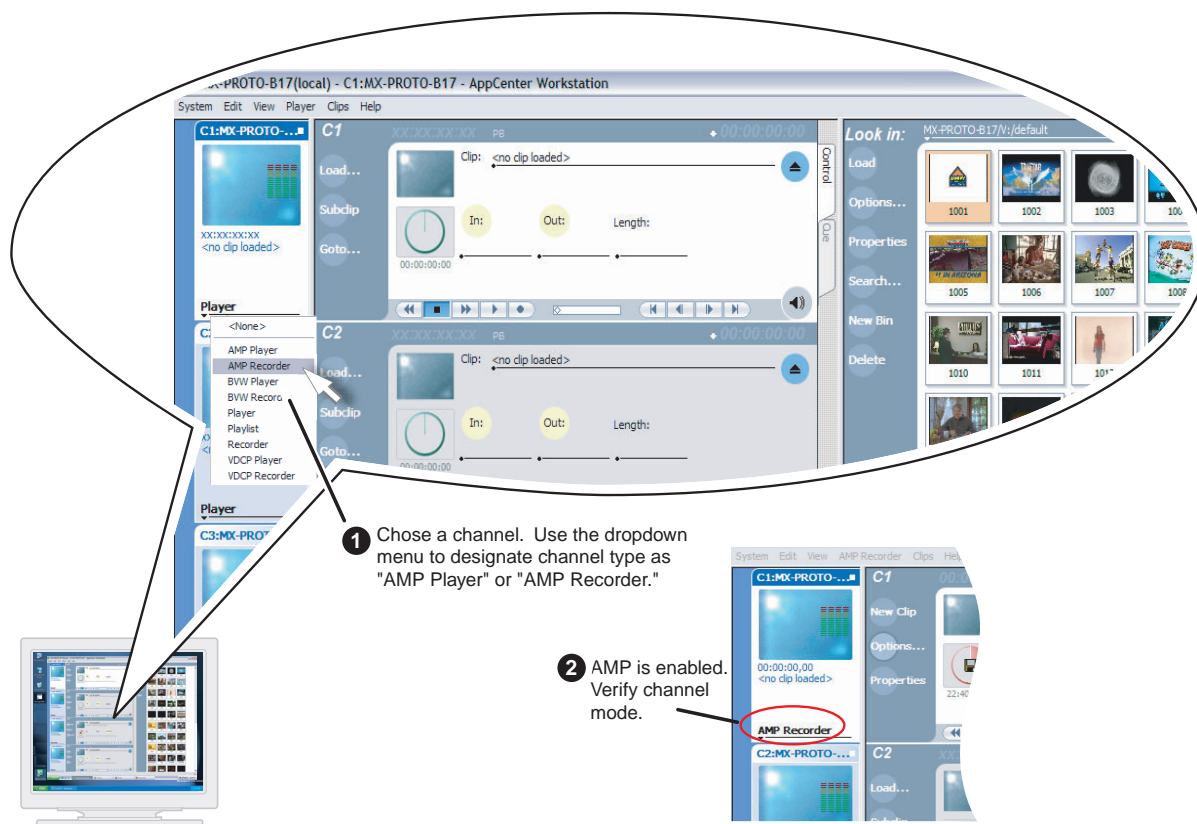

Channel-less AMP-Ethernet is always enabled on the K2 Server—no special set up is required, and you do not need to dedicate a channel to AMP. Channels on the K2 Server are permanently set, so you do not need to select Ethernet or a port number.

