

User instructions

CAT FEEDER

1. Opening the food box using the matrix keyboard

1. STEP: Show the initial display

When the feeder is turned on, the initial screen will appear on the display, which is used to enter a four-digit PIN with the help of a matrix keyboard.

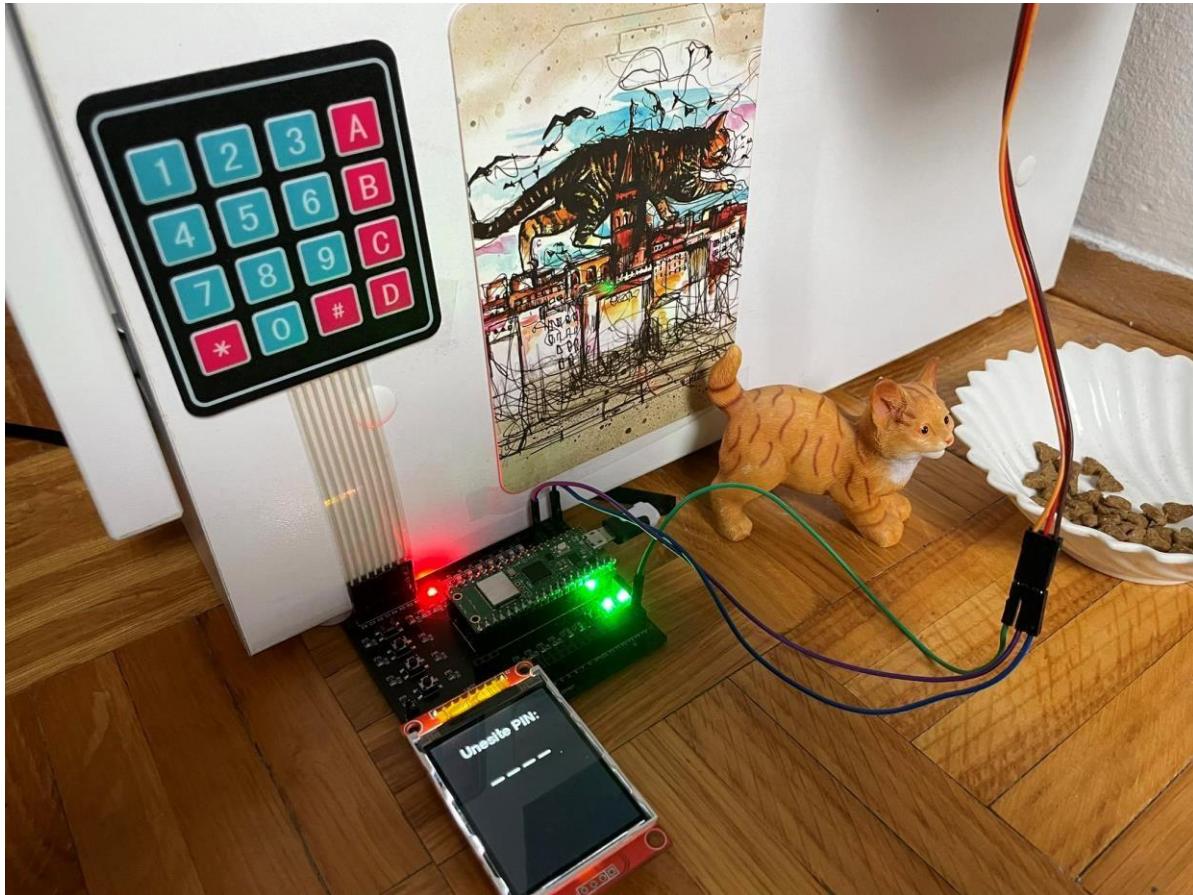


Image 1: cat feeder look

2. STEP: Enter the PIN

Use the matrix keypad on the feeder to enter the desired four-digit PIN. To enter each digit, use the appropriate key on the matrix keyboard. Deleting the last entered digit is possible by pressing "*".

2. STEP: Checking the correctness of the PIN

When you have finished entering the PIN, press the "#" key to verify the correctness of the entered PIN.

Correct PIN entered:

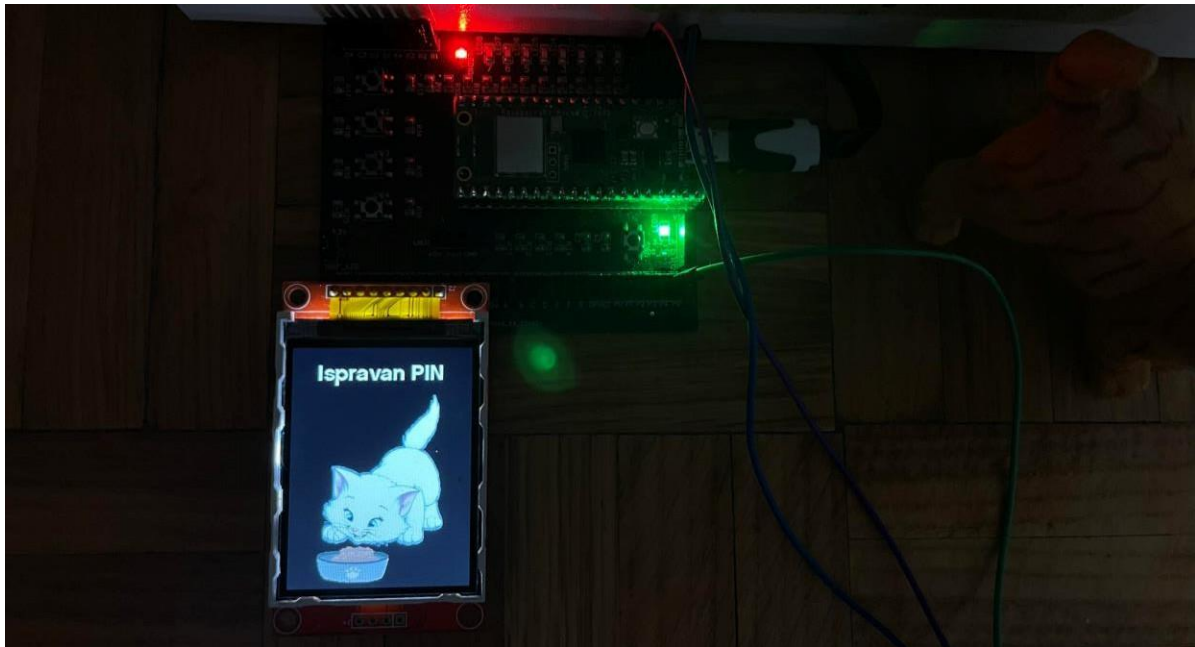


Image 2: Display for correct PIN

A message about the correctness of the PIN will be shown on the display, and then the motor will open the opening on the box and the cat food will fall out.

Incorrect PIN entered:

A message about the incorrect PIN will be displayed on the display, and then the initial screen for entering the PIN will be displayed again, and the described process is repeated.



Image 3: Display for incorrect PIN

2. Opening the food box using the app

The food box can also be opened via the application.

1. STEP: Launching the application

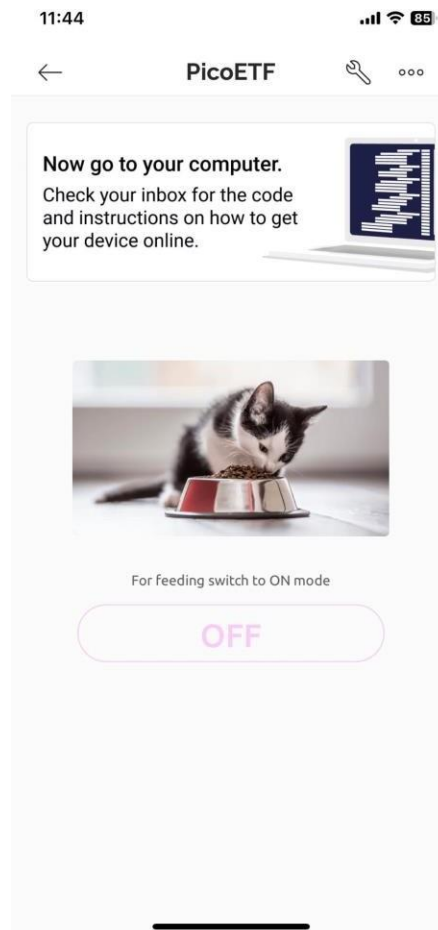


Image 4: Feeder management application

2. STEP: Controlling the opening of the box

Switching the switch from "OFF" to "ON" opens the food box, and after 0.3 seconds it closes again..

3. STEP: Shutting down the feeder

After the end of use, it is necessary to switch the switch from "ON" to "OFF" in order not to reactivate the engine.