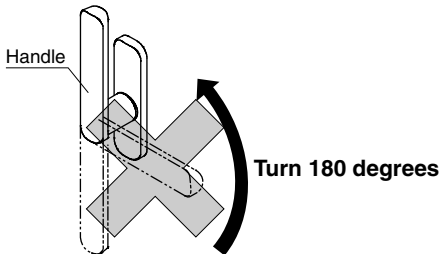



■ Opening and unlocking operation of glass sash

■ Opening the closed glass sash


- 1) Turn the handle of the glass sash upward in the counterclockwise direction 180 degrees. The sash unlocks.
- Do not open the glass sash when the handle is at about the 90 degree position. The handle will hit the glass and it may break.**



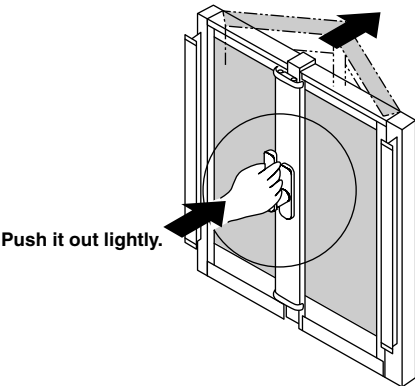- 2) Hold the handle and lightly push out the glass sash.









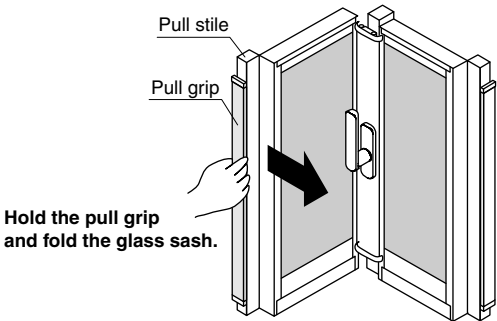- 3) Take your hand off the handle, and hold the pull grip of the pull stile and then fold the glass sash to open.



■ Opening operation and unlocking operation of the door

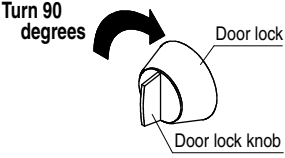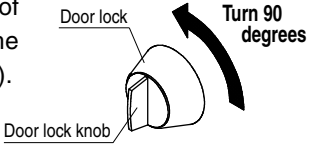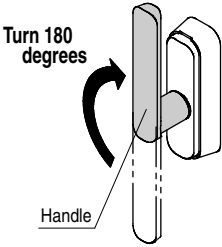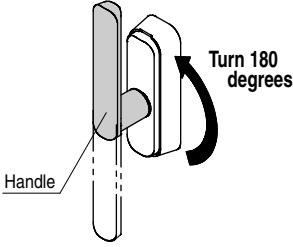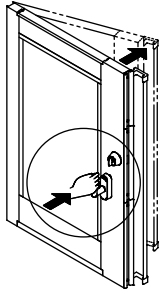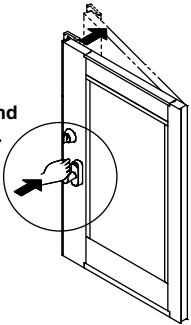■ Opening the closed door

In the case where the door is on the left when viewed from the indoor side	In the case where the door is on the right when viewed from the indoor side
<p>1) Make sure that the knob of the door lock is at the unlocked position (vertical).</p>  <p>Turn 90 degrees</p> <p>Door lock</p> <p>Door lock knob</p>	<p>1) Make sure that the knob of the door lock is at the unlocked position (vertical).</p>  <p>Turn 90 degrees</p> <p>Door lock</p> <p>Door lock knob</p>
<p>2) Turn the handle of the door up in the clockwise direction 180 degrees. The door is unlocked.</p>  <p>Turn 180 degrees</p> <p>Handle</p>	<p>2) Turn the handle of the door up in the counterclockwise direction 180 degrees. The door is unlocked.</p>  <p>Turn 180 degrees</p> <p>Handle</p>
<p>3) Hold the handle and open the door.</p>  <p>Hold the handle when opening and closing the door.</p>	<p>3) Hold the handle and open the door.</p>  <p>Hold the handle when opening and closing the door.</p>