



## How to set permissions for KSL450 slave stations.

Go administrator:

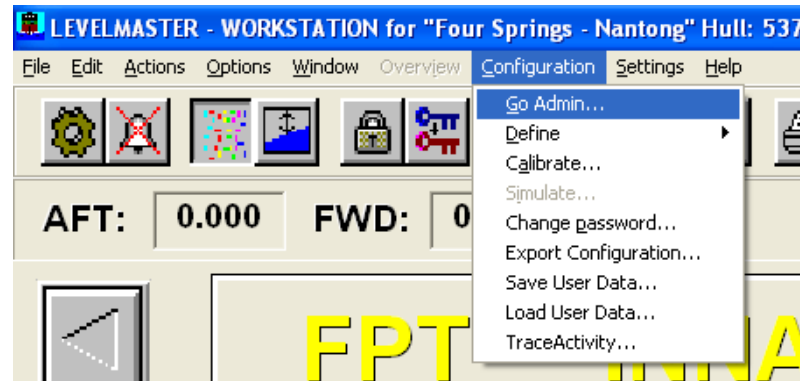


Enter password: LK4BJM

Choose Define permissions:

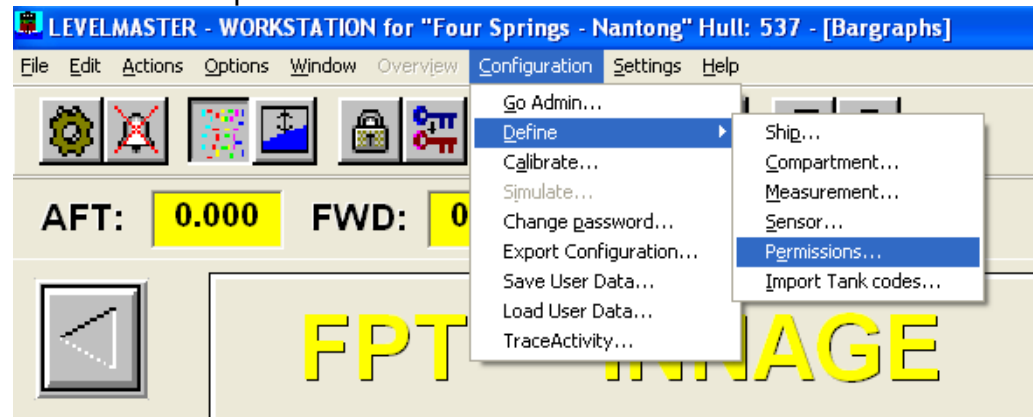


Press OK.

Select Tank and press Generate followed by OK.

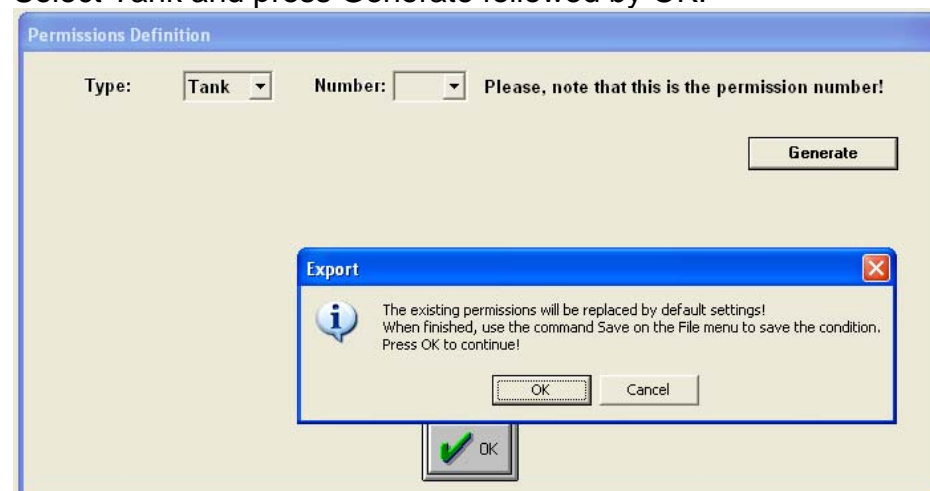


Enter the number of additional slave stations:

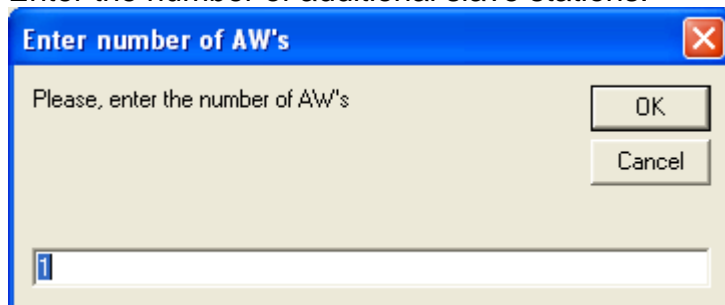

A dialog box titled "Enter number of AW's" with a close button (X) in the top right corner. The text inside says "Please, enter the number of AW's". There are two buttons: "OK" and "Cancel". Below the text is a text input field containing the number "1".

Enter the host name for the slave workstation:  
(This name can be found in properties for My Computer)

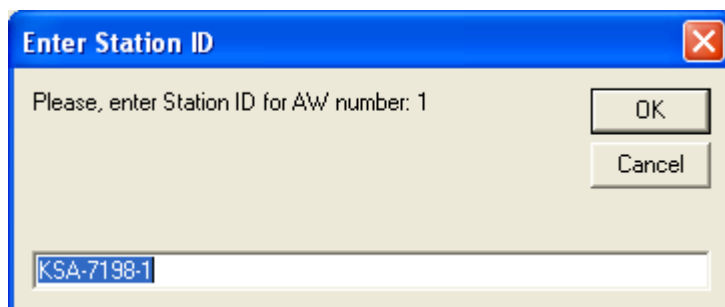


A dialog box titled "Enter Station ID" with a close button (X) in the top right corner. The text inside says "Please, enter Station ID for AW number: 1". There are two buttons: "OK" and "Cancel". Below the text is a text input field containing the text "KSA-7198-1".

This will auto-generate default permissions for the workstations for all tanks and drafts.

Enter the define permissions again according to below and now it is possible to set individual permissions for tanks and drafts as per each slave station.

When ready, make File and Save and restart the KSL450 program and the slave stations.

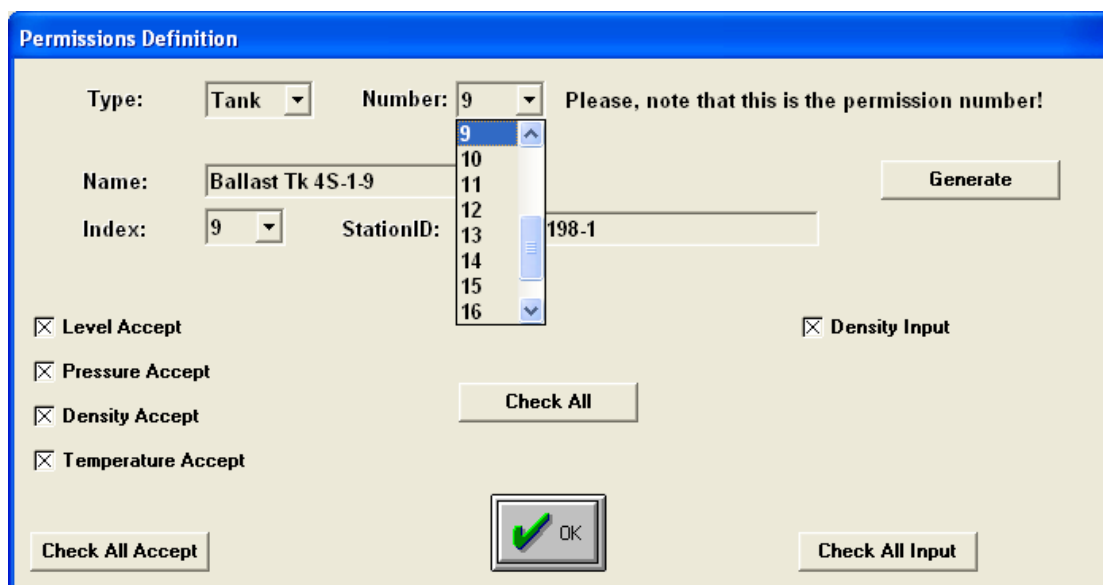

A dialog box titled "Permissions Definition". It contains several fields and checkboxes:

- Type:** A dropdown menu set to "Tank".
- Number:** A dropdown menu set to "9".
- Name:** A text field containing "Ballast Tk 4S-1-9".
- Index:** A dropdown menu set to "9".
- StationID:** A text field containing "198-1".
- Checkboxes:** Four checkboxes are checked: "Level Accept", "Pressure Accept", "Density Accept", and "Temperature Accept".
- Buttons:** "Generate", "Check All", "Check All Accept", "OK" (with a green checkmark icon), and "Check All Input".
- Text:** "Please, note that this is the permission number!"