


## Position of Parts in Instrument Panel

[LHD]

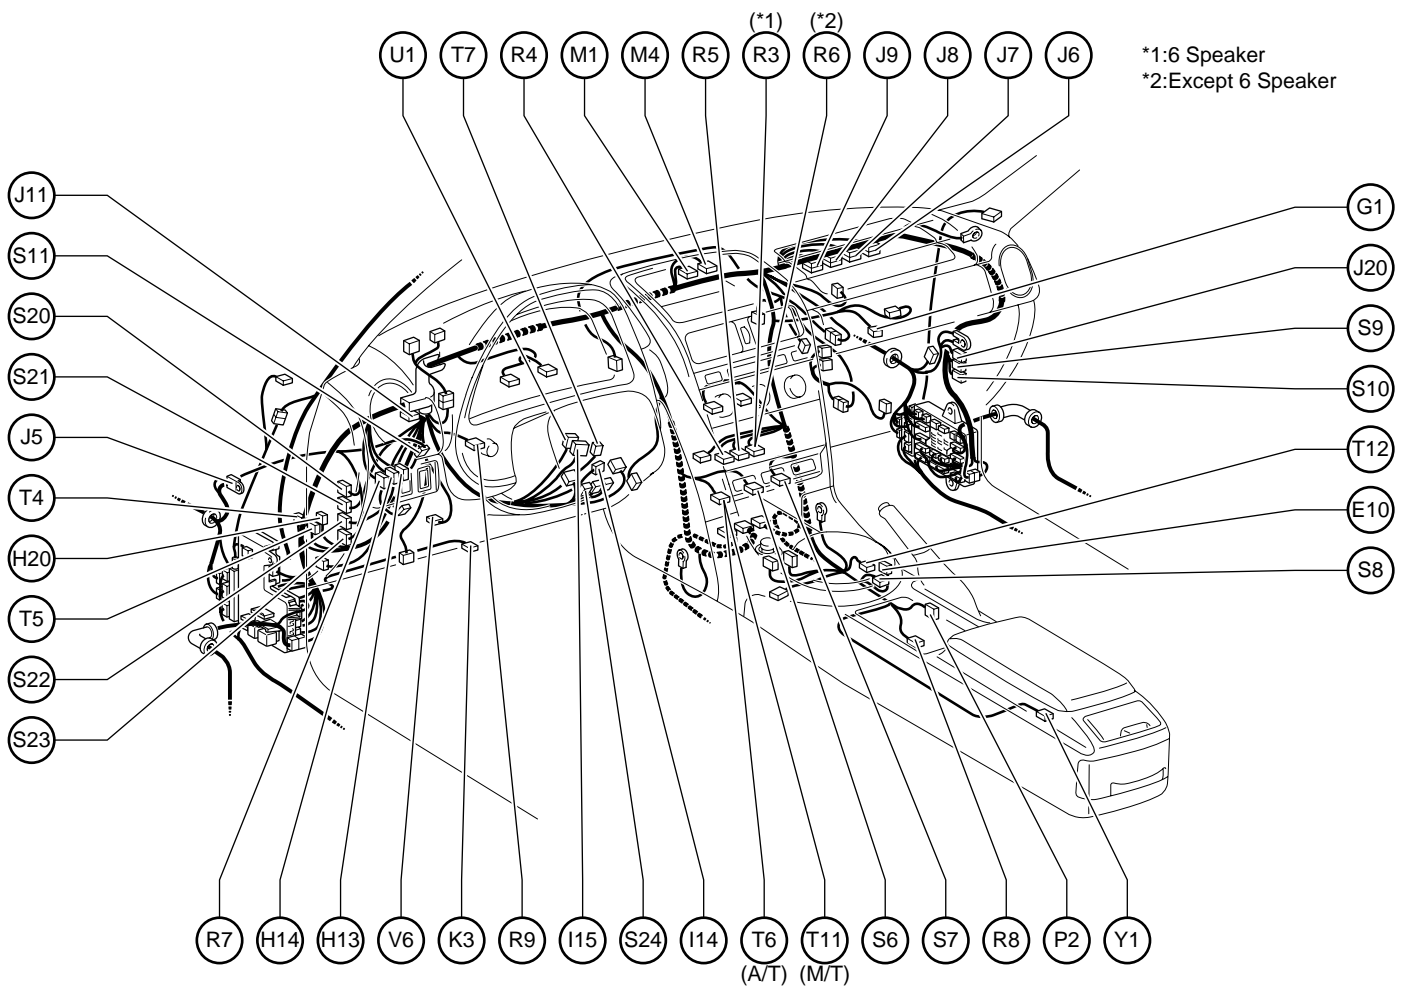

E 10 ECT Pattern Select SW

G 1 Glove Box Light

H13 Headlight Beam Level Control SW

H14 Headlight Cleaner SW

H20 Headlight Beam Level Control ECU

I 14 Ignition Key Cylinder Light

I 15 Ignition SW

J 5 Junction Connector

J 6 Junction Connector

J 7 Junction Connector

J 8 Junction Connector

J 9 Junction Connector

J 11 Junction Connector

J 20 Junction Connector

K 3 Kick Down SW

M 1 Multi-Display

M 4 Multi-Display

P 2 Parking Brake SW

R 3 Radio and Player

R 4 Radio and Player

R 5 Radio and Player

R 6 Radio and Player

R 7 Rear Fog Light SW

R 8 Remote Controller (Navigation)

R 9 Rheostat

S 6 Seat Heater SW (Driver's Seat)

S 7 Seat Heater SW (Passenger's Seat)

S 8 Shift Lock Control ECU

S 9 Stereo Component Amplifier

S10 Stereo Component Amplifier

S11 Stop Light SW

S20 Skid Control ECU

S21 Skid Control ECU

S22 Skid Control ECU

S23 Skid Control ECU

S24 Steering Sensor

T 4 Theft Deterrent ECU

T 5 Theft Deterrent ECU

T 6 Traction Cut SW

T 7 Transponder Key Amplifier

T11 Traction Cut SW and Snow SW

T12 Transmission Control SW (L-2)

U 1 Unlock Warning SW

V 6 VSC Warning Buzzer

Y 1 Yaw Rate Sensor