


## DISASSEMBLY

### 1. REMOVE EXTENSION HOUSING DUST DEFLECTOR

Using a plastic hammer, remove the dust deflector.

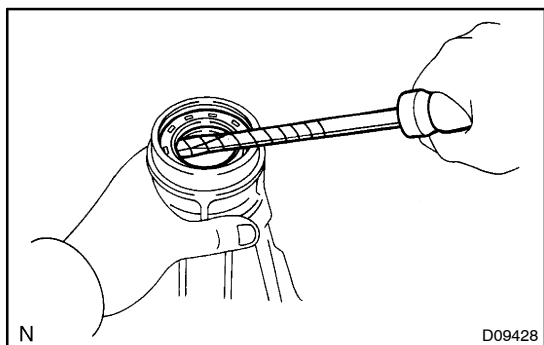

### 2. REMOVE EXTENSION HOUSING OIL SEAL

Using a screwdriver, remove the oil seal.