


J POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

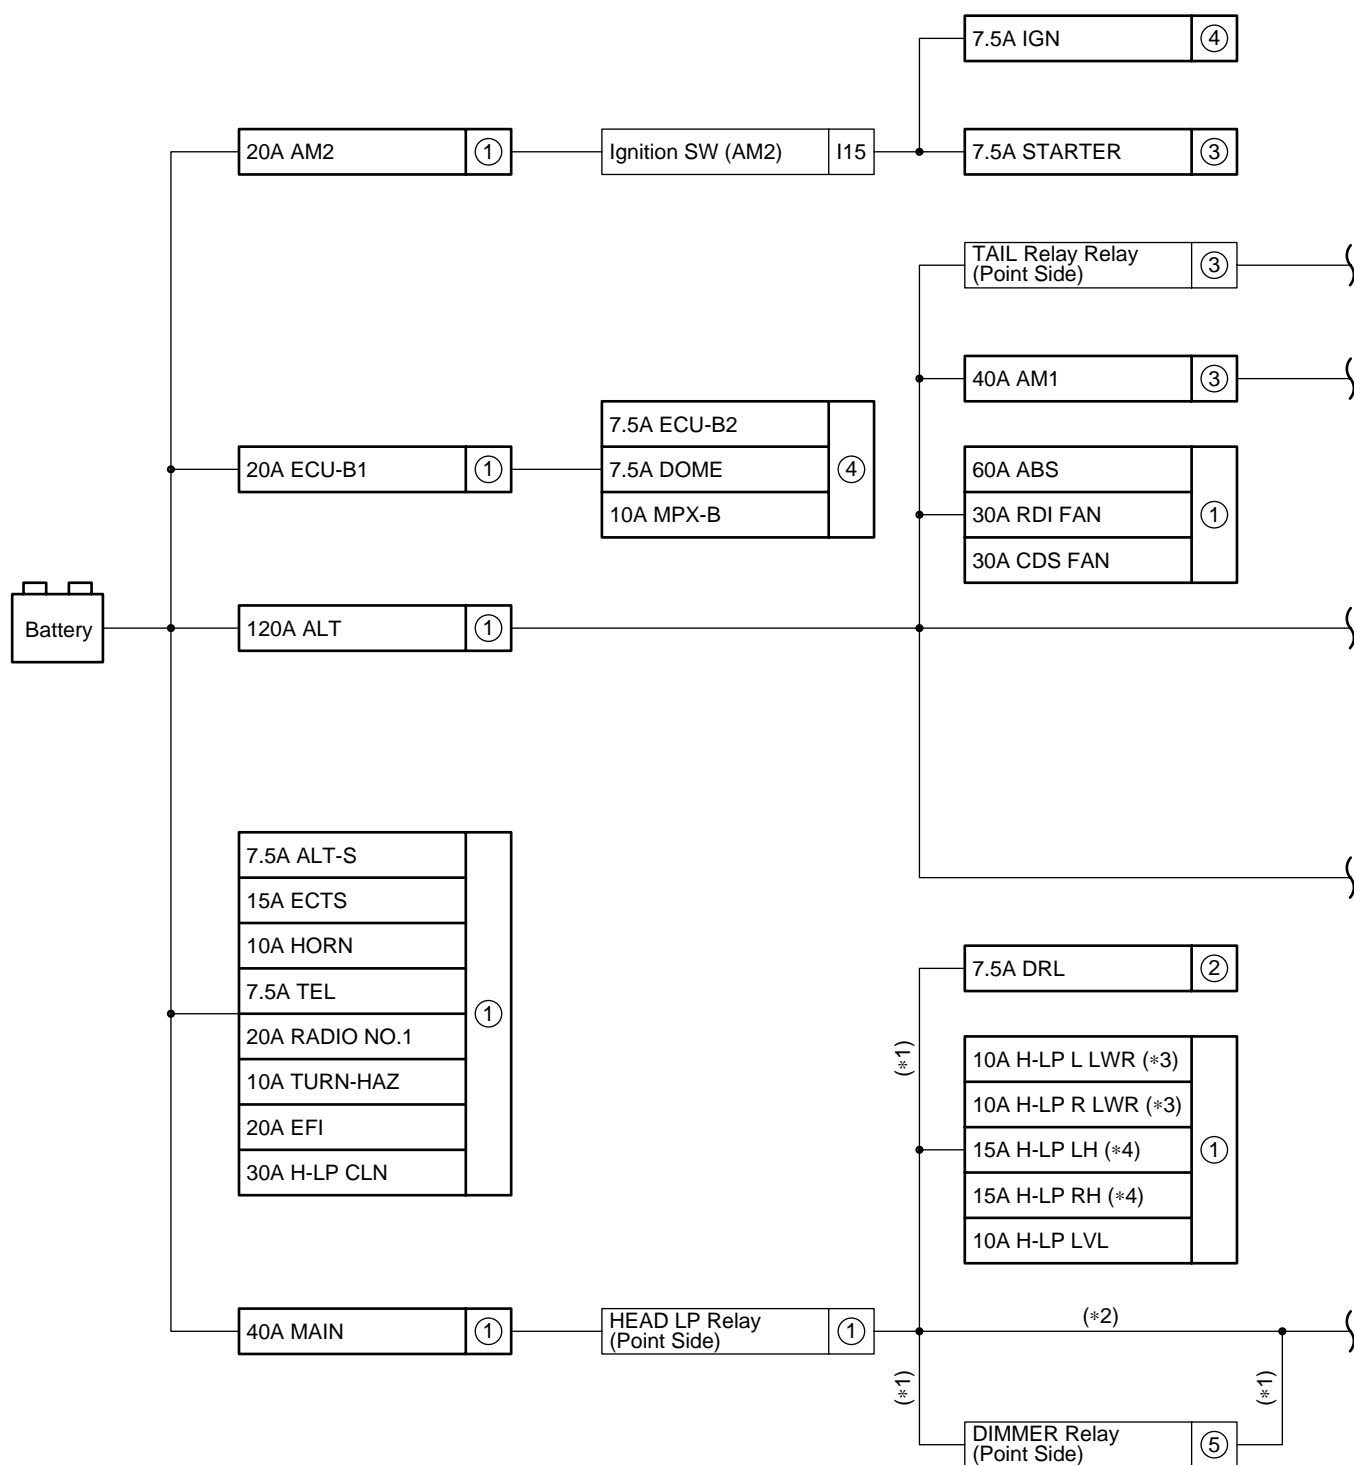

[LOCATION] ① : Engine Room No.1 R/B (See page 80 (LHD) or 81 (RHD))

③ : Driver Side J/B (See page 82 (LHD) or 88 (RHD))

*1 : w/ Daytime Running Light
 *2 : w/o Daytime Running Light
 *3 : Except Australia
 *4 : Australia

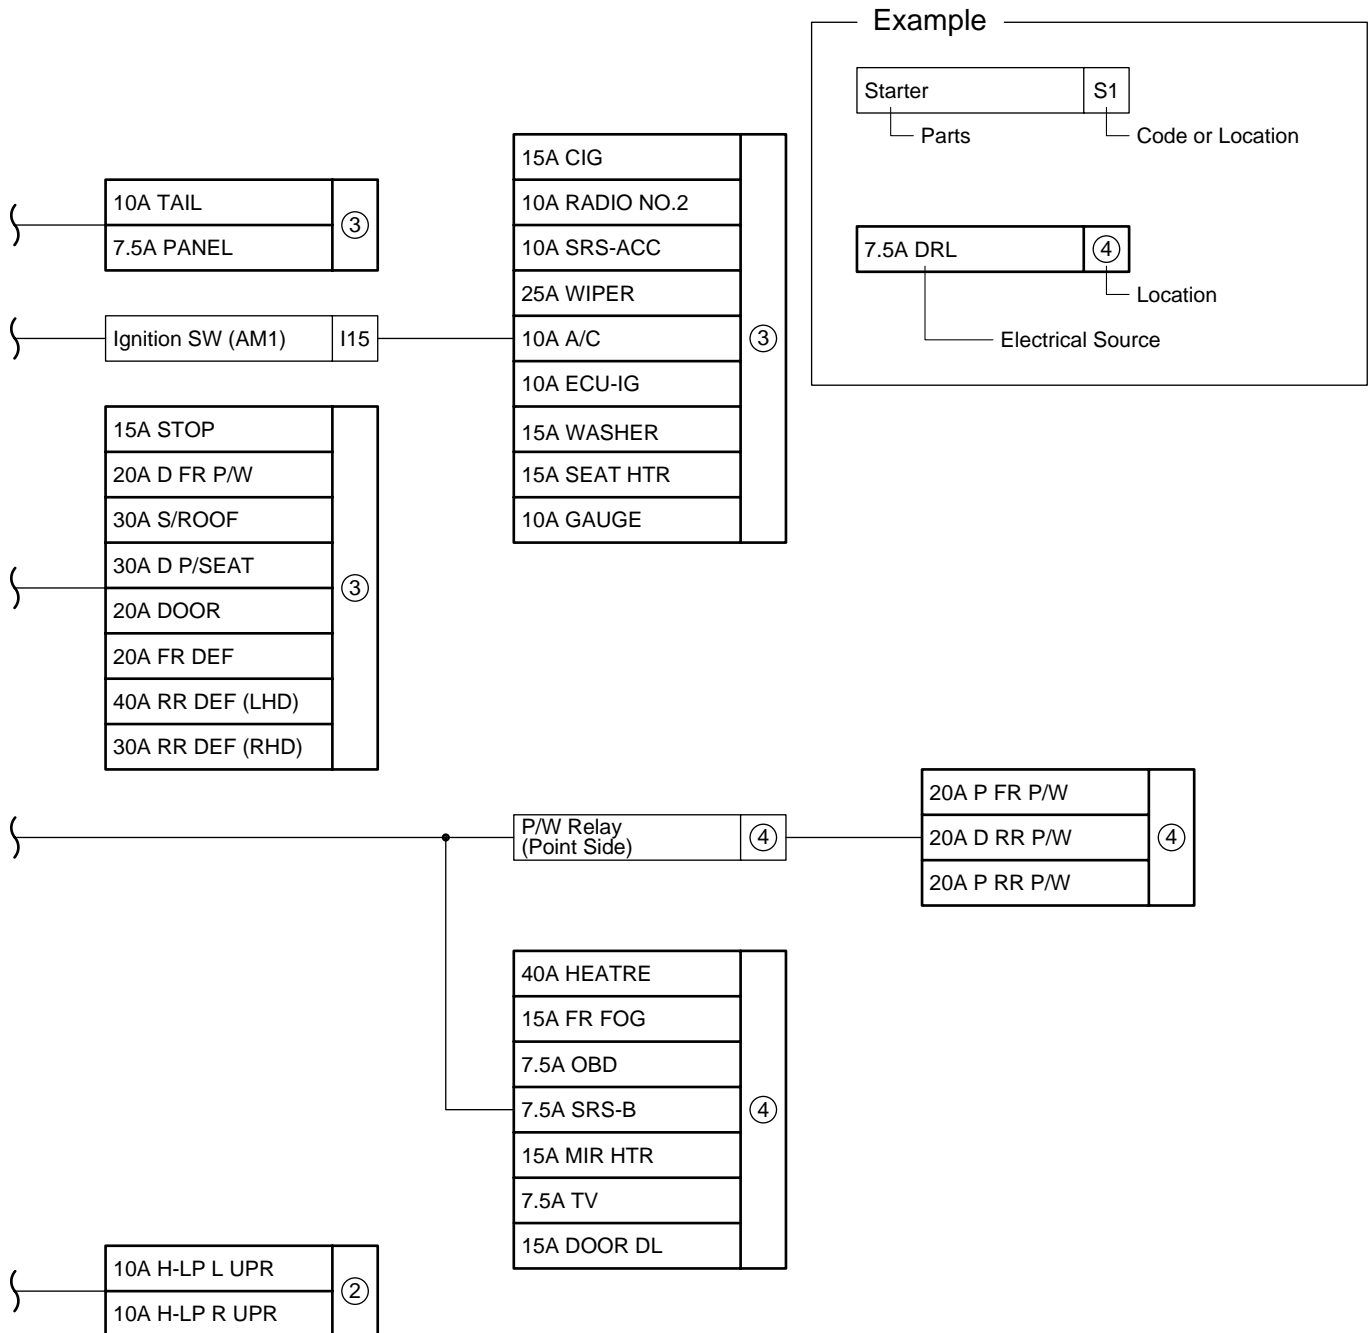

② : Engine Room No.2 R/B (See page 80 (LHD) or 81 (RHD))

④ : Passenger Side J/B (See page 84 (LHD) or 90 (RHD))

⑤ : Engine Room No.3 R/B (See Page 94)