


CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


[LHD]

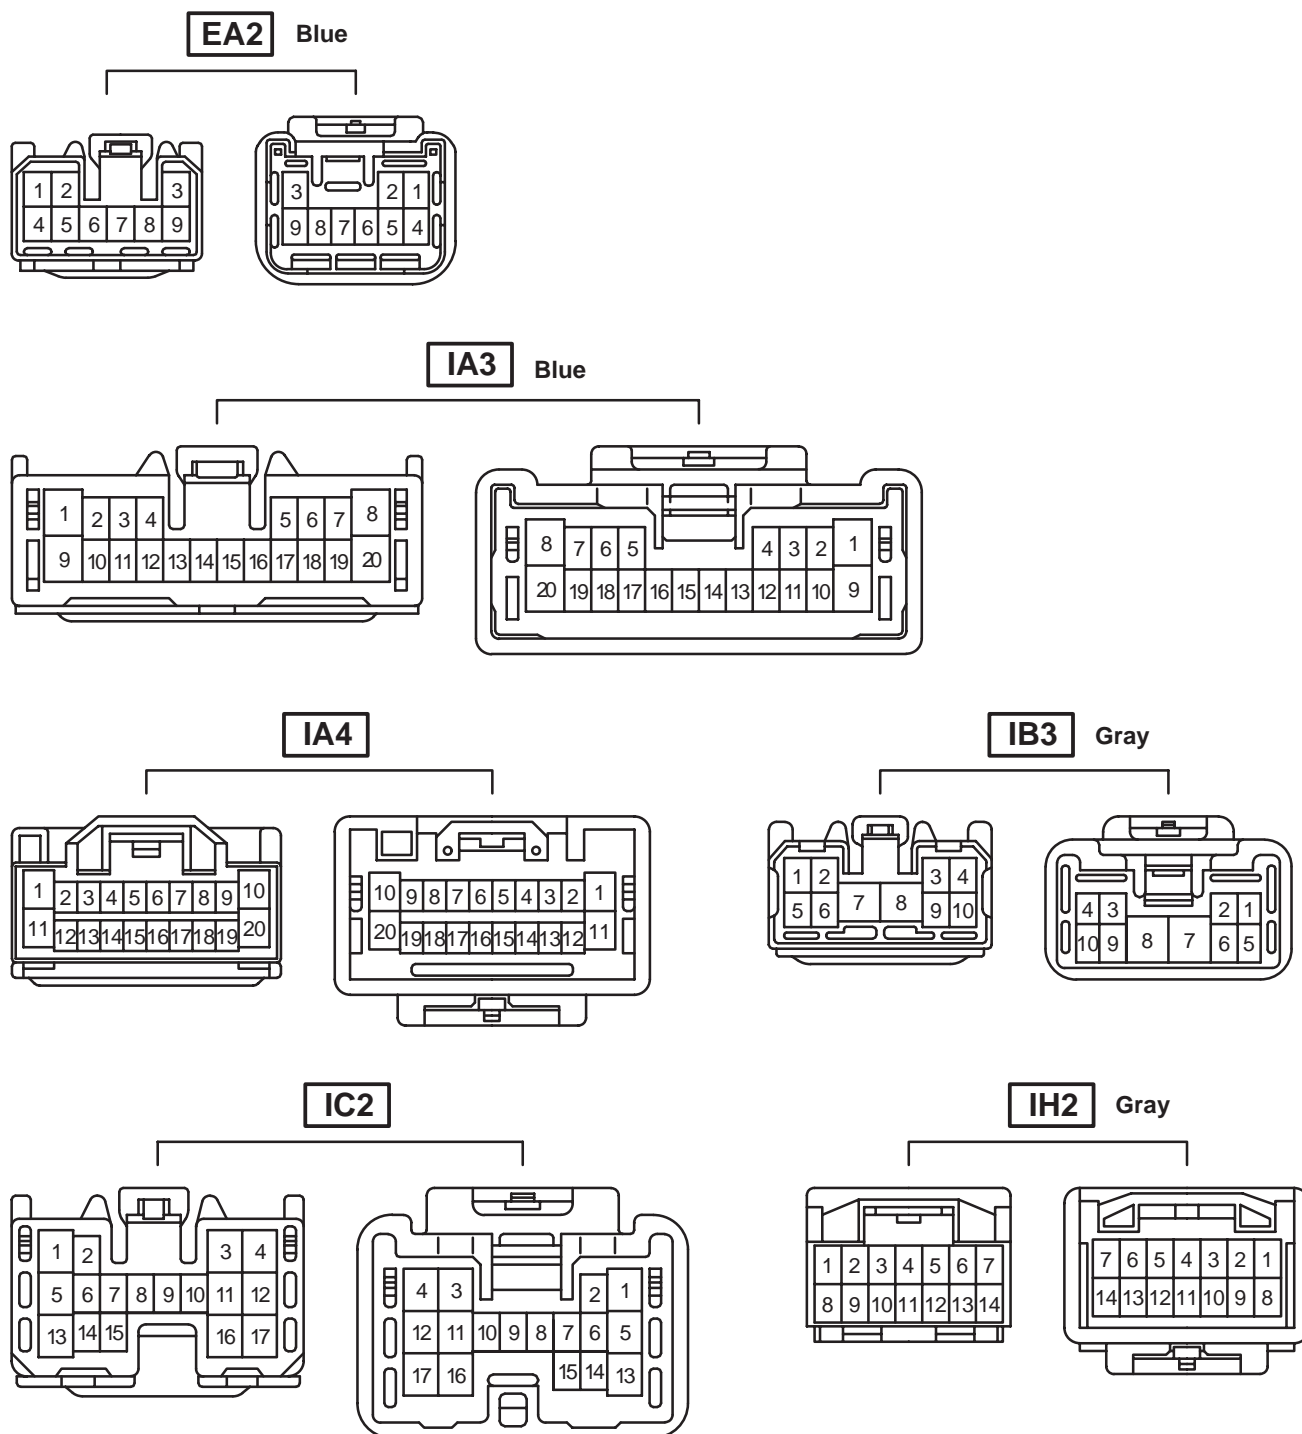

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Engine Room Main Wire (Inside of the ECU Box)
IA3	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IA4	
IB3	Instrument Panel Wire and Floor No.2 Wire (Near the Driver Side J/B)
IC2	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH2	Instrument Panel Wire and Floor Wire (Near the Passenger Side J/B)

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS






[LHD]

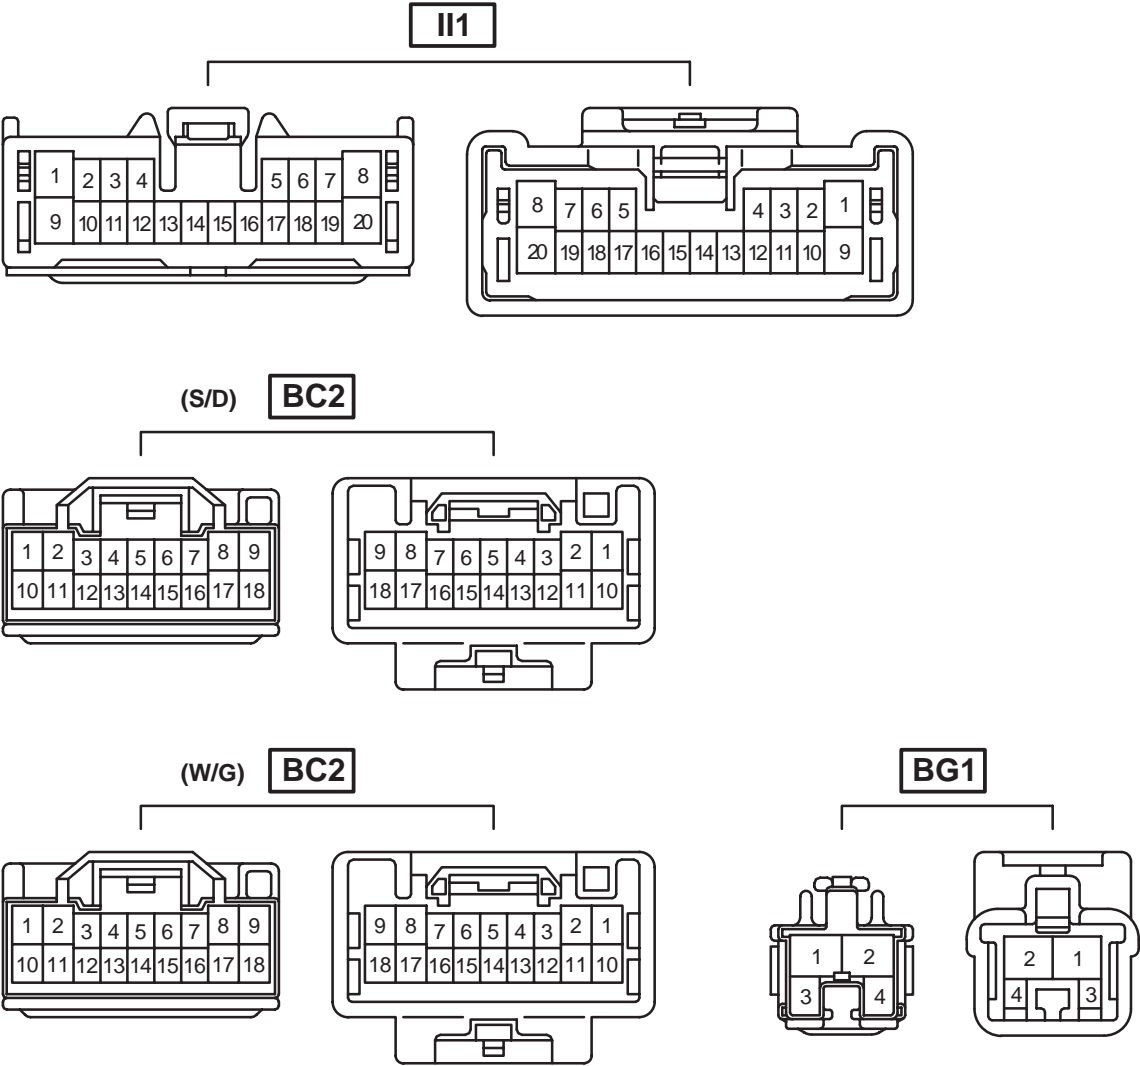

Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BC2 (S/D)	Floor No.2 Wire and Floor Wire (Under the Right Rear Cushion)
BC2 (W/G)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel Center)
BG1	Back Door No.1 Wire and Floor No.2 Wire (Left Side of the Back Panel Upper)

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


[RHD]

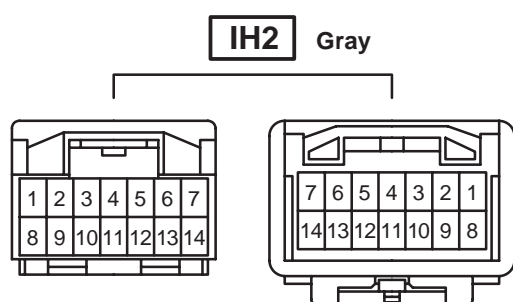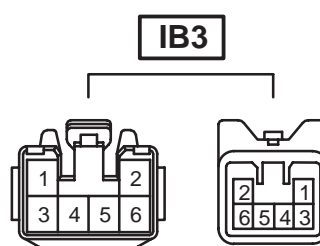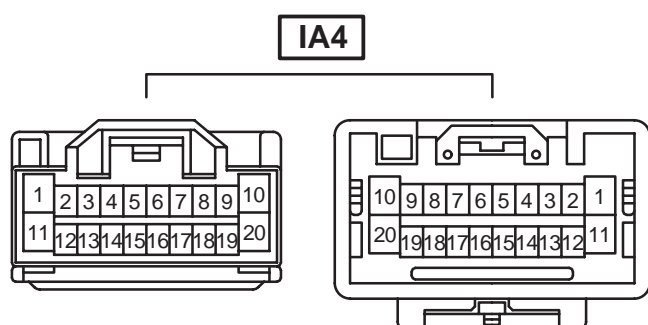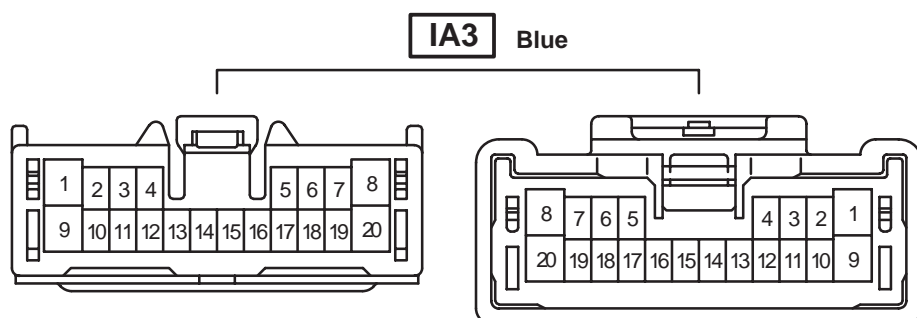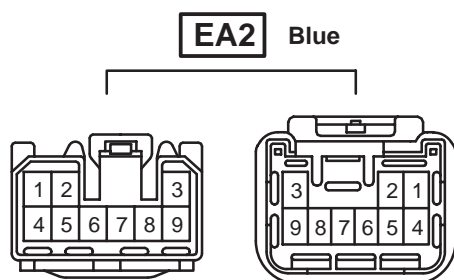

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA2	Engine Wire and Engine Room Main Wire (Inside of the ECU Box)
IA3	Instrument Panel Wire and Engine Room Main Wire (Near the Passenger Side J/B)
IA4	
IB3	Instrument Panel Wire and Floor No.2 Wire (Near the Passenger Side J/B)
IH2	Instrument Panel Wire and Floor Wire (Near the Driver Side J/B)
























CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

[RHD]

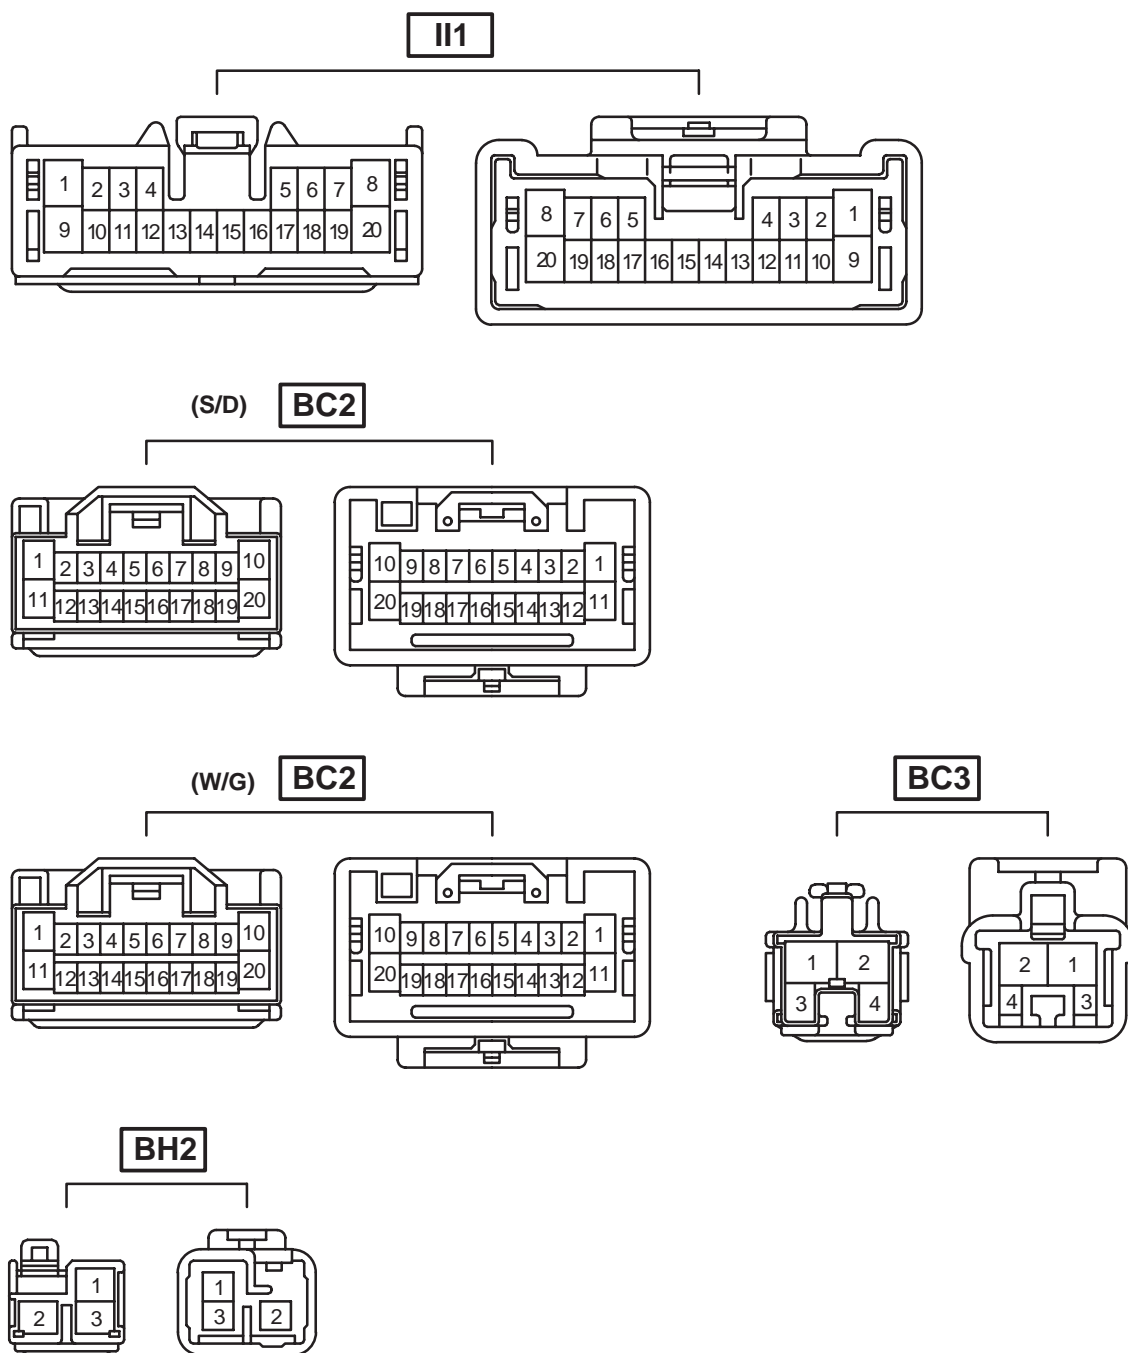

Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Front Door RH Wire and Instrument Panel Wire (Left Kick Panel)
BC2 (S/D)	Floor No.2 Wire and Floor Wire (Under the Right Rear Cushion)
BC2 (W/G)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel Center)
BC3	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel Center)
BH2	Back Door No.1 Wire and Back Door No.2 Wire (Left Side of the Back Panel Lower)

CONNECTOR LIST

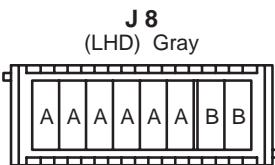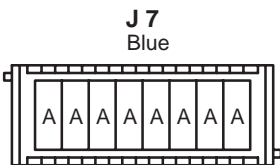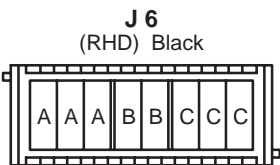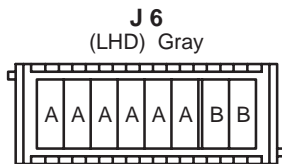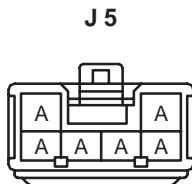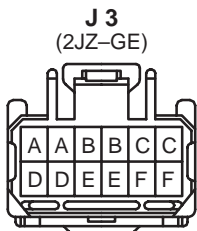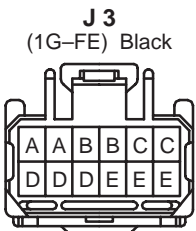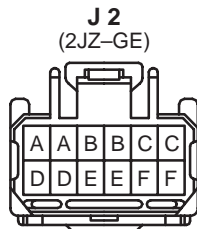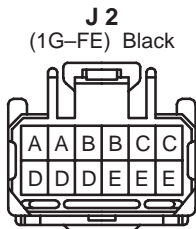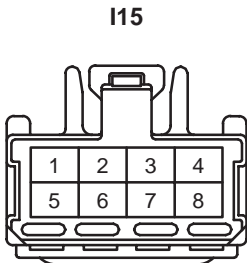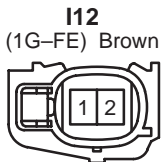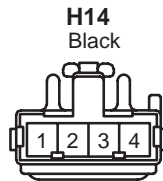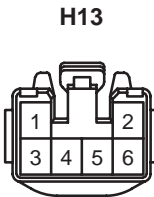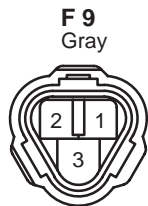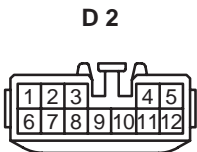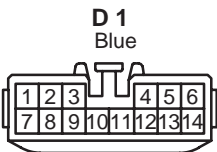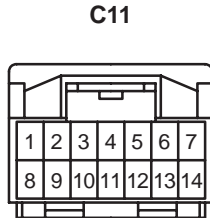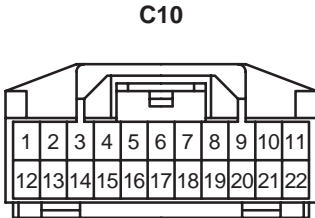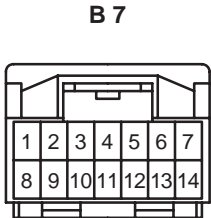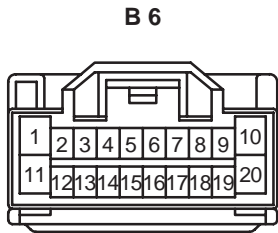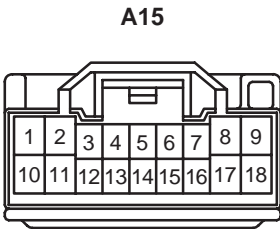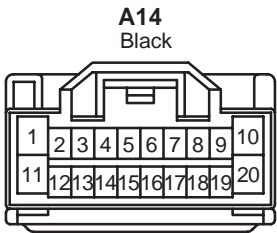

CONNECTOR LIST

